

SONY®

DIGITAL CAMCORDER

DSR-390
DSR-390P
DSR-370
DSR-370P
DSR-300A
DSR-300AP

SERVICE MANUAL

Volume 2 1st Edition (Revised 2)

Power HAD

DVCAM™



⚠ 警告

このマニュアルは、サービス専用です。

お客様が、このマニュアルに記載された設置や保守、点検、修理などを行うと感電や火災、人身事故につながる可能性があります。

危険をさけるため、サービストレーニングを受けた技術者のみご使用ください。

設置や保守、点検、修理などを行う前に、別冊のサービスマニュアルVolume 1の「安全のために」と別冊の取扱説明書の「安全のために」を必ずお読みください。

⚠ WARNING

This manual is intended for qualified service personnel only.

To reduce the risk of electric shock, fire or injury, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so. Refer all servicing to qualified service personnel.

⚠ WARNING

Die Anleitung ist nur für qualifiziertes Fachpersonal bestimmt.

Alle Wartungsarbeiten dürfen nur von qualifiziertem Fachpersonal ausgeführt werden. Um die Gefahr eines elektrischen Schlages, Feuergefahr und Verletzungen zu vermeiden, sind bei Wartungsarbeiten strikt die Angaben in der Anleitung zu befolgen. Andere als die angegeben Wartungsarbeiten dürfen nur von Personen ausgeführt werden, die eine spezielle Befähigung dazu besitzen.

⚠ AVERTISSEMENT

Ce manuel est destiné uniquement aux personnes compétentes en charge de l'entretien. Afin de réduire les risques de décharge électrique, d'incendie ou de blessure n'effectuer que les réparations indiquées dans le mode d'emploi à moins d'être qualifié pour en effectuer d'autres. Pour toute réparation faire appel à une personne compétente uniquement.

目次 / Table of Contents

このマニュアルについて

| | |
|---------------|-------|
| 本書の目的 | 5 (J) |
| 関連マニュアル | 5 (J) |
| 構成 | 7 (J) |

Manual Structure

| | |
|------------------------------|-------|
| Purpose of this manual | 5 (E) |
| Related manuals | 5 (E) |
| Contents | 7 (E) |

1. Spare Parts

| | |
|--------------------------------------|-------|
| 1-1. 補修部品注意事項 | 1-1 |
| 1-1. Notes on Repair Parts | 1-1 |
| 1-2. Exploded Views | 1-2 |
| 1-3. Electrical Parts List | 1-25 |
| 1-4. Supplied Accessories List | 1-122 |
| 1-5. Optional Fixtures List | 1-122 |

2. Semiconductor Pin Assignments

| | |
|-------------|-----|
| Index | 2-1 |
| IC | 2-6 |

3. Block Diagrams

| | |
|--|------|
| Index | 3-1 |
| Camera Overall | 3-2 |
| VTR Overall (1/2) | 3-4 |
| VTR Overall (2/2) | 3-5 |
| VA-199 | 3-6 |
| DPR-141C/141A (1/3) | 3-8 |
| CP-373/315 (1/7), ES-31 (1/3) | |
| DPR-141C/141A (2/3) | 3-10 |
| DPR-141C/141A (3/3) | 3-11 |
| ES-31 (2/3) | 3-12 |
| ES-31 (3/3) | 3-13 |
| CN-2277/1519, CP-373/315 (2/7) (3/7) (4/7) | |

| | |
|--|------|
| AT-150 | 3-14 |
| SE-566 | |
| Audio (1/2) | 3-16 |
| CP-373/315 (5/7), FP-118A/122 (1/4), SW-19 | |
| Audio (2/2) | 3-17 |
| AA-104, CP-373/315 (6/7), CN-1867, FP-118A/122 (2/4), LE-221 (2/2) | |
| System Control (1/2) | 3-18 |
| FP-118A/122 (3/4), KY-405, LE-221 (1/2) | |
| RP-91 | 3-20 |
| Servo (1/3) | 3-21 |
| CC-68, HN-227 (1/3), MT-114 (1/2), SE-295, SE-297, SV-213 (1/3) | |
| Servo (2/3) | 3-22 |
| HN-227 (2/3), SV-213 (2/3) | |
| Servo (3/3) | 3-23 |
| DU-36, HN-227 (3/3), MB-833, MT-114 (2/2), SV-213 (3/3) | |
| DV-21C/21A | 3-24 |

4. Schematic Diagrams and Frame Wiring

| | |
|---------------------|------|
| Index | 4-1 |
| Frame Wiring | 4-2 |
| PA-205 (R) | 4-3 |
| PA-206 (G) | 4-3 |
| PA-207 (B) | 4-3 |
| TG-187/187P | 4-4 |
| VA-199 | 4-6 |
| DPR-141C/141A | 4-12 |
| ES-31/31P | 4-30 |
| AT-150 | 4-38 |
| SE-566 | 4-38 |
| AT-142 | 4-42 |
| CN-1811 | 4-45 |
| FP-118A | 4-46 |
| KY-405 | 4-46 |
| FP-122 | 4-56 |
| FP-99 | 4-65 |
| GCN-16 | 4-65 |
| SW-929 | 4-65 |
| RP-91 | 4-66 |
| SE-298 | 4-70 |
| SV-213 | 4-70 |
| CC-68 | 4-78 |
| HN-227 | 4-78 |

| | |
|------------------|------|
| MT-114 | 4-78 |
| SE-295 | 4-78 |
| SE-297 | 4-78 |
| AA-104 | 4-79 |
| CN-1866 | 4-79 |
| CN-1867 | 4-79 |
| LE-221 | 4-79 |
| SW-18 | 4-79 |
| CN-1864 | 4-80 |
| CN-1865 | 4-80 |
| IR-33 | 4-80 |
| PSW-71 | 4-80 |
| SW-19 | 4-80 |
| CP-373 | 4-81 |
| CN-2277 | 4-86 |
| CP-315 | 4-87 |
| CN-1519 | 4-89 |
| CN-1873 | 4-89 |
| CN-1874 | 4-89 |
| PS-570 | 4-89 |
| CN-1823 | 4-90 |
| DV-21C/21A | 4-90 |
| MB-833 | 4-92 |
| DU-36 | 4-94 |

5. Board Layouts

| | |
|---------------|-----|
| Index | 5-1 |
| AA-104 | 5-2 |
| AT-150 | 5-3 |
| AT-142 | 5-4 |
| CN-1823 | 5-5 |
| CN-1864 | 5-5 |
| CN-1865 | 5-5 |
| CN-2277 | 5-5 |
| CC-68 | 5-6 |
| CN-1519 | 5-6 |
| CN-1866 | 5-6 |
| CN-1867 | 5-6 |
| CN-1873 | 5-6 |
| CN-1874 | 5-6 |
| DU-36 | 5-7 |

| | |
|---------------|------|
| DV-21 | 5-7 |
| FP-99 | 5-7 |
| GCN-16 | 5-7 |
| CP-373 | 5-8 |
| CP-315 | 5-9 |
| DPR-141 | 5-10 |
| ES-31 | 5-12 |
| FP-118 | 5-14 |
| FP-122 | 5-16 |
| IR-33 | 5-18 |
| KY-405 | 5-18 |
| LE-221 | 5-18 |
| PA-205 | 5-18 |
| PA-206 | 5-18 |
| PA-207 | 5-18 |
| HN-227 | 5-19 |
| MT-114 | 5-19 |
| SE-295 | 5-19 |
| SE-297 | 5-19 |
| SE-298 | 5-19 |
| PS-570 | 5-20 |
| PSW-71 | 5-20 |
| SE-566 | 5-20 |
| MB-833 | 5-21 |
| SV-213 | 5-22 |
| RP-91 | 5-24 |
| SW-18 | 5-24 |
| SW-19 | 5-24 |
| SW-929 | 5-24 |
| TG-187 | 5-25 |
| VA-199 | 5-26 |

このマニュアルについて

本書の目的

本書はデジタルカムコーダDSR-390/370/300A, のサービスマニュアルVol.2です。本書は、サービスエンジニアの方々にご使用いただくことを想定し、部品レベルまでのサービスを前提とした情報（パーツリスト、半導体、ブロック図、回路図、マウント図）を記載しています。

関連マニュアル

この「サービスマニュアル Vol.2」の他に、下記のマニュアルが用意されています。入手を希望される方は、ソニーの営業窓口にお問い合わせください。

- **取扱説明書 DSR-390 (DSR-390 に付属)**

DSR-390 を実際に運用および操作するのに必要なマニュアルです。
入手を希望される方は、ソニーの営業窓口にお問い合わせください。
部品番号：3-776-645-0X

- **CD-ROM マニュアル DSR-390 (別途用意)**

DSR-390 の日本語、英語、フランス語、ドイツ語、イタリア語、およびスペイン語の取扱説明書 (PDF) が含まれています。
入手を希望される方は、ソニーの営業窓口にお問い合わせください。
部品番号：3-776-663-0X

- **取扱説明書 DSR-370 (DSR-370 に付属)**

DSR-370 を実際に運用および操作するのに必要なマニュアルです。
入手を希望される方は、ソニーの営業窓口にお問い合わせください。
部品番号：3-206-359-0X

- **CD-ROM マニュアル DSR-370 (別途用意)**

DSR-370 の日本語、英語、フランス語、ドイツ語、イタリア語、およびスペイン語の取扱説明書 (PDF) が含まれています。
入手を希望される方は、ソニーの営業窓口にお問い合わせください。
部品番号：3-691-094-0X

- **サービスマニュアル Vol.1 DSR-390/DSR-370 (別途用意)**

DSR-390/370 の部品の交換方法および調整などに関する情報を記載しています。
入手を希望される方は、ソニーの営業窓口にお問い合わせください。
部品番号：9-967-973-0X

- **サービスマニュアル Vol.1 DSR-300A (別途用意)**

DSR-300Aの取り扱い、操作方法と部品の交換方法および調整などに関する情報を記載しています。
入手を希望される方は、ソニーの営業窓口にお問い合わせください。
部品番号：9-955-209-1X

- ・ **サービスマニュアル DSBK-301A (別途用意)**

インデックスピクチャーボード DSBK-301A の取り付け方法と部品レベルまでのサービスを前提とした情報 (パーツリスト, 半導体, ブロック図, 回路図, マウント図) を記載しています。

入手を希望される方は, ソニーの営業窓口にお問い合わせください。

部品番号: 9-955-216-0X

- ・ **サービスマニュアル DSBK-501 (別途用意)**

アナログコンボジットインプットボード DSBK-501 の取り付け方法と部品レベルまでのサービスを前提とした情報 (パーツリスト, 半導体, ブロック図, 回路図, マウント図) を記載しています。

入手を希望される方は, ソニーの営業窓口にお問い合わせください。

部品番号: 9-955-217-0X

- ・ **サービスマニュアル DXF-801 (別途用意)**

ビューファインダ DXF-801 の部品レベルまでのサービスを前提とした情報 (部品交換方法, 調整要項, パーツリスト, 半導体, ブロック図, 回路図, マウント図) を記載しています。

入手を希望される方は, ソニーの営業窓口にお問い合わせください。

部品番号: 9-955-212-0X

- ・ **サービスマニュアル CA-370 (別途用意)**

インターカムアダプタ CA-370 の部品レベルまでのサービスを前提とした情報 (調整要項, パーツリスト, 半導体, ブロック図, 回路図, マウント図) を記載しています。

入手を希望される方は, ソニーの営業窓口にお問い合わせください。

部品番号: 9-967-978-0X

- ・ **サービスマニュアル CA-WR855 (別途用意)**

カメラアダプタ CA-WR855 の部品レベルまでのサービスを前提とした情報 (パーツリスト, 半導体, ブロック図, 回路図, マウント図) を記載しています。

入手を希望される方は, ソニーの営業窓口にお問い合わせください。

部品番号: 9-955-215-0X

- ・ **サービスマニュアル VCT-U14 (別途用意)**

三脚アタッチメント VCT-U14 のパーツリストです。

入手を希望される方は, ソニーの営業窓口にお問い合わせください。

部品番号: 9-977-221-0X

- ・ **サービスマニュアル VCL-718BX (別途用意)**

ズームレンズ VCL-718BX のパーツリストです。

入手を希望される方は, ソニーの営業窓口にお問い合わせください。

部品番号: 9-955-211-0X

- “Semiconductor Pin Assignments” CD-ROM 版（別途用意）

この“Semiconductor Pin Assignments” CD-ROM 版は、B&P カンパニーの機器に使用されている半導体を検索することができます。

このCD-ROMで検索できない半導体は、その半導体が使用されている機種の手冊に記載されています。手冊には、その機種に使用されているすべての半導体一覧とそのID番号を記載していますので、このCD-ROM版と合わせて使用してください。

部品番号：9-968-546-XX

構成

本書の構成を把握していただくために、全章の概略を以下に説明します。

Section 1 Parts List

分解図および機構部品リスト、電機部品リストを記載しています。

Section 2 Semiconductor Pin Assignments

本機で使用している半導体の型名一覧とその半導体標準図検索用ID番号を記載しています。

別売の“Semiconductor Pin Assignments” CD-ROM 版と合わせてご覧ください。また、本書作成時に、CD-ROM版に含まれていない半導体標準図がある場合は、本章に追加掲載しています。

Section 3 Block Diagrams

各基板の機能や信号の流れを示すブロック図を記載しています。

Section 4 Schematic Diagrams and Frame Wiring

全プリント基板の回路図とフレーム図を記載しています。

Section 5 Board Layouts

基板のマウント図を記載しています。

Manual Structure

Purpose of this manual

This manual is the Service Manual Vol. 2 of the digital camcorder DSR-390/390P/370/370P/300A/300AP.

This manual is intended for use by trained service engineers, and describes information (parts lists, semiconductor pin assignments, block diagrams, schematic diagrams and board layouts) on the premise of component level service.

Related manuals

Besides to this Service Manual Vol. 2, the following manuals are provided.
For obtaining, contact your local Sony Sales Office/Service Center.

- **Operating Instructions DSR-390/390P (Supplied with the DSR-390/390P)**

This manual is necessary for application and operation of the DSR-390/390P.

For obtaining, contact your local Sony Sales Office/Service Center.

Part No. 3-776-645-1X

- **CD-ROM Manual DSR-390/390P (Supplied with the DSR-390/390P)**

This manual contains the Japanese, English, French, German, Italian, and Spanish operating instructions (PDF) of the DSR-390/390P.

For obtaining, contact your local Sony Sales Office/Service Center.

Part No. 3-776-663-0X

- **Operating Instructions DSR-370/370P (Supplied with the DSR-370/370P)**

This manual is necessary for application and operation of the DSR-370/370P.

For obtaining, contact your local Sony Sales Office/Service Center.

Part No. 3-206-359-1X

- **CD-ROM Manual DSR-370/370P (Supplied with the DSR-370/370P)**

This manual contains the Japanese, English, French, German, Italian, and Spanish operating instructions (PDF) of the DSR-370/370P.

For obtaining, contact your local Sony Sales Office/Service Center.

Part No. 3-691-094-0X

- **Service Manual Vol. 1 DSR-390/390P/370/370P (Available on request)**

Contains the information on operation, the part replacement and adjustments of the DSR-390/390P/370/370P.

For obtaining, contact your local Sony Sales Office/Service Center.

Part No. 9-967-974-0X

- **Service Manual Vol. 1 DSR-300A/300AP (Available on request)**

Contains the information on operation, the part replacement and adjustments of the DSR-300A/300AP.

For obtaining, contact your local Sony Sales Office/Service Center.

Part No. 9-955-210-1X

- **Service Manual DSBK-301A (Available on request)**

Contains the information on installation, and the information on the premise of component level service (parts list, semiconductor pin assignments, block diagrams, schematic diagrams and board layouts) of the index picture board DSBK-301A.

For obtaining, contact your local Sony Sales Office/Service Center.

Part No. 9-955-216-0X

- **Service Manual DSBK-501/501P (Available on request)**

Contains the information on installation, and the information on the premise of component level service (parts list, semiconductor pin assignments, block diagrams, schematic diagrams and board layouts) of the analog composite input board DSBK-501/501P.

For obtaining, contact your local Sony Sales Office/Service Center.

Part No. 9-955-217-0X

- **Service Manual DXF-801/801CE (Available on request)**

Contains the information on the premise of component level service (part replacement, alignment, parts list, semiconductor pin assignments, block diagrams, schematic diagrams and board layouts) of the viewfinder DXF-801/801CE.

For obtaining, contact your local Sony Sales Office/Service Center.

Part No. 9-955-212-0X

- **Service Manual CA-370 (Available on request)**

Contains the information on the premise of component level service (alignment, parts list, semiconductor pin assignments, block diagrams, schematic diagrams and board layouts) of the intercom adaptor CA-370.

For obtaining, contact your local Sony Sales Office/Service Center.

Part No. 9-967-978-0X

- **Service Manual CA-WR855 (Available on request)**

Contains the information on the premise of component level service (parts list, semiconductor pin assignments, block diagrams, schematic diagrams and board layouts) of the camera adaptor CA-WR855.

For obtaining, contact your local Sony Sales Office/Service Center.

Part No. 9-955-215-0X

- **Service Manual VCT-U14 (Available on request)**

Contains the parts list of the tripod adaptor VCT-U14.

For obtaining, contact your local Sony Sales Office/Service Center.

Part No. 9-977-221-0X

- **Service Manual VCL-718BX (Available on request)**

Contains the parts list of the zoom lens VCL-718BX.

For obtaining, contact your local Sony Sales Office/Service Center.

Part No. 9-955-211-0X

- **“Semiconductor Pin Assignments” CD-ROM (Available on request)**

This “Semiconductor Pin Assignments” CD-ROM allows you to search for semiconductors used in B&P Company equipment.

Semiconductors that cannot be searched for on this CD-ROM are listed in the service manual for the corresponding unit. The service manual contains a complete list of all semiconductors and their ID Nos., and thus should be used together with the CD-ROM.

Part number: 9-968-546-XX

Contents

The following is a summary of all the sections for understanding the contents of this manual.

Section 1 Parts List

Contains the exploded views, the mechanical parts list, and the electrical parts list.

Section 2 Semiconductor Pin Assignments

Contains information on semiconductors used for the unit.

It includes a complete list of the semiconductors and their ID Nos. for retrieving information on “Semiconductor Pin Assignments” CD-ROM, which is available separately.

Please refer to this section together with the “Semiconductor Pin Assignments” CD-ROM.

Information on the semiconductors not contained in the CD-ROM at the time of issue of this manual, if any, is given in this section as well.

Section 3 Block Diagrams

Contains the block diagrams which show each board function and signal flow.

Section 4 Schematic diagrams and Frame Wiring

Contains the schematic diagrams of all circuit boards and the frame wiring.

Section 5 Board Layouts

Contains the board layouts for the unit.

Section 1

Spare Parts

1-1. Notes on Repair Parts

1. Safety Related Components Warning

WARNING

Components marked Δ are critical to safe operation. Therefore, specified parts should be used in the case of replacement.

2. Standardization of Parts

Some repair parts supplied by Sony differ from those used for the unit. These are because of parts commonality and improvement.

Parts list has the present standardized repair parts.

3. Stock of Parts

Parts marked with "o" at SP (Supply Code) column of the spare parts list may not be stocked. Therefore, the delivery date will be delayed.

4. Harness

Harnesses with no part number are not registered as spare parts.

In need of repair, get components shown in the list and repair using them.

1-1. 補修部品注意事項

1. 安全重要部品

Δ 警告

Δ 印のついた部品は安全性を維持するために重要な部品です。したがって、交換する時は必ず指定の部品を使ってください。

2. 部品の共通化

ソニーから供給する補修用部品は、セットに使われているものと異なることがあります。

これは部品の共通化、改良等によるものです。

部品表には現時点での共通化された補修用部品が記載されています。

3. 部品の在庫

部品表のSP (Supply code) 欄に "o" で示される部品は在庫していないことがあり、納期が長くなることがあります。


4. ハーネス

部品番号が記載されていないハーネスは、サービス部品として登録されていません。

これらは、リストに展開されているコンポーネント部品で補修してください。

Left/Right Panel Block

1-2. Exploded Views

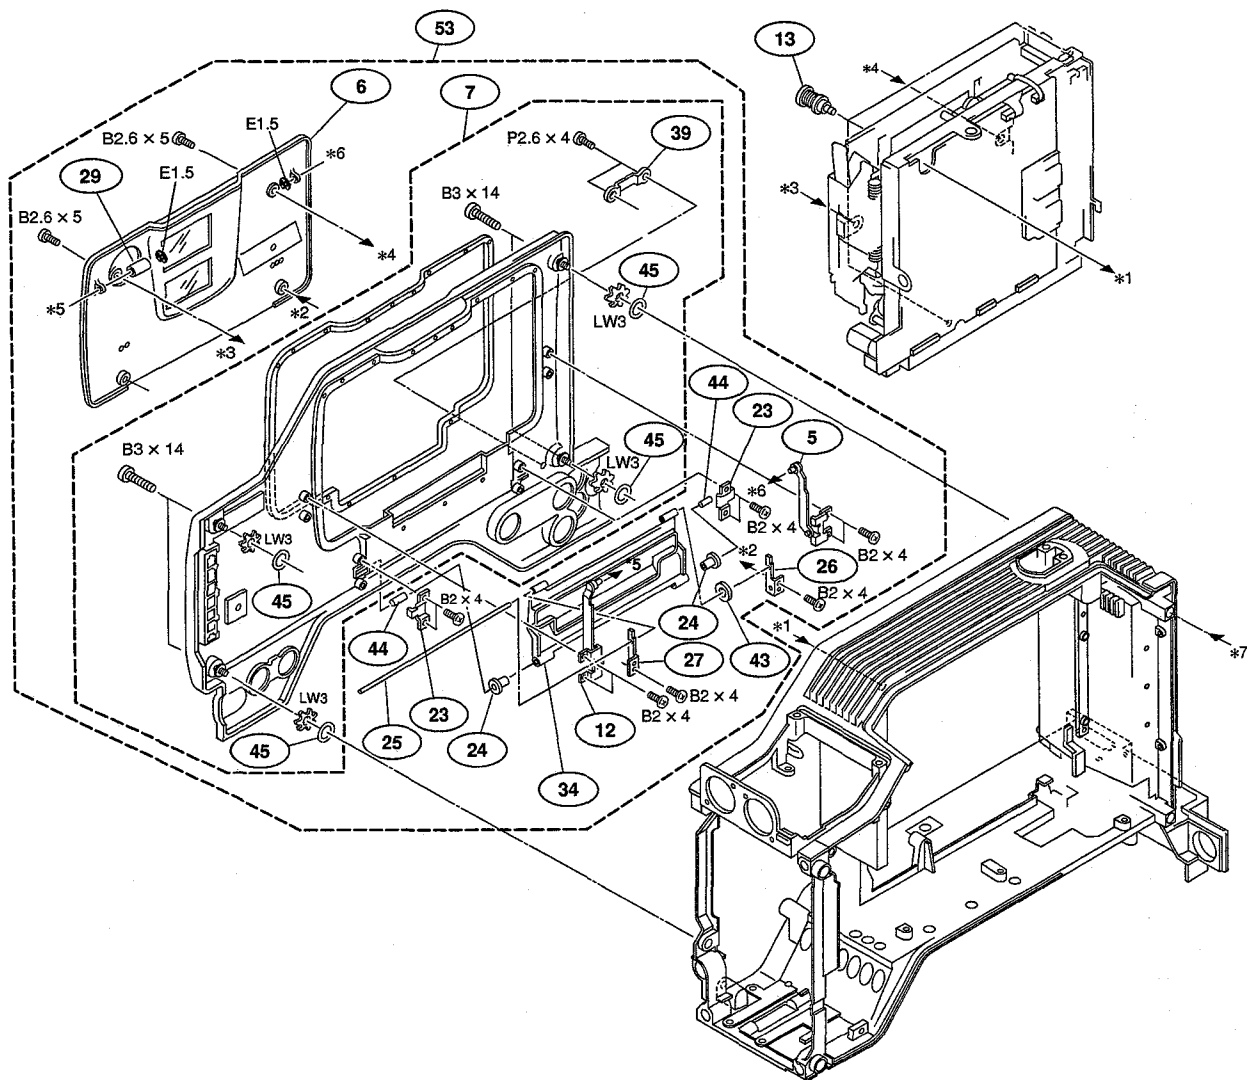


No. Part No. SP Description

- | | | |
|---|--------------|---|
| 1 | A-8324-994-A | o MOUNTED CIRCUIT BOARD, FP-122 [for DSR-300A/300AP] |
| | A-8329-963-A | s MOUNTED CIRCUIT BOARD, FP-118A [for DSR-390/390P/370/370P] |
| 2 | A-8318-188-A | o MOUNTED CIRCUIT BOARD, KY-405 |
| 3 | A-8322-170-A | o MOUNTED CIRCUIT BOARD, GCN-16 |
| 4 | A-8318-233-A | o MOUNTED CIRCUIT BOARD, FP-99 |
| 5 | X-3604-530-1 | o SUPPORT L-M ASSEMBLY, ARM |
| 6 | X-3604-535-4 | s LID ASSEMBLY, CASSETTE COMPARTMENT [for DSR-300A/300AP] |
| | X-3608-412-1 | s LID ASSY, CASSETTE COMPARTMENT [for DSR-390/390P/370/370P] |
| 7 | X-3604-536-7 | o L PANEL SUB ASSEMBLY [for DSR-300A/300AP] |
| | X-3608-409-2 | o PANEL SUB ASSY, L [for DSR-390/390P/370/370P] |
| 8 | 3-612-570-03 | o PAD, R |
| 9 | X-3604-538-5 | s COVER ASSEMBLY, FP [for DSR-300A/300AP] |
| | X-3608-410-2 | s COVER ASSY, FP [for DSR-370/370P] |
| | X-3608-603-1 | s ASSY, SIDE PANEL [for DSR-390/390P] |

No. Part No. SP Description

- | | | |
|----|--------------|--|
| 10 | X-3605-822-5 | s R PANEL SUB ASSEMBLY(A) [for DSR-300A/300AP] |
| | X-3608-413-4 | o SUB ASSY, R PANEL (B) [for DSR-390/390P/370/370P] |
| 11 | X-3605-818-1 | o KEY PANEL SUB ASSEMBLY [for DSR-300A/300AP] |
| | X-3608-411-2 | o SUB ASSY, KEY PANEL [for DSR-390/390P/370/370P] |
| 12 | X-3678-799-5 | o SUPPORT L ASSEMBLY, ARM |
| 13 | X-3678-976-3 | s SCREW ASSEMBLY, MD |
| 14 | 1-473-406-11 | s ENCODER, ED JOG, SW-929 |
| 15 | 1-544-559-11 | s SPEAKER |
| 16 | 1-550-414-31 | s HOLDER, BATTERY |
| 17 | 1-528-174-31 | s BATTERY, LITHIUM(CR2032 TYPE) |
| 18 | 1-777-902-11 | o CABLE, FLAT TYPE(10-CORE) |
| 19 | 1-783-363-11 | s CABLE, FLAT TYPE(10-CORE) |
| 20 | 3-176-488-01 | s SHEET, VR |
| 21 | 3-604-358-01 | o KNOB(H), SW |
| 22 | 3-604-373-03 | o COVER, BATTERY |
| 23 | 3-604-805-01 | o CLAMP B, SHAFT |
| 24 | 3-604-806-01 | o SUPPORT, SHAFT |

Left/Right Panel Block

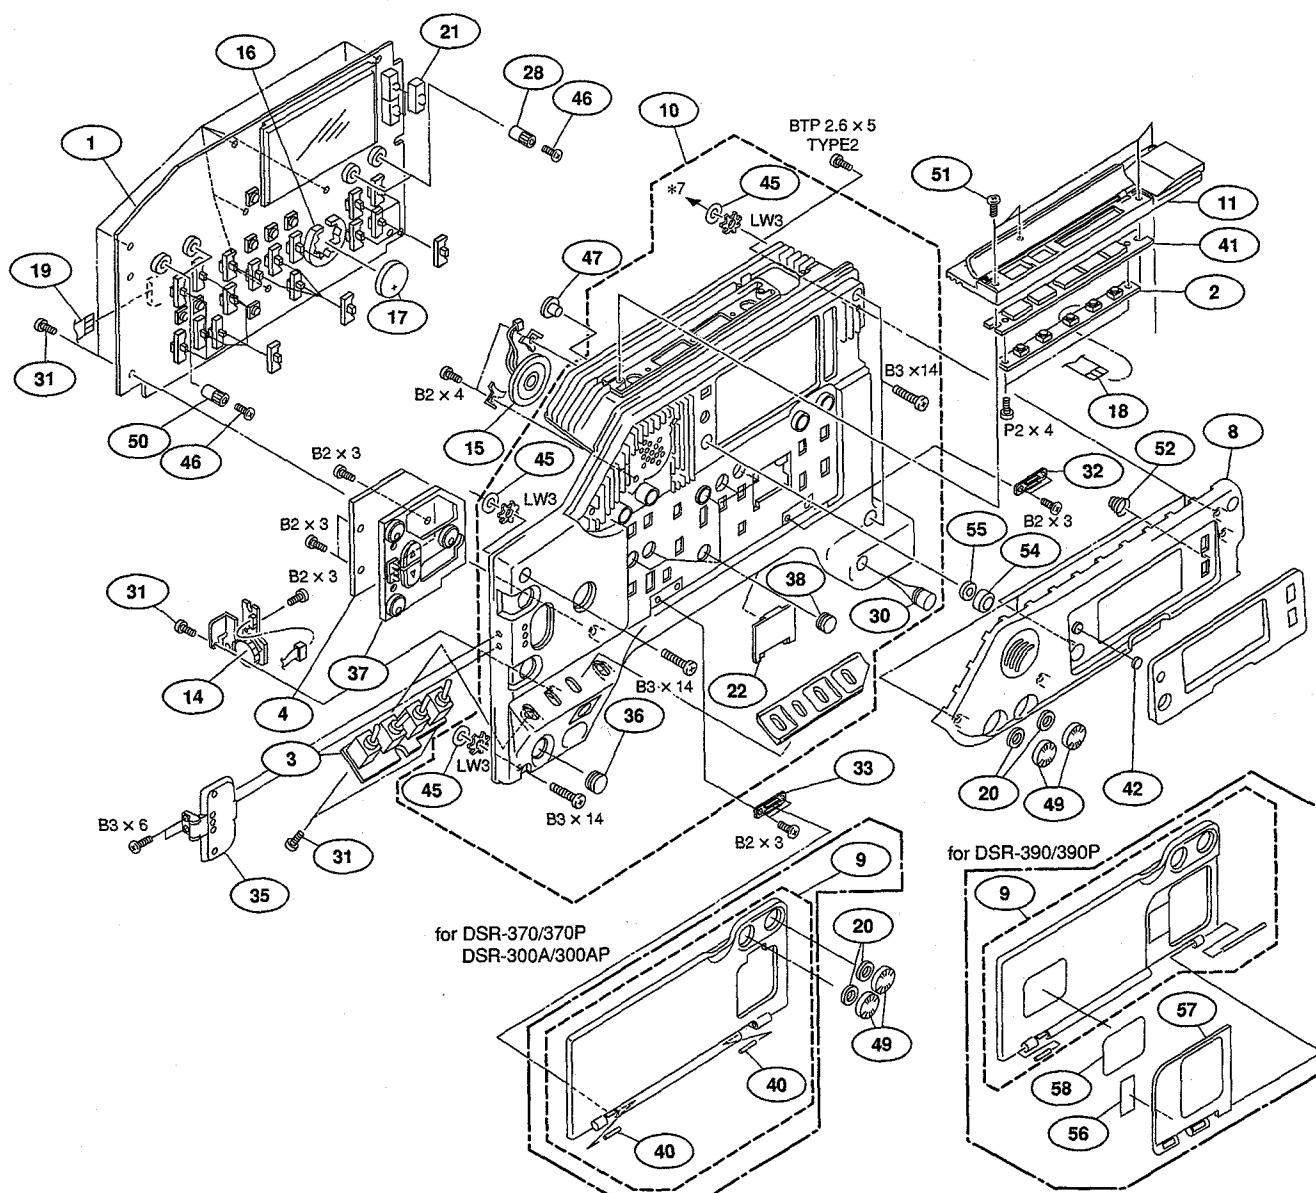

No. Part No. SP Description

25 3-604-889-01 o SHAFT R1, ARM
 26 3-604-897-01 o FL, SUPPORT
 27 3-604-898-01 o FR, SUPPORT
 28 3-605-437-01 o SUPPORT, KNOB
 29 3-605-946-01 o ROLLER, F

30 3-607-206-02 s FOOT, RUBBER
 31 3-625-924-01 o ALOCK SCREW, +B2.6NI
 32 3-612-529-01 s HINGE(F), FP
 33 3-612-530-01 s HINGE(R), FP
 34 3-612-572-02 o SUPPORT PANEL, SUB
 [for DSR-300A/300AP]
 3-612-572-21 o SUPPORT PANEL, SUB
 [for DSR-390/390P/370/370P]

35 X-3605-488-1 s SWITCH GUARD ASSEMBLY
 36 3-612-632-02 s COVER, SW(H)
 37 3-612-674-01 s COVER, SWITCH
 38 3-676-244-21 s COVER, SWITCH
 39 3-617-811-01 s HOLDER, CLAMP
 40 3-703-358-09 o PIN, PARALLEL (DIA. 2X25)

No. Part No. SP Description

41 3-679-501-01 o COVER, RUBBER KEY BOARD
 42 3-717-936-03 s COVER, LED
 43 3-701-437-11 s WASHER
 44 3-703-358-06 s PIN, PARALLEL (DIA. 2X14)
 45 3-672-250-01 s RING (M2.6), O

46 3-704-244-41 s SCREW (P1.7X3.0)
 47 3-718-694-01 s PIN, PUSH BUTTON
 49 3-724-755-04 s KNOB (F), VR
 50 3-744-304-01 s KNOB (SUPPORT)
 51 7-627-556-58 s SCREW, PRECISION +P2.6X5


52 3-622-568-01 o SPRING, GROUND
 53 A-8278-791-H o PANEL ASSY, L [for DSR-300A/300AP]
 A-8279-674-A o PANEL ASSY, L
 [for DSR-390/390P/370/370P]

54 3-679-086-01 o BUTTON, PUSH
 55 3-686-086-01 s CUSHION, BUTTON
 56 3-790-024-01 s MAGNET, SP [for DSR-390/390P]


57 3-790-026-01 s DOOR, SIDE PANEL
 [for DSR-390/390P]
 58 3-790-029-01 s WINDOW, DOOR (VTR TRIGGER)
 [for DSR-390/390P]

Bottom/Rear Frame

| No. | Part No. | SP Description |
|-----|--------------|--|
| 101 | A-8278-413-E | s PLATE, CP ASSEMBLY |
| 102 | A-8278-790-C | o PANEL ASSEMBLY, BOTTOM [for DSR-300A/300AP] |
| | A-8279-670-A | o PANEL ASSY, BOTTOM (A) [for DSR-390/390P/370/370P] |
| 103 | A-8278-792-D | o PANEL ASSEMBLY, REAR |
| 104 | A-8278-807-D | s PAD ASSEMBLY, SHOULDER |
| 105 | A-8317-811-A | o MOUNTED CIRCUIT BOARD, CN-1519 [for DSR-300A/300AP] |
| | A-8329-788-A | s MOUNTED CIRCUIT BOARD, CN-2277 [for DSR-390/390P/370/370P] |
| 106 | A-8318-040-A | o MOUNTED CIRCUIT BOARD, CP-315 [for DSR-300A/300AP] |
| | A-8329-787-A | s MOUNTED CIRCUIT BOARD, CP-373 [for DSR-390/390P/370/370P] |
| 107 | A-8322-176-A | o MOUNTED CIRCUIT BOARD, PS-570 |
| 108 | A-8327-543-A | s CONVERTER ASSY, DD |
| 109 | 1-563-929-11 | s CONNECTOR, 4P FEMALE "DC OUT" |
| 110 | 1-572-042-11 | s SWITCH, SLIDE |
| 111 | 1-573-590-13 | s CONNECTOR, S-TERMINAL 4P FEMALE "S VIDEO OUT" |
| 112 | 1-673-955-11 | o PRINTED WIRING BOARD, CN-1873 |
| 113 | 1-766-386-14 | s CONNECTOR, XLR 3P FEMALE "AUDIO IN CH-1/CH2" |
| 114 | 1-766-566-11 | o CONNECTOR, 26P MALE "EXT VTR" |
| 115 | 1-778-787-13 | o CONNECTOR, COAXIAL BNC "GENLOCK IN /TC IN/TC OUT/MONITOR OUT" |
| 116 | 1-778-788-11 | o JACK, 2P "AUDIO OUT CH-1/CH-2" |
| 117 | 1-958-497-12 | s HARNESS, SUB (BATTERY) |
| 118 | 3-604-359-01 | o ADAPTOR, SW |
| 119 | 3-604-376-01 | o PLATE, CP |
| 121 | 3-613-330-01 | s ALOCK SCREW, PRECISION +P2.6X6 |
| 122 | 3-613-650-01 | s SPACER |
| 123 | 3-679-648-02 | o SPRING, COMPRESSION |
| 124 | 3-679-688-02 | o LEVER, RELEASE |
| 125 | 3-680-952-02 | o KNOB, RELEASE LEVER |
| 126 | 3-711-703-01 | o STOPPER |
| 127 | 3-718-694-01 | s PIN, PUSH BUTTON |
| 128 | 3-729-076-01 | s SCREW, (+B2X3) |
| 129 | 3-622-445-02 | s SCREW, (+B3X18) |
| 130 | 4-622-069-01 | s SUPPORT, MODEM |
| 131 | 1-958-496-12 | s HARNESS, SUB (POWER LINE) |
| 132 | 3-625-924-01 | s ALOCK SCREW, +B2.6 NI |
| 133 | A-8322-181-B | o MOUNTED CIRCUIT BOARD, CN-1823 |
| 134 | 3-617-827-02 | s COVER, DV |
| 135 | 3-617-828-02 | o BOX, DV [for DSR-300A/300AP] |
| | 3-617-828-11 | o BOX, DV [for DSR-390/390P/370/370P] |
| 136 | 3-719-381-11 | s SCREW, (M2X5) |
| 137 | 7-627-553-38 | s SCREW, PRECISION +P2X3 |
| 138 | 3-364-941-01 | s SCREW (+B) (2.6X5), NYLOK |

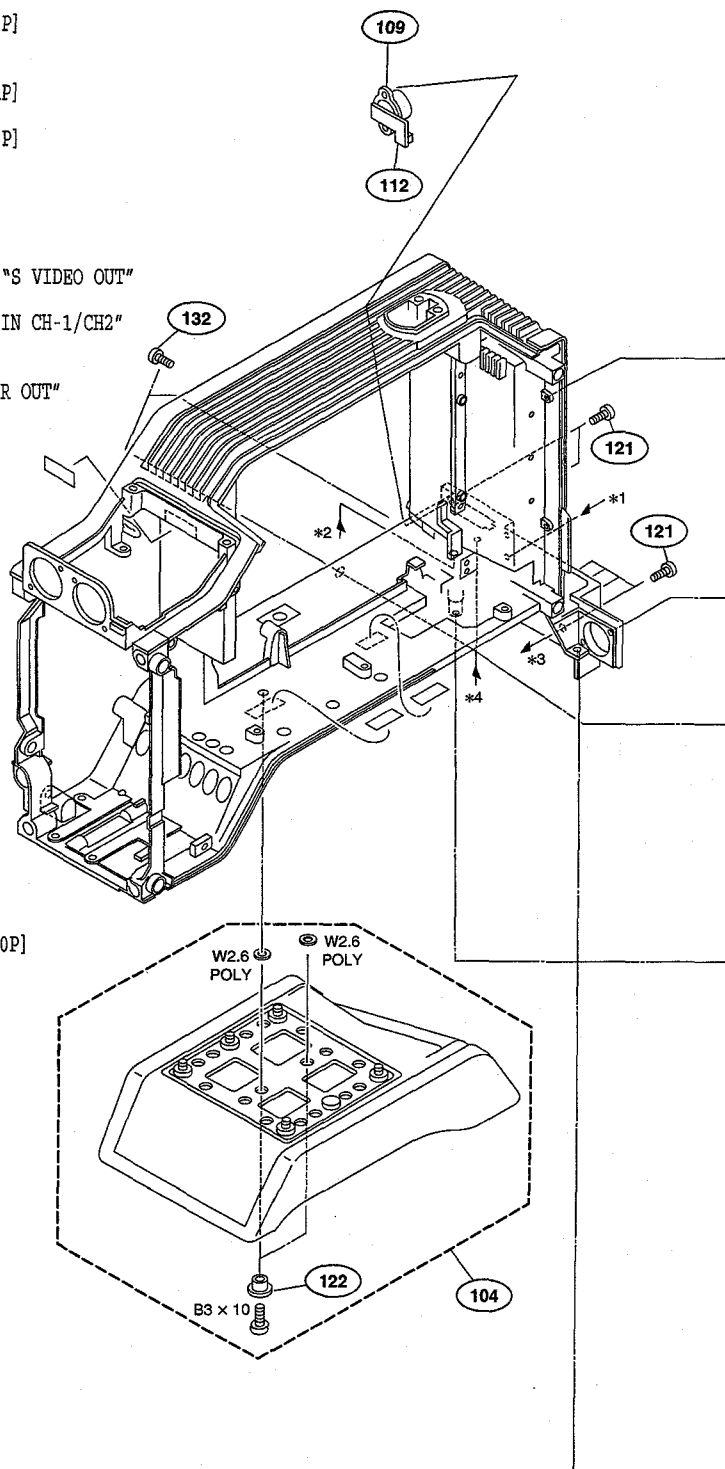


Bottom/Rear Frame

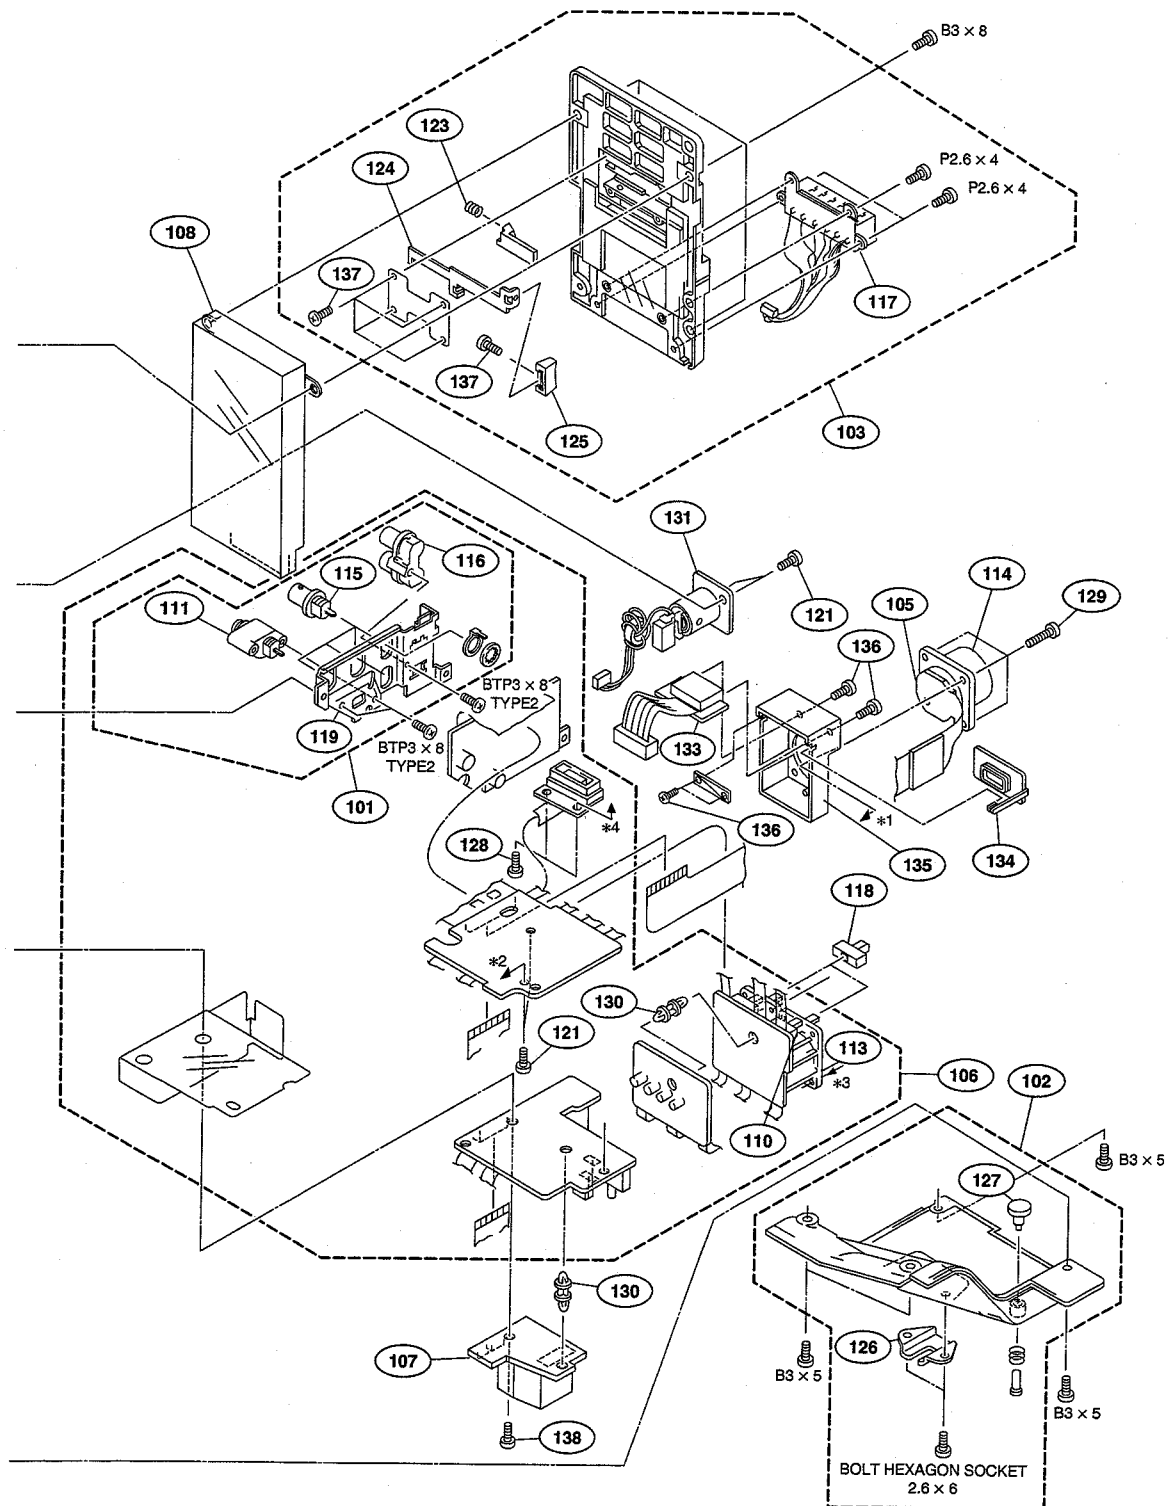

Front Frame/Chassis Block/Boards


| No. | Part No. | SP Description | No. | Part No. | SP Description |
|-----|--------------|--|-----|--------------|--|
| 201 | A-8322-150-B | o MOUNTED CIRCUIT BOARD, MB-833 | 211 | A-8325-104-A | o MOUNTED CIRCUIT BOARD, DV-21C/21A [for DSR-300A/300AP] |
| 202 | A-8324-988-A | o MOUNTED CIRCUIT BOARD, DPR-141A [for DSR-300A/300AP] | | A-8344-126-A | s MOUNTED CIRCUIT BOARD, DV-21C [for DSR-390/390P/370/370P] |
| | A-8344-130-A | s MOUNTED CIRCUIT BOARD, DPR-141C [for DSR-390/390P/370/370P] | 212 | 3-729-013-41 | s SCREW (M1.4X3.5), WASHERHEAD (+P) |
| 203 | A-8324-990-A | o MOUNTED CIRCUIT BOARD, ES-31 [for DSR-390/370/300A] | 213 | 1-562-221-31 | s CONNECTOR, 12P FEMALE "LENS" |
| | A-8324-992-A | o MOUNTED CIRCUIT BOARD, ES-31 (P) [for DSR-390P/370P/300AP] | 214 | 1-562-382-31 | s CONNECTOR, BNC "VIDEO OUT" |
| 204 | A-8324-984-A | o MOUNTED CIRCUIT BOARD, VA-199 | 215 | 1-565-443-11 | s CONNECTOR, 10P FEMALE "REMOTE" |
| 205 | A-8324-996-A | o MOUNTED CIRCUIT BOARD, AT-142 [for DSR-300A/300AP] | 216 | 1-570-984-11 | s SWITCH, TOGGLE |
| | A-8329-857-A | s MOUNTED CIRCUIT BOARD, AT-150 [for DSR-390/390P/370/370P] | 217 | 1-673-954-11 | o PRINTED WIRING BOARD, DU-36 |
| 206 | A-8322-177-A | o MOUNTED CIRCUIT BOARD, SW-19 | 218 | 1-764-394-11 | s CONNECTOR, XLR 3P FEMALE "MIC IN +48V" |
| 207 | A-8322-168-A | o MOUNTED CIRCUIT BOARD, CN-1865 | 219 | 1-777-865-13 | s CABLE, FLEXIBLE FLAT (40-CORE) |
| 208 | A-8322-167-A | o MOUNTED CIRCUIT BOARD, CN-1864 | 220 | 1-777-866-12 | s CABLE, FLEXIBLE FLAT (45-CORE) |
| 209 | A-8322-165-B | o MOUNTED CIRCUIT BOARD, AA-104 | 221 | 1-777-867-12 | s CABLE, FLEXIBLE FLAT (50-CORE) |
| 210 | A-8322-174-A | o MOUNTED CIRCUIT BOARD, PSW-71 | 222 | 1-783-282-14 | s CABLE, FLEXIBLE FLAT (50-CORE) |
| | | | 223 | 1-783-283-13 | s CABLE, FLEXIBLE FLAT (50-CORE) |
| | | | 224 | 1-677-405-11 | s FLEXIBLE PRINTED WIRING BOARD, CN-1981 |
| | | | 225 | 1-783-285-13 | s CABLE, FLEXIBLE FLAT (50-CORE) |

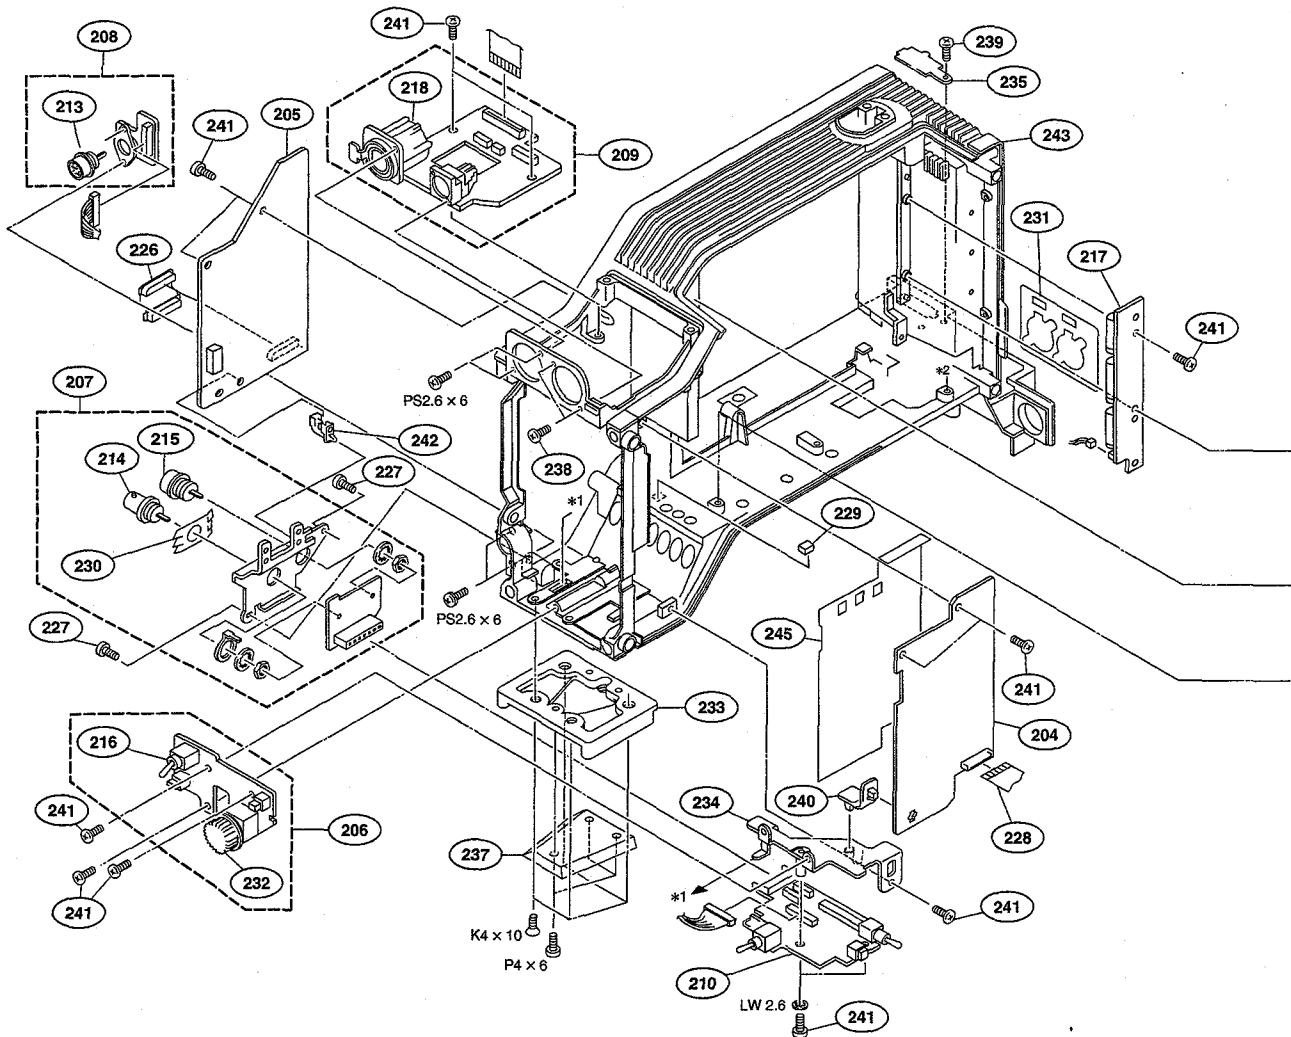

Front Frame/Chassis Block/Boards


| No. | Part No. | SP Description |
|-----|--------------|----------------------------------|
| 226 | A-8322-163-A | s MOUNTED CIRCUIT BOARD, CN-1811 |
| 227 | 3-614-427-01 | s ALOCK SCREW, +B3X6 |
| 228 | 1-783-288-13 | s CABLE, FLEXIBLE FLAT (30-CORE) |
| 229 | 3-625-908-01 | o SPACER |
| 230 | 3-604-416-01 | o SHIELD FINGER (CN) |
| 231 | 3-612-575-01 | o LABEL, BOX |
| 232 | 3-612-604-01 | s KNOB, VR(AUDIO) |
| 233 | 3-612-631-01 | o SHOE(S), CAMERA |
| 234 | 3-612-663-02 | s BRACKET, PSW |
| 235 | 3-612-698-02 | o COVER, CN(WIRELESS) |
| 236 | 3-612-743-03 | s SHEET, FP-122 |
| 237 | 3-716-391-01 | o WEDGE, MOUNTING |
| 238 | 3-729-076-21 | s SCREW, +B2X6 |
| 239 | 3-965-077-01 | s SCREW, SPECIAL (M2) |
| 240 | 4-313-732-00 | o CLIP, HINGE, CIRCUIT BOARD |


| No. | Part No. | SP Description |
|-----|--------------|-------------------------------------|
| 241 | 3-625-924-01 | s ALOCK SCREW, +B2.6NI |
| 242 | 3-175-660-01 | o HINGE, PC BOARD |
| 243 | 3-613-310-15 | o FRAME [for DSR-300A/300AP] |
| | 3-613-310-22 | o FRAME [for DSR-390/390P/370/370P] |
| 244 | X-3604-621-1 | o SHEET, DUST PROTECTION ASSEMBLY |
| 245 | 3-690-627-01 | o SHEET, VA |

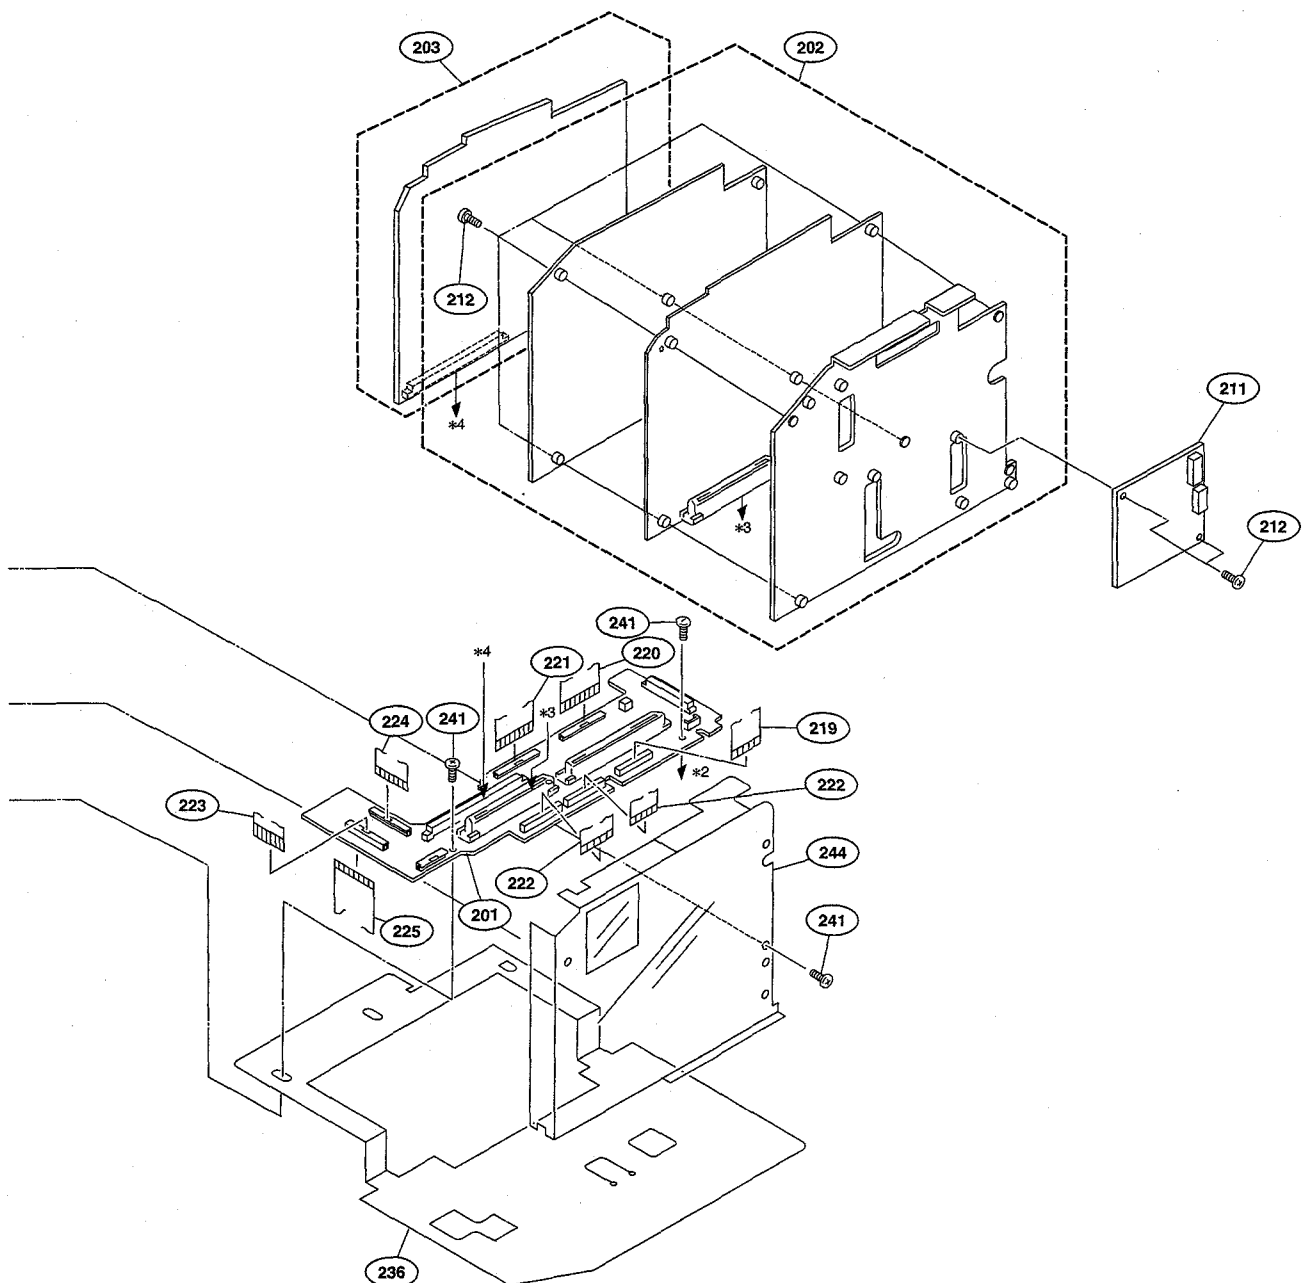


CCD Block

| No. | Part No. | SP Description |
|-----|--------------|--|
| 301 | A-8325-511-A | s CCD UNIT-R300A(N) [for DSR-370/300A] |
| | A-8325-512-A | s CCD UNIT-R300A(P) [for DSR-370P/300AP] |
| | A-8346-741-A | s CCD UNIT-R390(N) [for DSR-390] |
| | A-8346-742-A | s CCD UNIT-R390(P) [for DSR-390P] |
| 302 | 1-547-463-22 | o FILTER UNIT, OPTICAL |
| 303 | 3-604-391-01 | o COVER, SW(M) |
| 304 | 3-184-550-31 | s SCREW, + B2.6NI |
| 305 | 3-612-608-01 | o FIXING PLATE, FILTER |
| 306 | 3-612-636-01 | o GLASS, FILTER(5600K+1/8ND) |
| | 3-612-636-11 | o GLASS, FILTER(5600K+1/64ND) |
| | 3-708-372-01 | o GLASS, FILTER(3200K) |
| | 3-708-372-21 | o GLASS, FILTER(5600K) |
| | 3-200-281-01 | o GLASS, FILTER(CROSS) [OPTIONAL] |
| 307 | 3-612-853-02 | o PANEL, FRONT [for DSR-300A/300AP] |
| | 3-612-853-11 | o PANEL, FRONT [for DSR-390/390P/370/370P] |
| 308 | 3-672-221-02 | s PACKING, VR |
| 309 | 3-672-250-01 | s RING (M2.6), O |
| 310 | A-8318-219-A | s MOUNTED CIRCUIT BOARD, TG-187 [for DSR-390/370/300A] |
| | A-8318-242-A | s MOUNTED CIRCUIT BOARD, TG-187P [for DSR-390P/370P/300AP] |
| 311 | 3-678-684-00 | o HOLDER, CABLE |
| 312 | 3-686-269-02 | s STOPPER, MOUNT |
| 313 | 3-688-781-02 | s KNOB, FILTER |
| 314 | 3-699-144-02 | s CAP, MOUNT |
| 315 | 3-701-506-01 | s SET SCREW, DOUBLE POINT 3X4 |
| 316 | 7-627-452-28 | s SCREW, PRECISION +K2X4 |
| 317 | 7-627-552-88 | s SCREW, PRECISION +P1.7X2.2 |
| 318 | 3-175-632-01 | o PLATE, GUIDE |
| 319 | 3-626-792-01 | o RING, MOUNT(D) |
| 320 | 7-627-551-78 | o SCREW, PRECISION +P1.4X4 |
| 321 | 3-729-076-11 | s SCREW +B2X4(STEEL) |

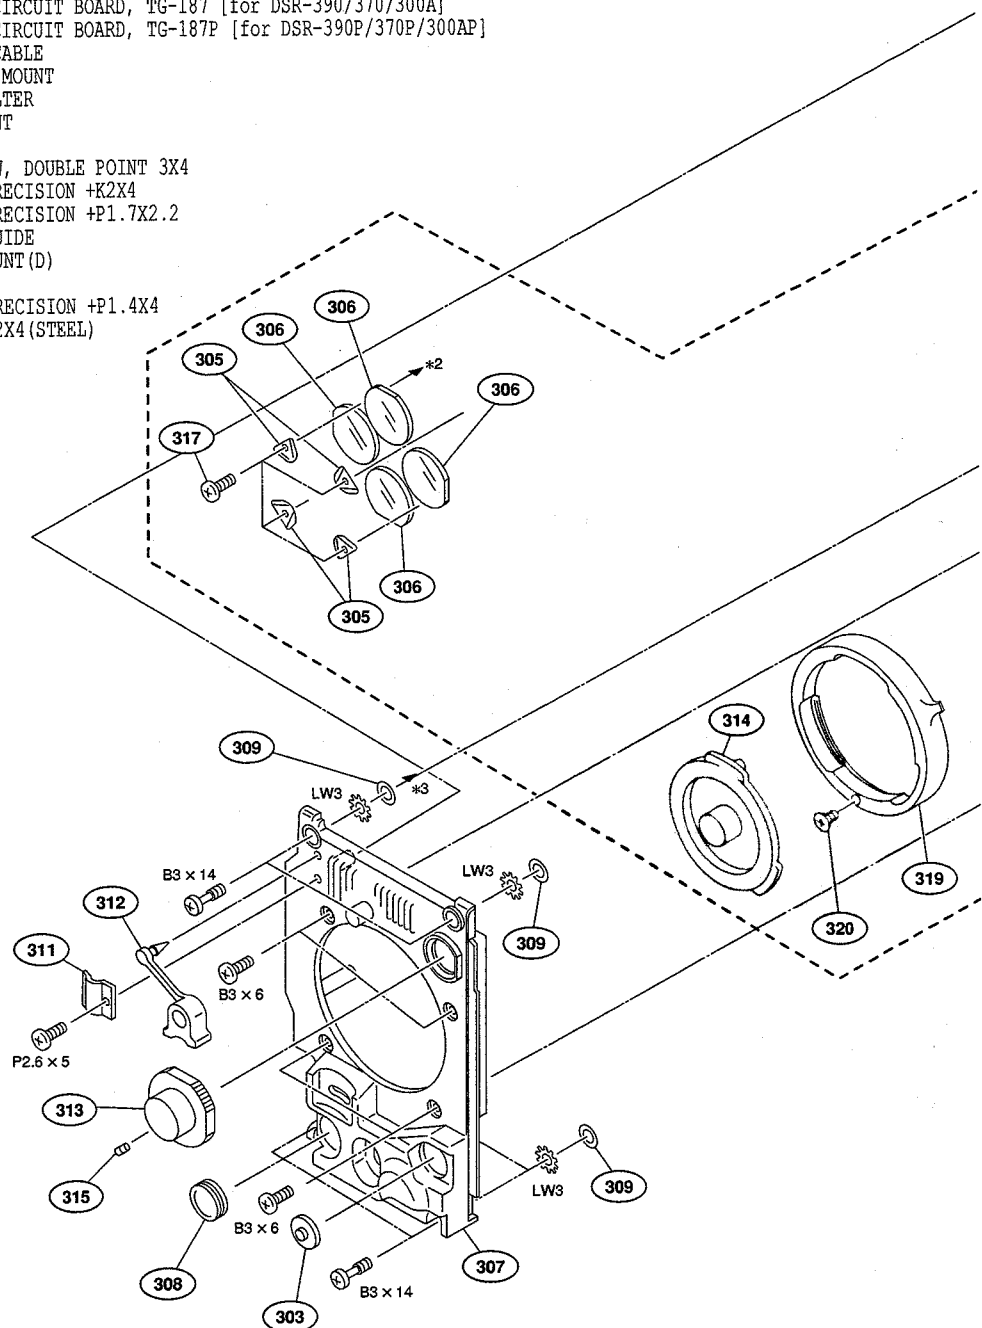


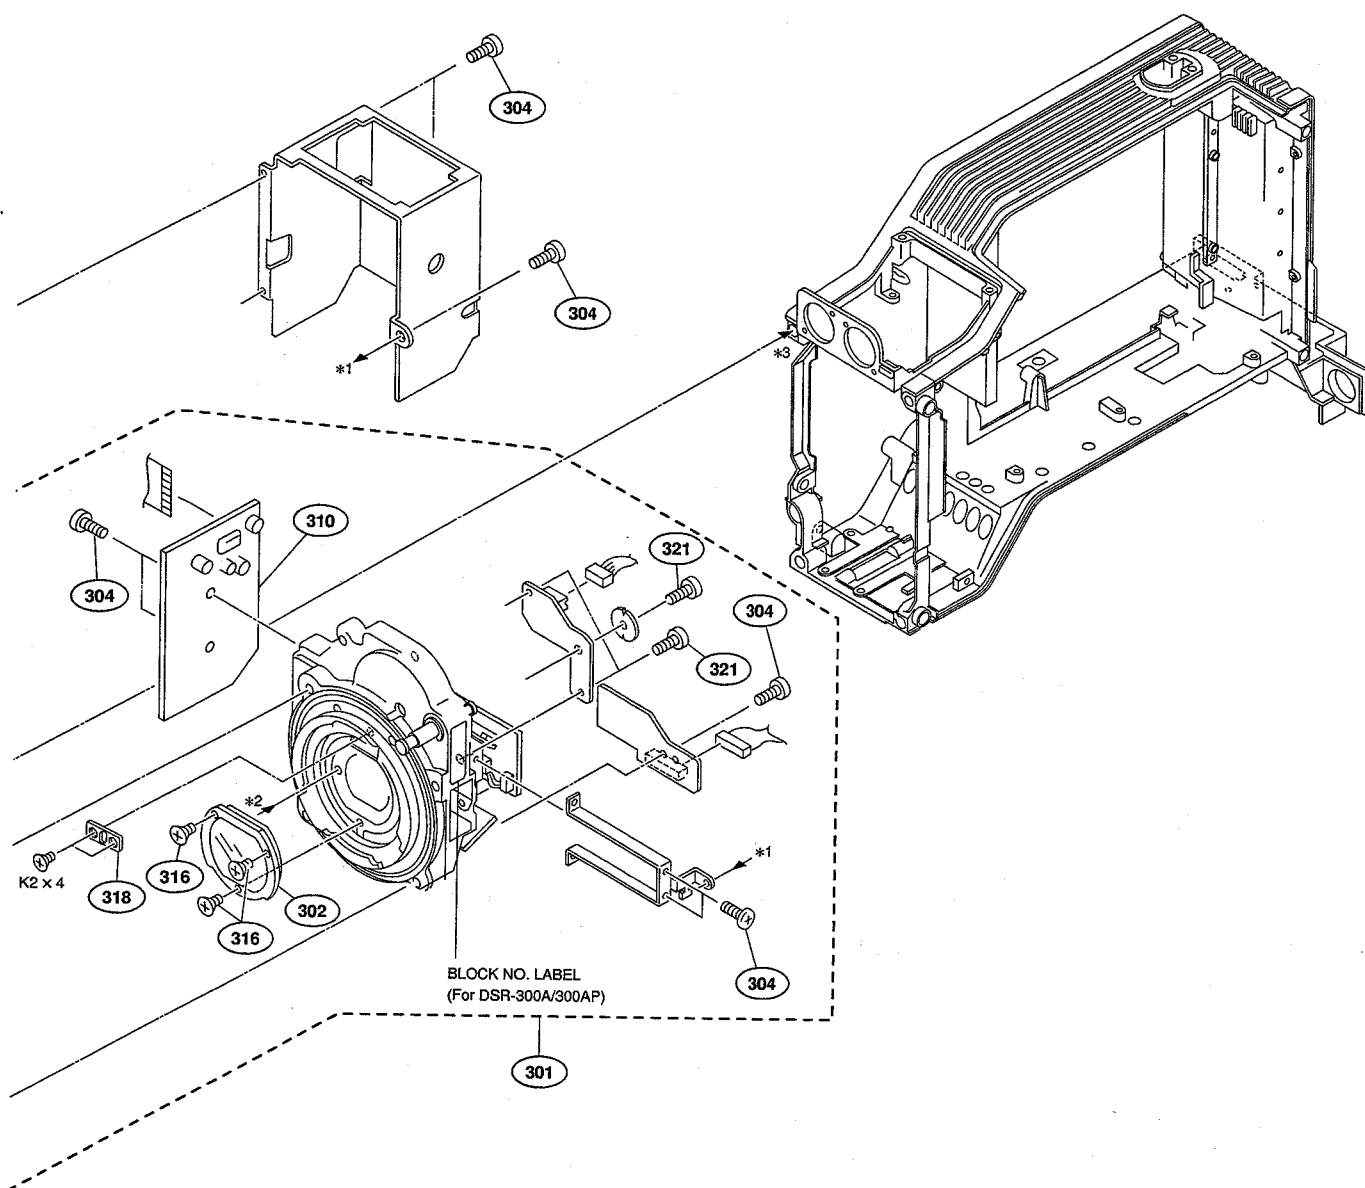


Handle Block

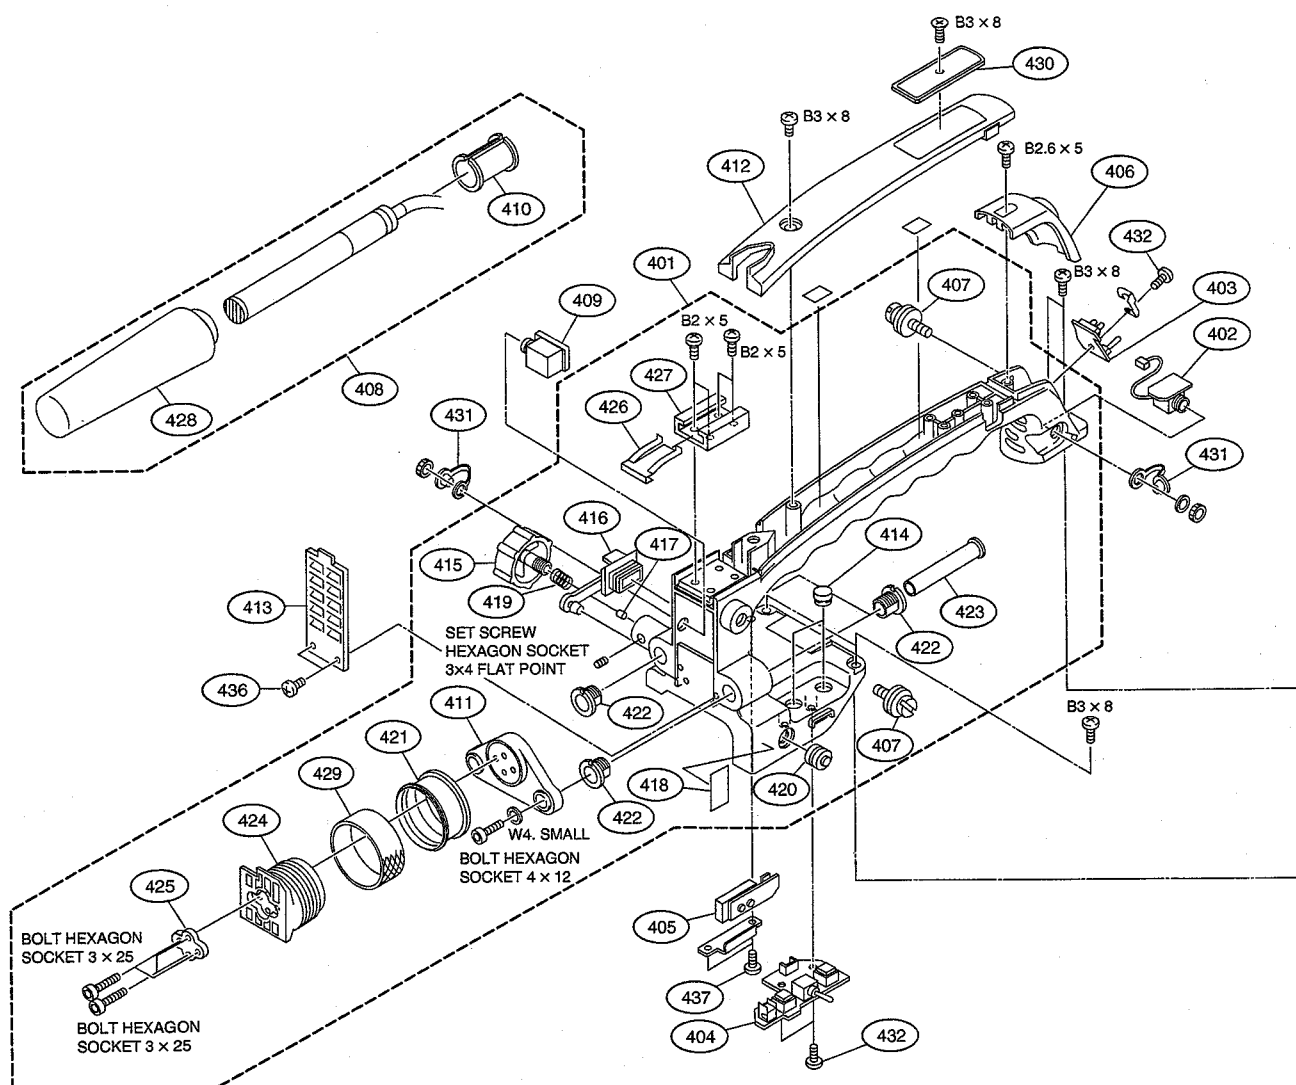


Gear (1)

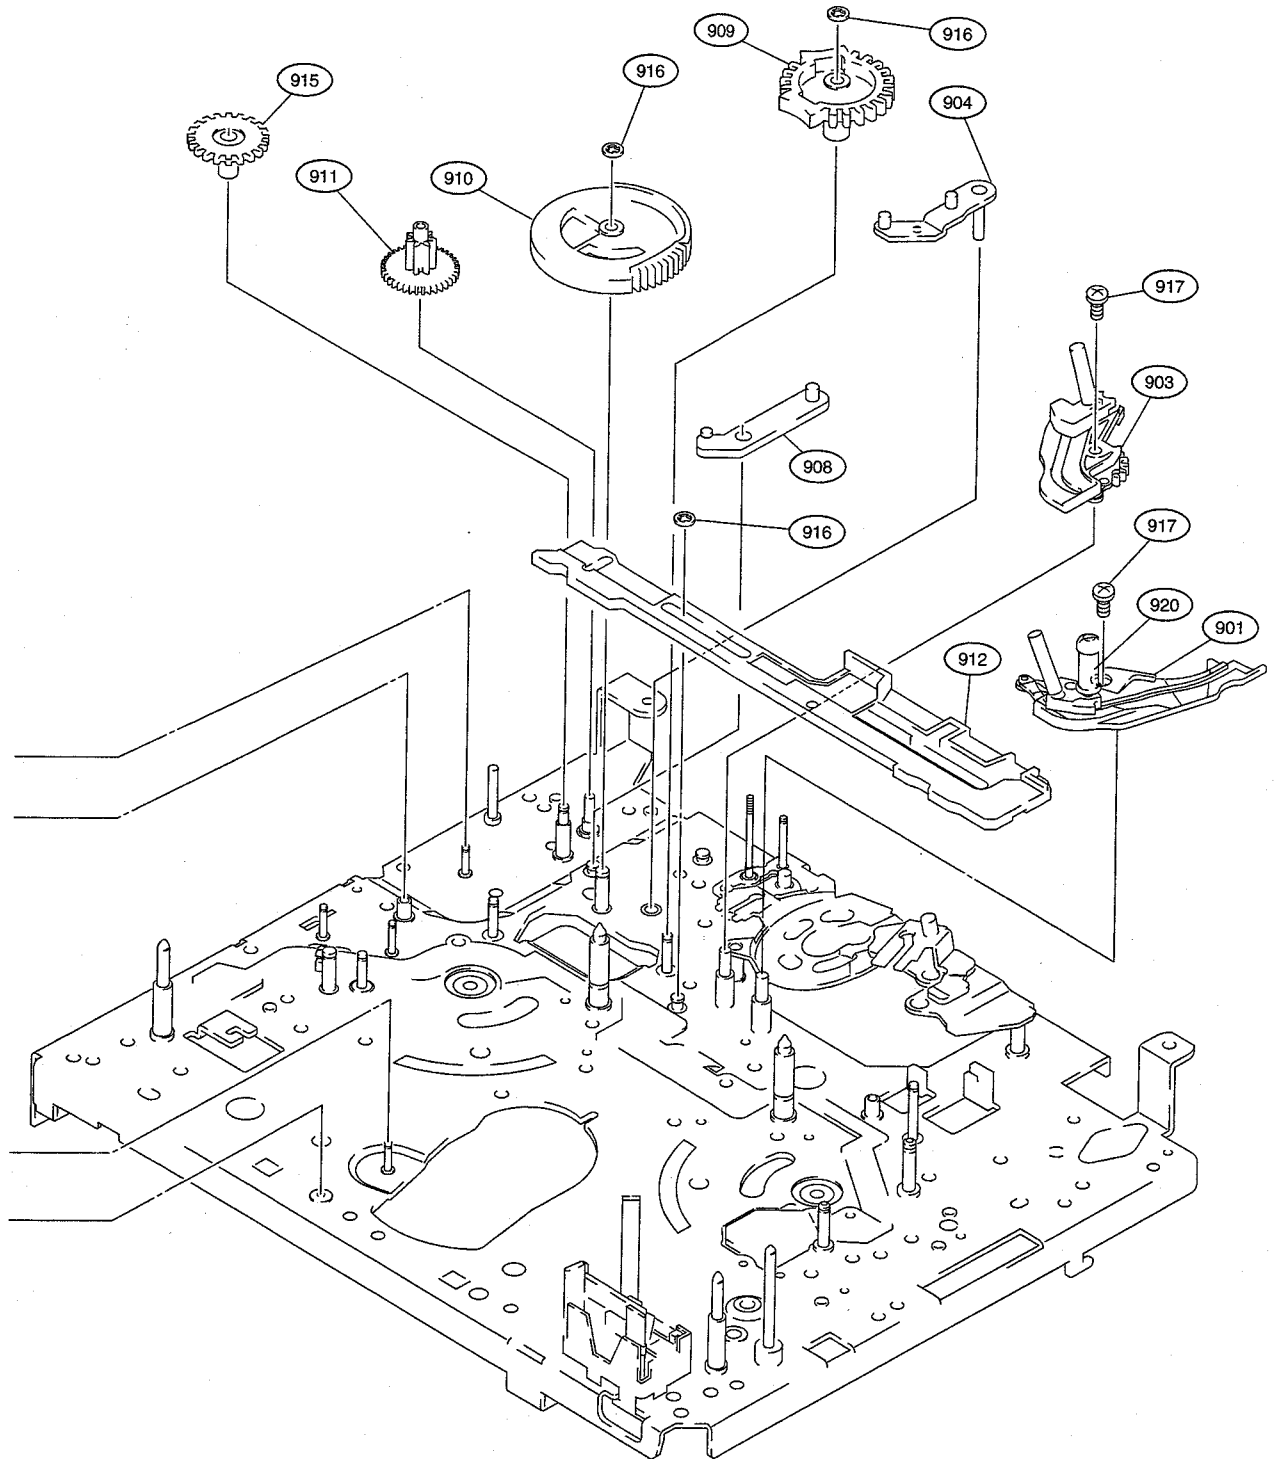


Gear (2)

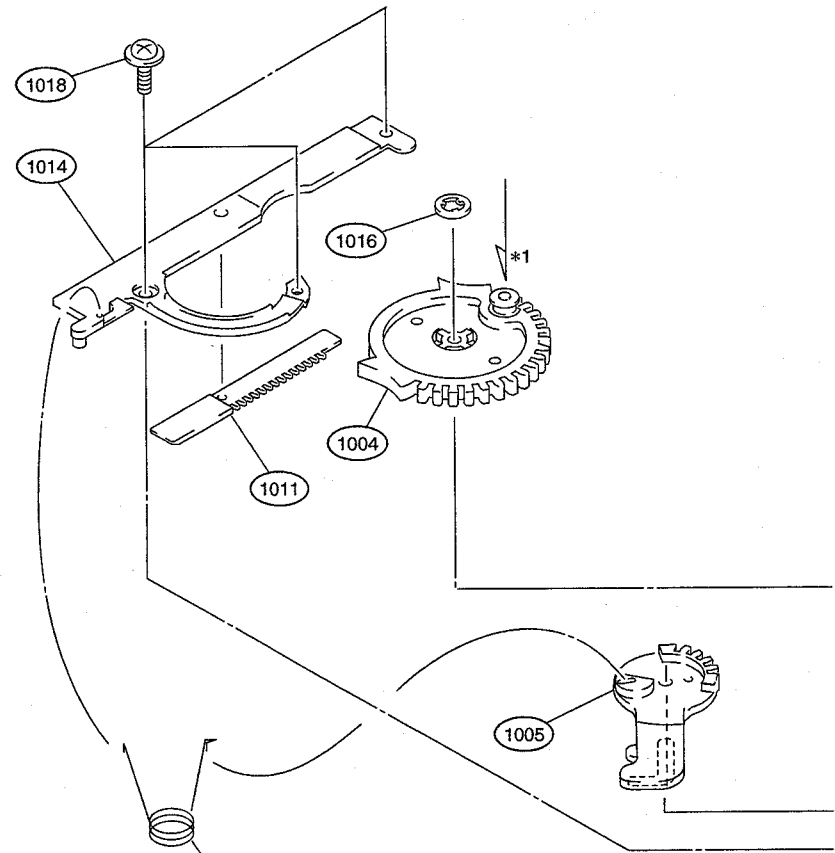


| No. | Part No. | SP Description |
|------|--------------|-------------------------------------|
| 1001 | A-8311-396-C | o HOLDER(C) BLOCK ASSEMBLY, MIC |
| 1002 | X-3678-878-1 | o REEL MOVE ARM ASSEMBLY |
| 1003 | X-3678-879-1 | o REEL PLATE PRESS LINK ASSEMBLY |
| 1004 | X-3678-888-2 | o GEAR ASSEMBLY, DRIVE B |
| 1005 | 3-603-962-01 | o LEVER, MIC |
| 1006 | 3-603-968-01 | o GEAR, B |
| 1007 | 3-603-969-01 | o GEAR, C |
| 1008 | 3-603-970-01 | o GEAR, A |
| 1009 | 3-604-826-01 | o SHAFT, NO.1 GEAR |
| 1010 | 3-604-839-01 | o DETENT, #1 |
| 1011 | 3-604-849-01 | o RACK |
| 1012 | 3-604-853-01 | o GEAR, E |
| 1013 | 3-605-312-01 | o DRIVING GEAR A, REEL |
| 1014 | 3-605-313-02 | o CASE, RACK |
| 1015 | 3-605-331-01 | o SPRING, COMPRESSION, MIC |
| 1016 | 3-669-465-01 | s WASHER (1.5), STOPPER |
| 1017 | 3-726-829-01 | s WASHER, STOPPER |
| 1018 | 3-729-013-21 | s SCREW (M1.4X2.5), WASHERHEAD (+P) |
| 1019 | 3-730-141-01 | s SCREW (PSW2X4) |
| 1020 | 3-729-078-11 | s SPRING, TENSION |

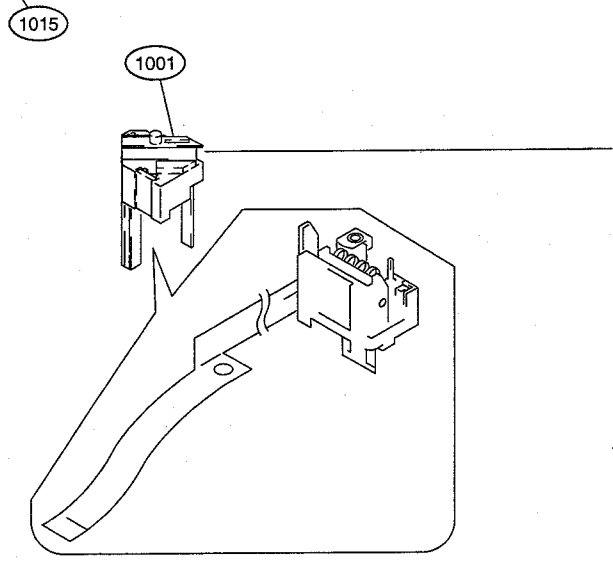

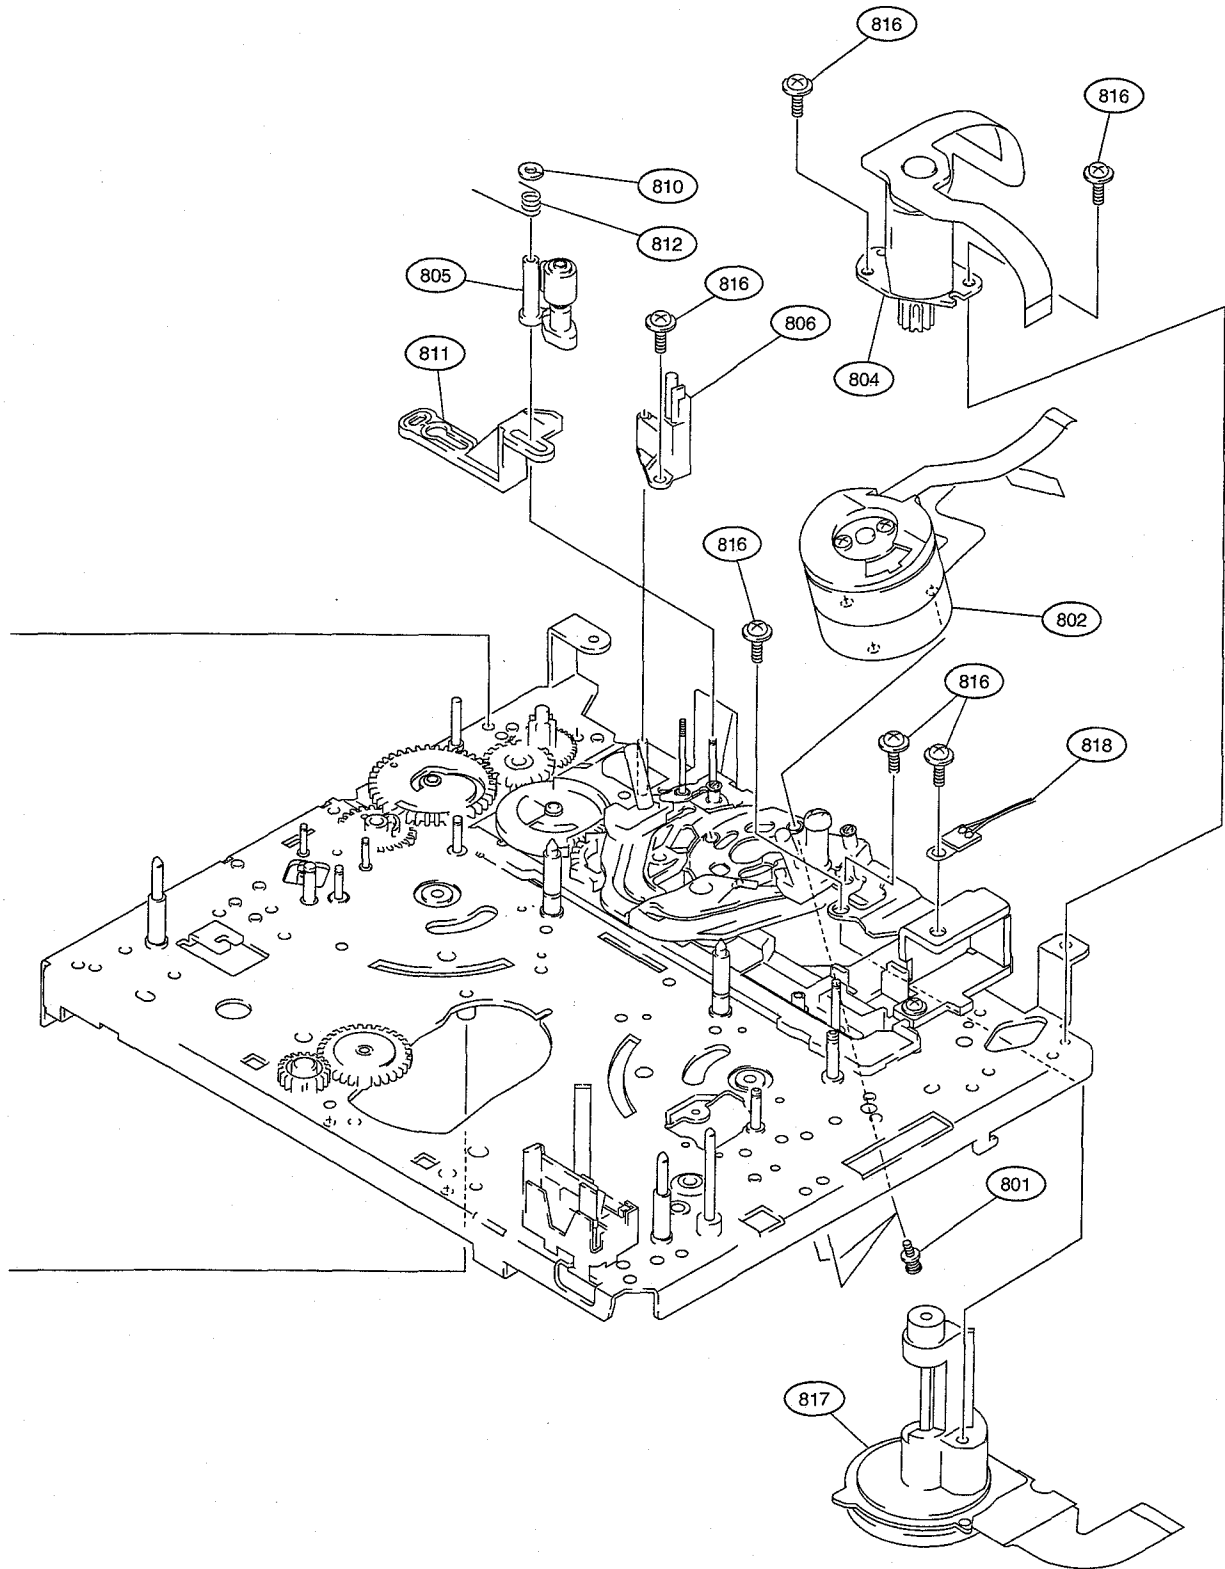


Gear (1)

| No. | Part No. | SP Description |
|-----|--------------|----------------------------------|
| 901 | A-8319-580-A | s GL(T)BLOCK ASSEMBLY(2) |
| 902 | A-8344-460-A | s MOUNTED CIRCUIT BOARD, SE-295A |
| 903 | A-8311-397-C | s GL(S)BLOCK ASSEMBLY |
| 904 | X-3678-776-4 | o ARM ASSEMBLY,SLIDER |
| 905 | X-3608-224-1 | o GEAR ASSEMBLY,MODE |
| 906 | 3-388-596-01 | s SPRING, COMPRESSION |
| 907 | 3-603-969-01 | o GEAR,C |
| 908 | 3-604-707-01 | o ARM(A),HC |
| 909 | 3-604-713-01 | o GEAR,THREADING |
| 910 | X-3605-670-2 | o CAM GEAR ASSEMBLY |
| 911 | 3-604-825-01 | o GEAR,NO.1 |
| 912 | 3-604-829-01 | o SLIDER,MODE |
| 913 | 3-604-856-01 | o GEAR,D |
| 914 | 3-604-858-01 | o CAM GEAR,RELEASE |
| 915 | X-3678-962-1 | o GEAR ASSEMBLY,HC |
| 916 | 3-669-465-01 | s WASHER(1.5), STOPPER |
| 917 | 3-703-816-42 | s SCREW(M1.4X2.5), SPECIAL HEAD |
| 918 | 3-726-829-01 | s WASHER, STOPPER |
| 919 | 3-729-013-21 | s SCREW(M1.4X2.5),WASHERHEAD(+P) |
| 920 | X-3604-927-1 | s TG5 ASSEMBLY 2 |

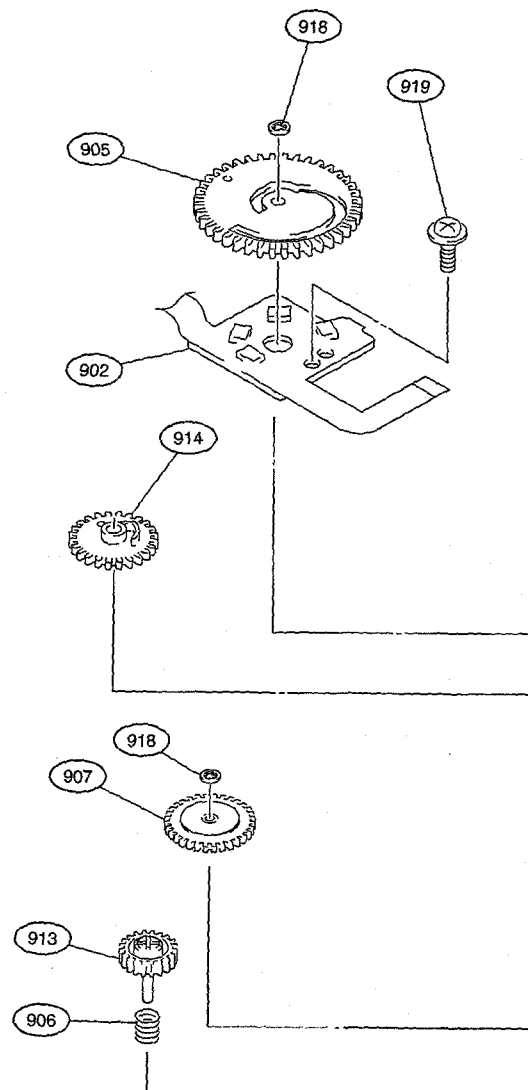


Handle Block

| No. | Part No. | SP Description |
|-----|--------------|--|
| 401 | A-8278-801-K | o HANDLE ASSEMBLY, SUB |
| 402 | 1-673-950-11 | o PRINTED WIRING BOARD, CN-1867 |
| 403 | A-8322-171-A | o MOUNTED CIRCUIT BOARD, LE-221 |
| 404 | A-8322-166-A | o MOUNTED CIRCUIT BOARD, SW-18 |
| 405 | 1-673-956-11 | o PRINTED WIRING BOARD, CN-1874 |
| 406 | X-3604-541-1 | s COVER ASSEMBLY, HANDLE |
| 407 | X-3744-307-1 | s SUSPENSION ASSEMBLY |
| 408 | 1-542-296-23 | o MICROPHONE |
| 409 | 1-673-947-12 | o PRINTED WIRING BOARD, CN-1866 |
| 410 | 3-179-882-01 | o SPACER, MICROPHONE |
| 411 | 3-612-600-01 | s FIXING BASE, VF SHOE |
| 412 | 3-612-624-04 | s COVER, HANDLE(2) |
| 413 | 3-612-629-02 | s COVER, HANDLE(3) |
| 414 | 3-612-632-02 | s COVER, SW(H) |
| 415 | 3-612-635-02 | o FIXING KNOB, VF |
| 416 | 3-612-664-01 | s COVER, CN(ANTON) |
| 417 | 3-612-665-01 | o CUSHION(2) |
| 418 | 3-604-403-01 | o LABEL, FILTER |
| 419 | 3-612-822-01 | s SPRING, COMPRESSION |
| 420 | 3-676-244-03 | s COVER, SWITCH |
| 421 | 3-679-543-11 | o RING(D), LOCK |
| 422 | 3-679-684-01 | o REST, ARM |
| 423 | 3-686-197-01 | o ARM, SLIDE |
| 424 | 3-686-261-03 | s SHOE3, SLIDE, VF |
| 425 | 3-687-070-01 | o WASHER, SHOE |
| 426 | 3-688-754-11 | s SPRING |
| 427 | 3-688-755-13 | s SHOE, ACCESSORY |
| 428 | 3-624-426-01 | s SCREEN, WIND |
| 429 | 3-720-919-01 | o RUBBER, LOCK RING |
| 430 | 3-626-743-01 | s COVER, HANDLE(4) |
| 431 | 3-849-405-00 | s COVER, EARPHONE JACK |
| 432 | 3-625-924-01 | s ALOCK SCREW, +B2.6NI |
| 433 | 1-475-344-21 | o REMOTE COMMANDER (RM-LG1) [for DSR-300A/300AP] |
| 434 | 9-980-573-01 | o HOLDER ASSEMBLY [for DSR-300A/300AP] |
| 435 | 3-608-925-01 | o LABEL, RM ("VTR", "MARK", "CUE", "NG") [for DSR-300A/300AP] |
| 436 | 3-370-476-11 | s SCREW (NYLOCK +B2X5) |
| 437 | 3-725-295-21 | s SCREW, (+) (B3) |

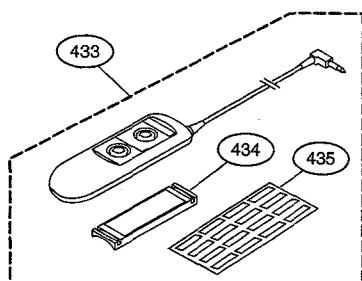


for DSR-300A/300AP

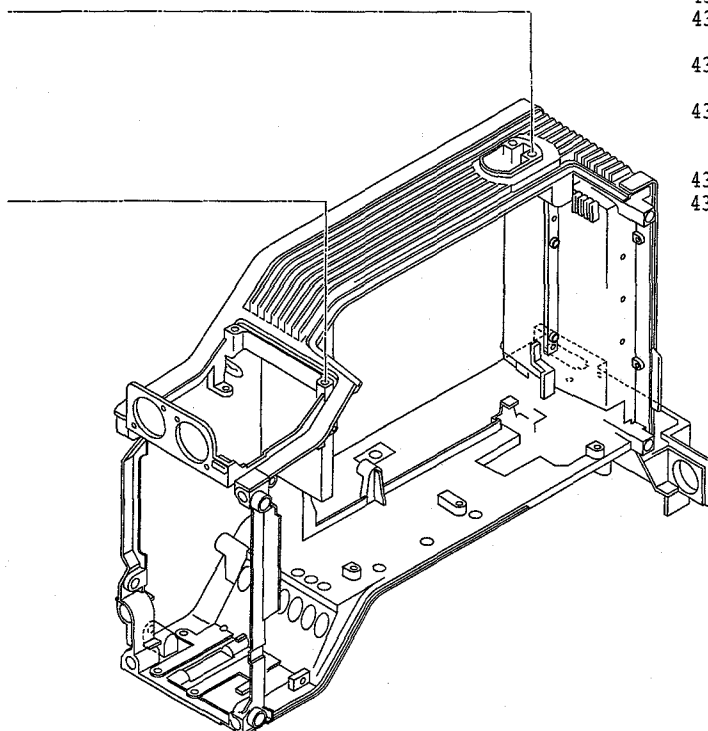


Cassette Compartment/Boards

| No. | Part No. | SP Description |
|-----|--------------|-------------------------------------|
| 501 | A-8277-832-C | o MOUNTED CIRCUIT BOARD, CC-68 |
| 502 | A-8277-852-A | o MOUNTED CIRCUIT BOARD, RP-91 |
| 503 | A-8277-853-A | o MOUNTED CIRCUIT BOARD, HN-227 |
| 504 | A-8322-140-B | o MOUNTED CIRCUIT BOARD, SV-213 |
| 505 | A-8315-150-L | s CASSETTE COMPARTMENT ASSEMBLY |
| 506 | 1-777-864-11 | s CABLE, FLEXIBLE FLAT (20-CORE) |
| 507 | 3-729-013-21 | s SCREW (M1.4X2.5), WASHERHEAD (+P) |

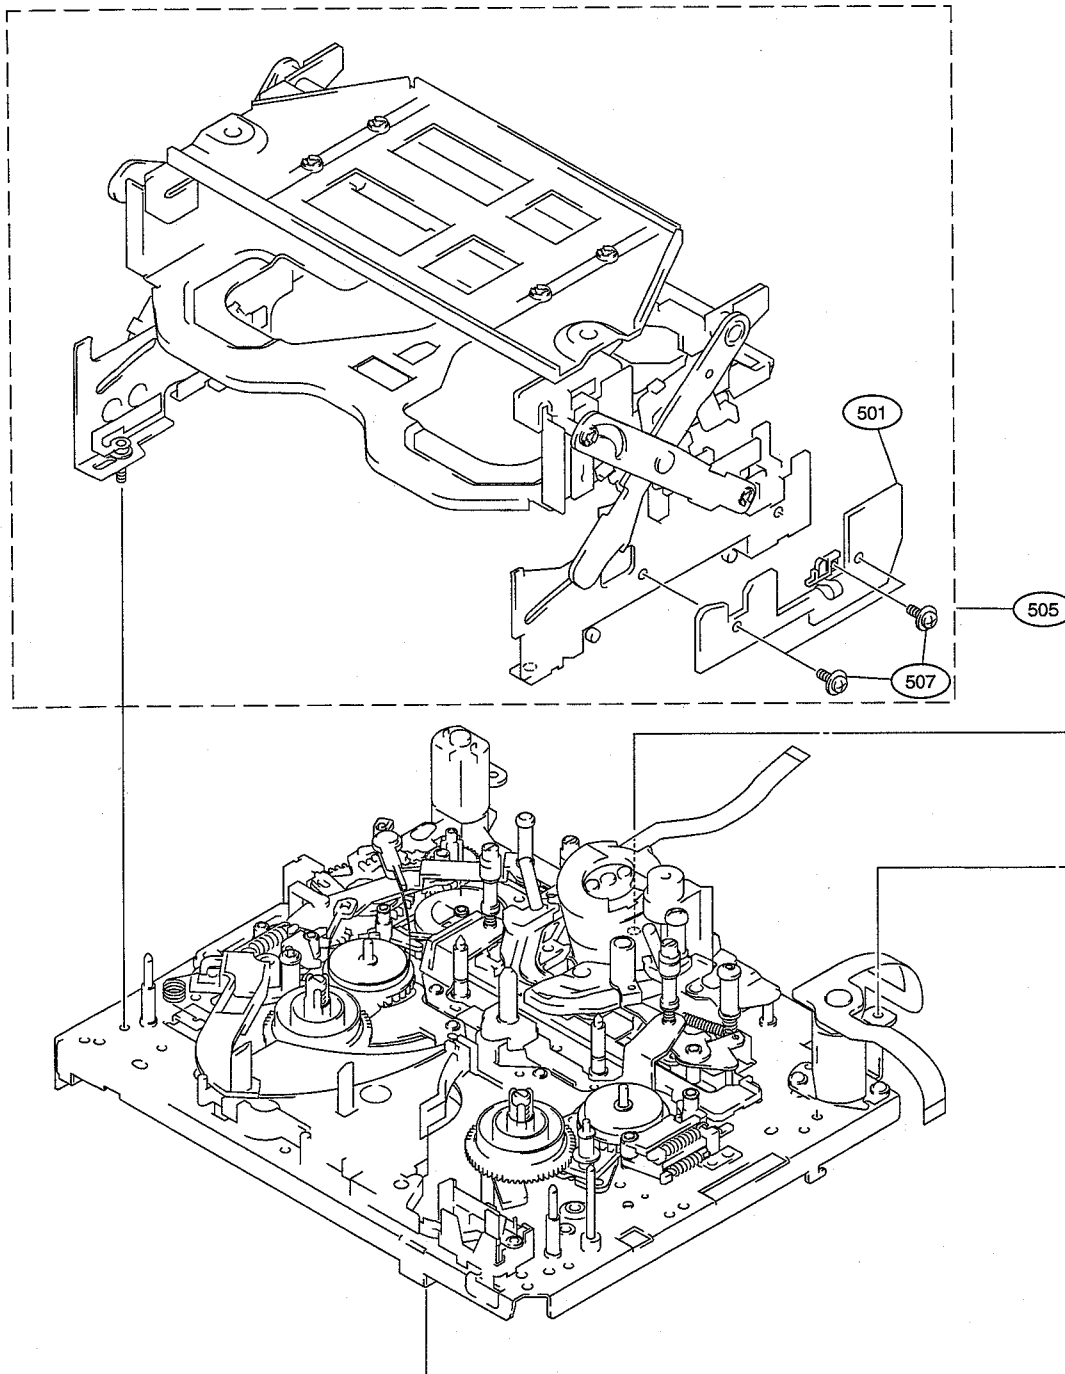

Cassette Compartment/Boards

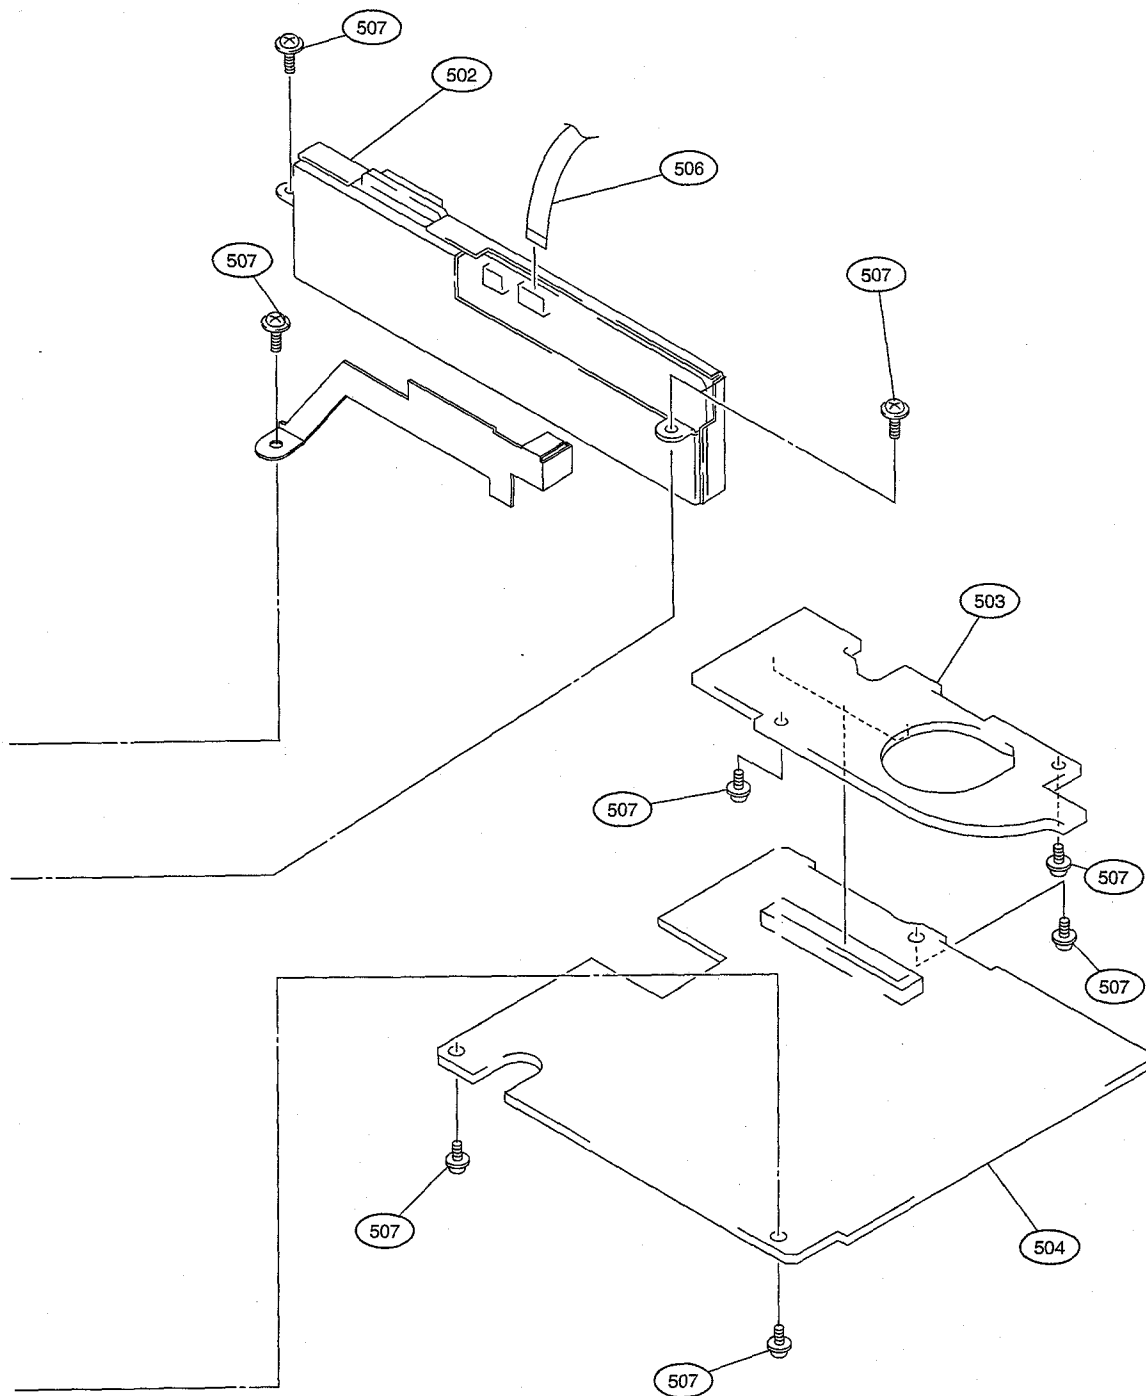


Guide

| No. | Part No. | SP Description |
|-----|--------------|----------------------------|
| 601 | A-8278-429-F | o ARM ASSEMBLY, TR |
| 602 | X-3678-777-2 | s BAND ASSEMBLY, TR |
| 603 | X-3678-788-3 | s ARM ASSEMBLY, PINCH |
| 604 | X-3678-791-1 | o ARM ASSEMBLY, TG7 |
| 605 | X-3678-872-1 | o BRACKET ASSEMBLY, SENSOR |

| | | |
|-----|--------------|----------------------------|
| 606 | X-3678-880-1 | o TG#1/#8 BASE ASSEMBLY |
| 607 | X-3678-908-1 | o WEIGHT ASSEMBLY, COUNTER |
| 608 | 3-548-757-00 | s SPRING, TENSION |
| 609 | 3-604-702-02 | s ROLLER, TG18 |
| 610 | 3-604-703-01 | s LOWER FLANGE, TG1/8 |

| | | |
|-----|--------------|---------------------------|
| 611 | 3-604-704-01 | s UPPER FLANGE, TG18 |
| 612 | 3-608-304-02 | s SLEEVE, TG18 |
| 613 | 3-973-948-01 | s UPPER FLANGE (2), TG13 |
| 614 | 3-966-099-11 | s ROLLER, TG13 |
| 615 | 3-604-796-01 | o SPRING (PINCH), TORSION |


| | | |
|-----|--------------|-------------------------|
| 616 | 3-606-146-01 | o SPRING (TG7), TORSION |
| 617 | 3-604-832-01 | o RETAINER, CAP |
| 618 | 3-604-833-01 | o CAP |
| 619 | 3-604-861-02 | o HOLDER, PRISM |
| 620 | 3-604-953-01 | s DETENT, TG7 |

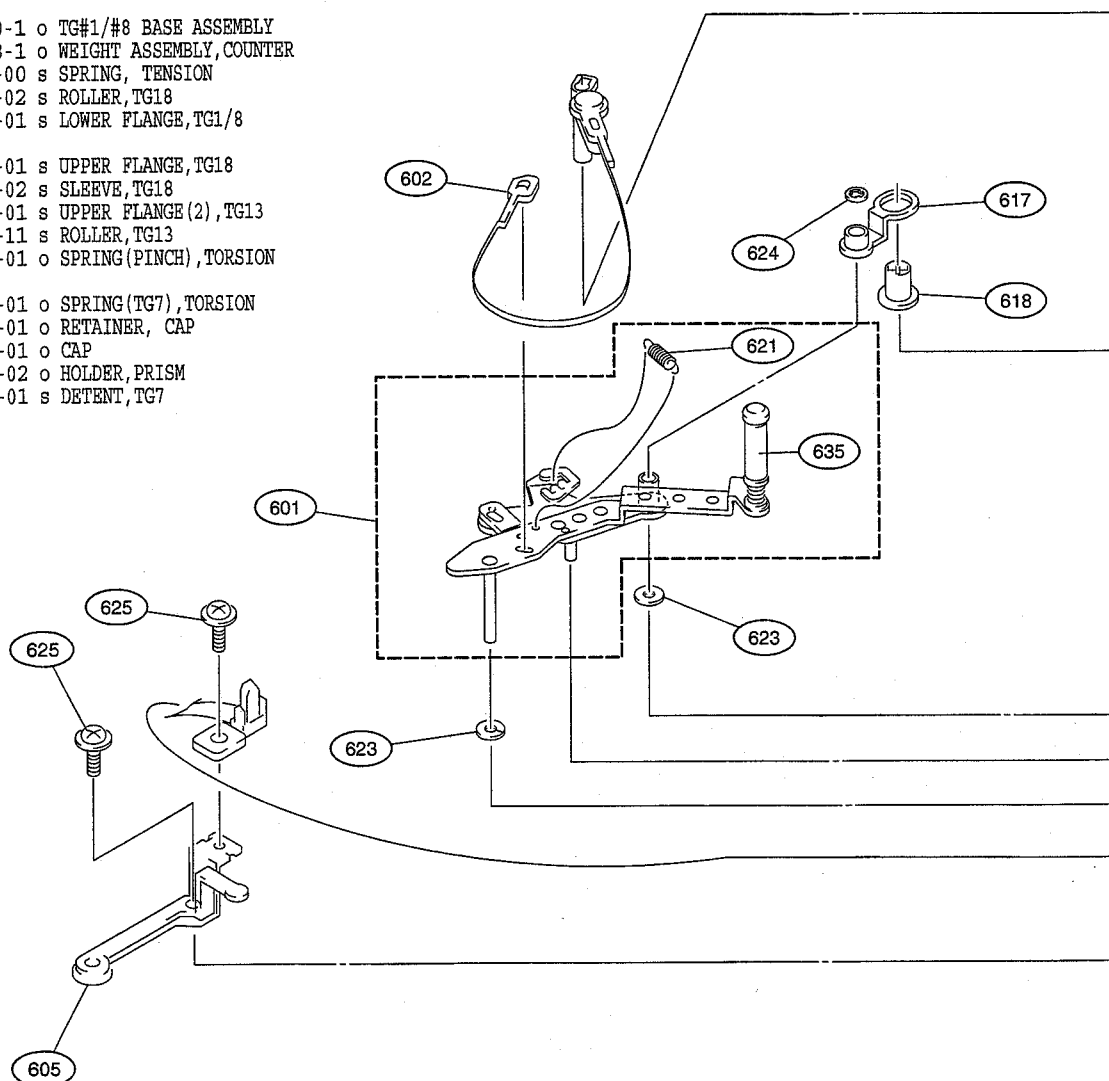


| | | |
|-----|--------------|-------------------------------------|
| 621 | 3-607-208-01 | s SPRING (TR) 9, EXTENSION |
| 622 | 3-605-319-01 | o PRISM |
| 623 | 3-701-436-11 | s WASHER, 1.6 POLYETHYLENE |
| 624 | 3-726-829-01 | s WASHER, STOPPER |
| 625 | 3-729-013-21 | s SCREW (M1.4X2.5), WASHERHEAD (+P) |

| | | |
|-----|--------------|-------------------------------------|
| 626 | 3-729-013-61 | s SCREW (M1.4X4.5), WASHERHEAD (+P) |
| 627 | 3-748-777-02 | s TG7 |
| 628 | 3-940-891-01 | s SPRING, COMPRESSION |
| 629 | 3-964-614-02 | s FLANGE, TG7 LOWER |
| 630 | 3-966-100-11 | s SLEEVE, TG13 |


| | | |
|-----|--------------|-----------------------|
| 631 | 3-623-839-01 | s NUT, TG13 |
| 632 | 3-966-106-01 | s FLANGE, TG3 LOWER |
| 633 | 3-966-107-01 | s SPRING, COMPRESSION |
| 634 | 3-966-194-01 | s FLANGE, TG7 UPPER |
| 635 | 3-604-718-01 | o ROLLER, TG2 |

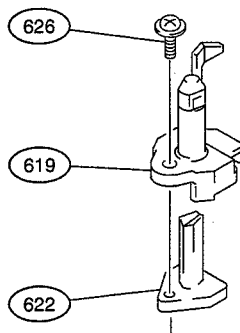

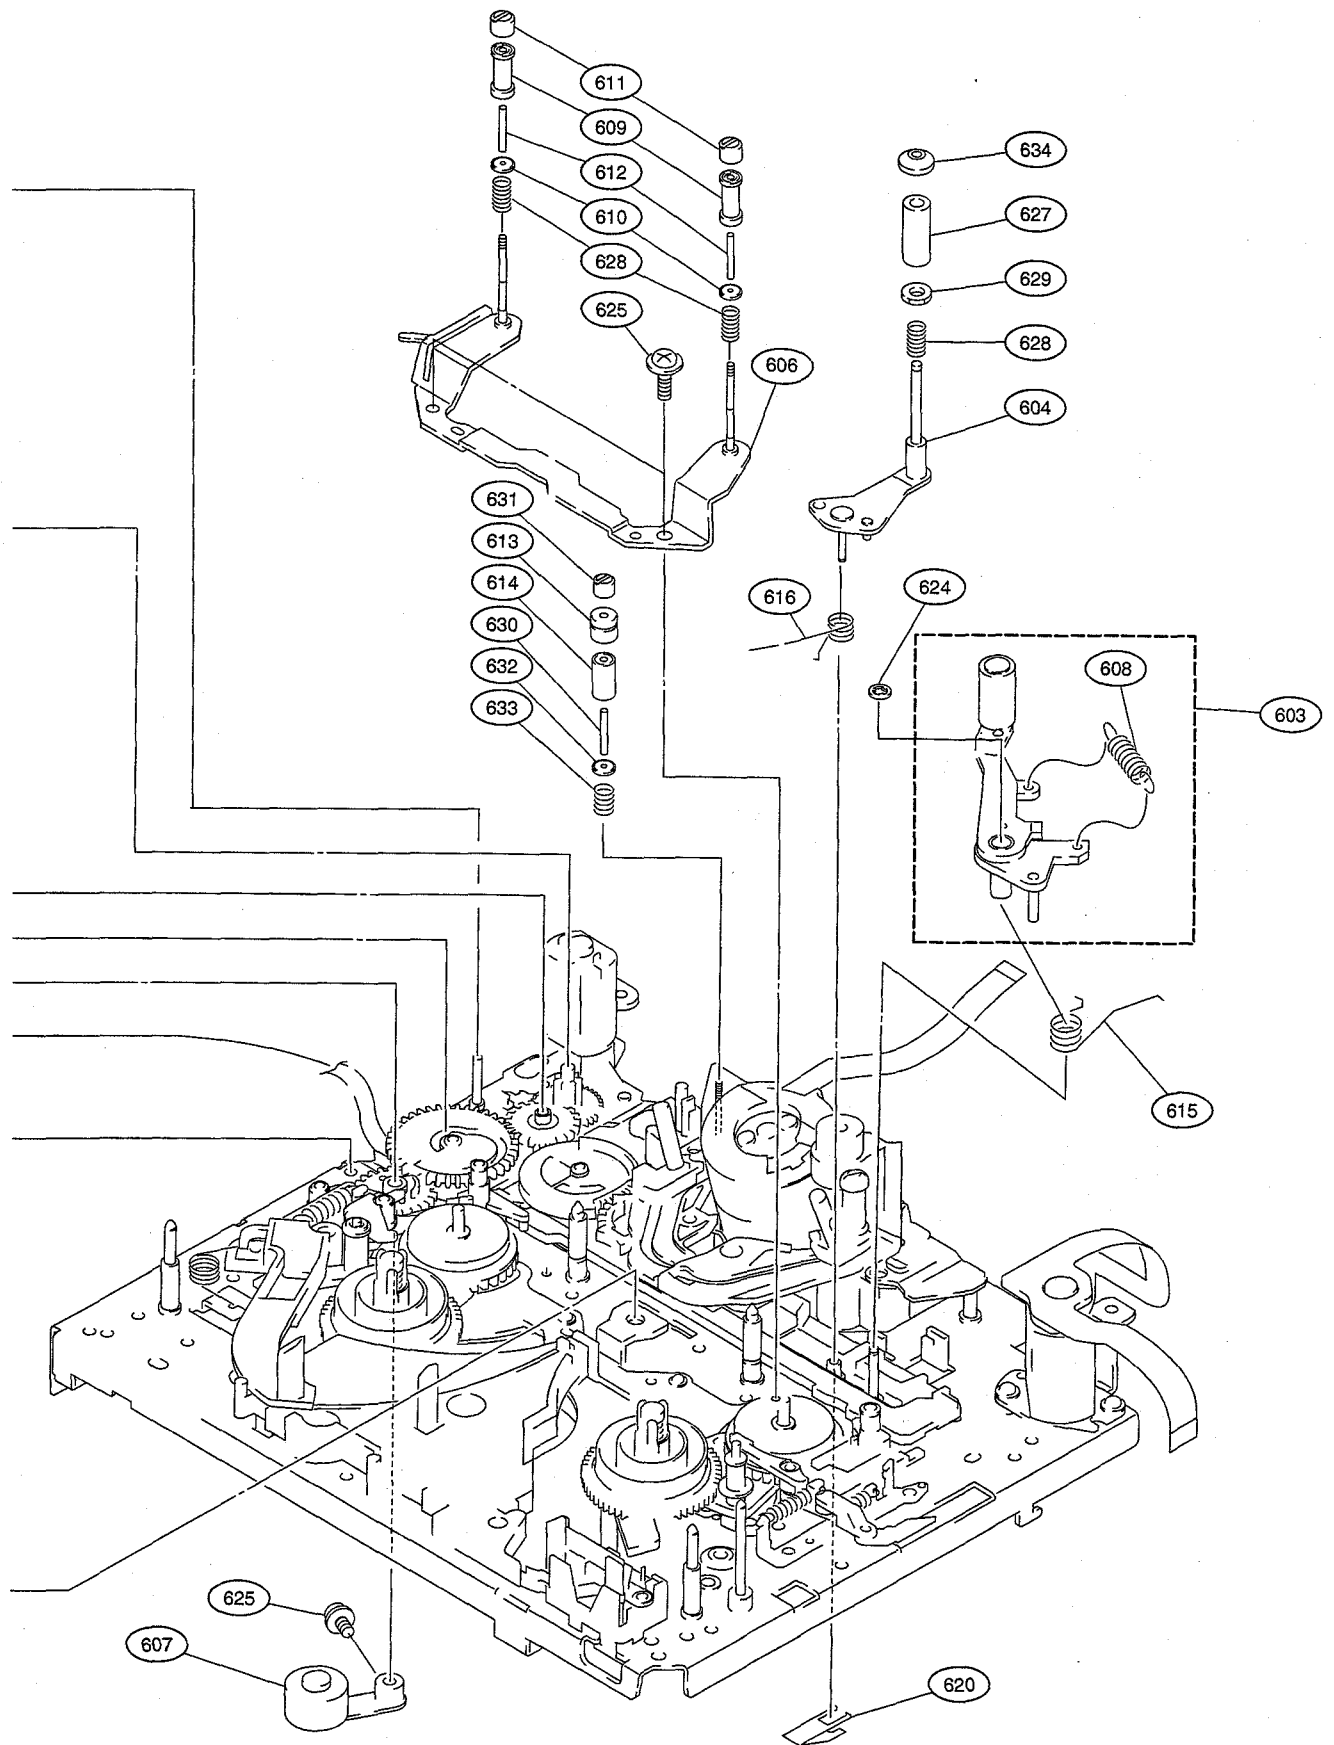



Reel/Brake

| No. | Part No. | SP Description |
|-----|--------------|------------------------------|
| 701 | A-8278-432-C | o ARM ASSEMBLY(T),HARD BRAKE |
| 702 | A-8278-433-A | o ARM(S)ASSEMBLY,HARD BRAKE |
| 703 | A-8311-497-C | o REEL(LARGE)ASSEMBLY |
| 704 | X-3678-869-1 | s ARM(T)ASSEMBLY,SOFT BRAKE |
| 705 | X-3678-870-1 | s SOFT BRAKE ASSEMBLY,TL |
| 706 | X-3678-881-3 | o S PLATE ASSEMBLY,REEL |
| 707 | X-3678-882-3 | o PLATE ASSEMBLY,T REEL |
| 708 | X-3608-225-1 | o GEAR ASSEMBLY(T),SUB REEL |
| 709 | X-3608-226-1 | o GEAR ASSEMBLY(S),SUB REEL |
| 710 | 3-349-867-01 | s SPRING, TENSION |

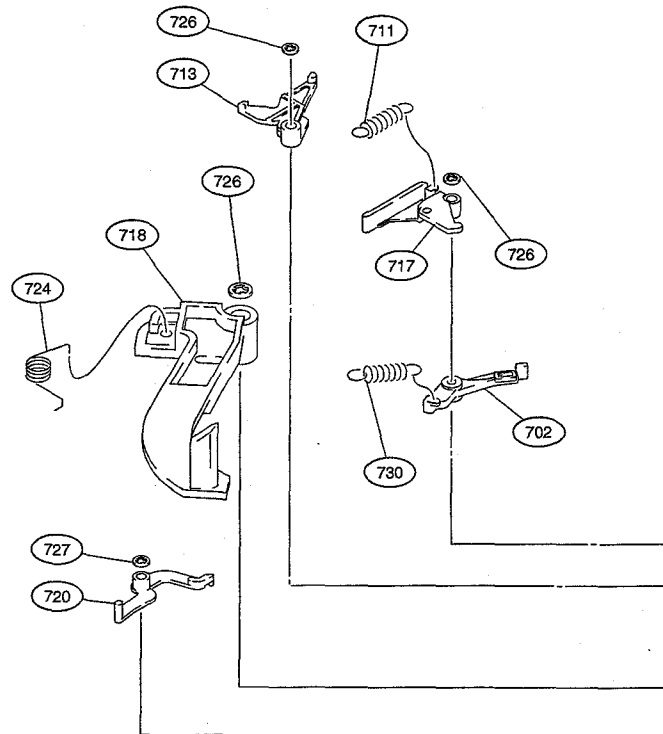



| | | |
|-----|--------------|----------------------------------|
| 711 | 3-446-154-99 | s SPRING, TENSION |
| 712 | 3-605-330-01 | o HOOK(T),SPRING |
| 713 | 3-603-966-02 | o ARM,LOCK RELEASE |
| 714 | 3-604-851-01 | o ARM,SH RELEASE |
| 715 | 3-604-855-01 | o LEVER,TL,RELEASE |
| 716 | 3-604-860-02 | o RELEASE ARM,T BRAKE |
| 717 | 3-605-314-01 | s ARM(S),SOFT BRAKE |
| 718 | 3-605-316-02 | o ROCK ARM,REEL |
| 719 | 3-605-317-02 | o ROCK DRIVING ARM,REEL |
| 720 | 3-605-318-01 | o ARM,SS RELEASE |
| 721 | 3-605-320-02 | o STOPPER,REEL T |
| 722 | 3-605-329-02 | o HOOK(S),SPRING |
| 723 | 3-605-332-01 | o RETAINER,REEL PLATE |
| 724 | 3-605-333-01 | o PRESS SPRING,REEL LOCK |
| 725 | 3-606-366-01 | o LEVER,BRAKE,SOFT,T |
| 726 | 3-669-465-01 | s WASHER(1.5), STOPPER |
| 727 | 3-726-829-01 | s WASHER, STOPPER |
| 728 | 3-729-013-21 | s SCREW(M1.4X2.5),WASHERHEAD(+P) |
| 729 | 3-908-649-01 | s SPRING(OPEN) |
| 730 | 3-913-922-01 | s SPRING(T RELEASE), TENSION |
| 731 | 4-930-450-01 | s SPRING, TENSION |
| 732 | 3-331-658-01 | s SPRING, TENSION |

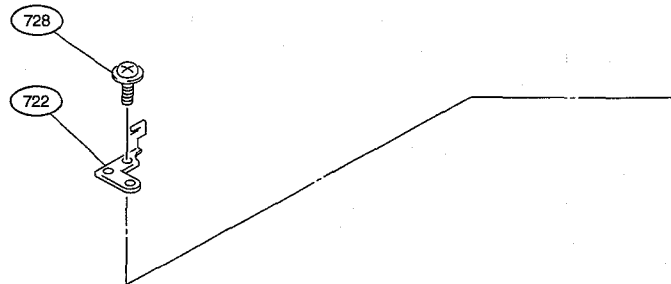

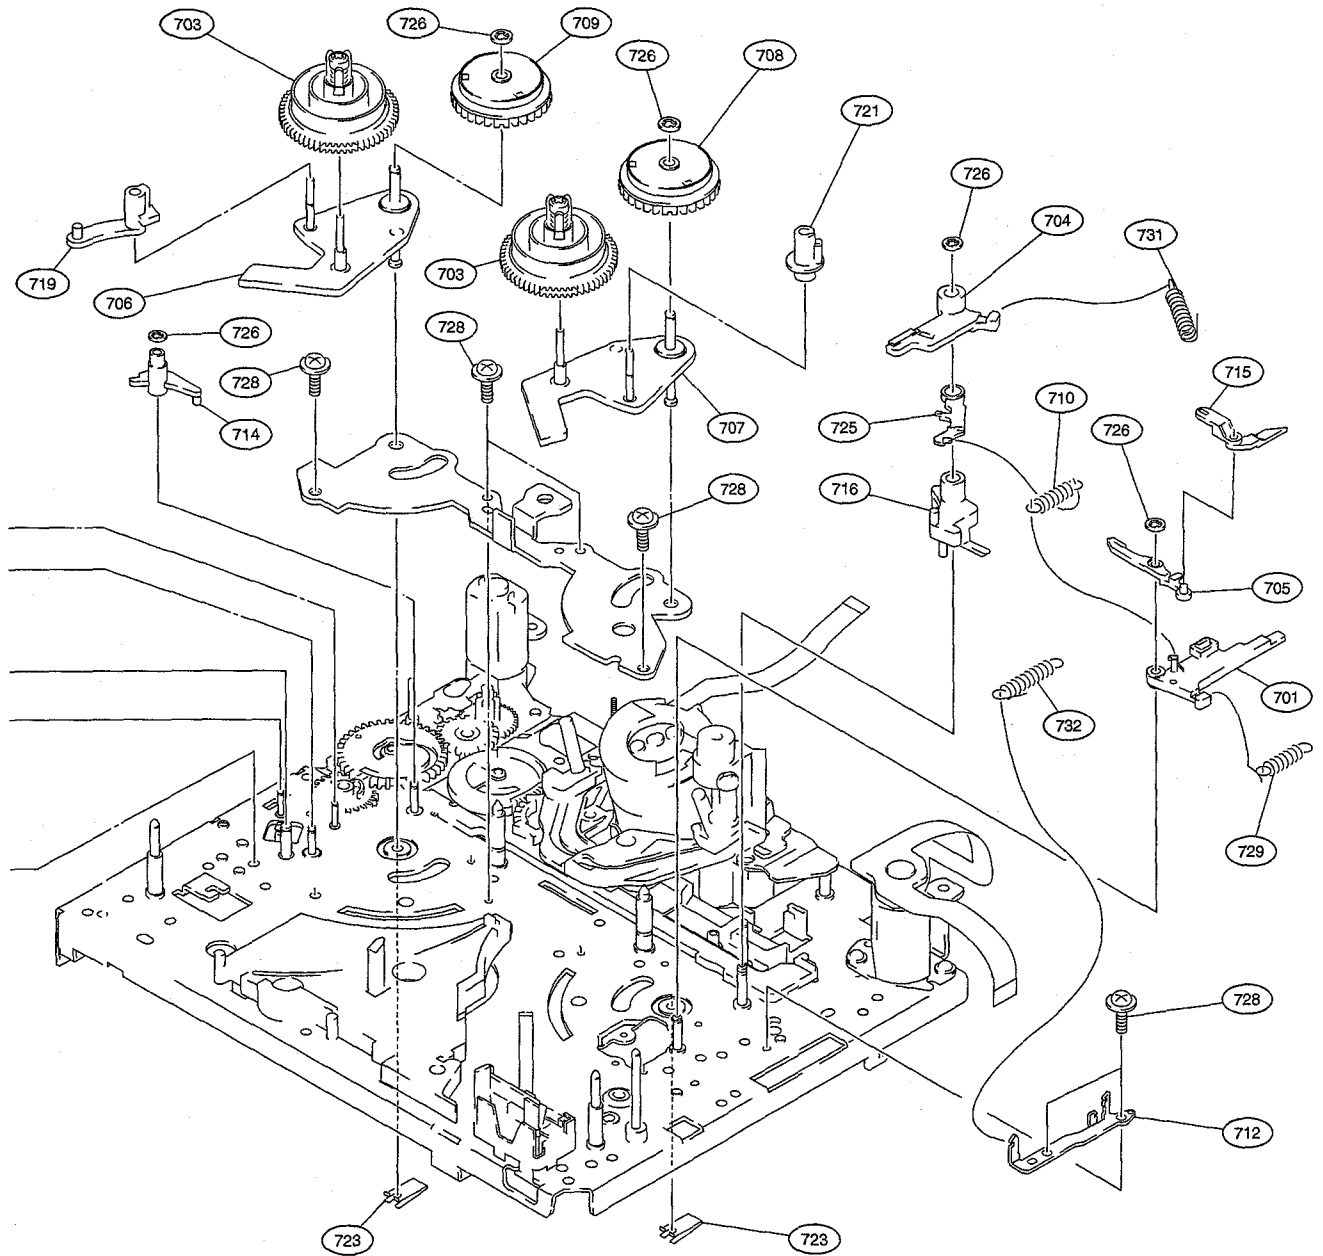


Motor


| No. | Part No. | SP Description |
|-----|--------------|--|
| 801 | A-7026-009-B | s SCREW ASSEMBLY, DRUM FITTING |
| 802 | A-4900-064-A | s DRUM ASSY, DEH-03A/J-RP [for DSR-390/390P/370/370P] |
| | A-7044-005-A | s DRUM ASSEMBLY, DEH-03A-R [for DSR-300A/300AP] |
| 803 | A-8311-086-C | s MOTOR BLOCK ASSEMBLY, LD |
| 804 | A-8311-088-A | s MOTOR ASSEMBLY, SHIFT |
| 805 | A-8311-505-B | s C ASSEMBLY |
| 806 | 3-604-834-03 | o HOLDER, TC |
| 807 | X-3678-884-2 | s IDLER GEAR ASSEMBLY |
| 808 | X-3945-435-1 | s SHAFT(12) ASSEMBLY, WORM |
| 809 | 1-698-870-12 | s MOTOR, DC(REEL) |
| 810 | 3-315-414-31 | s WASHER |
| 811 | 3-604-708-01 | o ARM(B), HC |
| 812 | 3-604-797-01 | o SPRING(HC), TORSION |
| 813 | 3-604-864-02 | o COVER, REEL ROCK |
| 814 | 3-669-465-01 | s WASHER(1.5), STOPPER |
| 815 | 3-703-816-42 | s SCREW(M1.4X2.5), SPECIAL HEAD |
| 816 | 3-729-013-21 | s SCREW(M1.4X2.5), WASHERHEAD(+P) |
| 817 | 8-835-530-01 | s MOTOR, DC SCD12A/J-N |
| 818 | 1-801-756-11 | s SENSOR, DEW CONDENSATION |

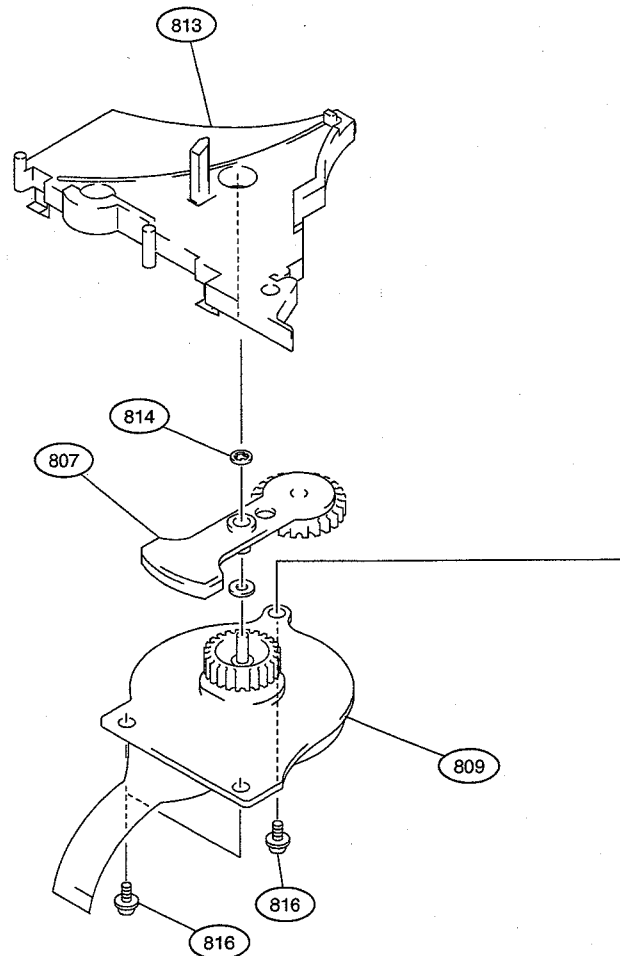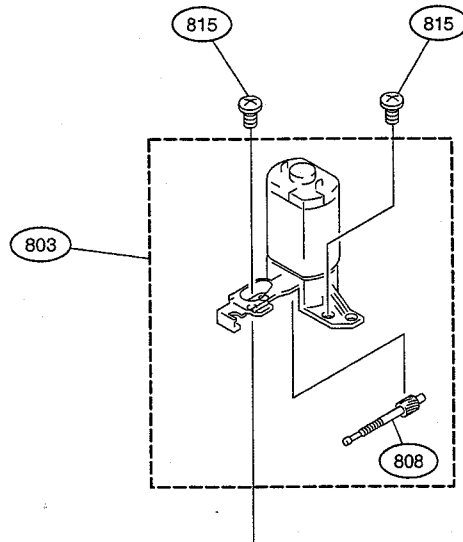

Gear (2)

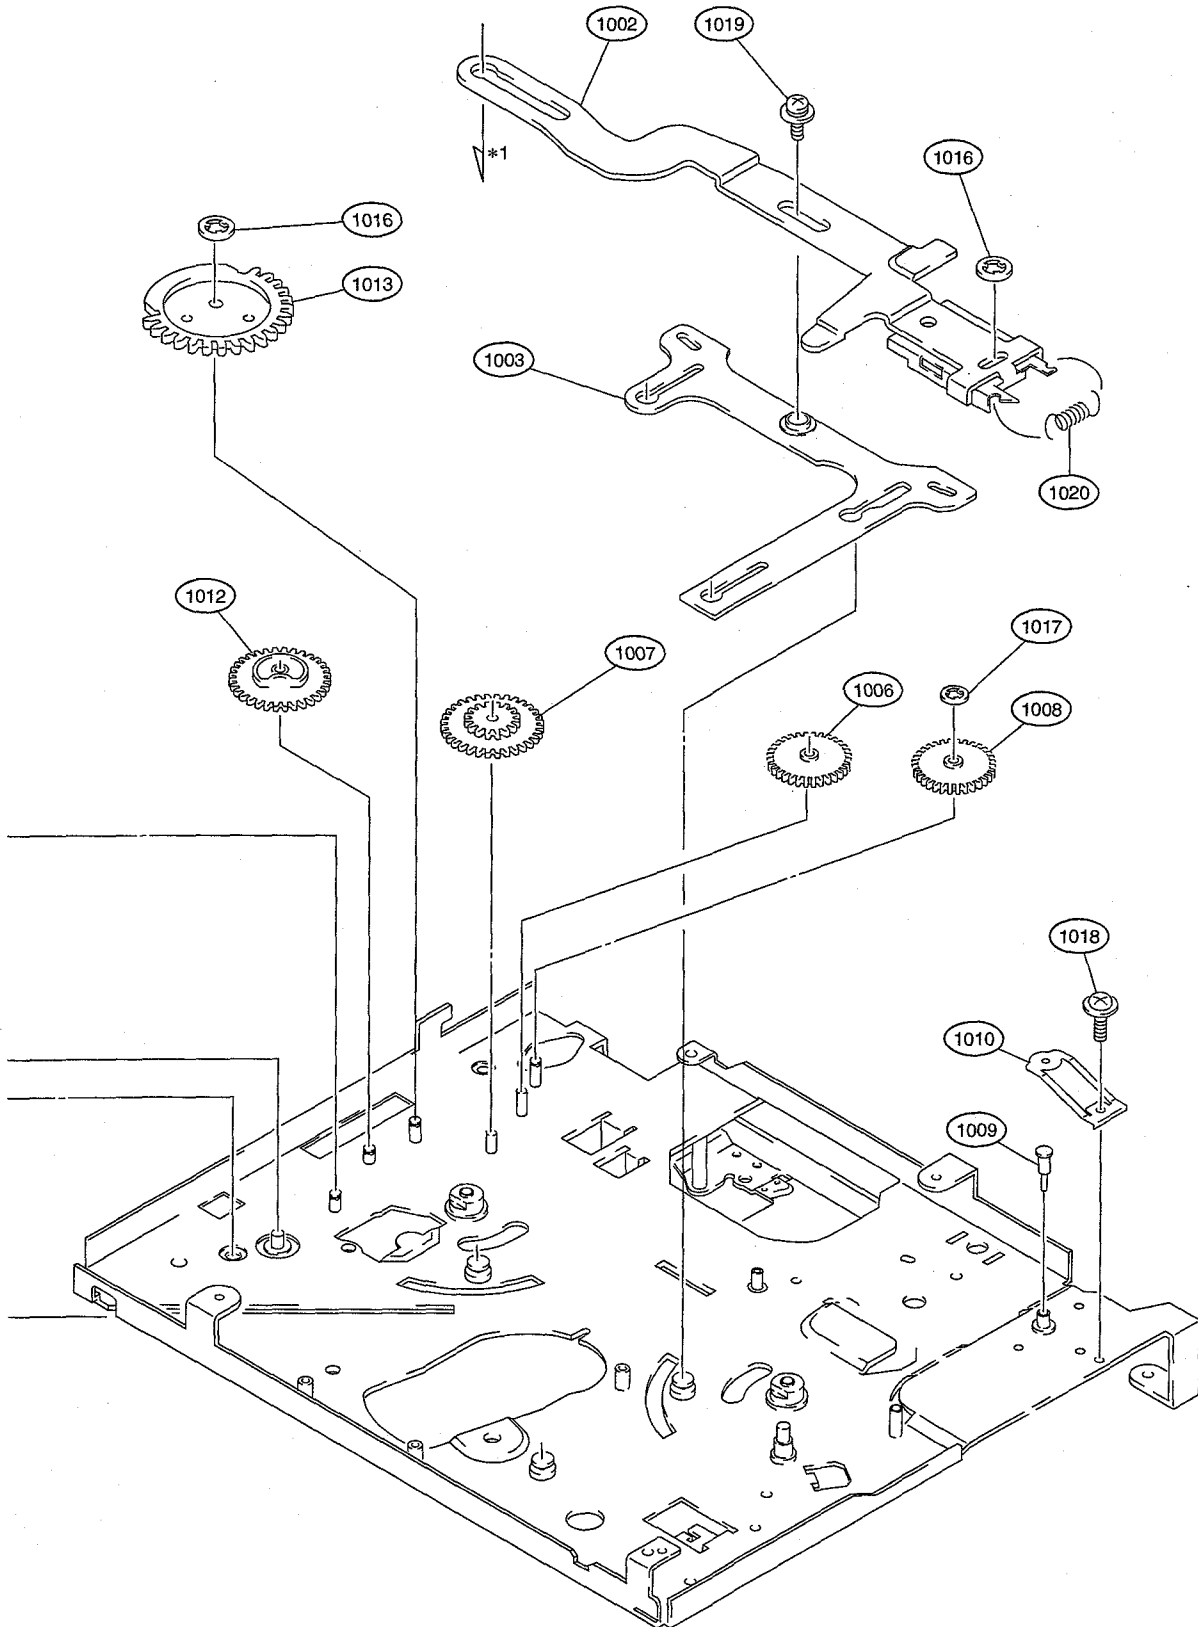

Lens

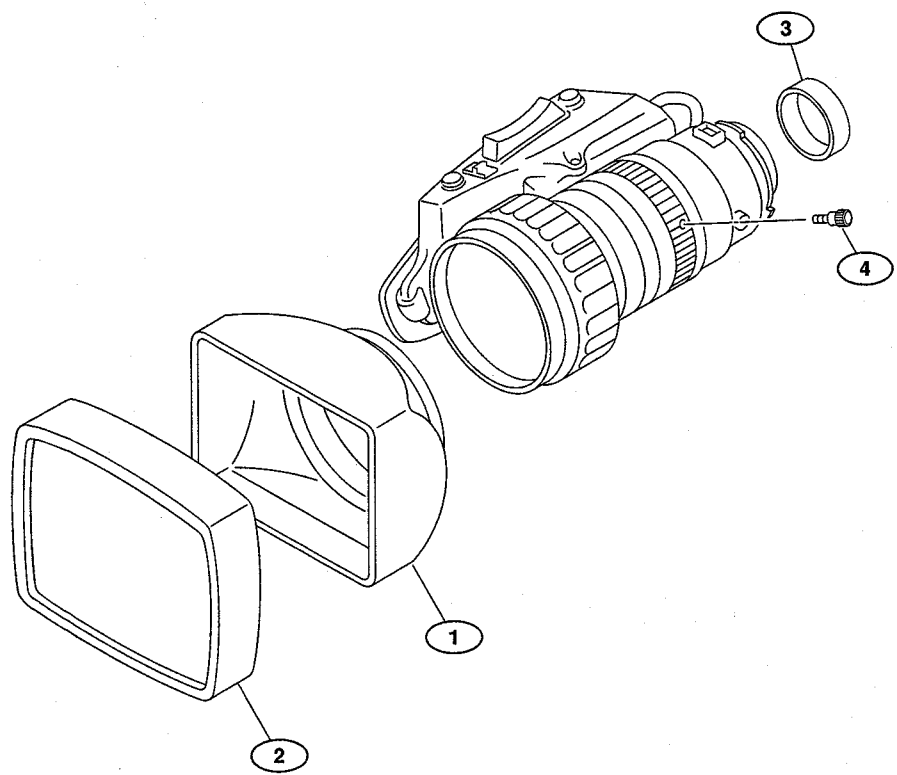

VCL-716BX (For DSR-390K2/370K2)

| No. | Part No. | SP Description |
|-----|--------------|----------------|
| 1 | 3-709-661-01 | s HOOD |
| 2 | 3-709-663-01 | s CAP, LENS |
| 3 | 3-709-660-01 | s CAP, MOUNT |
| 4 | 3-709-662-01 | s LEVER |

VCL-719BX (For DSR-390K1/370K1)

| No. | Part No. | SP Description |
|-----|--------------|----------------|
| 1 | 3-709-307-01 | o HOOD |
| 2 | 3-709-308-01 | o CAP, HOOD |
| 3 | 3-707-546-01 | o CAP, DUST |
| 4 | 3-709-310-01 | o LEVER, ZOOM |

1-3. Electrical Parts List

Index

| Board | Page | Remarks |
|-----------|-------|-----------------------------|
| AA-104 | 1-26 | |
| AT-142 | 1-27 | DSR-300A/300AP |
| AT-150 | 1-30 | DSR-390/390P/370/370P |
| CC-68 | 1-33 | |
| CN-1519 | 1-33 | DSR-300A/300AP |
| CN-1524 | 1-33 | |
| CN-1811 | 1-34 | |
| CN-1823 | 1-34 | |
| CN-1864 | 1-34 | |
| CN-1865 | 1-34 | |
| CN-1866 | 1-35 | |
| CN-1867 | 1-35 | |
| CN-1873 | 1-35 | |
| CN-1874 | 1-35 | |
| CN-1981 | 1-35 | |
| CN-2277 | 1-35 | DSR-390/390P/370/370P |
| CP-315 | 1-36 | DSR-300A/300AP |
| CP-373 | 1-37 | DSR-390/390P/370/370P |
| DPR-141A | 1-40 | DSR-300A/300AP (suffix 13-) |
| | 1-50 | DSR-300A/300AP (suffix 11) |
| DPR-141C | 1-60 | DSR-390/390P/370/370P |
| DU-36 | 1-69 | |
| DV-21A | 1-70 | DSR-300A/300AP |
| DV-21C | 1-70 | DSR-390/390P/370/370P |
| ES-31/31P | 1-71 | |
| FP-118A | 1-82 | DSR-390/390P/370/370P |
| FP-122 | 1-89 | DSR-300A/300AP |
| FP-99 | 1-96 | |
| GCN-16 | 1-97 | |
| HN-227 | 1-97 | |
| IR-33 | 1-98 | |
| KY-405 | 1-98 | |
| LE-221 | 1-98 | |
| MB-833 | 1-98 | |
| MT-114 | 1-98 | |
| PA-205 | 1-99 | |
| PA-206 | 1-100 | |
| PA-207 | 1-101 | |
| PS-570 | 1-102 | |
| PSW-71 | 1-102 | |
| RP-91 | 1-103 | |
| SE-295 | 1-106 | |

| Board | Page | Remarks |
|-------------|-------|---------|
| SE-297 | 1-106 | |
| SE-566 | 1-106 | |
| SV-213 | 1-106 | |
| SW-18 | 1-112 | |
| SW-19 | 1-112 | |
| SW-929 | 1-112 | |
| TG-187/187P | 1-112 | |
| VA-199 | 1-114 | |
| FRAME | 1-121 | |

AA-104 BOARD

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-------------------------------------|
| 1pc | A-8322-165-B | o MOUNTED CIRCUIT BOARD, AA-104 |
| C501 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C502 | 1-163-021-91 | s CAPACITOR, CERAMIC 0.01MF/50V |
| C503 | 1-163-021-91 | s CAPACITOR, CERAMIC 0.01MF/50V |
| C504 | 1-163-021-91 | s CAPACITOR, CERAMIC 0.01MF/50V |
| C505 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C506 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C507 | 1-104-551-11 | s CAPACITOR, FILM 0.01MF/16V 2125 |
| C508 | 1-104-551-11 | s CAPACITOR, FILM 0.01MF/16V 2125 |
| C509 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C512 | 1-163-038-00 | s CAPACITOR, CERAMIC 0.1MF/25V |
| C516 | 1-104-823-11 | s CAPACITOR, TANTALUM 47MF/16V |
| C517 | 1-113-500-11 | s CAPACITOR, TANTALUM 100MF/10V |
| C518 | 1-107-561-11 | s CAPACITOR, CHIP FILM 0.01MF |
| C519 | 1-107-561-11 | s CAPACITOR, CHIP FILM 0.01MF |
| C520 | 1-163-133-00 | s CAPACITOR, CHIP CERAMIC 470PF |
| C521 | 1-163-133-00 | s CAPACITOR, CHIP CERAMIC 470PF |
| C522 | 1-126-219-11 | s CAPACITOR, ELECT 3.3MF |
| C523 | 1-163-021-91 | s CAPACITOR, CERAMIC 0.01MF/50V |
| C524 | 1-126-219-11 | s CAPACITOR, ELECT 3.3MF |
| C525 | 1-126-219-11 | s CAPACITOR, ELECT 3.3MF |
| C526 | 1-163-021-91 | s CAPACITOR, CERAMIC 0.01MF/50V |
| C527 | 1-163-021-91 | s CAPACITOR, CERAMIC 0.01MF/50V |
| C528 | 1-163-243-11 | s CAPACITOR, CHIP CERAMIC 47PF/50 |
| C529 | 1-163-243-11 | s CAPACITOR, CHIP CERAMIC 47PF/50 |
| C530 | 1-104-563-11 | s CAPACITOR, CHIP FILM 0.1MF |
| C531 | 1-104-563-11 | s CAPACITOR, CHIP FILM 0.1MF |
| C532 | 1-163-038-00 | s CAPACITOR, CERAMIC 0.1MF/25V |
| C533 | 1-163-038-00 | s CAPACITOR, CERAMIC 0.1MF/25V |
| C534 | 1-104-563-11 | s CAPACITOR, CHIP FILM 0.1MF |
| C535 | 1-104-563-11 | s CAPACITOR, CHIP FILM 0.1MF |
| C536 | 1-164-161-11 | s CAPACITOR, CERAMIC 2200PF/100V |
| C537 | 1-164-161-11 | s CAPACITOR, CERAMIC 2200PF/100V |
| C538 | 1-164-161-11 | s CAPACITOR, CERAMIC 2200PF/100V |
| C540 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C543 | 1-163-038-00 | s CAPACITOR, CERAMIC 0.1MF/25V |
| C545 | 1-163-021-91 | s CAPACITOR, CERAMIC 0.01MF/50V |
| C546 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C547 | 1-163-021-91 | s CAPACITOR, CERAMIC 0.01MF/50V |
| C548 | 1-163-021-91 | s CAPACITOR, CERAMIC 0.01MF/50V |
| CN501 | 1-691-550-11 | s PIN, CONNECTOR (3P) (SMD) (1.5MM) |
| CN502 | 1-565-249-11 | o SOCKET, CONNECTOR 20P |
| CN503 | 1-764-394-11 | s CONNECTOR (XLR TYPE) 3P |
| CN504 | 1-778-652-11 | o CONNECTOR, FFC (ZIF) 50P |
| CN505 | 1-764-177-11 | o PIN, CONNECTOR (7P) (SMD) (1.5MM) |
| CN506 | 1-573-806-21 | s PIN, CONNECTOR (6P) (SMD) (1.5MM) |
| D501 | 8-719-800-76 | s DIODE 1SS226 |
| D502 | 8-719-800-76 | s DIODE 1SS226 |
| D504 | 8-719-027-95 | s DIODE HSM88WK |
| FB501 | 1-543-775-11 | s BEAD, FERRITE |
| FB502 | 1-543-775-11 | s BEAD, FERRITE |
| FB503 | 1-543-775-11 | s BEAD, FERRITE |
| FB504 | 1-414-445-11 | s FERRITE, EMI (SMD) |
| FB505 | 1-414-445-11 | s FERRITE, EMI (SMD) |
| FB506 | 1-414-445-11 | s FERRITE, EMI (SMD) |
| FB507 | 1-543-775-11 | s BEAD, FERRITE |
| FB508 | 1-543-775-11 | s BEAD, FERRITE |
| FB509 | 1-543-775-11 | s BEAD, FERRITE |

(AA-104 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-----------------------------------|
| FB510 | 1-414-445-11 | s FERRITE, EMI (SMD) |
| FB511 | 1-543-775-11 | s BEAD, FERRITE |
| FB512 | 1-543-775-11 | s BEAD, FERRITE |
| FB513 | 1-543-775-11 | s BEAD, FERRITE |
| FB514 | 1-543-775-11 | s BEAD, FERRITE |
| FB515 | 1-543-775-11 | s BEAD, FERRITE |
| FB516 | 1-543-775-11 | s BEAD, FERRITE |
| FB517 | 1-543-775-11 | s BEAD, FERRITE |
| FB518 | 1-543-775-11 | s BEAD, FERRITE |
| FB519 | 1-543-775-11 | s BEAD, FERRITE |
| FL501 | 1-239-077-11 | s FILTER, EMI |
| FL502 | 1-239-896-12 | s FILTER, EMI (SMD) |
| IC501 | 8-759-082-57 | s IC TC7W04FU |
| IC503 | 8-759-659-71 | s IC SN74HC165APWR |
| IC505 | 8-759-268-33 | s IC SN74HC595ADB (R) |
| IC506 | 8-759-058-58 | s IC TC7S04FU-TB85R |
| IC507 | 8-759-669-45 | s IC TL062CPWR-12 |
| IC508 | 8-759-111-56 | s IC UPC4572G2 |
| IC509 | 8-759-422-21 | s IC NJM4580VTE2 |
| IC510 | 8-759-530-27 | s IC TC4052BFT(EL,N) |
| IC512 | 8-759-669-45 | s IC TL062CPWR-12 |
| IC513 | 8-759-082-61 | s IC TC4W53FU |
| Q503 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q504 | 8-729-026-52 | s TRANSISTOR 2SA1576A-T106-R |
| Q505 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q506 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q507 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| R501 | 1-216-097-91 | s RESISTOR, CHIP 100K 1/10W(2012) |
| R502 | 1-216-097-91 | s RESISTOR, CHIP 100K 1/10W(2012) |
| R503 | 1-216-097-91 | s RESISTOR, CHIP 100K 1/10W(2012) |
| R512 | 1-216-001-00 | s RESISTOR, CHIP 10 1/10W(2012) |
| R513 | 1-216-843-11 | s RESISTOR, CHIP 68K 1/16W (1608) |
| R514 | 1-216-101-00 | s RESISTOR, CHIP 150K 1/10W(2012) |
| R515 | 1-216-051-00 | s RESISTOR, CHIP 1.2K 1/10W(2012) |
| R516 | 1-216-105-91 | s RESISTOR, CHIP 220K 1/10W(2125) |
| R517 | 1-216-655-11 | s RESISTOR, CHIP 1.5K 1/10W(2012) |
| R518 | 1-216-655-11 | s RESISTOR, CHIP 1.5K 1/10W(2012) |
| R524 | 1-216-001-00 | s RESISTOR, CHIP 10 1/10W(2012) |
| R525 | 1-216-065-91 | s RESISTOR, CHIP 4.7K 1/10W(2012) |
| R526 | 1-216-065-91 | s RESISTOR, CHIP 4.7K 1/10W(2012) |
| R527 | 1-216-295-91 | s RESISTOR, CHIP 0 (1/10W) |
| R528 | 1-216-295-91 | s RESISTOR, CHIP 0 (1/10W) |
| R529 | 1-216-069-00 | s RESISTOR, CHIP 6.8K 1/10W(2012) |
| R530 | 1-216-069-00 | s RESISTOR, CHIP 6.8K 1/10W(2012) |
| R531 | 1-216-081-00 | s RESISTOR, CHIP 22K 1/10W(2012) |
| R533 | 1-216-073-00 | s RESISTOR, CHIP 10K 1/10W(2012) |
| R535 | 1-216-073-00 | s RESISTOR, CHIP 10K 1/10W(2012) |
| R536 | 1-208-801-11 | s RESISTOR, CHIP 6.2K 1/10W(2012) |
| R537 | 1-208-830-11 | s RESISTOR, CHIP 100K 1/10W(2012) |
| R538 | 1-208-830-11 | s RESISTOR, CHIP 100K 1/10W(2012) |
| R539 | 1-208-796-11 | s RESISTOR, CHIP 3.9K 1/10W(2012) |
| R541 | 1-208-807-11 | s RESISTOR, CHIP 11K 1/10W (2125) |
| R542 | 1-208-796-11 | s RESISTOR, CHIP 3.9K 1/10W(2012) |
| R544 | 1-208-807-11 | s RESISTOR, CHIP 11K 1/10W (2125) |
| R547 | 1-216-051-00 | s RESISTOR, CHIP 1.2K 1/10W(2012) |
| R548 | 1-216-051-00 | s RESISTOR, CHIP 1.2K 1/10W(2012) |
| R549 | 1-216-001-00 | s RESISTOR, CHIP 10 1/10W(2012) |
| R550 | 1-216-295-91 | s RESISTOR, CHIP 0 (1/10W) |

(AA-104 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| R551 | 1-216-001-00 | s RESISTOR,CHIP 10 1/10W(2012) |
| R552 | 1-216-001-00 | s RESISTOR,CHIP 10 1/10W(2012) |
| R553 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R554 | 1-216-033-00 | s RESISTOR,CHIP 220 1/10W(2012) |
| R555 | 1-216-033-00 | s RESISTOR,CHIP 220 1/10W(2012) |
| R556 | 1-216-033-00 | s RESISTOR,CHIP 220 1/10W(2012) |
| R557 | 1-216-797-11 | s RESISTOR,CHIP 10 1/16W 1608 |
| R558 | 1-216-797-11 | s RESISTOR,CHIP 10 1/16W 1608 |
| R559 | 1-216-797-11 | s RESISTOR,CHIP 10 1/16W 1608 |
| R560 | 1-216-797-11 | s RESISTOR,CHIP 10 1/16W 1608 |
| R561 | 1-216-813-11 | s RESISTOR,CHIP 220 1/16W 1608 |
| R562 | 1-216-025-91 | s RESISTOR,CHIP 100 1/10W(2125) |
| R563 | 1-216-025-91 | s RESISTOR,CHIP 100 1/10W(2125) |
| R564 | 1-216-061-00 | s RESISTOR,CHIP 3.3K 1/10W(2012) |
| R565 | 1-216-025-91 | s RESISTOR,CHIP 100 1/10W(2125) |
| R566 | 1-216-061-00 | s RESISTOR,CHIP 3.3K 1/10W(2012) |
| R572 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R573 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R582 | 1-216-125-00 | s RESISTOR,CHIP 1.5M 1/10W(2012) |
| R583 | 1-216-817-11 | s RESISTOR,CHIP 470 1/16W 1608 |
| R584 | 1-216-817-11 | s RESISTOR,CHIP 470 1/16W 1608 |
| R585 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R586 | 1-216-841-11 | s RESISTOR,CHIP 47K 1/16W 1608 |
| R587 | 1-216-065-91 | s RESISTOR,CHIP 4.7K 1/10W(2012) |
| R589 | 1-216-125-00 | s RESISTOR,CHIP 1.5M 1/10W(2012) |
| R590 | 1-216-089-91 | s RESISTOR,CHIP 47K 1/10W(2012) |
| R591 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R592 | 1-216-829-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R593 | 1-216-089-91 | s RESISTOR,CHIP 47K 1/10W(2012) |
| RB501 | 1-239-444-11 | s NETWORK,RESISTOR 220K (1608) |
| RB502 | 1-236-908-11 | s RESISTOR,NETWORK 10K (3216) |
| RB503 | 1-236-908-11 | s RESISTOR,NETWORK 10K (3216) |
| RB504 | 1-239-444-11 | s NETWORK,RESISTOR 220K (1608) |
| RV501 | 1-241-261-41 | s RESISTOR, ADJ, CERMET 1K |

AT-142 BOARD

*a: [Lot No. 911-162]
*b: [Lot No. 163-]

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| 1pc | A-8324-996-A | o MOUNTED CIRCUIT BOARD, AT-142 |
| 1pc | 3-709-100-01 | o COVER, IC SOCKET |
| C501 | 1-113-991-11 | s CAPACITOR,TANTALUM 33MF/16V |
| C502 | 1-113-682-11 | s CAPACITOR,TANTALUM 33MF/10V |
| C503 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C504 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C505 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C506 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C507 | 1-135-149-21 | s CAPACITOR,TANTALUM 2.2MF/10V |
| C508 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C509 | 1-126-393-11 | s CAPACITOR,ELECT 33MF/10V(CHIP) |
| C510 | 1-104-851-11 | s CAPACITOR,TANTALUM 10MF/10V |
| C511 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C512 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C513 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C514 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C515 | 1-126-393-11 | s CAPACITOR,ELECT 33MF/10V(CHIP) |
| C516 | 1-104-851-11 | s CAPACITOR,TANTALUM 10MF/10V |
| C517 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C520 | 1-104-851-11 | s CAPACITOR,TANTALUM 10MF/10V |
| C521 | 1-104-851-11 | s CAPACITOR,TANTALUM 10MF/10V |
| C522 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C523 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C524 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C525 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C526 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C527 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C528 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C529 | 1-104-851-11 | s CAPACITOR,TANTALUM 10MF/10V |
| C530 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C531 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C532 | 1-162-964-11 | s CAPACITOR,CERAMIC 1000PF/50V B |
| C533 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C534 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C536 | 1-162-964-11 | s CAPACITOR,CERAMIC 1000PF/50V B |
| C537 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C538 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C539 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C540 | 1-104-851-11 | s CAPACITOR,TANTALUM 10MF/10V |
| C541 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C542 | 1-162-964-11 | s CAPACITOR,CERAMIC 1000PF/50V B |
| C543 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C544 | 1-162-964-11 | s CAPACITOR,CERAMIC 1000PF/50V B |
| C545 | 1-126-397-11 | s CAPACITOR,ELECT 33MF/25V(CHIP) |
| C546 | 1-126-397-11 | s CAPACITOR,ELECT 33MF/25V(CHIP) |
| C547 | 1-104-851-11 | s CAPACITOR,TANTALUM 10MF/10V |
| C548 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C549 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C550 | 1-104-851-11 | s CAPACITOR,TANTALUM 10MF/10V |
| C551 | 1-135-177-21 | s CAPACITOR,TANTALUM 1MF/25V |
| C552 | 1-162-923-11 | s CAPACITOR,CERAMIC 47PF/50V CH |
| C553 | 1-162-917-11 | s CAPACITOR,CERAMIC 15PF/50V CH |
| C554 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C555 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C556 | 1-162-964-11 | s CAPACITOR,CERAMIC 1000PF/50V B |
| C557 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |

(AT-142 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|-----------------|-----------------------------------|
| C558 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C559 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C701 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C702 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C703 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C704 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C705 | 1-113-642-11 | s CAPACITOR, TANTALUM 47MF/10V |
| C706 | 1-113-642-11 | s CAPACITOR, TANTALUM 47MF/10V |
| C707 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C710 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C711 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C712 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C713 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C714 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C715 | 1-107-689-21 | s CAPACITOR, TANTALUM 1MF/35V |
| C716 | *b 1-162-912-11 | s CAPACITOR, CERAMIC 7PF/50V CH |
| | *a 1-162-917-11 | s CAPACITOR, CERAMIC 7PF/50V CH |
| C717 | 1-162-919-11 | s CAPACITOR, CERAMIC 22PF/50V CH |
| C719 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C720 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C721 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C729 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C730 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C731 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C732 | 1-162-927-11 | s CAPACITOR, CERAMIC 100PF/50V CH |
| C733 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C734 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C735 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C736 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| CN503 | 1-580-789-21 | o PIN, CONNECTOR (SMD) 6P |
| CN1703 | 1-251-496-21 | o SOCKET, IC |
| CV502 | 1-141-368-11 | s CAPACITOR, CHIP TRIMMER 30PF |
| CV701 | 1-141-422-11 | s CAPACITOR TRIMER 10PF (CHIP) |
| D501 | 8-719-029-64 | s DIODE RD4.7UH-T1 |
| D502 | 8-719-050-51 | s DIODE RD9.1UM-T1B2 |
| D503 | 8-719-421-69 | s DIODE MA133 |
| D504 | 8-719-421-69 | s DIODE MA133 |
| D505 | 8-719-421-69 | s DIODE MA133 |
| D506 | 8-719-421-69 | s DIODE MA133 |
| D507 | 8-719-421-69 | s DIODE MA133 |
| D508 | 8-719-421-69 | s DIODE MA133 |
| D509 | 8-719-421-69 | s DIODE MA133 |
| D510 | 8-719-421-69 | s DIODE MA133 |
| D511 | 8-719-421-69 | s DIODE MA133 |
| D701 | 8-719-975-40 | s DIODE RB411D (RECTI) |
| D702 | 8-719-421-69 | s DIODE MA133 |
| D703 | 8-719-421-69 | s DIODE MA133 |
| IC501 | 8-759-185-42 | s IC LM4040AIM3-2.5 |
| IC502 | 8-759-669-45 | s IC TL062CPWR-12 |
| IC504 | 8-759-589-29 | s IC X24645S8I-2.7T2 |
| IC506 | 8-759-049-77 | s IC SN74HC244APWR |
| IC507 | 8-759-659-71 | s IC SN74HC165APWR |
| IC508 | 8-752-392-03 | s IC CXD1095BR |
| IC509 | 8-759-082-58 | s IC TC7W08FU |
| IC511 | 8-759-660-18 | s IC SN74HC74APWR |
| IC512 | 8-759-338-95 | s IC NJM2903V (TE2) |
| IC513 | 8-759-257-96 | s IC TC7814FU (TE85R) |

(AT-142 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|------------------------------------|
| IC514 | 8-759-659-96 | s IC SN74HC08APWR |
| IC515 | 8-759-082-59 | s IC TC7W32FU |
| IC516 | 8-759-058-58 | s IC TC7S04FU-TE85R |
| IC517 | 8-759-082-55 | s IC TC7W00FU |
| IC518 | 8-759-669-66 | s IC TLC272CPWR |
| IC519 | 8-759-009-05 | s IC MC14051BF |
| IC520 | 8-759-669-45 | s IC TL062CPWR-12 |
| IC521 | 8-759-064-36 | s IC MB88346BPFV |
| IC522 | 8-759-669-45 | s IC TL062CPWR-12 |
| IC524 | 8-759-082-60 | s IC TC7866FU |
| IC525 | 8-759-594-35 | s IC UPD6453GT-658-E2 |
| IC526 | 8-759-660-09 | s IC SN74HC158APWR |
| IC528 | 8-759-064-36 | s IC MB88346BPFV |
| IC529 | 8-759-669-45 | s IC TL062CPWR-12 |
| IC530 | 8-759-082-60 | s IC TC7866FU |
| IC701 | 8-759-532-02 | s IC CY62256LL-70ZC-T2 |
| IC702 | 8-759-532-02 | s IC CY62256LL-70ZC-T2 |
| IC703 | 6-800-374-01 | o IC 29F800B-DSR300AV1.02 |
| IC704 | 8-759-058-58 | s IC TC7S04FU-TE85R |
| IC708 | 8-759-489-89 | s IC HD6437034AD49F |
| IC709 | 8-759-542-91 | s IC S-80840ANUP-ED4-T2 |
| IC711 | 8-759-182-95 | s IC HD151015T |
| IC712 | 8-759-196-96 | s IC TC7SH08FU (TE85R) |
| IC717 | 8-759-252-59 | s IC MAX202CSE |
| L501 | 1-410-385-11 | s INDUCTOR, CHIP 22UH (3225) |
| L502 | 1-410-385-11 | s INDUCTOR, CHIP 22UH (3225) |
| L503 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| L504 | 1-412-963-11 | s INDUCTOR 100UH (2520) |
| L505 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| L507 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| L508 | 1-410-385-11 | s INDUCTOR, CHIP 22UH (3225) |
| L509 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| L510 | 1-410-385-11 | s INDUCTOR, CHIP 22UH (3225) |
| L511 | 1-412-282-41 | s INDUCTOR INDUCTOR 470UH (3225) |
| L512 | 1-412-282-41 | s INDUCTOR INDUCTOR 470UH (3225) |
| L513 | 1-412-957-11 | s INDUCTOR 33UH (2520) |
| L701 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| L702 | 1-412-943-11 | s INDUCTOR 2.2UH (2520) |
| L703 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| L704 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| L706 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| Q501 | 8-729-101-07 | s TRANSISTOR 2SB798 |
| Q502 | 8-729-402-19 | s TRANSISTOR XN6501 |
| Q503 | 8-729-402-19 | s TRANSISTOR XN6501 |
| Q504 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q505 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q506 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q507 | 8-729-142-90 | s TRANSISTOR 2SK853-K5 |
| Q508 | 8-729-141-75 | s TRANSISTOR 2SD596DV345 |
| Q509 | 8-729-141-48 | s TRANSISTOR 2SB624-BV345 |
| Q510 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q511 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q512 | 8-729-026-52 | s TRANSISTOR 2SA1576A-T106-R |
| Q513 | 8-729-026-52 | s TRANSISTOR 2SA1576A-T106-R |
| Q701 | 8-729-402-19 | s TRANSISTOR XN6501 |
| R501 | 1-218-881-11 | s RESISTOR, CHIP 27K 1/16W (1608) |
| R502 | 1-216-833-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R503 | 1-218-851-11 | s RESISTOR, CHIP 1.5K 1/16W (1608) |

(AT-142 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|--------------------------------|
| R504 | 1-218-857-11 s | RESISTOR,CHIP 2.7K 1/16W(1608) |
| R505 | 1-218-839-11 s | RESISTOR,CHIP 470 1/16W (1608) |
| R506 | 1-218-859-11 s | RESISTOR,CHIP 3.3K 1/16W(1608) |
| R507 | 1-216-839-11 s | RESISTOR,CHIP 33K 1/16W 1608 |
| R508 | 1-216-827-11 s | RESISTOR,CHIP 3.3K 1/16W 1608 |
| R509 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R510 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R511 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R512 | 1-216-841-11 s | RESISTOR,CHIP 47K 1/16W 1608 |
| R513 | 1-216-841-11 s | RESISTOR,CHIP 47K 1/16W 1608 |
| R514 | 1-216-841-11 s | RESISTOR,CHIP 47K 1/16W 1608 |
| R515 | 1-216-841-11 s | RESISTOR,CHIP 47K 1/16W 1608 |
| R516 | 1-216-837-11 s | RESISTOR,CHIP 22K 1/16W 1608 |
| R517 | 1-216-819-11 s | RESISTOR,CHIP 680 1/16W 1608 |
| R518 | 1-216-819-11 s | RESISTOR,CHIP 680 1/16W 1608 |
| R519 | 1-216-837-11 s | RESISTOR,CHIP 22K 1/16W 1608 |
| R520 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R521 | 1-216-837-11 s | RESISTOR,CHIP 22K 1/16W 1608 |
| R522 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R523 | 1-218-863-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R524 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R525 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R526 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R527 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R528 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R529 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R530 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R531 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R532 | 1-216-839-11 s | RESISTOR,CHIP 33K 1/16W 1608 |
| R533 | 1-218-875-11 s | RESISTOR,CHIP 15K 1/16W (1608) |
| R534 | 1-218-882-11 s | RESISTOR,CHIP 30K 1/16W(1608) |
| R535 | 1-218-875-11 s | RESISTOR,CHIP 15K 1/16W (1608) |
| R536 | 1-216-837-11 s | RESISTOR,CHIP 22K 1/16W 1608 |
| R537 | 1-216-837-11 s | RESISTOR,CHIP 22K 1/16W 1608 |
| R538 | 1-216-863-11 s | RESISTOR,CHIP 3.3M 1/16W 1608 |
| R539 | 1-216-863-11 s | RESISTOR,CHIP 3.3M 1/16W 1608 |
| R540 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R541 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R542 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R543 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R544 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R545 | 1-218-861-11 s | RESISTOR,CHIP 3.9K 1/16W(1608) |
| R546 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R547 | 1-216-857-11 s | RESISTOR,CHIP 1M 1/16W(1608) |
| R548 | 1-218-893-11 s | RESISTOR,CHIP 82K 1/16W(1608) |
| R549 | 1-218-871-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R550 | 1-218-893-11 s | RESISTOR,CHIP 82K 1/16W(1608) |
| R551 | 1-218-871-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R552 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R553 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R554 | 1-218-871-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R555 | 1-218-871-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R557 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| R558 | 1-216-857-11 s | RESISTOR,CHIP 1M 1/16W(1608) |
| R559 | 1-218-867-11 s | RESISTOR,CHIP 6.8K 1/16W(1608) |
| R560 | 1-218-879-11 s | RESISTOR,CHIP 22K 1/16W (1608) |
| R561 | 1-218-869-11 s | RESISTOR,CHIP 8.2K 1/16W(1608) |
| R562 | 1-218-865-11 s | RESISTOR,CHIP 5.6K 1/16W(1608) |
| R563 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |

(AT-142 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|--------------------------------|
| R564 | 1-216-841-11 s | RESISTOR,CHIP 47K 1/16W 1608 |
| R565 | 1-218-863-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R566 | 1-216-857-11 s | RESISTOR,CHIP 1M 1/16W(1608) |
| R567 | 1-218-861-11 s | RESISTOR,CHIP 3.9K 1/16W(1608) |
| R568 | 1-218-867-11 s | RESISTOR,CHIP 6.8K 1/16W(1608) |
| R569 | 1-218-879-11 s | RESISTOR,CHIP 22K 1/16W (1608) |
| R570 | 1-218-870-11 s | RESISTOR,CHIP 9.1K 1/16W(1608) |
| R571 | 1-218-865-11 s | RESISTOR,CHIP 5.6K 1/16W(1608) |
| R572 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R573 | 1-216-857-11 s | RESISTOR,CHIP 1M 1/16W(1608) |
| R574 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R575 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R576 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R577 | 1-216-807-11 s | RESISTOR,CHIP 68 1/16W 1608 |
| R578 | 1-216-807-11 s | RESISTOR,CHIP 68 1/16W 1608 |
| R579 | 1-216-807-11 s | RESISTOR,CHIP 68 1/16W 1608 |
| R580 | 1-216-807-11 s | RESISTOR,CHIP 68 1/16W 1608 |
| R581 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R582 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R583 | 1-216-837-11 s | RESISTOR,CHIP 22K 1/16W 1608 |
| R585 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R586 | 1-216-817-11 s | RESISTOR,CHIP 470 1/16W 1608 |
| R587 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R588 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R589 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R590 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R591 | 1-218-863-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R592 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R593 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R594 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R595 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R596 | 1-218-863-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R597 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R598 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R599 | 1-216-817-11 s | RESISTOR,CHIP 470 1/16W 1608 |
| R601 | 1-218-861-11 s | RESISTOR,CHIP 3.9K 1/16W(1608) |
| R602 | 1-216-857-11 s | RESISTOR,CHIP 1M 1/16W(1608) |
| R603 | 1-216-857-11 s | RESISTOR,CHIP 1M 1/16W(1608) |
| R604 | 1-218-861-11 s | RESISTOR,CHIP 3.9K 1/16W(1608) |
| R605 | 1-218-867-11 s | RESISTOR,CHIP 6.8K 1/16W(1608) |
| R606 | 1-218-879-11 s | RESISTOR,CHIP 22K 1/16W (1608) |
| R608 | 1-218-870-11 s | RESISTOR,CHIP 9.1K 1/16W(1608) |
| R609 | 1-218-865-11 s | RESISTOR,CHIP 5.6K 1/16W(1608) |
| R610 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R611 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R612 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R613 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R615 | 1-216-857-11 s | RESISTOR,CHIP 1M 1/16W(1608) |
| R616 | 1-218-863-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R617 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R618 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R619 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R620 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R621 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R622 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R623 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R624 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R625 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R626 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |

(AT-142 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| R627 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R628 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R701 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R704 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R705 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R706 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R707 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R708 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R709 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R711 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R712 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R713 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R714 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R715 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R716 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R717 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R718 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R719 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R722 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R724 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R725 | 1-218-895-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R726 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R728 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R729 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R730 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R731 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R732 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R733 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R734 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R737 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R738 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R739 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R740 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R741 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R742 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R743 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R749 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R750 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R752 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| RB501 | 1-239-309-11 | s RESISTOR,ARRAY,CHIP 100K |
| RB502 | 1-236-904-11 | s RESISTOR,NETWORK 1K (1608) |
| RB503 | 1-236-907-11 | s RESISTOR,BLOCK 100K (1608) |
| RB504 | 1-236-904-11 | s RESISTOR,NETWORK 1K (1608) |
| RB505 | 1-236-907-11 | s RESISTOR,BLOCK 100K (1608) |
| RB506 | 1-236-907-11 | s RESISTOR,BLOCK 100K (1608) |
| RB507 | 1-236-907-11 | s RESISTOR,BLOCK 100K (1608) |
| RB508 | 1-236-904-11 | s RESISTOR,NETWORK 1K (1608) |
| RB509 | 1-236-904-11 | s RESISTOR,NETWORK 1K (1608) |
| RB510 | 1-236-907-11 | s RESISTOR,BLOCK 100K (1608) |
| RB701 | 1-239-309-11 | s RESISTOR,ARRAY,CHIP 100K |
| RB702 | 1-239-309-11 | s RESISTOR,ARRAY,CHIP 100K |
| RB703 | 1-236-904-11 | s RESISTOR,NETWORK 1K (1608) |
| RB704 | 1-236-907-11 | s RESISTOR,BLOCK 100K (1608) |
| RB705 | 1-239-309-11 | s RESISTOR,ARRAY,CHIP 100K |
| RB706 | 1-239-426-11 | s NETWORK,RESISTOR 2.2K (1608) |
| RB707 | 1-239-412-11 | s NETWORK,RESISTOR 100 (1608) |
| RB708 | 1-239-428-11 | s NETWORK,RESISTOR 3.3K (1608) |
| X702 | 1-760-273-11 | s VIBRATOR, CRYSTAL |

AT-150 BOARD

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| 1pc | A-8329-857-A | s MOUNTED CIRCUIT BOARD, AT-150 |
| 1pc | 3-709-100-01 | o COVER, IC SOCKET |
| C501 | 1-104-919-11 | s CAPACITOR,TANTALUM 10MF/25V |
| C502 | 1-119-751-11 | s CAPACITOR,TANTALUM 22MF/16V |
| C503 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C504 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C505 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C506 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C507 | 1-135-870-91 | s CAPACITOR, TANTALUM 2.2/16V |
| C508 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C509 | 1-126-393-11 | s CAPACITOR ELECT 33MF/10V(CHIP) |
| C510 | 1-119-751-11 | s CAPACITOR,TANTALUM 22MF/16V |
| C511 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C512 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C513 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C514 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C515 | 1-126-393-11 | s CAPACITOR ELECT 33MF/10V(CHIP) |
| C516 | 1-119-751-11 | s CAPACITOR,TANTALUM 22MF/16V |
| C517 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C520 | 1-119-751-11 | s CAPACITOR,TANTALUM 22MF/16V |
| C521 | 1-119-751-11 | s CAPACITOR,TANTALUM 22MF/16V |
| C522 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C523 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C524 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C525 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C526 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C527 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C528 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C529 | 1-119-751-11 | s CAPACITOR,TANTALUM 22MF/16V |
| C530 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C531 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C532 | 1-162-964-11 | s CAPACITOR,CERAMIC 1000PF/50V B |
| C533 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C534 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C536 | 1-162-964-11 | s CAPACITOR,CERAMIC 1000PF/50V B |
| C537 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C538 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C539 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C540 | 1-119-751-11 | s CAPACITOR,TANTALUM 22MF/16V |
| C541 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C542 | 1-162-964-11 | s CAPACITOR,CERAMIC 1000PF/50V B |
| C543 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C544 | 1-162-964-11 | s CAPACITOR,CERAMIC 1000PF/50V B |
| C545 | 1-126-397-11 | s CAPACITOR ELECT 33MF/25V(CHIP) |
| C546 | 1-126-397-11 | s CAPACITOR ELECT 33MF/25V(CHIP) |
| C547 | 1-104-919-11 | s CAPACITOR,TANTALUM 10MF/25V |
| C548 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C549 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C550 | 1-104-919-11 | s CAPACITOR,TANTALUM 10MF/25V |
| C551 | 1-107-689-21 | s CAPACITOR,TANTALUM 1MF/35V |
| C552 | 1-162-923-11 | s CAPACITOR,CERAMIC 47PF/50V CH |
| C553 | 1-162-917-11 | s CAPACITOR,CERAMIC 15PF/50V CH |
| C554 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C555 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C556 | 1-162-964-11 | s CAPACITOR,CERAMIC 1000PF/50V B |
| C557 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C558 | 1-104-919-11 | s CAPACITOR,TANTALUM 10MF/25V |
| C559 | 1-162-970-11 | s CAPACITOR CERAMIC 0.01MF/25V B |

(AT-150 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-----------------------------------|
| C560 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C576 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C577 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C578 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C579 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C580 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C701 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C702 | 1-119-751-11 | s CAPACITOR, TANTALUM 22MF/16V |
| C703 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C704 | 1-119-751-11 | s CAPACITOR, TANTALUM 22MF/16V |
| C705 | 1-119-751-11 | s CAPACITOR, TANTALUM 22MF/16V |
| C706 | 1-119-751-11 | s CAPACITOR, TANTALUM 22MF/16V |
| C707 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C710 | 1-119-751-11 | s CAPACITOR, TANTALUM 22MF/16V |
| C711 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C712 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C713 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C714 | 1-119-751-11 | s CAPACITOR, TANTALUM 22MF/16V |
| C715 | 1-107-689-21 | s CAPACITOR, TANTALUM 1MF/35V |
| C716 | 1-162-912-11 | s CAPACITOR, CERAMIC 7PF/50V 1608 |
| C717 | 1-162-919-11 | s CAPACITOR, CERAMIC 22PF/50V CH |
| C720 | 1-119-751-11 | s CAPACITOR, TANTALUM 22MF/16V |
| C721 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C729 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C730 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C731 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C732 | 1-162-927-11 | s CAPACITOR, CERAMIC 100PF/50V CH |
| C733 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C734 | 1-119-751-11 | s CAPACITOR, TANTALUM 22MF/16V |
| C735 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C736 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C748 | 1-119-751-11 | s CAPACITOR, TANTALUM 22MF/16V |
| CN501 | 1-774-603-41 | s CONNECTOR, BOARD TO BOARD 100P |
| CN503 | 1-580-789-21 | o PIN, CONNECTOR (SMD) 6P |
| CV502 | 1-141-368-11 | s CAPACITOR, CHIP TRIMMER 30PF |
| CV701 | 1-141-422-11 | s CAPACITOR, TRIMER 10PF (CHIP) |
| D501 | 8-719-017-03 | s DIODE 02DZ4.7-TPH3 |
| D502 | 8-719-050-51 | s DIODE RD9.1UM-T1B2 |
| D503 | 8-719-421-69 | s DIODE MA133 |
| D504 | 8-719-421-69 | s DIODE MA133 |
| D505 | 8-719-421-69 | s DIODE MA133 |
| D506 | 8-719-421-69 | s DIODE MA133 |
| D507 | 8-719-421-69 | s DIODE MA133 |
| D508 | 8-719-421-69 | s DIODE MA133 |
| D509 | 8-719-421-69 | s DIODE MA133 |
| D511 | 8-719-421-69 | s DIODE MA133 |
| D512 | 8-719-421-69 | s DIODE MA133 |
| D702 | 8-719-421-69 | s DIODE MA133 |
| D703 | 8-719-421-69 | s DIODE MA133 |
| IC501 | 8-759-185-42 | s IC LM4040AIM3-2.5 |
| IC502 | 8-759-327-01 | s IC NJM062V-TE2 |
| IC504 | 8-759-589-29 | s IC X24645S81-2.7T2 |
| IC506 | 8-759-673-09 | s IC MM74HC244MTCX |
| IC507 | 8-759-659-71 | s IC SN74HC165APWR |
| IC508 | 8-752-392-03 | s IC CXD1095BR |
| IC509 | 8-759-082-58 | s IC TC7W08FU |
| IC511 | 8-759-673-55 | s IC MM74HC74AMTCX |

(AT-150 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-------------------------------|
| IC512 | 8-759-338-95 | s IC NJM2903V (TE2) |
| IC513 | 8-759-257-96 | s IC TC7S14FU (TE85R) |
| IC514 | 8-759-673-46 | s IC MM74HC08MTCX |
| IC515 | 8-759-673-52 | s IC MM74HC32MTCX |
| IC516 | 8-759-082-55 | s IC TC7W00FU |
| IC517 | 8-759-082-55 | s IC TC7W00FU |
| IC518 | 8-759-327-01 | s IC NJM062V-TE2 |
| IC519 | 8-759-009-05 | s IC MC14051BF |
| IC520 | 8-759-327-01 | s IC NJM062V-TE2 |
| IC521 | 8-759-064-36 | s IC MB88346BPFV |
| IC522 | 8-759-327-01 | s IC NJM062V-TE2 |
| IC524 | 8-759-082-60 | s IC TC7S66FU |
| IC525 | 8-759-594-35 | s IC UPD6453GT-658-E2 |
| IC526 | 8-759-660-09 | s IC SN74HC158APWR |
| IC528 | 8-759-064-36 | s IC MB88346BPFV |
| IC529 | 8-759-327-01 | s IC NJM062V-TE2 |
| IC530 | 8-759-082-60 | s IC TC7S66FU |
| IC531 | 8-759-058-64 | s IC TC7S32FU-TE85R |
| IC550 | 8-759-564-49 | s IC TC7W53FU-TE12R |
| IC551 | 8-759-564-49 | s IC TC7W53FU-TE12R |
| IC701 | 8-759-532-02 | s IC CY62256LL-70ZC-T2 |
| IC702 | 8-759-532-02 | s IC CY62256LL-70ZC-T2 |
| IC703 | 6-803-352-01 | o IC 29F800B-DSR370/570V1.10 |
| IC708 | 8-759-489-89 | s IC HD6437034AD49F |
| IC709 | 8-759-542-91 | s IC S-80840ANUP-ED4-T2 |
| IC711 | 8-759-549-15 | s IC SN74LV245APWR |
| IC712 | 8-759-196-96 | s IC TC7SH08FU (TE85R) |
| IC723 | 8-759-252-59 | s IC MAX202CSE |
| IC724 | 8-759-399-56 | s IC STK12C68-S45 |
| IS703 | 1-251-496-21 | o SOCKET, IC |
| L501 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| L502 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| L503 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| L504 | 1-412-963-11 | s INDUCTOR 100UH (2520) |
| L505 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| L507 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| L508 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| L509 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| L510 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| L511 | 1-412-282-41 | s INDUCTOR, CHIP 470UH (3225) |
| L512 | 1-412-282-41 | s INDUCTOR, CHIP 470UH (3225) |
| L513 | 1-412-957-11 | s INDUCTOR 33UH (2520) |
| L701 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| L702 | 1-412-943-11 | s INDUCTOR 2.2UH (2520) |
| L704 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| L706 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| Q501 | 8-729-101-07 | s TRANSISTOR 2SB798 |
| Q502 | 8-729-402-19 | s TRANSISTOR XN6501 |
| Q503 | 8-729-402-19 | s TRANSISTOR XN6501 |
| Q504 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q505 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q506 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q508 | 8-729-141-75 | s TRANSISTOR 2SD596DV345 |
| Q509 | 8-729-141-48 | s TRANSISTOR 2SB624-BV345 |
| Q510 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q511 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q512 | 8-729-026-53 | s TRANSISTOR 2SA1576A-T106-QR |

(AT-150 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| Q513 | 8-729-026-53 | s TRANSISTOR 2SA1576A-T106-QR |
| Q517 | 8-729-142-90 | s TRANSISTOR 2SK853-K5 |
| Q701 | 8-729-402-19 | s TRANSISTOR XN6501 |
| R501 | 1-218-881-11 | s RESISTOR, CHIP 27K 1/16W(1608) |
| R502 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R503 | 1-218-851-11 | s RESISTOR,CHIP 1.5K 1/16W(1608) |
| R504 | 1-218-857-11 | s RESISTOR,CHIP 2.7K 1/16W(1608) |
| R505 | 1-218-839-11 | s RESISTOR,CHIP 470 1/16W (1608) |
| R506 | 1-218-859-11 | s RESISTOR,CHIP 3.3K 1/16W(1608) |
| R507 | 1-218-883-11 | s RESISTOR,CHIP 33K 1/16W (1608) |
| R508 | 1-218-859-11 | s RESISTOR,CHIP 3.3K 1/16W(1608) |
| R509 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R510 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R511 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R512 | 1-218-887-11 | s RESISTOR,CHIP 47K 1/16W (1608) |
| R513 | 1-218-887-11 | s RESISTOR,CHIP 47K 1/16W (1608) |
| R514 | 1-218-887-11 | s RESISTOR,CHIP 47K 1/16W (1608) |
| R515 | 1-218-887-11 | s RESISTOR,CHIP 47K 1/16W (1608) |
| R516 | 1-218-879-11 | s RESISTOR,CHIP 22K 1/16W (1608) |
| R517 | 1-218-843-11 | s RESISTOR,CHIP 680 1/16W (1608) |
| R518 | 1-218-843-11 | s RESISTOR,CHIP 680 1/16W (1608) |
| R519 | 1-218-879-11 | s RESISTOR,CHIP 22K 1/16W (1608) |
| R520 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R521 | 1-218-879-11 | s RESISTOR,CHIP 22K 1/16W (1608) |
| R522 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R523 | 1-218-863-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R524 | 1-218-895-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R525 | 1-218-895-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R526 | 1-218-895-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R527 | 1-218-895-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R528 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R529 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R530 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R531 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R532 | 1-218-883-11 | s RESISTOR,CHIP 33K 1/16W (1608) |
| R533 | 1-218-875-11 | s RESISTOR,CHIP 15K 1/16W (1608) |
| R534 | 1-218-882-11 | s RESISTOR, CHIP 30K 1/16W(1608) |
| R535 | 1-218-875-11 | s RESISTOR,CHIP 15K 1/16W (1608) |
| R536 | 1-218-879-11 | s RESISTOR,CHIP 22K 1/16W (1608) |
| R537 | 1-218-879-11 | s RESISTOR,CHIP 22K 1/16W (1608) |
| R538 | 1-216-863-11 | s RESISTOR,CHIP 3.3M 1/16W 1608 |
| R539 | 1-216-863-11 | s RESISTOR,CHIP 3.3M 1/16W 1608 |
| R540 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R541 | 1-218-895-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R542 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R543 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R544 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R545 | 1-218-861-11 | s RESISTOR,CHIP 3.9K 1/16W(1608) |
| R546 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R547 | 1-216-857-11 | s RESISTOR,CHIP 1M 1/16W(1608) |
| R548 | 1-218-893-11 | s RESISTOR, CHIP 82K 1/16W(1608) |
| R549 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R550 | 1-218-893-11 | s RESISTOR, CHIP 82K 1/16W(1608) |
| R551 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R552 | 1-218-895-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R553 | 1-218-895-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R554 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R555 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |

(AT-150 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| R557 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R558 | 1-216-857-11 | s RESISTOR,CHIP 1M 1/16W(1608) |
| R559 | 1-218-867-11 | s RESISTOR,CHIP 6.8K 1/16W(1608) |
| R560 | 1-218-879-11 | s RESISTOR,CHIP 22K 1/16W (1608) |
| R561 | 1-218-869-11 | s RESISTOR,CHIP 8.2K 1/16W(1608) |
| R562 | 1-218-865-11 | s RESISTOR,CHIP 5.6K 1/16W(1608) |
| R563 | 1-218-895-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R564 | 1-218-887-11 | s RESISTOR,CHIP 47K 1/16W (1608) |
| R565 | 1-218-863-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R566 | 1-216-857-11 | s RESISTOR,CHIP 1M 1/16W(1608) |
| R567 | 1-218-861-11 | s RESISTOR,CHIP 3.9K 1/16W(1608) |
| R568 | 1-218-867-11 | s RESISTOR,CHIP 6.8K 1/16W(1608) |
| R569 | 1-218-879-11 | s RESISTOR,CHIP 22K 1/16W (1608) |
| R570 | 1-218-870-11 | s RESISTOR,CHIP 9.1K 1/16W(1608) |
| R571 | 1-218-865-11 | s RESISTOR,CHIP 5.6K 1/16W(1608) |
| R572 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R573 | 1-216-857-11 | s RESISTOR,CHIP 1M 1/16W(1608) |
| R574 | 1-218-895-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R575 | 1-218-895-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R576 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R577 | 1-211-989-11 | s RESISTOR,CHIP 68 1/16W (1608) |
| R578 | 1-211-989-11 | s RESISTOR,CHIP 68 1/16W (1608) |
| R579 | 1-211-989-11 | s RESISTOR,CHIP 68 1/16W (1608) |
| R580 | 1-211-989-11 | s RESISTOR,CHIP 68 1/16W (1608) |
| R581 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R582 | 1-218-895-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R583 | 1-218-879-11 | s RESISTOR,CHIP 22K 1/16W (1608) |
| R585 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R586 | 1-218-839-11 | s RESISTOR,CHIP 470 1/16W (1608) |
| R587 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R588 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R589 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R590 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R591 | 1-218-863-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R592 | 1-218-895-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R593 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R594 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R595 | 1-218-895-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R596 | 1-218-863-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R597 | 1-218-895-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R598 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R599 | 1-218-839-11 | s RESISTOR,CHIP 470 1/16W (1608) |
| R601 | 1-218-861-11 | s RESISTOR,CHIP 3.9K 1/16W(1608) |
| R602 | 1-216-857-11 | s RESISTOR,CHIP 1M 1/16W(1608) |
| R603 | 1-216-857-11 | s RESISTOR,CHIP 1M 1/16W(1608) |
| R604 | 1-218-861-11 | s RESISTOR,CHIP 3.9K 1/16W(1608) |
| R605 | 1-218-867-11 | s RESISTOR,CHIP 6.8K 1/16W(1608) |
| R606 | 1-218-879-11 | s RESISTOR,CHIP 22K 1/16W (1608) |
| R608 | 1-218-870-11 | s RESISTOR,CHIP 9.1K 1/16W(1608) |
| R609 | 1-218-865-11 | s RESISTOR,CHIP 5.6K 1/16W(1608) |
| R610 | 1-218-863-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R611 | 1-218-895-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R612 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R613 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R614 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R615 | 1-216-857-11 | s RESISTOR,CHIP 1M 1/16W(1608) |
| R616 | 1-218-863-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R617 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R618 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |

(AT-150 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|----------------------------------|
| R620 | 1-218-847-11 s | RESISTOR, CHIP 1K 1/16W (1608) |
| R621 | 1-218-847-11 s | RESISTOR, CHIP 1K 1/16W (1608) |
| R622 | 1-218-847-11 s | RESISTOR, CHIP 1K 1/16W (1608) |
| R623 | 1-218-847-11 s | RESISTOR, CHIP 1K 1/16W (1608) |
| R624 | 1-218-847-11 s | RESISTOR, CHIP 1K 1/16W (1608) |
| R625 | 1-218-847-11 s | RESISTOR, CHIP 1K 1/16W (1608) |
| R626 | 1-218-847-11 s | RESISTOR, CHIP 1K 1/16W (1608) |
| R627 | 1-218-847-11 s | RESISTOR, CHIP 1K 1/16W (1608) |
| R651 | 1-218-863-11 s | RESISTOR, CHIP 4.7K 1/16W (1608) |
| R652 | 1-218-871-11 s | RESISTOR, CHIP 10K 1/16W (1608) |
| R653 | 1-218-859-11 s | RESISTOR, CHIP 3.3K 1/16W (1608) |
| R654 | 1-218-823-11 s | RESISTOR, CHIP 100 1/16W (1608) |
| R655 | 1-218-839-11 s | RESISTOR, CHIP 470 1/16W (1608) |
| R656 | 1-218-839-11 s | RESISTOR, CHIP 470 1/16W (1608) |
| R701 | 1-216-791-11 s | RESISTOR, CHIP 3.3 1/16W 1608 |
| R702 | 1-218-871-11 s | RESISTOR, CHIP 10K 1/16W (1608) |
| R703 | 1-218-887-11 s | RESISTOR, CHIP 47K 1/16W (1608) |
| R704 | 1-218-895-11 s | RESISTOR, CHIP 100K 1/16W (1608) |
| R705 | 1-218-895-11 s | RESISTOR, CHIP 100K 1/16W (1608) |
| R706 | 1-218-895-11 s | RESISTOR, CHIP 100K 1/16W (1608) |
| R707 | 1-218-895-11 s | RESISTOR, CHIP 100K 1/16W (1608) |
| R708 | 1-216-864-11 s | CONDUCTOR, CHIP (1608) |
| R711 | 1-218-895-11 s | RESISTOR, CHIP 100K 1/16W (1608) |
| R712 | 1-218-895-11 s | RESISTOR, CHIP 100K 1/16W (1608) |
| R713 | 1-218-847-11 s | RESISTOR, CHIP 1K 1/16W (1608) |
| R714 | 1-218-823-11 s | RESISTOR, CHIP 100 1/16W (1608) |
| R715 | 1-218-847-11 s | RESISTOR, CHIP 1K 1/16W (1608) |
| R716 | 1-218-823-11 s | RESISTOR, CHIP 100 1/16W (1608) |
| R717 | 1-218-895-11 s | RESISTOR, CHIP 100K 1/16W (1608) |
| R718 | 1-218-895-11 s | RESISTOR, CHIP 100K 1/16W (1608) |
| R719 | 1-218-895-11 s | RESISTOR, CHIP 100K 1/16W (1608) |
| R722 | 1-218-895-11 s | RESISTOR, CHIP 100K 1/16W (1608) |
| R724 | 1-218-895-11 s | RESISTOR, CHIP 100K 1/16W (1608) |
| R725 | 1-218-895-11 s | RESISTOR, CHIP 100K 1/16W (1608) |
| R726 | 1-218-895-11 s | RESISTOR, CHIP 100K 1/16W (1608) |
| R728 | 1-216-864-11 s | CONDUCTOR, CHIP (1608) |
| R729 | 1-218-895-11 s | RESISTOR, CHIP 100K 1/16W (1608) |
| R732 | 1-218-823-11 s | RESISTOR, CHIP 100 1/16W (1608) |
| R733 | 1-218-823-11 s | RESISTOR, CHIP 100 1/16W (1608) |
| R734 | 1-216-864-11 s | CONDUCTOR, CHIP (1608) |
| R737 | 1-218-823-11 s | RESISTOR, CHIP 100 1/16W (1608) |
| R738 | 1-218-823-11 s | RESISTOR, CHIP 100 1/16W (1608) |
| R739 | 1-218-871-11 s | RESISTOR, CHIP 10K 1/16W (1608) |
| R740 | 1-218-871-11 s | RESISTOR, CHIP 10K 1/16W (1608) |
| R741 | 1-218-871-11 s | RESISTOR, CHIP 10K 1/16W (1608) |
| R742 | 1-218-839-11 s | RESISTOR, CHIP 470 1/16W (1608) |
| R743 | 1-218-847-11 s | RESISTOR, CHIP 1K 1/16W (1608) |
| R749 | 1-218-895-11 s | RESISTOR, CHIP 100K 1/16W (1608) |
| R750 | 1-218-895-11 s | RESISTOR, CHIP 100K 1/16W (1608) |
| R752 | 1-218-895-11 s | RESISTOR, CHIP 100K 1/16W (1608) |
| R765 | 1-218-895-11 s | RESISTOR, CHIP 100K 1/16W (1608) |
| RB501 | 1-239-309-11 s | RESISTOR ARRAY, CHIP 100K |
| RB502 | 1-236-904-11 s | RESISTOR NETWORK 1K (1608) |
| RB503 | 1-236-907-11 s | RESISTOR BLOCK 100K (1608) |
| RB504 | 1-236-904-11 s | RESISTOR NETWORK 1K (1608) |
| RB505 | 1-236-907-11 s | RESISTOR BLOCK 100K (1608) |
| RB506 | 1-236-907-11 s | RESISTOR BLOCK 100K (1608) |
| RB507 | 1-236-907-11 s | RESISTOR BLOCK 100K (1608) |

(AT-150 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|------------------------------|
| RB508 | 1-236-904-11 s | RESISTOR NETWORK 1K (1608) |
| RB509 | 1-236-904-11 s | RESISTOR NETWORK 1K (1608) |
| RB510 | 1-236-907-11 s | RESISTOR BLOCK 100K (1608) |
| RB701 | 1-239-309-11 s | RESISTOR ARRAY, CHIP 100K |
| RB702 | 1-239-309-11 s | RESISTOR ARRAY, CHIP 100K |
| RB703 | 1-236-904-11 s | RESISTOR NETWORK 1K (1608) |
| RB704 | 1-236-907-11 s | RESISTOR BLOCK 100K (1608) |
| RB705 | 1-239-309-11 s | RESISTOR ARRAY, CHIP 100K |
| RB706 | 1-239-426-11 s | NETWORK RESISTOR 2.2K (1608) |
| RB707 | 1-239-412-11 s | NETWORK, RESISTOR 100 (1608) |
| RB708 | 1-239-428-11 s | NETWORK RESISTOR 3.3K (1608) |
| X702 | 1-760-273-11 s | VIBRATOR, CRYSTAL |

CC-68 BOARD

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|------------------------------|
| 1pc | A-8277-832-C o | MOUNTED CIRCUIT BOARD, CC-68 |
| CN1 | 1-750-159-21 o | CONNECTOR, FPC (5P) |
| Q1 | 8-729-926-31 s | PHOTO TRANSISTOR PT483F1S |
| S1 | 1-572-288-11 s | SWITCH, PUSH0 (1-1) |
| S2 | 1-572-288-11 s | SWITCH, PUSH0 (1-1) |

CN-1519 BOARD

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|---------------------------------|
| 1pc | A-8317-811-A o | MOUNTED CIRCUIT BOARD, CN-1519 |
| CN2 | 1-766-566-11 o | CONNECTOR, ROUND TYPE (M) (26P) |
| FB101 | 1-414-552-11 s | MICRO INDUCTOR (CHIP TYPE) |
| FB102 | 1-414-552-11 s | MICRO INDUCTOR (CHIP TYPE) |
| FB103 | 1-414-552-11 s | MICRO INDUCTOR (CHIP TYPE) |
| FB104 | 1-414-552-11 s | MICRO INDUCTOR (CHIP TYPE) |
| FB105 | 1-414-552-11 s | MICRO INDUCTOR (CHIP TYPE) |
| FB106 | 1-414-552-11 s | MICRO INDUCTOR (CHIP TYPE) |
| FB107 | 1-414-552-11 s | MICRO INDUCTOR (CHIP TYPE) |
| FB108 | 1-414-552-11 s | MICRO INDUCTOR (CHIP TYPE) |
| FB109 | 1-414-552-11 s | MICRO INDUCTOR (CHIP TYPE) |
| FB110 | 1-414-552-11 s | MICRO INDUCTOR (CHIP TYPE) |
| FL101 | 1-239-896-12 s | FILTER, EMI (SMD) |
| FL102 | 1-239-896-12 s | FILTER, EMI (SMD) |
| FL103 | 1-239-896-12 s | FILTER, EMI (SMD) |
| FL104 | 1-239-896-12 s | FILTER, EMI (SMD) |
| FL105 | 1-239-896-12 s | FILTER, EMI (SMD) |
| FL106 | 1-239-896-12 s | FILTER, EMI (SMD) |

CN-1524 BOARD

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|-------------------------------|
| 1pc | 1-669-156-11 o | PRINTED WIRING BOARD, CN-1524 |

CN-1866 BOARD

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|---------------------------------|
| 1pc | 1-673-947-12 | o PRINTED WIRING BOARD, CN-1866 |
| C801 | 1-163-009-11 | s CAPACITOR, CERAMIC 1000PF/50V |
| C802 | 1-163-009-11 | s CAPACITOR, CERAMIC 1000PF/50V |
| CN801 | 1-507-980-41 | s JACK |
| W801 | 1-958-492-11 | o HARNESS, SUB (CN1518) |

CN-1867 BOARD

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| 1pc | 1-673-950-11 | o PRINTED WIRING BOARD, CN-1867 |
| C701 | 1-163-017-00 | s CAPACITOR, CHIP CERAMIC 4700PF |
| C702 | 1-163-017-00 | s CAPACITOR, CHIP CERAMIC 4700PF |
| CN701 | 1-507-980-41 | s JACK |
| FB701 | 1-543-775-11 | s BEAD, FERRITE |
| R701 | 1-216-005-00 | s RESISTOR, CHIP 15 1/10W(2012) |
| R702 | 1-216-005-00 | s RESISTOR, CHIP 15 1/10W(2012) |
| W701 | 1-958-491-11 | o HARNESS, SUB (CN1549) |

CN-1873 BOARD

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|---------------------------------|
| 1pc | 1-673-955-11 | o PRINTED WIRING BOARD, CN-1873 |
| CN1 | 1-563-929-11 | s CONNECTOR, ROUND TYPE (RF) 4P |
| W1 | 1-958-493-11 | o HARNESS, SUB (CN1693) |

CN-1874 BOARD

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|---------------------------------|
| 1pc | 1-673-956-11 | o PRINTED WIRING BOARD, CN-1874 |
| 1pc | 3-709-106-01 | o TERMINAL, LIGHT |
| 1pc | 3-709-108-01 | o HOLDER, CONNECTOR |
| 1pc | 3-709-107-01 | o HOUSING, LIGHT TERMINAL |
| C1 | 1-163-021-91 | s CAPACITOR, CERAMIC 0.01MF/50V |
| C2 | 1-163-021-91 | s CAPACITOR, CERAMIC 0.01MF/50V |
| CN1 | 1-560-364-00 | o CONNECTOR, 2P |

CN-1981 BOARD

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|---------------------------------|
| 1pc | 1-677-405-11 | o PRINTED WIRING BOARD, CN-1981 |

CN-2277 BOARD

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-----------------------------------|
| 1pc | A-8329-788-A | s MOUNTED CIRCUIT BOARD, CN-2277 |
| 2pcs | 1-560-372-00 | s TERMINAL, PRESS |
| 1pc | 1-561-514-00 | o CONNECTOR HOUSING, ILG (2P) |
| CN2 | 1-766-566-11 | o CONNECTOR, ROUND TYPE (M) (26P) |
| FB101 | 1-414-552-11 | s MICRO INDUCTOR (CHIP TYPE) |
| FB102 | 1-414-552-11 | s MICRO INDUCTOR (CHIP TYPE) |
| FB103 | 1-414-552-11 | s MICRO INDUCTOR (CHIP TYPE) |
| FB104 | 1-414-552-11 | s MICRO INDUCTOR (CHIP TYPE) |
| FB105 | 1-414-552-11 | s MICRO INDUCTOR (CHIP TYPE) |
| FB106 | 1-414-552-11 | s MICRO INDUCTOR (CHIP TYPE) |
| FB107 | 1-414-552-11 | s MICRO INDUCTOR (CHIP TYPE) |
| FB108 | 1-414-552-11 | s MICRO INDUCTOR (CHIP TYPE) |
| FB109 | 1-414-552-11 | s MICRO INDUCTOR (CHIP TYPE) |
| FB110 | 1-414-552-11 | s MICRO INDUCTOR (CHIP TYPE) |
| FL101 | 1-239-896-12 | s FILTER, EMI (SMD) |
| FL102 | 1-239-896-12 | s FILTER, EMI (SMD) |
| FL103 | 1-239-896-12 | s FILTER, EMI (SMD) |
| FL104 | 1-239-896-12 | s FILTER, EMI (SMD) |
| FL105 | 1-239-896-12 | s FILTER, EMI (SMD) |
| FL106 | 1-239-896-12 | s FILTER, EMI (SMD) |
| FL107 | 1-239-896-12 | s FILTER, EMI (SMD) |

CP-315 BOARD

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|-----------------------------------|
| 1pc | A-8318-040-A | o MOUNTED CIRCUIT BOARD, CP-315 |
| 1pc | A-8278-413-E | s PLATE, CP ASSY |
| 1pc | 1-573-590-13 | s CONNECTOR, (S) TERMINAL 4P |
| 4pcs | 1-778-787-13 | o CONNECTOR, COAXIAL (BNC TYPE) |
| 1pc | 1-778-788-11 | o JACK, 2P PIN |
| 1pc | 3-604-376-01 | o PLATE, CP |
| 3pcs | 7-685-546-14 | s SCREW +BTP 3X8 |
| C101 | 1-163-251-11 | s CAPACITOR, CERAMIC 100PF/50V |
| C102 | 1-163-251-11 | s CAPACITOR, CERAMIC 100PF/50V |
| C103 | 1-163-251-11 | s CAPACITOR, CERAMIC 100PF/50V |
| C104 | 1-163-275-11 | s CAPACITOR, CERAMIC 1000PF/50V |
| C105 | 1-163-133-00 | s CAPACITOR, CHIP CERAMIC 470PF |
| C106 | 1-163-133-00 | s CAPACITOR, CHIP CERAMIC 470PF |
| C107 | 1-124-261-00 | s CAPACITOR, ELECT 10M/50V |
| C108 | 1-124-261-00 | s CAPACITOR, ELECT 10M/50V |
| C109 | 1-163-251-11 | s CAPACITOR, CERAMIC 100PF/50V |
| C110 | 1-163-251-11 | s CAPACITOR, CERAMIC 100PF/50V |
| C111 | 1-163-037-11 | s CAPACITOR, CHIP CERAMIC 0.022MF |
| C112 | 1-163-037-11 | s CAPACITOR, CHIP CERAMIC 0.022MF |
| C113 | 1-104-852-11 | s CAPACITOR, TANTALUM 22MF/10V |
| C114 | 1-104-852-11 | s CAPACITOR, TANTALUM 22MF/10V |
| C115 | 1-135-259-11 | s CAPACITOR, TANTALUM 10MF/6.3V |
| C116 | 1-135-259-11 | s CAPACITOR, TANTALUM 10MF/6.3V |
| C117 | 1-163-038-00 | s CAPACITOR, CERAMIC 0.1MF/25V |
| C118 | 1-163-038-00 | s CAPACITOR, CERAMIC 0.1MF/25V |
| C119 | 1-107-690-11 | s CAPACITOR, TANTALUM 6.8MF/35V |
| C120 | 1-163-251-11 | s CAPACITOR, CERAMIC 100PF/50V |
| C121 | 1-163-251-11 | s CAPACITOR, CERAMIC 100PF/50V |
| C122 | 1-163-251-11 | s CAPACITOR, CERAMIC 100PF/50V |
| C123 | 1-163-275-11 | s CAPACITOR, CERAMIC 1000PF/50V |
| C124 | 1-107-690-11 | s CAPACITOR, TANTALUM 6.8MF/35V |
| C125 | 1-163-133-00 | s CAPACITOR, CHIP CERAMIC 470PF |
| C126 | 1-163-133-00 | s CAPACITOR, CHIP CERAMIC 470PF |
| C127 | 1-124-261-00 | s CAPACITOR, ELECT 10M/50V |
| C128 | 1-124-261-00 | s CAPACITOR, ELECT 10M/50V |
| C129 | 1-163-251-11 | s CAPACITOR, CERAMIC 100PF/50V |
| C130 | 1-163-251-11 | s CAPACITOR, CERAMIC 100PF/50V |
| C131 | 1-163-037-11 | s CAPACITOR, CHIP CERAMIC 0.022MF |
| C132 | 1-163-037-11 | s CAPACITOR, CHIP CERAMIC 0.022MF |
| C133 | 1-107-690-11 | s CAPACITOR, TANTALUM 6.8MF/35V |
| C134 | 1-107-690-11 | s CAPACITOR, TANTALUM 6.8MF/35V |
| C301 | 1-163-251-11 | s CAPACITOR, CERAMIC 100PF/50V |
| C302 | 1-163-251-11 | s CAPACITOR, CERAMIC 100PF/50V |
| C303 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C304 | 1-163-037-11 | s CAPACITOR, CHIP CERAMIC 0.022MF |
| C305 | 1-163-037-11 | s CAPACITOR, CHIP CERAMIC 0.022MF |
| C306 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C406 | 1-163-037-11 | s CAPACITOR, CHIP CERAMIC 0.022MF |
| C413 | 1-163-021-91 | s CAPACITOR, CERAMIC 0.01MF/50V |
| C414 | 1-128-548-11 | s CAPACITOR, ELECT 4700MF/25V |
| C415 | 1-115-339-11 | s CAPACITOR, CERAMIC 0.1MF/50V |
| CB401 | Δ 1-533-481-11 | s BREAKER, CIRCUIT |
| CN1 | 1-750-065-11 | o CONNECTOR, BOARD TO BOARD 60P |
| CN2 | 1-784-720-12 | s PIN, CONNECTOR (PC BOARD TYPE) |
| CN3 | 1-560-356-00 | o CONNECTOR POST HEADER, ILG (2P) |
| CN5 | 1-784-626-11 | o CONNECTOR, FPC (DIP TYPE) 22P |
| CN6 | 1-580-535-11 | o PIN, CONNECTOR (PC BOARD) 12P |

(CP-315 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|------------------------------------|
| CN7 | 1-580-534-11 | o PIN, CONNECTOR (PC BOARD) 10P |
| CN8 | 1-566-757-11 | s PIN, CONNECTOR (PC BOARD) 2P |
| CN9 | 1-506-703-11 | o CONNECTOR POST HEADER, ILG (4P) |
| CN101 | 1-766-386-12 | s CONNECTOR, 3P-XLR TYPE(FEMALE) |
| CN102 | 1-766-386-12 | s CONNECTOR, 3P-XLR TYPE(FEMALE) |
| D101 | 8-719-820-41 | s DIODE 1SS302 |
| D102 | 8-719-820-41 | s DIODE 1SS302 |
| D103 | 8-719-820-41 | s DIODE 1SS302 |
| D104 | 8-719-820-41 | s DIODE 1SS302 |
| D202 | 8-719-820-41 | s DIODE 1SS302 |
| D203 | 8-719-820-41 | s DIODE 1SS302 |
| D205 | 8-719-820-41 | s DIODE 1SS302 |
| D206 | 8-719-820-41 | s DIODE 1SS302 |
| D207 | 8-719-820-41 | s DIODE 1SS302 |
| D208 | 8-719-820-41 | s DIODE 1SS302 |
| D209 | 8-719-820-41 | s DIODE 1SS302 |
| D210 | 8-719-820-41 | s DIODE 1SS302 |
| D402 | 8-719-911-55 | s DIODE U05G (RECTI) |
| FL201 | 1-239-896-12 | s FILTER, EMI (SMD) |
| FL202 | 1-239-896-12 | s FILTER, EMI (SMD) |
| FL203 | 1-239-896-12 | s FILTER, EMI (SMD) |
| FL205 | 1-239-895-11 | s FILTER, EMI (SMD) |
| FL206 | 1-239-895-11 | s FILTER, EMI (SMD) |
| FL207 | 1-239-895-11 | s FILTER, EMI (SMD) |
| FL208 | 1-239-895-11 | s FILTER, EMI (SMD) |
| IC101 | 8-759-700-84 | s IC NJM2041MD |
| IC201 | 8-759-700-84 | s IC NJM2041MD |
| IC301 | 8-759-385-17 | s IC NUM4580E (TE2) |
| L101 | 1-412-137-11 | s INDUCTOR, MICRO 10UH |
| L102 | 1-412-137-11 | s INDUCTOR, MICRO 10UH |
| L103 | 1-412-137-11 | s INDUCTOR, MICRO 10UH |
| L104 | 1-412-137-11 | s INDUCTOR, MICRO 10UH |
| PS301 | Δ 1-533-282-21 | s CIRCUIT PROTECTOR 2A (3225) |
| PS401 | Δ 1-576-410-21 | s FUSE, CHIP 2A/63V |
| Q101 | 8-729-141-75 | s TRANSISTOR 2SD596DV345 |
| Q102 | 8-729-141-48 | s TRANSISTOR 2SB624-BV345 |
| Q103 | 8-729-271-31 | s TRANSISTOR 2SC2713-G |
| Q104 | 8-729-271-31 | s TRANSISTOR 2SC2713-G |
| Q407 | 8-729-039-35 | s TRANSISTOR SI9435DY-T1 |
| Q408 | 8-729-039-35 | s TRANSISTOR SI9435DY-T1 |
| Q409 | 8-729-039-35 | s TRANSISTOR SI9435DY-T1 |
| R102 | 1-216-017-91 | s RESISTOR, CHIP 47 1/10W (2012) |
| R103 | 1-216-295-91 | s RESISTOR, CHIP 0 (1/10W) |
| R105 | 1-216-295-91 | s RESISTOR, CHIP 0 (1/10W) |
| R106 | 1-208-790-11 | s RESISTOR, CHIP 2.2K 1/10W (2012) |
| R107 | 1-208-790-11 | s RESISTOR, CHIP 2.2K 1/10W (2012) |
| R108 | 1-208-790-11 | s RESISTOR, CHIP 2.2K 1/10W (2012) |
| R109 | 1-208-790-11 | s RESISTOR, CHIP 2.2K 1/10W (2012) |
| R110 | 1-208-790-11 | s RESISTOR, CHIP 2.2K 1/10W (2012) |
| R111 | 1-208-790-11 | s RESISTOR, CHIP 2.2K 1/10W (2012) |
| R112 | 1-208-768-11 | s RESISTOR, CHIP 270 1/10W (2012) |
| R113 | 1-208-768-11 | s RESISTOR, CHIP 270 1/10W (2012) |
| R114 | 1-208-770-11 | s RESISTOR, CHIP 330 1/10W (2012) |
| R115 | 1-208-770-11 | s RESISTOR, CHIP 330 1/10W (2012) |
| R116 | 1-216-295-91 | s RESISTOR, CHIP 0 (1/10W) |
| R117 | 1-208-793-11 | s RESISTOR, CHIP 3K 1/10W (2125) |

(CP-315 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| R118 | 1-208-818-11 | s RESISTOR,CHIP 33K 1/10W (2012) |
| R119 | 1-208-818-11 | s RESISTOR,CHIP 33K 1/10W (2012) |
| R120 | 1-208-776-11 | s RESISTOR,CHIP 560 1/10W (2012) |
| R121 | 1-208-778-11 | s RESISTOR,CHIP 680 1/10W (2012) |
| R122 | 1-208-798-11 | s RESISTOR,CHIP 4.7K 1/10W(2012) |
| R123 | 1-208-798-11 | s RESISTOR,CHIP 4.7K 1/10W(2012) |
| R124 | 1-216-295-91 | s RESISTOR,CHIP 0 (1/10W) |
| R127 | 1-216-055-00 | s RESISTOR,CHIP 1.8K 1/10W(2012) |
| R128 | 1-216-055-00 | s RESISTOR,CHIP 1.8K 1/10W(2012) |
| R129 | 1-216-083-00 | s RESISTOR,CHIP 27K 1/10W(2012) |
| R131 | 1-216-017-91 | s RESISTOR,CHIP 47 1/10W(2012) |
| R132 | 1-216-295-91 | s RESISTOR,CHIP 0 (1/10W) |
| R134 | 1-216-083-00 | s RESISTOR,CHIP 27K 1/10W(2012) |
| R135 | 1-216-295-91 | s RESISTOR,CHIP 0 (1/10W) |
| R136 | 1-208-790-11 | s RESISTOR,CHIP 2.2K 1/10W(2012) |
| R137 | 1-208-790-11 | s RESISTOR,CHIP 2.2K 1/10W(2012) |
| R138 | 1-208-790-11 | s RESISTOR,CHIP 2.2K 1/10W(2012) |
| R139 | 1-208-790-11 | s RESISTOR,CHIP 2.2K 1/10W(2012) |
| R140 | 1-208-790-11 | s RESISTOR,CHIP 2.2K 1/10W(2012) |
| R141 | 1-208-790-11 | s RESISTOR,CHIP 2.2K 1/10W(2012) |
| R142 | 1-208-768-11 | s RESISTOR,CHIP 270 1/10W (2012) |
| R143 | 1-208-768-11 | s RESISTOR,CHIP 270 1/10W (2012) |
| R144 | 1-216-295-91 | s RESISTOR,CHIP 0 (1/10W) |
| R145 | 1-208-770-11 | s RESISTOR,CHIP 330 1/10W (2012) |
| R146 | 1-208-770-11 | s RESISTOR,CHIP 330 1/10W (2012) |
| R147 | 1-208-793-11 | s RESISTOR,CHIP 3K 1/10W (2125) |
| R148 | 1-208-818-11 | s RESISTOR,CHIP 33K 1/10W (2012) |
| R149 | 1-208-818-11 | s RESISTOR,CHIP 33K 1/10W (2012) |
| R150 | 1-208-776-11 | s RESISTOR,CHIP 560 1/10W (2012) |
| R151 | 1-208-778-11 | s RESISTOR,CHIP 680 1/10W (2012) |
| R152 | 1-208-798-11 | s RESISTOR,CHIP 4.7K 1/10W(2012) |
| R153 | 1-208-798-11 | s RESISTOR,CHIP 4.7K 1/10W(2012) |
| R154 | 1-216-295-91 | s RESISTOR,CHIP 0 (1/10W) |
| R201 | 1-216-295-91 | s RESISTOR,CHIP 0 (1/10W) |
| R202 | 1-216-295-91 | s RESISTOR,CHIP 0 (1/10W) |
| R203 | 1-216-295-91 | s RESISTOR,CHIP 0 (1/10W) |
| R204 | 1-216-295-91 | s RESISTOR,CHIP 0 (1/10W) |
| R205 | 1-216-295-91 | s RESISTOR,CHIP 0 (1/10W) |
| R206 | 1-216-295-91 | s RESISTOR,CHIP 0 (1/10W) |
| R207 | 1-216-295-91 | s RESISTOR,CHIP 0 (1/10W) |
| R219 | 1-216-023-00 | s RESISTOR,CHIP 82 1/10W(2012) |
| R301 | 1-208-798-11 | s RESISTOR,CHIP 4.7K 1/10W(2012) |
| R302 | 1-208-798-11 | s RESISTOR,CHIP 4.7K 1/10W(2012) |
| R303 | 1-216-025-91 | s RESISTOR,CHIP 100 1/10W(2125) |
| R304 | 1-216-295-91 | s RESISTOR,CHIP 0 (1/10W) |
| R305 | 1-216-295-91 | s RESISTOR,CHIP 0 (1/10W) |
| R306 | 1-208-781-11 | s RESISTOR,CHIP 910 1/10W (2125) |
| R307 | 1-216-655-11 | s RESISTOR,CHIP 1.5K 1/10W(2012) |
| R308 | 1-216-660-11 | s RESISTOR,CHIP 2.4K 1/10W(2012) |
| R309 | 1-216-655-11 | s RESISTOR,CHIP 1.5K 1/10W(2012) |
| R310 | 1-216-025-91 | s RESISTOR,CHIP 100 1/10W(2125) |
| R311 | 1-216-660-11 | s RESISTOR,CHIP 2.4K 1/10W(2012) |
| R312 | 1-216-655-11 | s RESISTOR,CHIP 1.5K 1/10W(2012) |
| R415 | 1-216-033-00 | s RESISTOR,CHIP 220 1/10W(2012) |
| R418 | 1-216-097-91 | s RESISTOR,CHIP 100K 1/10W(2012) |
| S101 | 1-572-042-11 | s SWITCH,SLIDE (2-4-3) |
| S102 | 1-572-042-11 | s SWITCH,SLIDE (2-4-3) |

CP-373 BOARD

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| 1pc | A-8329-787-A | s MOUNTED CIRCUIT BOARD, CP-373 |
| 1pc | 1-573-590-13 | s CONNECTOR, (S) TERMINAL 4P |
| 4pcs | 1-778-787-13 | o CONNECTOR, COAXIAL (BNC TYPE) |
| 1pc | 1-778-788-11 | o JACK, 2P PIN |
| 1pc | 3-604-376-01 | o PLATE,CP |
| 3pcs | 7-685-546-14 | s SCREW +BTP 3X8 |
| 1pc | A-8278-413-E | s PLATE,CP ASSY |
| C101 | 1-163-251-11 | s CAPACITOR CERAMIC 100PF/50V |
| C102 | 1-163-251-11 | s CAPACITOR CERAMIC 100PF/50V |
| C103 | 1-163-251-11 | s CAPACITOR CERAMIC 100PF/50V |
| C104 | 1-163-275-11 | s CAPACITOR CERAMIC 1000PF/50V |
| C105 | 1-163-133-00 | s CAPACITOR,CHIP CERAMIC 470PF |
| C106 | 1-163-133-00 | s CAPACITOR,CHIP CERAMIC 470PF |
| C107 | 1-124-261-00 | s CAPACITOR,ELECT 10M/50V |
| C108 | 1-124-261-00 | s CAPACITOR,ELECT 10M/50V |
| C109 | 1-163-251-11 | s CAPACITOR CERAMIC 100PF/50V |
| C110 | 1-163-251-11 | s CAPACITOR CERAMIC 100PF/50V |
| C111 | 1-163-037-11 | s CAPACITOR,CHIP CERAMIC 0.022MF |
| C112 | 1-163-037-11 | s CAPACITOR,CHIP CERAMIC 0.022MF |
| C113 | 1-128-694-11 | s CAP, CHIP TANTALUM ELECT 22MF |
| C114 | 1-128-694-11 | s CAP, CHIP TANTALUM ELECT 22MF |
| C115 | 1-135-259-11 | s CAPACITOR,TANTALUM 10MF/6.3V |
| C116 | 1-135-259-11 | s CAPACITOR,TANTALUM 10MF/6.3V |
| C117 | 1-115-339-11 | s CAPACITOR,CERAMIC 0.1MF/50V |
| C118 | 1-115-339-11 | s CAPACITOR,CERAMIC 0.1MF/50V |
| C119 | 1-104-920-11 | s CAPACITOR TANTALUM 4.7MF/35V |
| C120 | 1-163-251-11 | s CAPACITOR CERAMIC 100PF/50V |
| C121 | 1-163-251-11 | s CAPACITOR CERAMIC 100PF/50V |
| C122 | 1-163-251-11 | s CAPACITOR CERAMIC 100PF/50V |
| C123 | 1-163-275-11 | s CAPACITOR CERAMIC 1000PF/50V |
| C124 | 1-104-920-11 | s CAPACITOR TANTALUM 4.7MF/35V |
| C125 | 1-163-133-00 | s CAPACITOR,CHIP CERAMIC 470PF |
| C126 | 1-163-133-00 | s CAPACITOR,CHIP CERAMIC 470PF |
| C127 | 1-124-261-00 | s CAPACITOR,ELECT 10M/50V |
| C128 | 1-124-261-00 | s CAPACITOR,ELECT 10M/50V |
| C129 | 1-163-251-11 | s CAPACITOR CERAMIC 100PF/50V |
| C130 | 1-163-251-11 | s CAPACITOR CERAMIC 100PF/50V |
| C131 | 1-163-037-11 | s CAPACITOR,CHIP CERAMIC 0.022MF |
| C132 | 1-163-037-11 | s CAPACITOR,CHIP CERAMIC 0.022MF |
| C133 | 1-104-920-11 | s CAPACITOR TANTALUM 4.7MF/35V |
| C134 | 1-104-920-11 | s CAPACITOR TANTALUM 4.7MF/35V |
| C301 | 1-163-251-11 | s CAPACITOR CERAMIC 100PF/50V |
| C302 | 1-163-251-11 | s CAPACITOR CERAMIC 100PF/50V |
| C303 | 1-104-851-11 | s CAPACITOR,TANTALUM 10MF/10V |
| C304 | 1-163-037-11 | s CAPACITOR,CHIP CERAMIC 0.022MF |
| C305 | 1-163-037-11 | s CAPACITOR,CHIP CERAMIC 0.022MF |
| C306 | 1-104-851-11 | s CAPACITOR,TANTALUM 10MF/10V |
| C406 | 1-163-037-11 | s CAPACITOR,CHIP CERAMIC 0.022MF |
| C413 | 1-163-021-91 | s CAPACITOR, CERAMIC 0.01MF/50V |
| C414 | 1-128-548-11 | s CAPACITOR,ELECT 4700MF/25V |
| C415 | 1-115-339-11 | s CAPACITOR,CERAMIC 0.1MF/50V |
| C416 | 1-115-339-11 | s CAPACITOR,CERAMIC 0.1MF/50V |
| C417 | 1-165-629-11 | s CAPACITOR,CERAMIC1000000PF B |
| C501 | 1-119-667-11 | s CAPACITOR CERAMIC 22MF/10V(F) |
| C502 | 1-119-667-11 | s CAPACITOR CERAMIC 22MF/10V(F) |
| C503 | 1-163-021-91 | s CAPACITOR, CERAMIC 0.01MF/50V |
| C504 | 1-127-573-11 | s CAPACITOR,CERAMIC 1MFB(2012) |
| C505 | 1-127-573-11 | s CAPACITOR,CERAMIC 1MFB(2012) |

(CP-373 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|------------------|---------------------------------|
| C506 | 1-163-021-91 s | CAPACITOR, CERAMIC 0.01MF/50V |
| CB401 | Δ 1-533-481-11 s | BREAKER, CIRCUIT |
| CN1 | 1-750-065-11 o | CONNECTOR, BOARD TO BOARD 60P |
| CN2 | 1-784-720-12 s | PIN, CONNECTOR (PC BOARD TYPE) |
| CN3 | 1-560-356-00 o | CONNECTOR POST HEADER, ILG (2P) |
| CN5 | 1-774-114-11 s | CONNECTOR, FPC (DIP TYPE) 24P |
| CN6 | 1-580-535-11 o | PIN, CONNECTOR (PC BOARD) 12P |
| CN7 | 1-580-534-11 o | PIN, CONNECTOR (PC BOARD) 10P |
| CN8 | 1-566-757-11 s | PIN, CONNECTOR (PC BOARD) 2P |
| CN9 | 1-506-703-11 o | CONNECTOR POST HEADER, ILG (4P) |
| CN10 | 1-560-356-00 o | CONNECTOR POST HEADER, ILG (2P) |
| CN101 | 1-766-386-14 s | CONNECTOR, 3P-XLR TYPE (FEMALE) |
| CN102 | 1-766-386-14 s | CONNECTOR, 3P-XLR TYPE (FEMALE) |
| D101 | 8-719-820-41 s | DIODE 1SS302 |
| D102 | 8-719-820-41 s | DIODE 1SS302 |
| D103 | 8-719-820-41 s | DIODE 1SS302 |
| D104 | 8-719-820-41 s | DIODE 1SS302 |
| D201 | 8-719-820-41 s | DIODE 1SS302 |
| D202 | 8-719-820-41 s | DIODE 1SS302 |
| D203 | 8-719-820-41 s | DIODE 1SS302 |
| D204 | 8-719-820-41 s | DIODE 1SS302 |
| D205 | 8-719-820-41 s | DIODE 1SS302 |
| D206 | 8-719-820-41 s | DIODE 1SS302 |
| D207 | 8-719-820-41 s | DIODE 1SS302 |
| D208 | 8-719-820-41 s | DIODE 1SS302 |
| D401 | 8-719-801-78 s | DIODE 1SS184 |
| D402 | 8-719-911-55 s | DIODE U05G (RECTI) |
| D403 | 8-719-105-91 s | DIODE RD5.6M-B2 |
| D404 | 8-719-801-78 s | DIODE 1SS184 |
| D501 | 8-719-820-41 s | DIODE 1SS302 |
| D502 | 8-719-024-81 s | DIODE 1SS300-TE85L |
| D503 | 8-719-820-41 s | DIODE 1SS302 |
| FL201 | 1-239-896-12 s | FILTER, EMI (SMD) |
| FL202 | 1-239-896-12 s | FILTER, EMI (SMD) |
| FL203 | 1-239-896-12 s | FILTER, EMI (SMD) |
| FL204 | 1-239-895-11 s | FILTER, EMI (SMD) |
| FL205 | 1-239-895-11 s | FILTER, EMI (SMD) |
| FL206 | 1-239-895-11 s | FILTER, EMI (SMD) |
| FL207 | 1-239-895-11 s | FILTER, EMI (SMD) |
| FL208 | 1-239-895-11 s | FILTER, EMI (SMD) |
| IC101 | 8-759-700-84 s | IC NJM2041MD |
| IC201 | 8-759-700-84 s | IC NJM2041MD |
| IC301 | 8-759-385-17 s | IC NJM4580E (TE2) |
| IC501 | 8-759-702-02 s | IC NJM062M |
| IC502 | 8-759-242-64 s | IC TC4W53F |
| IC503 | 8-759-702-02 s | IC NJM062M |
| IC504 | 8-759-242-64 s | IC TC4W53F |
| L101 | 1-412-137-11 s | INDUCTOR, MICRO 10UH |
| L102 | 1-412-137-11 s | INDUCTOR, MICRO 10UH |
| L103 | 1-412-137-11 s | INDUCTOR, MICRO 10UH |
| L104 | 1-412-137-11 s | INDUCTOR, MICRO 10UH |
| PS301 | Δ 1-533-282-21 s | CIRCUIT PROTECTOR 2A (3225) |
| PS401 | Δ 1-576-410-21 s | FUSE, CHIP 2A/63V |
| Q101 | 8-729-159-65 s | TRANSISTOR 2SD596-DV5 |
| Q102 | 8-729-162-45 s | TRANSISTOR 2SB624-BV5 |

(CP-373 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|----------------------------------|
| Q103 | 8-729-271-31 s | TRANSISTOR 2SC2713-G |
| Q104 | 8-729-271-31 s | TRANSISTOR 2SC2713-G |
| Q401 | 6-550-062-01 s | TRANSISTOR SI4835DY-T1 |
| Q402 | 6-550-062-01 s | TRANSISTOR SI4835DY-T1 |
| Q403 | 6-550-062-01 s | TRANSISTOR SI4835DY-T1 |
| Q404 | 6-550-062-01 s | TRANSISTOR SI4835DY-T1 |
| Q407 | 6-550-062-01 s | TRANSISTOR SI4835DY-T1 |
| Q408 | 6-550-062-01 s | TRANSISTOR SI4835DY-T1 |
| Q409 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q410 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q411 | 6-550-062-01 s | TRANSISTOR SI4835DY-T1 |
| Q412 | 6-550-062-01 s | TRANSISTOR SI4835DY-T1 |
| Q413 | 6-550-062-01 s | TRANSISTOR SI4835DY-T1 |
| Q414 | 6-550-062-01 s | TRANSISTOR SI4835DY-T1 |
| Q415 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q416 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q501 | 8-729-026-53 s | TRANSISTOR 2SA1576A-T106-QR |
| Q502 | 8-729-026-53 s | TRANSISTOR 2SA1576A-T106-QR |
| Q503 | 8-729-026-53 s | TRANSISTOR 2SA1576A-T106-QR |
| Q504 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| R102 | 1-216-295-91 s | CONDUCTOR, CHIP (2012) |
| R103 | 1-216-295-91 s | CONDUCTOR, CHIP (2012) |
| R105 | 1-216-295-91 s | CONDUCTOR, CHIP (2012) |
| R106 | 1-208-790-11 s | RESISTOR, CHIP 2.2K 1/10W (2012) |
| R107 | 1-208-790-11 s | RESISTOR, CHIP 2.2K 1/10W (2012) |
| R108 | 1-208-790-11 s | RESISTOR, CHIP 2.2K 1/10W (2012) |
| R109 | 1-208-790-11 s | RESISTOR, CHIP 2.2K 1/10W (2012) |
| R110 | 1-208-790-11 s | RESISTOR, CHIP 2.2K 1/10W (2012) |
| R111 | 1-208-790-11 s | RESISTOR, CHIP 2.2K 1/10W (2012) |
| R112 | 1-208-768-11 s | RESISTOR, CHIP 270 1/10W (2012) |
| R113 | 1-208-768-11 s | RESISTOR, CHIP 270 1/10W (2012) |
| R114 | 1-208-770-11 s | RESISTOR, CHIP 330 1/10W (2012) |
| R115 | 1-208-770-11 s | RESISTOR, CHIP 330 1/10W (2012) |
| R116 | 1-216-295-91 s | CONDUCTOR, CHIP (2012) |
| R117 | 1-208-793-11 s | RESISTOR, CHIP 3K 1/10W (2125) |
| R118 | 1-208-818-11 s | RESISTOR, CHIP 33K 1/10W (2012) |
| R119 | 1-208-818-11 s | RESISTOR, CHIP 33K 1/10W (2012) |
| R120 | 1-208-776-11 s | RESISTOR, CHIP 560 1/10W (2012) |
| R121 | 1-208-778-11 s | RESISTOR, CHIP 680 1/10W (2012) |
| R122 | 1-208-798-11 s | RESISTOR, CHIP 4.7K 1/10W (2012) |
| R123 | 1-208-798-11 s | RESISTOR, CHIP 4.7K 1/10W (2012) |
| R124 | 1-216-295-91 s | CONDUCTOR, CHIP (2012) |
| R127 | 1-216-055-00 s | RESISTOR CHIP 1.8K 1/10W (2012) |
| R128 | 1-216-055-00 s | RESISTOR CHIP 1.8K 1/10W (2012) |
| R129 | 1-216-685-11 s | RESISTOR, CHIP 27K 1/10W (2012) |
| R131 | 1-216-295-91 s | CONDUCTOR, CHIP (2012) |
| R132 | 1-216-295-91 s | CONDUCTOR, CHIP (2012) |
| R134 | 1-216-685-11 s | RESISTOR, CHIP 27K 1/10W (2012) |
| R135 | 1-216-295-91 s | CONDUCTOR, CHIP (2012) |
| R136 | 1-208-790-11 s | RESISTOR, CHIP 2.2K 1/10W (2012) |
| R137 | 1-208-790-11 s | RESISTOR, CHIP 2.2K 1/10W (2012) |
| R138 | 1-208-790-11 s | RESISTOR, CHIP 2.2K 1/10W (2012) |
| R139 | 1-208-790-11 s | RESISTOR, CHIP 2.2K 1/10W (2012) |
| R140 | 1-208-790-11 s | RESISTOR, CHIP 2.2K 1/10W (2012) |
| R141 | 1-208-790-11 s | RESISTOR, CHIP 2.2K 1/10W (2012) |
| R142 | 1-208-768-11 s | RESISTOR, CHIP 270 1/10W (2012) |
| R143 | 1-208-768-11 s | RESISTOR, CHIP 270 1/10W (2012) |
| R144 | 1-208-770-11 s | RESISTOR, CHIP 330 1/10W (2012) |
| R145 | 1-208-770-11 s | RESISTOR, CHIP 330 1/10W (2012) |

(CP-373 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| R146 | 1-216-295-91 | s CONDUCTOR, CHIP (2012) |
| R147 | 1-208-793-11 | s RESISTOR,CHIP 3K 1/10W (2125) |
| R148 | 1-208-818-11 | s RESISTOR,CHIP 33K 1/10W (2012) |
| R149 | 1-208-818-11 | s RESISTOR,CHIP 33K 1/10W (2012) |
| R150 | 1-208-776-11 | s RESISTOR,CHIP 560 1/10W (2012) |
| R151 | 1-208-778-11 | s RESISTOR,CHIP 680 1/10W (2012) |
| R152 | 1-208-798-11 | s RESISTOR,CHIP 4.7K 1/10W(2012) |
| R153 | 1-208-798-11 | s RESISTOR,CHIP 4.7K 1/10W(2012) |
| R154 | 1-216-295-91 | s CONDUCTOR, CHIP (2012) |
| R205 | 1-216-295-91 | s CONDUCTOR, CHIP (2012) |
| R301 | 1-208-798-11 | s RESISTOR,CHIP 4.7K 1/10W(2012) |
| R302 | 1-208-798-11 | s RESISTOR,CHIP 4.7K 1/10W(2012) |
| R303 | 1-208-758-11 | s RESISTOR,CHIP 100 1/10W (2012) |
| R306 | 1-208-781-11 | s RESISTOR,CHIP 910 1/10W (2125) |
| R307 | 1-216-053-00 | s RESISTOR CHIP 1.5K 1/10W(2012) |
| R308 | 1-216-660-11 | s RESISTOR,CHIP 2.4K 1/10W(2012) |
| R309 | 1-216-053-00 | s RESISTOR CHIP 1.5K 1/10W(2012) |
| R310 | 1-216-025-00 | s RESISTOR,CHIP 100 1/10W(2012) |
| R311 | 1-216-660-11 | s RESISTOR,CHIP 2.4K 1/10W(2012) |
| R312 | 1-216-053-00 | s RESISTOR CHIP 1.5K 1/10W(2012) |
| R313 | 1-216-049-11 | s RESISTOR, CHIP 1K 1/10W(2012) |
| R401 | 1-216-105-91 | s RESISTOR,CHIP 220K 1/10W(2125) |
| R402 | 1-216-097-00 | s RESISTOR CHIP 100K 1/10W(2012) |
| R403 | 1-216-097-00 | s RESISTOR CHIP 100K 1/10W(2012) |
| R404 | 1-216-085-00 | s RESISTOR CHIP 33K 1/10W(2012) |
| R405 | 1-216-081-00 | s RESISTOR,CHIP 22K 1/10W(2012) |
| R406 | 1-216-105-91 | s RESISTOR,CHIP 220K 1/10W(2125) |
| R415 | 1-216-085-00 | s RESISTOR CHIP 33K 1/10W(2012) |
| R418 | 1-216-097-00 | s RESISTOR CHIP 100K 1/10W(2012) |
| R422 | 1-216-089-91 | s RESISTOR, CHIP 47K 1/10W(2012) |
| R423 | 1-216-097-00 | s RESISTOR CHIP 100K 1/10W(2012) |
| R424 | 1-216-077-00 | s RESISTOR,CHIP 15K 1/10W(2012) |
| R425 | 1-216-081-00 | s RESISTOR,CHIP 22K 1/10W(2012) |
| R426 | 1-216-097-00 | s RESISTOR CHIP 100K 1/10W(2012) |
| R427 | 1-216-025-00 | s RESISTOR,CHIP 100 1/10W(2012) |
| R428 | 1-216-689-11 | s RESISTOR,CHIP 39K 1/10W(2012) |
| R429 | 1-216-073-00 | s RESISTOR,CHIP 10K 1/10W(2012) |
| R502 | 1-216-025-00 | s RESISTOR,CHIP 100 1/10W(2012) |
| R503 | 1-208-798-11 | s RESISTOR,CHIP 4.7K 1/10W(2012) |
| R504 | 1-208-798-11 | s RESISTOR,CHIP 4.7K 1/10W(2012) |
| R505 | 1-216-025-00 | s RESISTOR,CHIP 100 1/10W(2012) |
| R506 | 1-216-025-00 | s RESISTOR,CHIP 100 1/10W(2012) |
| R507 | 1-216-022-00 | s RESISTOR,CHIP 75 1/10W (2125) |
| R508 | 1-216-089-91 | s RESISTOR, CHIP 47K 1/10W(2012) |
| R509 | 1-216-061-00 | s RESISTOR CHIP 3.3K 1/10W(2012) |
| R510 | 1-216-109-00 | s RESISTOR CHIP 330K 1/10W(2012) |
| R511 | 1-216-089-91 | s RESISTOR, CHIP 47K 1/10W(2012) |
| R512 | 1-216-089-91 | s RESISTOR, CHIP 47K 1/10W(2012) |
| R514 | 1-216-025-00 | s RESISTOR,CHIP 100 1/10W(2012) |
| R515 | 1-208-798-11 | s RESISTOR,CHIP 4.7K 1/10W(2012) |
| R516 | 1-216-025-00 | s RESISTOR,CHIP 100 1/10W(2012) |
| R517 | 1-216-061-00 | s RESISTOR CHIP 3.3K 1/10W(2012) |
| R518 | 1-216-089-91 | s RESISTOR, CHIP 47K 1/10W(2012) |
| R519 | 1-216-109-00 | s RESISTOR CHIP 330K 1/10W(2012) |
| R520 | 1-216-089-91 | s RESISTOR, CHIP 47K 1/10W(2012) |
| R521 | 1-216-089-91 | s RESISTOR, CHIP 47K 1/10W(2012) |
| R522 | 1-208-798-11 | s RESISTOR,CHIP 4.7K 1/10W(2012) |
| R523 | 1-216-022-00 | s RESISTOR,CHIP 75 1/10W (2125) |

(CP-373 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|------------------------|
| S101 | 1-572-042-11 | s SWITCH,SLIDE (2-4-3) |
| S102 | 1-572-042-11 | s SWITCH,SLIDE (2-4-3) |

DPR-141A BOARD suffix 13 and higher

*a: [Lot No. 161-181]

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-----------------------------------|
| 1pc | A-8324-988-A | o MOUNTED CIRCUIT BOARD, DPR-141 |
| 5pcs | 3-729-013-41 | s SCREW(M1.4X3.5), WASHERHEAD(+P) |
| 4pcs | 7-622-205-05 | s NUT M2 TYPE2 |
| 4pcs | 7-628-253-20 | s SCREW +PS 2X6 |
| C101 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C102 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C103 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C104 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C105 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C106 | 1-104-912-11 | s CAPACITOR TANTALUM 3.3MF/16V |
| C107 | 1-107-689-21 | s CAPACITOR, TANTALUM 1MF/35V |
| C108 | 1-104-823-11 | s CAPACITOR, TANTALUM 47MF/16V |
| C109 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C110 | 1-104-912-11 | s CAPACITOR TANTALUM 3.3MF/16V |
| C111 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C112 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C113 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C114 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C115 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C116 | 1-104-912-11 | s CAPACITOR TANTALUM 3.3MF/16V |
| C117 | 1-104-912-11 | s CAPACITOR TANTALUM 3.3MF/16V |
| C118 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C119 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C120 | 1-135-177-21 | s CAPACITOR TANTALUM 1MF/25V |
| C121 | 1-135-177-21 | s CAPACITOR TANTALUM 1MF/25V |
| C122 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C123 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C124 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C125 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C131 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C133 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C134 | 1-162-921-11 | s CAPACITOR, CERAMIC 33PF/50V CH |
| C135 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C136 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C137 | 1-107-686-11 | s CAPACITOR, TANTALUM 4.7MF/16V |
| C138 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C139 | 1-107-686-11 | s CAPACITOR, TANTALUM 4.7MF/16V |
| C140 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C141 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C142 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C143 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C144 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C145 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C146 | 1-162-921-11 | s CAPACITOR, CERAMIC 33PF/50V CH |
| C147 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C148 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C149 | 1-107-686-11 | s CAPACITOR, TANTALUM 4.7MF/16V |
| C150 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C151 | 1-107-686-11 | s CAPACITOR, TANTALUM 4.7MF/16V |
| C152 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C153 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C154 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C155 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C156 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C157 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C158 | 1-162-921-11 | s CAPACITOR, CERAMIC 33PF/50V CH |

(DPR-141A BOARD suffix 13 and higher)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|-----------------|-----------------------------------|
| C159 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C160 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C161 | 1-107-686-11 | s CAPACITOR, TANTALUM 4.7MF/16V |
| C162 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C163 | 1-107-686-11 | s CAPACITOR, TANTALUM 4.7MF/16V |
| C164 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C165 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C166 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C167 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C168 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C169 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C201 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C202 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C204 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C209 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C210 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C211 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C212 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C213 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C214 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C215 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C216 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C220 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C221 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C222 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C223 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C224 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C225 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C226 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C229 | *a 1-162-919-11 | s CAPACITOR, CERAMIC 22PF/50V CH |
| C231 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C232 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C233 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C234 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C235 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C236 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C237 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C238 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C239 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C240 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C241 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C242 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C243 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C244 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C245 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C246 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C247 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C248 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C249 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C250 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C251 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C252 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C255 | 1-162-962-11 | s CAPACITOR, CERAMIC 470PF/50V(B) |
| C256 | 1-162-962-11 | s CAPACITOR, CERAMIC 470PF/50V(B) |
| C257 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C258 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C301 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C302 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C303 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |

(DPR-141A BOARD suffix 13 and higher)

| Ref. No. or Q'ty | Part No. | SP | Description |
|---------------------|--------------|----|---------------------------------|
| C375 | 1-113-682-11 | s | CAPACITOR, TANTALUM 33MF/10V |
| C376 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C377 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C378 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C379 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C380 | 1-107-685-11 | s | CAPACITOR TANTALUM 15MF/6.3V |
| C381 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C382 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C383 | 1-113-682-11 | s | CAPACITOR, TANTALUM 33MF/10V |
| C384 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C385 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C386 | 1-113-682-11 | s | CAPACITOR, TANTALUM 33MF/10V |
| C387 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C388 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C389 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C390 | 1-162-923-11 | s | CAPACITOR, CERAMIC 47PF/50V CH |
| C391 | 1-104-851-11 | s | CAPACITOR, TANTALUM 10MF/10V |
| C392 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C393 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C394 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C395 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C396 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C397 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C398 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C399 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C400 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C401 | 1-113-682-11 | s | CAPACITOR, TANTALUM 33MF/10V |
| C402 | 1-113-682-11 | s | CAPACITOR, TANTALUM 33MF/10V |
| C403 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C404 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C501 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C502 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C503 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C504 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C507 | 1-164-315-11 | s | CAPACITOR, CERAMIC 470PF/50V CH |
| C508 | 1-162-964-11 | s | CAPACITOR, CERAMIC 1000PF/50V B |
| C509 | 1-162-922-11 | s | CAPACITOR, CERAMIC 39PF/50V CH |
| C510 | 1-162-964-11 | s | CAPACITOR, CERAMIC 1000PF/50V B |
| C511 | 1-162-964-11 | s | CAPACITOR, CERAMIC 1000PF/50V B |
| C512 | 1-113-682-11 | s | CAPACITOR, TANTALUM 33MF/10V |
| C513 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C514 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C515 | 1-113-682-11 | s | CAPACITOR, TANTALUM 33MF/10V |
| C516 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C517 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C518 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C521 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C522 | 1-110-569-21 | s | CAPACITOR CHIP TANTAL47MF/6.3V |
| C523 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C524 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C527 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C528 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C529 | 1-164-315-11 | s | CAPACITOR, CERAMIC 470PF/50V CH |
| C530 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C531 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C532 | 1-110-569-21 | s | CAPACITOR CHIP TANTAL47MF/6.3V |
| C534 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C535 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C536 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |

(DPR-141A BOARD suffix 13 and higher)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-----------------------------------|
| C537 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C539 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C546 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C547 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C548 | 1-162-922-11 | s CAPACITOR, CERAMIC 39PF/50V CH |
| C549 | 1-162-922-11 | s CAPACITOR, CERAMIC 39PF/50V CH |
| C601 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C603 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C604 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C605 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C606 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C611 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C612 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C613 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C614 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C615 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C621 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C622 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C623 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C631 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C632 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C633 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C651 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C652 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C653 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C654 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C655 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C656 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C657 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C658 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C701 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C702 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C703 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C704 | 1-165-176-11 | s CAPACITOR, CERAMIC 47000PF/16V |
| C705 | 1-135-149-21 | s CAPACITOR TANTALUM 2.2MF/10V |
| C711 | 1-162-910-11 | s CAPACITOR, CERAMIC 5PF/50V 1608 |
| C712 | 1-162-910-11 | s CAPACITOR, CERAMIC 5PF/50V 1608 |
| C714 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C715 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C716 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C717 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C727 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C728 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C731 | 1-162-966-11 | s CAPACITOR, CERAMIC 2200PF/50V B |
| C732 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C733 | 1-165-176-11 | s CAPACITOR, CERAMIC 47000PF/16V |
| C734 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C735 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C736 | 1-135-149-21 | s CAPACITOR TANTALUM 2.2MF/10V |
| C751 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C752 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C753 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C754 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C755 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C756 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C757 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C758 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C759 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C771 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |

(DPR-141A BOARD suffix 13 and higher)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-----------------------------------|
| C772 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C773 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C774 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C775 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C776 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C777 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C778 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C779 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C780 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C781 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C782 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C783 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C784 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C785 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C786 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C801 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C802 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C803 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C804 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C805 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C806 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C807 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C808 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C809 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C810 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C811 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C812 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C813 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C814 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C815 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C816 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C817 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C818 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C819 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C821 | 1-109-994-11 | s CAPACITOR, CHIP CERAMIC 2.2MF B |
| C822 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C823 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C824 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C825 | 1-162-927-11 | s CAPACITOR, CERAMIC 100PF/50V CH |
| C826 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C827 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C828 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C829 | 1-104-823-11 | s CAPACITOR, TANTALUM 47MF/16V |
| C830 | 1-107-689-21 | s CAPACITOR, TANTALUM 1MF/35V |
| C831 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C832 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C833 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C834 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C835 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C836 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C837 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C901 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C902 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C903 | 1-113-991-11 | s CAPACITOR TANTALUM 33MF/16V |
| C904 | 1-113-991-11 | s CAPACITOR TANTALUM 33MF/16V |
| C923 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C924 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C925 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C926 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |

(DPR-141A BOARD suffix 13 and higher)

| Ref. No. or Q'ty | Part No. | SP | Description |
|---------------------|--------------|----|------------------------------------|
| C927 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C928 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C929 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C930 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C931 | 1-162-927-11 | s | CAPACITOR, CERAMIC 100PF/50V CH |
| C932 | 1-162-927-11 | s | CAPACITOR, CERAMIC 100PF/50V CH |
| C933 | 1-162-927-11 | s | CAPACITOR, CERAMIC 100PF/50V CH |
| C934 | 1-162-927-11 | s | CAPACITOR, CERAMIC 100PF/50V CH |
| C935 | 1-162-927-11 | s | CAPACITOR, CERAMIC 100PF/50V CH |
| C936 | 1-162-927-11 | s | CAPACITOR, CERAMIC 100PF/50V CH |
| C937 | 1-162-927-11 | s | CAPACITOR, CERAMIC 100PF/50V CH |
| C938 | 1-162-927-11 | s | CAPACITOR, CERAMIC 100PF/50V CH |
| C939 | 1-104-546-11 | s | CAPACITOR, FILM 0.0039MF/16V |
| C940 | 1-104-546-11 | s | CAPACITOR, FILM 0.0039MF/16V |
| C941 | 1-164-392-11 | s | CAPACITOR, CERAMIC 390PF/50V CH |
| C942 | 1-164-392-11 | s | CAPACITOR, CERAMIC 390PF/50V CH |
| C943 | 1-162-915-11 | s | CAPACITOR, CERAMIC 10PF/50V CH |
| C944 | 1-162-915-11 | s | CAPACITOR, CERAMIC 10PF/50V CH |
| C945 | 1-162-959-11 | s | CAPACITOR, CERAMIC 330PF/50V SL |
| C946 | 1-162-959-11 | s | CAPACITOR, CERAMIC 330PF/50V SL |
| C947 | 1-162-927-11 | s | CAPACITOR, CERAMIC 100PF/50V CH |
| C948 | 1-162-927-11 | s | CAPACITOR, CERAMIC 100PF/50V CH |
| C949 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C950 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C951 | 1-113-682-11 | s | CAPACITOR, TANTALUM 33MF/10V |
| C952 | 1-113-682-11 | s | CAPACITOR, TANTALUM 33MF/10V |
| C954 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C955 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C956 | 1-110-569-21 | s | CAPACITOR, CHIP TANTALUM 47MF/6.3V |
| C957 | 1-113-682-11 | s | CAPACITOR, TANTALUM 33MF/10V |
| C958 | 1-113-682-11 | s | CAPACITOR, TANTALUM 33MF/10V |
| C959 | 1-164-315-11 | s | CAPACITOR, CERAMIC 470PF/50V CH |
| C960 | 1-164-315-11 | s | CAPACITOR, CERAMIC 470PF/50V CH |
| C961 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C962 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C965 | 1-104-913-11 | s | CAPACITOR, TANTALUM 10MF/16V |
| C966 | 1-104-913-11 | s | CAPACITOR, TANTALUM 10MF/16V |
| C971 | 1-104-913-11 | s | CAPACITOR, TANTALUM 10MF/16V |
| C972 | 1-104-913-11 | s | CAPACITOR, TANTALUM 10MF/16V |
| C973 | 1-104-913-11 | s | CAPACITOR, TANTALUM 10MF/16V |
| C985 | 1-162-923-11 | s | CAPACITOR, CERAMIC 47PF/50V CH |
| C986 | 1-162-923-11 | s | CAPACITOR, CERAMIC 47PF/50V CH |
| C987 | 1-162-927-11 | s | CAPACITOR, CERAMIC 100PF/50V CH |
| C988 | 1-162-927-11 | s | CAPACITOR, CERAMIC 100PF/50V CH |
| C989 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C990 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C991 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C992 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C993 | 1-162-965-11 | s | CAPACITOR, CERAMIC 1500PF/50V B |
| C994 | 1-162-965-11 | s | CAPACITOR, CERAMIC 1500PF/50V B |
| C995 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C996 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C997 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C998 | 1-162-966-11 | s | CAPACITOR, CERAMIC 2200PF/50V B |
| C999 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C1000 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C1001 | 1-162-966-11 | s | CAPACITOR, CERAMIC 2200PF/50V B |
| C1002 | 1-127-692-11 | s | CAP, CHIP CERAMIC 10MF B 3216 |
| C1003 | 1-127-692-11 | s | CAP, CHIP CERAMIC 10MF B 3216 |

(DPR-141A BOARD suffix 13 and higher)

| Ref. No. or Q'ty | Part No. | SP | Description |
|---------------------|--------------|----|--------------------------------|
| C1004 | 1-127-692-11 | s | CAP, CHIP CERAMIC 10MF B 3216 |
| C1005 | 1-127-692-11 | s | CAP, CHIP CERAMIC 10MF B 3216 |
| C1006 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| CN3 | 1-770-452-21 | o | CONNECTOR, BOARD TO BOARD 30P |
| CN4 | 1-774-391-11 | o | CONNECTOR, BOARD TO BOARD 60P |
| CN5 | 1-580-267-11 | o | CONNECTOR, BOARD TO BOARD 20P |
| CN6 | 1-793-091-11 | o | CONNECTOR, BOARD TO BOARD 60P |
| CN9 | 1-785-849-11 | o | CONNECTOR, BOARD TO BOARD 40P |
| D101 | 8-719-033-73 | s | DIODE RD4.3UM-T1B1B2 |
| D102 | 8-719-033-73 | s | DIODE RD4.3UM-T1B1B2 |
| D301 | 8-719-421-69 | s | DIODE MA133 |
| D302 | 8-719-421-69 | s | DIODE MA133 |
| D303 | 8-719-421-69 | s | DIODE MA133 |
| D304 | 8-719-421-69 | s | DIODE MA133 |
| D701 | 8-719-027-95 | s | DIODE HSM88WK |
| D702 | 8-719-041-39 | s | DIODE KV1470 (5MA) |
| D713 | 8-719-041-39 | s | DIODE KV1470 (5MA) |
| D714 | 8-719-027-95 | s | DIODE HSM88WK |
| D821 | 8-719-041-39 | s | DIODE KV1470 (5MA) |
| D901 | 8-719-941-09 | s | DIODE DAP202U |
| D902 | 8-719-941-09 | s | DIODE DAP202U |
| FB301 | 1-414-445-11 | s | FERRITE, EMI (SMD) |
| FB302 | 1-414-445-11 | s | FERRITE, EMI (SMD) |
| FB303 | 1-414-445-11 | s | FERRITE, EMI (SMD) |
| FB304 | 1-414-445-11 | s | FERRITE, EMI (SMD) |
| FL301 | 1-233-740-11 | s | FILTER, LOW PASS |
| FL303 | 1-233-740-11 | s | FILTER, LOW PASS |
| FL305 | 1-233-740-11 | s | FILTER, LOW PASS |
| FL307 | 1-233-740-11 | s | FILTER, LOW PASS |
| FL501 | 1-233-345-21 | s | FILTER, LOW PASS (5.5MHZ) |
| FL502 | 1-233-776-11 | s | FILTER, LOW PASS |
| FL503 | 1-233-776-11 | s | FILTER, LOW PASS |
| IC101 | 8-759-185-42 | s | IC LM4040AIM3-2.5 |
| IC102 | 8-759-669-72 | s | IC TL064CPWR |
| IC103 | 8-759-669-45 | s | IC TL062CPWR-12 |
| IC104 | 8-759-673-43 | s | IC MM74HC04MTCX |
| IC105 | 8-759-523-95 | s | IC TC74VHC74FT (EL) |
| IC106 | 8-752-376-32 | s | IC CXD2310AR |
| IC107 | 8-752-376-32 | s | IC CXD2310AR |
| IC108 | 8-752-376-32 | s | IC CXD2310AR |
| IC201 | 8-759-674-44 | s | IC MM74HCT244MTCX |
| IC202 | 8-759-669-72 | s | IC TL064CPWR |
| IC204 | 8-759-491-46 | s | IC TC74VHCT04AFT (EL) |
| IC205 | 8-759-058-54 | s | IC TC7S00FU-TE85R |
| IC208 | 8-759-058-54 | s | IC TC7S00FU-TE85R |
| IC209 | 8-759-447-77 | s | IC TC7WH74FU (TE12R) |
| IC211 | 8-752-360-44 | s | IC CXK1203AR |
| IC212 | 8-752-360-44 | s | IC CXK1203AR |
| IC213 | 8-752-360-44 | s | IC CXK1203AR |
| IC214 | 8-752-360-44 | s | IC CXK1203AR |
| IC215 | 8-759-196-96 | s | IC TC7SH08FU (TE85R) |
| IC217 | 8-759-491-46 | s | IC TC74VHCT04AFT (EL) |
| IC218 | 8-759-674-44 | s | IC MM74HCT244MTCX |
| IC219 | 8-759-196-93 | s | IC TC7SH00FU-TE85R |
| IC301 | 8-759-678-06 | s | IC CAT24WC02J1-TE13 |
| IC302 | 8-759-064-36 | s | IC MB88346BPFV |
| IC303 | 8-759-523-04 | s | IC TC74HC4538AFT |

(DPR-141A BOARD suffix 13 and higher)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| IC304 | 8-759-058-58 | s IC TC7S04FU-TE85R |
| IC305 | 8-759-485-79 | s IC TC7SET08FU (TE85L) |
| IC306 | 8-759-673-37 | s IC MM74HC00MTCX |
| IC307 | 8-752-363-60 | s IC CXD2307R-T4 |
| IC308 | 8-759-523-02 | s IC TC74HC4053AFT(EL) |
| IC309 | 8-759-531-92 | s IC TC7WH04FU(Te12R) |
| IC310 | 8-752-381-65 | o IC CXD606-101R |
| IC311 | 8-759-485-79 | s IC TC7SET08FU (TE85L) |
| IC312 | 8-759-184-64 | s IC TC4W66FU |
| IC313 | 8-759-669-45 | s IC TL062CPWR-12 |
| IC314 | 8-759-271-86 | s IC TC7SH04FU |
| IC315 | 8-759-491-46 | s IC TC74VHC04AFT (EL) |
| IC316 | 8-759-523-95 | s IC TC74VHC74FT(EL) |
| IC317 | 8-759-485-79 | s IC TC7SET08FU (TE85L) |
| IC318 | 8-759-546-74 | s IC TC7WH157FU(Te12R) |
| IC319 | 8-752-334-64 | s IC CXD1171M |
| IC320 | 8-759-196-96 | s IC TC7SH08FU (TE85R) |
| IC321 | 8-759-196-96 | s IC TC7SH08FU (TE85R) |
| IC324 | 8-759-058-54 | s IC TC7S00FU-TE85R |
| IC501 | 8-759-464-95 | s IC AK6420AF-E2 |
| IC502 | 8-759-498-27 | s IC TK16074MTL |
| IC503 | 8-759-498-27 | s IC TK16074MTL |
| IC504 | 8-759-271-86 | s IC TC7SH04FU |
| IC505 | 8-759-457-61 | s IC CXD8628BR |
| IC506 | 8-759-485-79 | s IC TC7SET08FU (TE85L) |
| IC509 | 8-759-524-50 | s IC TC74VHC541FT(EL) |
| IC510 | 8-759-271-86 | s IC TC7SH04FU |
| IC511 | 8-759-386-27 | s IC 74LCX04MTCX |
| IC512 | 8-759-524-50 | s IC TC74VHC541FT(EL) |
| IC513 | 8-759-485-79 | s IC TC7SET08FU (TE85L) |
| IC514 | 8-752-363-60 | s IC CXD2307R-T4 |
| IC517 | 8-759-524-04 | s IC TC74VHC125FT (EL) |
| IC518 | 8-759-524-04 | s IC TC74VHC125FT (EL) |
| IC521 | 8-759-196-96 | s IC TC7SH08FU (TE85R) |
| IC601 | 8-759-327-31 | s IC CXD2183R |
| IC611 | 8-752-378-68 | s IC CXD3101R |
| IC621 | 8-759-328-28 | s IC ZA4024 |
| IC631 | 8-759-328-28 | s IC ZA4024 |
| IC651 | 8-759-426-26 | s IC CXD8608R |
| IC652 | 8-759-524-52 | s IC TC74VHC574FT(EL) |
| IC653 | 8-759-524-52 | s IC TC74VHC574FT(EL) |
| IC711 | 8-752-375-05 | s IC CXD2191R |
| IC751 | 8-752-864-20 | s IC CXP911016-015Q |
| IC752 | 8-759-464-95 | s IC AK6420AF-E2 |
| IC771 | 8-759-385-90 | s IC CXD2187AR |
| IC772 | 8-759-585-05 | s IC CXD8627BR |
| IC773 | 8-759-082-60 | s IC TC7S66FU |
| IC781 | 8-759-433-17 | s IC UPD482445LG4-B10-9MH-E2-HDC |
| IC801 | 8-759-529-45 | s IC IDT71V256SA15PZ-TL |
| IC811 | 8-752-374-96 | s IC CXD2190R |
| IC821 | 8-759-271-86 | s IC TC7SH04FU |
| IC822 | 8-759-271-86 | s IC TC7SH04FU |
| IC823 | 8-759-362-16 | s IC CXD2913AQ |
| IC824 | 8-759-327-01 | s IC NJM062V-TE2 |
| IC825 | 8-759-429-28 | s IC CXD8630R |
| IC826 | 8-759-082-60 | s IC TC7S66FU |
| IC901 | 8-759-422-21 | s IC NJM4580VTE2 |
| IC905 | 8-759-173-51 | s IC SM5872AS (ET) |
| IC906 | 8-759-422-21 | s IC NJM4580VTE2 |

(DPR-141A BOARD suffix 13 and higher)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-------------------------------|
| IC907 | 8-759-422-21 | s IC NJM4580VTE2 |
| IC908 | 8-759-422-21 | s IC NJM4580VTE2 |
| IC911 | 8-752-374-97 | s IC CXD2705AR |
| IC912 | 8-759-674-62 | s IC MM74HCT541MTCX |
| IC913 | 8-759-523-94 | s IC TC74VHC32FT(EL) |
| IC917 | 8-759-833-99 | s IC MC74HC4052ADTR2 |
| IC918 | 8-759-833-99 | s IC MC74HC4052ADTR2 |
| IC919 | 8-759-422-21 | s IC NJM4580VTE2 |
| IC921 | 8-759-422-21 | s IC NJM4580VTE2 |
| IC923 | 8-759-462-08 | s IC AK5352-VF (E2) |
| IC924 | 8-759-447-77 | s IC TC7WH74FU (TE12R) |
| L101 | 1-412-951-11 | s INDUCTOR 10UH (2520) |
| L102 | 1-412-951-11 | s INDUCTOR 10UH (2520) |
| L103 | 1-412-951-11 | s INDUCTOR 10UH (2520) |
| L104 | 1-412-951-11 | s INDUCTOR 10UH (2520) |
| L105 | 1-412-951-11 | s INDUCTOR 10UH (2520) |
| L106 | 1-412-951-11 | s INDUCTOR 10UH (2520) |
| L107 | 1-412-951-11 | s INDUCTOR 10UH (2520) |
| L201 | 1-424-643-11 | s COIL, CHOKE 10UH |
| L301 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| L302 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| L303 | 1-410-737-31 | s INDUCTOR,CHIP 0.47UH (3225) |
| L305 | 1-410-385-11 | s INDUCTOR,CHIP 22UH (3225) |
| L306 | 1-424-643-11 | s COIL, CHOKE 10UH |
| L307 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| L308 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| L309 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| L310 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| L501 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L502 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L503 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L601 | 1-410-381-11 | s INDUCTOR,CHIP 10UH (3225) |
| L611 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L651 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L701 | 1-410-378-11 | s INDUCTOR,CHIP 5.6UH (3225) |
| L711 | 1-410-389-31 | s INDUCTOR,CHIP 47UH (3225) |
| L713 | 1-410-740-31 | s INDUCTOR,CHIP 0.82UH |
| L751 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L771 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L772 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L781 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L801 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L811 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L821 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L823 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L824 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L826 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L827 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L901 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L902 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L903 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L904 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L905 | 1-410-393-11 | s INDUCTOR,CHIP 100UH (3225) |
| L906 | 1-410-393-11 | s INDUCTOR,CHIP 100UH (3225) |
| L907 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L908 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L909 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L980 | 1-414-392-31 | s INDUCTOR (SMD) 1.0UH |

(DPR-141A BOARD suffix 13 and higher)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-----------------------------------|
| L981 | 1-414-392-31 | s INDUCTOR (SMD) 1.0UH |
| L982 | 1-414-392-31 | s INDUCTOR (SMD) 1.0UH |
| L983 | 1-414-392-31 | s INDUCTOR (SMD) 1.0UH |
| L984 | 1-414-392-31 | s INDUCTOR (SMD) 1.0UH |
| LV825 | 1-411-984-11 | s COIL, VARIABLE |
| Q101 | 8-729-101-07 | s TRANSISTOR 2SB798 |
| Q102 | 8-729-101-07 | s TRANSISTOR 2SB798 |
| Q103 | 8-729-101-07 | s TRANSISTOR 2SB798 |
| Q104 | 8-729-807-51 | s TRANSISTOR 2SD1623-S |
| Q105 | 8-729-427-74 | s TRANSISTOR XP4601-TXE |
| Q106 | 8-729-427-74 | s TRANSISTOR XP4601-TXE |
| Q107 | 8-729-427-74 | s TRANSISTOR XP4601-TXE |
| Q108 | 8-729-427-74 | s TRANSISTOR XP4601-TXE |
| Q301 | 8-729-427-83 | s TRANSISTOR XP6501-TXE |
| Q302 | 8-729-143-13 | s TRANSISTOR 2SC4176-B34 |
| Q303 | 8-729-026-32 | s TRANSISTOR XP6534-TX |
| Q304 | 8-729-026-34 | s TRANSISTOR XP6435-TX |
| Q305 | 8-729-427-83 | s TRANSISTOR XP6501-TXE |
| Q306 | 8-729-143-13 | s TRANSISTOR 2SC4176-B34 |
| Q307 | 8-729-026-32 | s TRANSISTOR XP6534-TX |
| Q308 | 8-729-026-34 | s TRANSISTOR XP6435-TX |
| Q309 | 8-729-427-83 | s TRANSISTOR XP6501-TXE |
| Q310 | 8-729-143-13 | s TRANSISTOR 2SC4176-B34 |
| Q311 | 8-729-026-32 | s TRANSISTOR XP6534-TX |
| Q312 | 8-729-026-34 | s TRANSISTOR XP6435-TX |
| Q313 | 8-729-026-53 | s TRANSISTOR 2SA1576A-T106-QR |
| Q501 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q502 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q503 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q504 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q505 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q506 | 8-729-026-53 | s TRANSISTOR 2SA1576A-T106-QR |
| Q507 | 8-729-055-85 | s TRANSISTOR UMT1N-TN |
| Q508 | 8-729-055-85 | s TRANSISTOR UMT1N-TN |
| Q823 | 8-729-029-14 | s TRANSISTOR DTC144EUA-T106 |
| Q901 | 6-550-007-01 | s TRANSISTOR UMC3NTR |
| Q902 | 8-729-013-37 | s TRANSISTOR 2SC4213-AB-TB85L |
| Q903 | 8-729-013-37 | s TRANSISTOR 2SC4213-AB-TB85L |
| Q904 | 8-729-013-37 | s TRANSISTOR 2SC4213-AB-TB85L |
| Q905 | 8-729-013-37 | s TRANSISTOR 2SC4213-AB-TB85L |
| Q906 | 6-550-007-01 | s TRANSISTOR UMC3NTR |
| Q907 | 6-550-007-01 | s TRANSISTOR UMC3NTR |
| Q908 | 6-550-007-01 | s TRANSISTOR UMC3NTR |
| R101 | 1-218-881-11 | s RESISTOR, CHIP 27K 1/16W(1608) |
| R102 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R103 | 1-218-881-11 | s RESISTOR, CHIP 27K 1/16W(1608) |
| R104 | 1-218-861-11 | s RESISTOR, CHIP 3.9K 1/16W(1608) |
| R105 | 1-218-879-11 | s RESISTOR, CHIP 22K 1/16W (1608) |
| R106 | 1-216-823-11 | s RESISTOR, CHIP 1.5K 1/16W |
| R107 | 1-218-863-11 | s RESISTOR, CHIP 4.7K 1/16W(1608) |
| R108 | 1-218-853-11 | s RESISTOR, CHIP 1.8K 1/16W(1608) |
| R109 | 1-218-883-11 | s RESISTOR, CHIP 33K 1/16W (1608) |
| R110 | 1-216-823-11 | s RESISTOR, CHIP 1.5K 1/16W |
| R111 | 1-218-881-11 | s RESISTOR, CHIP 27K 1/16W(1608) |
| R112 | 1-218-863-11 | s RESISTOR, CHIP 4.7K 1/16W(1608) |
| R113 | 1-218-883-11 | s RESISTOR, CHIP 33K 1/16W (1608) |
| R114 | 1-218-885-11 | s RESISTOR, CHIP 39K 1/16W (1608) |
| R115 | 1-218-884-11 | s RESISTOR, CHIP 36K 1/16W (1608) |

(DPR-141A BOARD suffix 13 and higher)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-----------------------------------|
| R116 | 1-218-875-11 | s RESISTOR, CHIP 15K 1/16W (1608) |
| R117 | 1-218-883-11 | s RESISTOR, CHIP 33K 1/16W (1608) |
| R118 | 1-218-883-11 | s RESISTOR, CHIP 33K 1/16W (1608) |
| R119 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R120 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R121 | 1-216-845-11 | s RESISTOR, CHIP 100K 1/16W(1608) |
| R122 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R123 | 1-216-857-11 | s RESISTOR, CHIP 1M 1/16W(1608) |
| R124 | 1-216-857-11 | s RESISTOR, CHIP 1M 1/16W(1608) |
| R125 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R126 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R131 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R132 | 1-216-797-11 | s RESISTOR, CHIP 10 1/16W 1608 |
| R134 | 1-216-805-11 | s RESISTOR, CHIP 47 1/16W 1608 |
| R135 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R137 | 1-218-859-11 | s RESISTOR, CHIP 3.3K 1/16W(1608) |
| R138 | 1-218-835-11 | s RESISTOR, CHIP 330 1/16W (1608) |
| R139 | 1-218-859-11 | s RESISTOR, CHIP 3.3K 1/16W(1608) |
| R140 | 1-211-977-11 | s RESISTOR, CHIP 22 1/16W (1608) |
| R141 | 1-216-813-11 | s RESISTOR, CHIP 220 1/16W 1608 |
| R142 | 1-216-797-11 | s RESISTOR, CHIP 10 1/16W 1608 |
| R143 | 1-218-859-11 | s RESISTOR, CHIP 3.3K 1/16W(1608) |
| R144 | 1-218-835-11 | s RESISTOR, CHIP 330 1/16W (1608) |
| R145 | 1-218-859-11 | s RESISTOR, CHIP 3.3K 1/16W(1608) |
| R146 | 1-211-977-11 | s RESISTOR, CHIP 22 1/16W (1608) |
| R147 | 1-216-797-11 | s RESISTOR, CHIP 10 1/16W 1608 |
| R148 | 1-216-813-11 | s RESISTOR, CHIP 220 1/16W 1608 |
| R149 | 1-218-859-11 | s RESISTOR, CHIP 3.3K 1/16W(1608) |
| R150 | 1-218-835-11 | s RESISTOR, CHIP 330 1/16W (1608) |
| R151 | 1-218-859-11 | s RESISTOR, CHIP 3.3K 1/16W(1608) |
| R152 | 1-211-977-11 | s RESISTOR, CHIP 22 1/16W (1608) |
| R153 | 1-216-797-11 | s RESISTOR, CHIP 10 1/16W 1608 |
| R154 | 1-216-813-11 | s RESISTOR, CHIP 220 1/16W 1608 |
| R202 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R203 | 1-218-843-11 | s RESISTOR, CHIP 680 1/16W (1608) |
| R204 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R206 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R208 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R209 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R210 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R211 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R212 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R213 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R214 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R215 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R216 | 1-218-867-11 | s RESISTOR, CHIP 6.8K 1/16W(1608) |
| R217 | 1-218-867-11 | s RESISTOR, CHIP 6.8K 1/16W(1608) |
| R218 | 1-218-867-11 | s RESISTOR, CHIP 6.8K 1/16W(1608) |
| R219 | 1-218-867-11 | s RESISTOR, CHIP 6.8K 1/16W(1608) |
| R220 | 1-218-867-11 | s RESISTOR, CHIP 6.8K 1/16W(1608) |
| R221 | 1-218-867-11 | s RESISTOR, CHIP 6.8K 1/16W(1608) |
| R222 | 1-216-797-11 | s RESISTOR, CHIP 10 1/16W 1608 |
| R224 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R225 | 1-218-883-11 | s RESISTOR, CHIP 33K 1/16W (1608) |
| R226 | 1-218-883-11 | s RESISTOR, CHIP 33K 1/16W (1608) |
| R227 | 1-218-883-11 | s RESISTOR, CHIP 33K 1/16W (1608) |
| R229 | 1-218-883-11 | s RESISTOR, CHIP 33K 1/16W (1608) |
| R230 | 1-218-883-11 | s RESISTOR, CHIP 33K 1/16W (1608) |
| R231 | 1-218-883-11 | s RESISTOR, CHIP 33K 1/16W (1608) |

(DPR-141A BOARD suffix 13 and higher)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| R232 | 1-216-805-11 | s RESISTOR,CHIP 47 1/16W 1608 |
| R234 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R238 | 1-216-797-11 | s RESISTOR,CHIP 10 1/16W 1608 |
| R239 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R240 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R241 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R242 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R243 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R244 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R245 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R246 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R247 | 1-216-805-11 | s RESISTOR,CHIP 47 1/16W 1608 |
| R248 | 1-216-805-11 | s RESISTOR,CHIP 47 1/16W 1608 |
| R249 | 1-216-805-11 | s RESISTOR,CHIP 47 1/16W 1608 |
| R250 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R251 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R252 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R253 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R254 | 1-216-805-11 | s RESISTOR,CHIP 47 1/16W 1608 |
| R255 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R256 | 1-218-830-11 | s RESISTOR,CHIP 200 1/16W (1608) |
| R257 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R258 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R259 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R301 | 1-218-859-11 | s RESISTOR,CHIP 3.3K 1/16W(1608) |
| R302 | 1-218-883-11 | s RESISTOR,CHIP 33K 1/16W (1608) |
| R303 | 1-218-879-11 | s RESISTOR,CHIP 22K 1/16W (1608) |
| R304 | 1-218-887-11 | s RESISTOR,CHIP 47K 1/16W (1608) |
| R305 | 1-218-885-11 | s RESISTOR,CHIP 39K 1/16W (1608) |
| R306 | 1-218-875-11 | s RESISTOR,CHIP 15K 1/16W (1608) |
| R308 | 1-218-887-11 | s RESISTOR,CHIP 47K 1/16W (1608) |
| R309 | 1-218-885-11 | s RESISTOR,CHIP 39K 1/16W (1608) |
| R310 | 1-218-875-11 | s RESISTOR,CHIP 15K 1/16W (1608) |
| R312 | 1-218-887-11 | s RESISTOR,CHIP 47K 1/16W (1608) |
| R313 | 1-218-885-11 | s RESISTOR,CHIP 39K 1/16W (1608) |
| R317 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R318 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R319 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R320 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R321 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R322 | 1-218-827-11 | s RESISTOR,CHIP 150 1/16W (1608) |
| R323 | 1-218-827-11 | s RESISTOR,CHIP 150 1/16W (1608) |
| R324 | 1-218-827-11 | s RESISTOR,CHIP 150 1/16W (1608) |
| R325 | 1-218-859-11 | s RESISTOR,CHIP 3.3K 1/16W(1608) |
| R326 | 1-218-859-11 | s RESISTOR,CHIP 3.3K 1/16W(1608) |
| R327 | 1-218-859-11 | s RESISTOR,CHIP 3.3K 1/16W(1608) |
| R328 | 1-211-977-11 | s RESISTOR,CHIP 22 1/16W (1608) |
| R329 | 1-216-825-11 | s RESISTOR,CHIP 2.2K 1/16W 1608 |
| R330 | 1-218-859-11 | s RESISTOR,CHIP 3.3K 1/16W(1608) |
| R331 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R332 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R334 | 1-211-977-11 | s RESISTOR,CHIP 22 1/16W (1608) |
| R335 | 1-218-863-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R339 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R340 | 1-218-874-11 | s RESISTOR,CHIP 13K 1/16W (1608) |
| R343 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R346 | 1-218-895-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R347 | 1-218-863-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R348 | 1-211-977-11 | s RESISTOR,CHIP 22 1/16W (1608) |

(DPR-141A BOARD suffix 13 and higher)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| R349 | 1-216-857-11 | s RESISTOR,CHIP 1M 1/16W(1608) |
| R350 | 1-216-825-11 | s RESISTOR,CHIP 2.2K 1/16W 1608 |
| R351 | 1-218-859-11 | s RESISTOR,CHIP 3.3K 1/16W(1608) |
| R352 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R353 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R355 | 1-211-977-11 | s RESISTOR,CHIP 22 1/16W (1608) |
| R356 | 1-218-863-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R360 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R361 | 1-218-874-11 | s RESISTOR,CHIP 13K 1/16W (1608) |
| R364 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R367 | 1-218-895-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R368 | 1-218-863-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R369 | 1-211-977-11 | s RESISTOR,CHIP 22 1/16W (1608) |
| R370 | 1-216-825-11 | s RESISTOR,CHIP 2.2K 1/16W 1608 |
| R371 | 1-218-859-11 | s RESISTOR,CHIP 3.3K 1/16W(1608) |
| R372 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R373 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R375 | 1-211-977-11 | s RESISTOR,CHIP 22 1/16W (1608) |
| R376 | 1-218-863-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R380 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R381 | 1-218-874-11 | s RESISTOR,CHIP 13K 1/16W (1608) |
| R384 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R387 | 1-218-895-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R388 | 1-218-863-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R389 | 1-211-977-11 | s RESISTOR,CHIP 22 1/16W (1608) |
| R390 | 1-218-843-11 | s RESISTOR,CHIP 680 1/16W (1608) |
| R391 | 1-218-843-11 | s RESISTOR,CHIP 680 1/16W (1608) |
| R392 | 1-216-805-11 | s RESISTOR,CHIP 47 1/16W 1608 |
| R393 | 1-216-805-11 | s RESISTOR,CHIP 47 1/16W 1608 |
| R394 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R395 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R396 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R397 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R398 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R399 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R401 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R402 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R403 | 1-218-883-11 | s RESISTOR,CHIP 33K 1/16W (1608) |
| R404 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R405 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R406 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R407 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R408 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R409 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R410 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R411 | 1-216-857-11 | s RESISTOR,CHIP 1M 1/16W(1608) |
| R412 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R413 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R414 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R415 | 1-216-797-11 | s RESISTOR,CHIP 10 1/16W 1608 |
| R420 | 1-216-797-11 | s RESISTOR,CHIP 10 1/16W 1608 |
| R425 | 1-218-839-11 | s RESISTOR,CHIP 470 1/16W (1608) |
| R426 | 1-216-813-11 | s RESISTOR, CHIP 220 1/16W 1608 |
| R430 | 1-218-869-11 | s RESISTOR,CHIP 8.2K 1/16W(1608) |
| R431 | 1-218-879-11 | s RESISTOR,CHIP 22K 1/16W (1608) |
| R432 | 1-218-857-11 | s RESISTOR,CHIP 2.7K 1/16W(1608) |
| R433 | 1-218-873-11 | s RESISTOR,CHIP 12K 1/16W (1608) |
| R434 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R435 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |

(DPR-141A BOARD suffix 13 and higher)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| R436 | 1-218-863-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R437 | 1-216-805-11 | s RESISTOR,CHIP 47 1/16W 1608 |
| R438 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R444 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R445 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R501 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R502 | 1-218-839-11 | s RESISTOR,CHIP 470 1/16W (1608) |
| R503 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R504 | 1-218-839-11 | s RESISTOR,CHIP 470 1/16W (1608) |
| R505 | 1-218-839-11 | s RESISTOR,CHIP 470 1/16W (1608) |
| R507 | 1-218-839-11 | s RESISTOR,CHIP 470 1/16W (1608) |
| R508 | 1-218-839-11 | s RESISTOR,CHIP 470 1/16W (1608) |
| R509 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R510 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R511 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R512 | 1-218-863-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R513 | 1-218-863-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R514 | 1-218-863-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R515 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R516 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R517 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R518 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R519 | 1-216-823-11 | s RESISTOR, CHIP 1.5K 1/16W |
| R520 | 1-216-823-11 | s RESISTOR, CHIP 1.5K 1/16W |
| R521 | 1-216-823-11 | s RESISTOR, CHIP 1.5K 1/16W |
| R522 | 1-216-825-11 | s RESISTOR,CHIP 2.2K 1/16W 1608 |
| R523 | 1-216-825-11 | s RESISTOR,CHIP 2.2K 1/16W 1608 |
| R524 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R525 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R526 | 1-216-823-11 | s RESISTOR, CHIP 1.5K 1/16W |
| R527 | 1-216-823-11 | s RESISTOR, CHIP 1.5K 1/16W |
| R528 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R529 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R532 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R533 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R534 | 1-216-825-11 | s RESISTOR,CHIP 2.2K 1/16W 1608 |
| R535 | 1-216-825-11 | s RESISTOR,CHIP 2.2K 1/16W 1608 |
| R536 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R537 | 1-218-830-11 | s RESISTOR,CHIP 200 1/16W (1608) |
| R538 | 1-218-830-11 | s RESISTOR,CHIP 200 1/16W (1608) |
| R539 | 1-218-830-11 | s RESISTOR,CHIP 200 1/16W (1608) |
| R540 | 1-218-859-11 | s RESISTOR,CHIP 3.3K 1/16W(1608) |
| R541 | 1-218-859-11 | s RESISTOR,CHIP 3.3K 1/16W(1608) |
| R542 | 1-218-859-11 | s RESISTOR,CHIP 3.3K 1/16W(1608) |
| R543 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R544 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R545 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R548 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R551 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R552 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R553 | 1-216-825-11 | s RESISTOR,CHIP 2.2K 1/16W 1608 |
| R559 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R560 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R561 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R563 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R564 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R565 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R568 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R569 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |

(DPR-141A BOARD suffix 13 and higher)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| R571 | 1-218-839-11 | s RESISTOR,CHIP 470 1/16W (1608) |
| R572 | 1-216-830-11 | s RESISTOR,CHIP 5.6K 1/16W 1608 |
| R573 | 1-216-830-11 | s RESISTOR,CHIP 5.6K 1/16W 1608 |
| R602 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R616 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R651 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R658 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R702 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R703 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R704 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R705 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R706 | 1-218-863-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R707 | 1-218-835-11 | s RESISTOR,CHIP 330 1/16W (1608) |
| R708 | 1-216-805-11 | s RESISTOR,CHIP 47 1/16W 1608 |
| R709 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R711 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R713 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R715 | 1-216-805-11 | s RESISTOR,CHIP 47 1/16W 1608 |
| R720 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R723 | 1-216-805-11 | s RESISTOR,CHIP 47 1/16W 1608 |
| R724 | 1-216-805-11 | s RESISTOR,CHIP 47 1/16W 1608 |
| R725 | 1-218-839-11 | s RESISTOR,CHIP 470 1/16W (1608) |
| R726 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R727 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R728 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R729 | 1-218-863-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R730 | 1-216-805-11 | s RESISTOR,CHIP 47 1/16W 1608 |
| R731 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R732 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R733 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R734 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R751 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R752 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R753 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R754 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R755 | 1-216-857-11 | s RESISTOR,CHIP 1M 1/16W(1608) |
| R758 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R759 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R760 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R761 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R763 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R764 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R765 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R766 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R767 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R771 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R772 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R776 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R777 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R778 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R779 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R801 | 1-218-887-11 | s RESISTOR,CHIP 47K 1/16W (1608) |
| R802 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R803 | 1-218-887-11 | s RESISTOR,CHIP 47K 1/16W (1608) |
| R804 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R806 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R808 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R812 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R813 | 1-218-887-11 | s RESISTOR,CHIP 47K 1/16W (1608) |

(DPR-141A BOARD suffix 13 and higher)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|------------------------------------|
| R814 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R815 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W (1608) |
| R816 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W (1608) |
| R817 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R818 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R819 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R820 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R821 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R822 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R823 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R824 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R825 | 1-218-879-11 | s RESISTOR, CHIP 22K 1/16W (1608) |
| R826 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R827 | 1-218-883-11 | s RESISTOR, CHIP 33K 1/16W (1608) |
| R828 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R829 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W (1608) |
| R830 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R901 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R902 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R904 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R906 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R913 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W (1608) |
| R914 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R916 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R917 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R918 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R919 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R920 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R921 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R922 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R923 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R924 | 1-218-880-11 | s RESISTOR, CHIP 24K 1/16W (1608) |
| R925 | 1-218-880-11 | s RESISTOR, CHIP 24K 1/16W (1608) |
| R926 | 1-218-880-11 | s RESISTOR, CHIP 24K 1/16W (1608) |
| R927 | 1-218-880-11 | s RESISTOR, CHIP 24K 1/16W (1608) |
| R928 | 1-218-857-11 | s RESISTOR, CHIP 2.7K 1/16W (1608) |
| R929 | 1-218-857-11 | s RESISTOR, CHIP 2.7K 1/16W (1608) |
| R930 | 1-218-857-11 | s RESISTOR, CHIP 2.7K 1/16W (1608) |
| R931 | 1-218-857-11 | s RESISTOR, CHIP 2.7K 1/16W (1608) |
| R932 | 1-218-857-11 | s RESISTOR, CHIP 2.7K 1/16W (1608) |
| R933 | 1-218-857-11 | s RESISTOR, CHIP 2.7K 1/16W (1608) |
| R934 | 1-218-860-11 | s RESISTOR, CHIP 3.6K 1/16W (1608) |
| R935 | 1-218-860-11 | s RESISTOR, CHIP 3.6K 1/16W (1608) |
| R936 | 1-218-859-11 | s RESISTOR, CHIP 3.3K 1/16W (1608) |
| R937 | 1-218-859-11 | s RESISTOR, CHIP 3.3K 1/16W (1608) |
| R939 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R940 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R941 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R942 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R943 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R944 | 1-216-845-11 | s RESISTOR, CHIP 100K 1/16W (1608) |
| R945 | 1-216-845-11 | s RESISTOR, CHIP 100K 1/16W (1608) |
| R946 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W (1608) |
| R947 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R958 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R959 | 1-218-878-11 | s RESISTOR, CHIP 20K 1/16W (1608) |
| R960 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R963 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R964 | 1-218-878-11 | s RESISTOR, CHIP 20K 1/16W (1608) |

(DPR-141A BOARD suffix 13 and higher)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|------------------------------------|
| R965 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R967 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R968 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R970 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R971 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R976 | 1-218-868-11 | s RESISTOR, CHIP 7.5K 1/16W (1608) |
| R977 | 1-218-875-11 | s RESISTOR, CHIP 15K 1/16W (1608) |
| R978 | 1-218-877-11 | s RESISTOR, CHIP 18K 1/16W (1608) |
| R980 | 1-218-868-11 | s RESISTOR, CHIP 7.5K 1/16W (1608) |
| R981 | 1-218-875-11 | s RESISTOR, CHIP 15K 1/16W (1608) |
| R982 | 1-218-877-11 | s RESISTOR, CHIP 18K 1/16W (1608) |
| R988 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R989 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R990 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R991 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R992 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R993 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R994 | 1-218-882-11 | s RESISTOR, CHIP 30K 1/16W (1608) |
| R995 | 1-218-882-11 | s RESISTOR, CHIP 30K 1/16W (1608) |
| R996 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R997 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R998 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R999 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R1000 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R1001 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R1002 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R1003 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R1004 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R1005 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R1006 | 1-216-797-11 | s RESISTOR, CHIP 10 1/16W (1608) |
| R1007 | 1-218-837-11 | s RESISTOR, CHIP 390 1/16W (1608) |
| R1008 | 1-218-841-11 | s RESISTOR, CHIP 560 1/16W (1608) |
| R1009 | 1-218-852-11 | s RESISTOR, CHIP 1.6K 1/16W (1608) |
| R1011 | 1-218-841-11 | s RESISTOR, CHIP 560 1/16W (1608) |
| R10110 | 1-218-837-11 | s RESISTOR, CHIP 390 1/16W (1608) |
| R1012 | 1-218-852-11 | s RESISTOR, CHIP 1.6K 1/16W (1608) |
| R1015 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R1016 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R1019 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R1020 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| RB101 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB102 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB103 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB104 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB105 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB106 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB107 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB108 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB109 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB201 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB202 | 1-236-904-11 | s RESISTOR NETWORK 1K (1608) |
| RB203 | 1-236-904-11 | s RESISTOR NETWORK 1K (1608) |
| RB204 | 1-236-908-11 | s RESISTOR, NETWORK 10K (3216) |
| RB205 | 1-236-908-11 | s RESISTOR, NETWORK 10K (3216) |
| RB206 | 1-236-908-11 | s RESISTOR, NETWORK 10K (3216) |
| RB207 | 1-236-908-11 | s RESISTOR, NETWORK 10K (3216) |
| RB208 | 1-236-908-11 | s RESISTOR, NETWORK 10K (3216) |
| RB209 | 1-236-907-11 | s RESISTOR BLOCK 100K (1608) |
| RB210 | 1-236-908-11 | s RESISTOR, NETWORK 10K (3216) |

(DPR-141A BOARD suffix 13 and higher)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|---------------------------------|
| RB211 | 1-236-908-11 | s RESISTOR, NETWORK 10K (3216) |
| RB212 | 1-236-907-11 | s RESISTOR BLOCK 100K (1608) |
| RB213 | 1-236-908-11 | s RESISTOR, NETWORK 10K (3216) |
| RB214 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB215 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB216 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB217 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB218 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB219 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB220 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB221 | 1-236-908-11 | s RESISTOR, NETWORK 10K (3216) |
| RB222 | 1-236-908-11 | s RESISTOR, NETWORK 10K (3216) |
| RB223 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB224 | 1-236-907-11 | s RESISTOR BLOCK 100K (1608) |
| RB225 | 1-236-907-11 | s RESISTOR BLOCK 100K (1608) |
| RB226 | 1-236-907-11 | s RESISTOR BLOCK 100K (1608) |
| RB227 | 1-236-907-11 | s RESISTOR BLOCK 100K (1608) |
| RB228 | 1-236-907-11 | s RESISTOR BLOCK 100K (1608) |
| RB229 | 1-236-907-11 | s RESISTOR BLOCK 100K (1608) |
| RB230 | 1-236-907-11 | s RESISTOR BLOCK 100K (1608) |
| RB231 | 1-236-907-11 | s RESISTOR BLOCK 100K (1608) |
| RB232 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB233 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB234 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB235 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB236 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB237 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB238 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB239 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB240 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB241 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB301 | 1-236-904-11 | s RESISTOR NETWORK 1K (1608) |
| RB302 | 1-236-907-11 | s RESISTOR BLOCK 100K (1608) |
| RB303 | 1-239-309-11 | s RESISTOR ARRAY, CHIP 100K |
| RB304 | 1-239-419-11 | s NETWORK RESISTOR 470 (1608) |
| RB305 | 1-239-419-11 | s NETWORK RESISTOR 470 (1608) |
| RB306 | 1-239-711-11 | s NETWORK, RESISTOR 0 (1608) |
| RB307 | 1-239-711-11 | s NETWORK, RESISTOR 0 (1608) |
| RB501 | 1-236-904-11 | s RESISTOR NETWORK 1K (1608) |
| RB503 | 1-239-444-11 | s NETWORK, RESISTOR 220K (1608) |
| RB504 | 1-239-444-11 | s NETWORK, RESISTOR 220K (1608) |
| RB505 | 1-239-412-11 | s NETWORK, RESISTOR 100 (1608) |
| RB506 | 1-239-412-11 | s NETWORK, RESISTOR 100 (1608) |
| RB507 | 1-239-412-11 | s NETWORK, RESISTOR 100 (1608) |
| RB508 | 1-239-412-11 | s NETWORK, RESISTOR 100 (1608) |
| RB509 | 1-239-444-11 | s NETWORK, RESISTOR 220K (1608) |
| RB510 | 1-239-412-11 | s NETWORK, RESISTOR 100 (1608) |
| RB511 | 1-239-412-11 | s NETWORK, RESISTOR 100 (1608) |
| RB512 | 1-239-412-11 | s NETWORK, RESISTOR 100 (1608) |
| RB513 | 1-239-412-11 | s NETWORK, RESISTOR 100 (1608) |
| RB514 | 1-239-412-11 | s NETWORK, RESISTOR 100 (1608) |
| RB515 | 1-239-412-11 | s NETWORK, RESISTOR 100 (1608) |
| RB516 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB517 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB518 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB519 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB520 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB521 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB522 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |

(DPR-141A BOARD suffix 13 and higher)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|---------------------------------|
| RB611 | 1-236-904-11 | s RESISTOR NETWORK 1K (1608) |
| RB711 | 1-236-904-11 | s RESISTOR NETWORK 1K (1608) |
| RB712 | 1-236-904-11 | s RESISTOR NETWORK 1K (1608) |
| RB713 | 1-239-444-11 | s NETWORK, RESISTOR 220K (1608) |
| RB753 | 1-239-444-11 | s NETWORK, RESISTOR 220K (1608) |
| RB755 | 1-239-412-11 | s NETWORK, RESISTOR 100 (1608) |
| RB756 | 1-239-444-11 | s NETWORK, RESISTOR 220K (1608) |
| RB771 | 1-236-904-11 | s RESISTOR NETWORK 1K (1608) |
| RB772 | 1-236-904-11 | s RESISTOR NETWORK 1K (1608) |
| RB774 | 1-236-904-11 | s RESISTOR NETWORK 1K (1608) |
| RB775 | 1-236-904-11 | s RESISTOR NETWORK 1K (1608) |
| RB802 | 1-236-904-11 | s RESISTOR NETWORK 1K (1608) |
| TP201 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP501 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP502 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP503 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP712 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| X401 | 1-767-695-21 | s OSCILLATOR, CRYSTAL |
| X711 | 1-760-654-21 | s VIBRATOR, CRYSTAL |
| X751 | 1-760-655-21 | s VIBRATOR, CRYSTAL |

DPR-141A BOARD suffix 11

| Ref. No. or Q'ty | Part No. | SP | Description |
|---------------------|--------------|----|---------------------------------|
| 1pc | A-8324-988-A | o | MOUNTED CIRCUIT BOARD, DPR-141A |
| 5pcs | 3-729-013-41 | s | SCREW, WASHERHEAD (+P) (ST) |
| 1pc | 7-622-205-05 | s | NUT M2 TYPE2 |
| 1pc | 7-628-253-20 | s | SCREW +PS 2X6 |
| C101 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C102 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C103 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C104 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C105 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C106 | 1-135-180-21 | s | CAPACITOR, TANTALUM 3.3MF/10V |
| C107 | 1-107-689-21 | s | CAPACITOR, TANTALUM 1MF/35V |
| C108 | 1-104-823-11 | s | CAPACITOR, TANTALUM 47MF/16V |
| C109 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C110 | 1-135-180-21 | s | CAPACITOR, TANTALUM 3.3MF/10V |
| C111 | 1-113-682-11 | s | CAPACITOR, TANTALUM 33MF/10V |
| C112 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C113 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C114 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C115 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C116 | 1-135-180-21 | s | CAPACITOR, TANTALUM 3.3MF/10V |
| C117 | 1-135-180-21 | s | CAPACITOR, TANTALUM 3.3MF/10V |
| C118 | 1-113-682-11 | s | CAPACITOR, TANTALUM 33MF/10V |
| C119 | 1-113-682-11 | s | CAPACITOR, TANTALUM 33MF/10V |
| C120 | 1-135-177-21 | s | CAPACITOR, TANTALUM 1MF/25V |
| C121 | 1-135-177-21 | s | CAPACITOR, TANTALUM 1MF/25V |
| C122 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C123 | 1-104-851-11 | s | CAPACITOR, TANTALUM 10MF/10V |
| C124 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C125 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C131 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C133 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C134 | 1-162-921-11 | s | CAPACITOR, CERAMIC 33PF/50V CH |
| C135 | 1-113-682-11 | s | CAPACITOR, TANTALUM 33MF/10V |
| C136 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C137 | 1-107-686-11 | s | CAPACITOR, TANTALUM 4.7MF/16V |
| C138 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C139 | 1-107-686-11 | s | CAPACITOR, TANTALUM 4.7MF/16V |
| C140 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C141 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C142 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C143 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C144 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C145 | 1-110-569-11 | s | CAPACITOR, TANTALUM 47MF/6.3V |
| C146 | 1-162-921-11 | s | CAPACITOR, CERAMIC 33PF/50V CH |
| C147 | 1-113-682-11 | s | CAPACITOR, TANTALUM 33MF/10V |
| C148 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C149 | 1-107-686-11 | s | CAPACITOR, TANTALUM 4.7MF/16V |
| C150 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C151 | 1-107-686-11 | s | CAPACITOR, TANTALUM 4.7MF/16V |
| C152 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C153 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C154 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C155 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C156 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C157 | 1-110-569-11 | s | CAPACITOR, TANTALUM 47MF/6.3V |
| C158 | 1-162-921-11 | s | CAPACITOR, CERAMIC 33PF/50V CH |
| C159 | 1-113-682-11 | s | CAPACITOR, TANTALUM 33MF/10V |
| C160 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C161 | 1-107-686-11 | s | CAPACITOR, TANTALUM 4.7MF/16V |

(DPR-141A BOARD suffix 11)

| Ref. No. or Q'ty | Part No. | SP | Description |
|---------------------|--------------|----|---------------------------------|
| C162 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C163 | 1-107-686-11 | s | CAPACITOR, TANTALUM 4.7MF/16V |
| C164 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C165 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C166 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C167 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C168 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C169 | 1-110-569-11 | s | CAPACITOR, TANTALUM 47MF/6.3V |
| C201 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C202 | 1-110-569-11 | s | CAPACITOR, TANTALUM 47MF/6.3V |
| C204 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C209 | 1-113-682-11 | s | CAPACITOR, TANTALUM 33MF/10V |
| C210 | 1-113-682-11 | s | CAPACITOR, TANTALUM 33MF/10V |
| C211 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C212 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C213 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C214 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C215 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C216 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C220 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C221 | 1-113-682-11 | s | CAPACITOR, TANTALUM 33MF/10V |
| C222 | 1-113-682-11 | s | CAPACITOR, TANTALUM 33MF/10V |
| C223 | 1-113-682-11 | s | CAPACITOR, TANTALUM 33MF/10V |
| C224 | 1-104-851-11 | s | CAPACITOR, TANTALUM 10MF/10V |
| C225 | 1-104-851-11 | s | CAPACITOR, TANTALUM 10MF/10V |
| C226 | 1-104-851-11 | s | CAPACITOR, TANTALUM 10MF/10V |
| C230 | 1-216-864-11 | s | RESISTOR, CHIP 0 1/16W (1608) |
| C231 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C232 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C233 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C234 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C235 | 1-110-569-11 | s | CAPACITOR, TANTALUM 47MF/6.3V |
| C236 | 1-110-569-11 | s | CAPACITOR, TANTALUM 47MF/6.3V |
| C237 | 1-110-569-11 | s | CAPACITOR, TANTALUM 47MF/6.3V |
| C238 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C239 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C240 | 1-110-569-11 | s | CAPACITOR, TANTALUM 47MF/6.3V |
| C241 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C242 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C243 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C244 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C245 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C246 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C247 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C248 | 1-110-569-11 | s | CAPACITOR, TANTALUM 47MF/6.3V |
| C249 | 1-110-569-11 | s | CAPACITOR, TANTALUM 47MF/6.3V |
| C250 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C251 | 1-110-569-11 | s | CAPACITOR, TANTALUM 47MF/6.3V |
| C252 | 1-110-569-11 | s | CAPACITOR, TANTALUM 47MF/6.3V |
| C255 | 1-162-962-11 | s | CAPACITOR, CERAMIC 470PF/50V(B) |
| C256 | 1-162-962-11 | s | CAPACITOR, CERAMIC 470PF/50V(B) |
| C257 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C258 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C301 | 1-110-569-11 | s | CAPACITOR, TANTALUM 47MF/6.3V |
| C302 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C303 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C304 | 1-113-682-11 | s | CAPACITOR, TANTALUM 33MF/10V |
| C305 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C306 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |

(DPR-141A BOARD suffix 11)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|---------------------------------|
| C307 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C308 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C309 | 1-162-968-11 s | CAPACITOR, CERAMIC 4700PF/50V B |
| C310 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C311 | 1-162-966-11 s | CAPACITOR, CERAMIC 2200PF/50V B |
| C314 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C315 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C316 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C317 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C318 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C319 | 1-113-682-11 s | CAPACITOR, TANTALUM 33MF/10V |
| C320 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C321 | 1-113-682-11 s | CAPACITOR, TANTALUM 33MF/10V |
| C322 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C323 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C324 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C325 | 1-162-910-11 s | CAPACITOR, CERAMIC 5PF/50V 1608 |
| C326 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C327 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C329 | 1-162-915-11 s | CAPACITOR, CERAMIC 10PF/50V CH |
| C330 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C333 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C334 | 1-162-910-11 s | CAPACITOR, CERAMIC 5PF/50V 1608 |
| C335 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C336 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C338 | 1-162-915-11 s | CAPACITOR, CERAMIC 10PF/50V CH |
| C339 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C342 | 1-113-682-11 s | CAPACITOR, TANTALUM 33MF/10V |
| C343 | 1-113-682-11 s | CAPACITOR, TANTALUM 33MF/10V |
| C344 | 1-162-910-11 s | CAPACITOR, CERAMIC 5PF/50V 1608 |
| C345 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C346 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C348 | 1-162-915-11 s | CAPACITOR, CERAMIC 10PF/50V CH |
| C349 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C352 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C353 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C354 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C355 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C357 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C358 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C359 | 1-110-569-11 s | CAPACITOR, TANTALUM 47MF/6.3V |
| C360 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C361 | 1-110-569-11 s | CAPACITOR, TANTALUM 47MF/6.3V |
| C362 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C363 | 1-110-569-11 s | CAPACITOR, TANTALUM 47MF/6.3V |
| C364 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C365 | 1-110-569-11 s | CAPACITOR, TANTALUM 47MF/6.3V |
| C366 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C367 | 1-110-569-11 s | CAPACITOR, TANTALUM 47MF/6.3V |
| C368 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C369 | 1-110-569-11 s | CAPACITOR, TANTALUM 47MF/6.3V |
| C370 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C371 | 1-110-569-11 s | CAPACITOR, TANTALUM 47MF/6.3V |
| C372 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C373 | 1-110-569-11 s | CAPACITOR, TANTALUM 47MF/6.3V |
| C374 | 1-113-682-11 s | CAPACITOR, TANTALUM 33MF/10V |
| C375 | 1-113-682-11 s | CAPACITOR, TANTALUM 33MF/10V |
| C376 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C377 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |

(DPR-141A BOARD suffix 11)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|---------------------------------|
| C378 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C379 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C380 | 1-107-685-11 s | CAPACITOR, TANTALUM 15MF/6.3V |
| C381 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C382 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C383 | 1-113-682-11 s | CAPACITOR, TANTALUM 33MF/10V |
| C384 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C385 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C386 | 1-113-682-11 s | CAPACITOR, TANTALUM 33MF/10V |
| C387 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C388 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C389 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C390 | 1-162-923-11 s | CAPACITOR, CERAMIC 47PF/50V CH |
| C391 | 1-104-851-11 s | CAPACITOR, TANTALUM 10MF/10V |
| C392 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C393 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C394 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C395 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C396 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C397 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C398 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C399 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C400 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C401 | 1-113-682-11 s | CAPACITOR, TANTALUM 33MF/10V |
| C402 | 1-113-682-11 s | CAPACITOR, TANTALUM 33MF/10V |
| C403 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C404 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C407 | 1-216-864-11 s | RESISTOR, CHIP 0 1/16W (1608) |
| C501 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C502 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C503 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C504 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C507 | 1-164-315-11 s | CAPACITOR, CERAMIC 470PF/50V CH |
| C508 | 1-162-964-11 s | CAPACITOR, CERAMIC 1000PF/50V B |
| C509 | 1-162-922-11 s | CAPACITOR, CERAMIC 39PF/50V CH |
| C510 | 1-162-964-11 s | CAPACITOR, CERAMIC 1000PF/50V B |
| C511 | 1-162-964-11 s | CAPACITOR, CERAMIC 1000PF/50V B |
| C512 | 1-113-682-11 s | CAPACITOR, TANTALUM 33MF/10V |
| C513 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C514 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C515 | 1-113-682-11 s | CAPACITOR, TANTALUM 33MF/10V |
| C516 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C517 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C518 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C521 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C522 | 1-110-569-11 s | CAPACITOR, TANTALUM 47MF/6.3V |
| C523 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C524 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C527 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C528 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C529 | 1-164-315-11 s | CAPACITOR, CERAMIC 470PF/50V CH |
| C530 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C531 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C532 | 1-110-569-11 s | CAPACITOR, TANTALUM 47MF/6.3V |
| C534 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C535 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C536 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C537 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C539 | 1-164-156-11 s | CAPACITOR, CERAMIC 0.1MF/25V F |

(DPR-141A BOARD suffix 11)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-----------------------------------|
| C546 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C547 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C548 | 1-162-922-11 | s CAPACITOR, CERAMIC 39PF/50V CH |
| C549 | 1-162-922-11 | s CAPACITOR, CERAMIC 39PF/50V CH |
| C601 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C603 | 1-110-569-11 | s CAPACITOR, TANTALUM 47MF/6.3V |
| C604 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C605 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C606 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C611 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C612 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C613 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C614 | 1-110-569-11 | s CAPACITOR, TANTALUM 47MF/6.3V |
| C615 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C621 | 1-110-569-11 | s CAPACITOR, TANTALUM 47MF/6.3V |
| C622 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C623 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C631 | 1-110-569-11 | s CAPACITOR, TANTALUM 47MF/6.3V |
| C632 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C633 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C651 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C652 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C653 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C654 | 1-110-569-11 | s CAPACITOR, TANTALUM 47MF/6.3V |
| C655 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C656 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C657 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C658 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C701 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C702 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C703 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C704 | 1-165-176-11 | s CAPACITOR, CERAMIC 47000PF/16V |
| C705 | 1-135-149-21 | s CAPACITOR, TANTALUM 2.2MF/10V |
| C711 | 1-162-910-11 | s CAPACITOR, CERAMIC 5PF/50V 1608 |
| C712 | 1-162-910-11 | s CAPACITOR, CERAMIC 5PF/50V 1608 |
| C714 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C715 | 1-110-569-11 | s CAPACITOR, TANTALUM 47MF/6.3V |
| C716 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C717 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C727 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C728 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C731 | 1-162-966-11 | s CAPACITOR, CERAMIC 2200PF/50V B |
| C732 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C733 | 1-165-176-11 | s CAPACITOR, CERAMIC 47000PF/16V |
| C734 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C735 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C736 | 1-135-149-21 | s CAPACITOR, TANTALUM 2.2MF/10V |
| C751 | 1-110-569-11 | s CAPACITOR, TANTALUM 47MF/6.3V |
| C752 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C753 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C754 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C755 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C756 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C757 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C758 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C759 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C771 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C772 | 1-110-569-11 | s CAPACITOR, TANTALUM 47MF/6.3V |
| C773 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |

(DPR-141A BOARD suffix 11)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-----------------------------------|
| C774 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C775 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C776 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C777 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C778 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C779 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C780 | 1-110-569-11 | s CAPACITOR, TANTALUM 47MF/6.3V |
| C781 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C782 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C783 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C784 | 1-110-569-11 | s CAPACITOR, TANTALUM 47MF/6.3V |
| C785 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C786 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C801 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C802 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C803 | 1-110-569-11 | s CAPACITOR, TANTALUM 47MF/6.3V |
| C804 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C805 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C806 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C807 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C808 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C809 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C810 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C811 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C812 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C813 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C814 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C815 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C816 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C817 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C818 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C819 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C821 | 1-109-994-11 | s CAPACITOR, CHIP CERAMIC 2.2MF B |
| C822 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C823 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C824 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C825 | 1-162-927-11 | s CAPACITOR, CERAMIC 100PF/50V CH |
| C826 | 1-110-569-11 | s CAPACITOR, TANTALUM 47MF/6.3V |
| C827 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C828 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C829 | 1-104-823-11 | s CAPACITOR, TANTALUM 47MF/16V |
| C830 | 1-107-689-21 | s CAPACITOR, TANTALUM 1MF/35V |
| C831 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C832 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C833 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C834 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C835 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C836 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C837 | 1-110-569-11 | s CAPACITOR, TANTALUM 47MF/6.3V |
| C901 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C902 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C903 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C904 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C905 | 1-110-569-11 | s CAPACITOR, TANTALUM 47MF/6.3V |
| C906 | 1-110-569-11 | s CAPACITOR, TANTALUM 47MF/6.3V |
| C907 | 1-104-852-11 | s CAPACITOR, TANTALUM 22MF/10V |
| C908 | 1-104-852-11 | s CAPACITOR, TANTALUM 22MF/10V |
| C909 | 1-110-569-11 | s CAPACITOR, TANTALUM 47MF/6.3V |
| C910 | 1-162-927-11 | s CAPACITOR, CERAMIC 100PF/50V CH |

(DPR-141A BOARD suffix 11)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-----------------------------------|
| C911 | 1-110-569-11 | s CAPACITOR, TANTALUM 47MF/6.3V |
| C912 | 1-162-927-11 | s CAPACITOR, CERAMIC 100PF/50V CH |
| C913 | 1-164-230-11 | s CAPACITOR, CERAMIC 220PF/50V |
| C914 | 1-164-230-11 | s CAPACITOR, CERAMIC 220PF/50V |
| C915 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C916 | 1-104-547-11 | s CAPACITOR, FILM 0.0047MF/16V |
| C917 | 1-104-547-11 | s CAPACITOR, FILM 0.0047MF/16V |
| C918 | 1-110-569-11 | s CAPACITOR, TANTALUM 47MF/6.3V |
| C919 | 1-104-547-11 | s CAPACITOR, FILM 0.0047MF/16V |
| C920 | 1-104-547-11 | s CAPACITOR, FILM 0.0047MF/16V |
| C921 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C922 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C923 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C924 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C925 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C926 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C927 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C928 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C929 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C930 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C931 | 1-162-927-11 | s CAPACITOR, CERAMIC 100PF/50V CH |
| C932 | 1-162-927-11 | s CAPACITOR, CERAMIC 100PF/50V CH |
| C933 | 1-162-927-11 | s CAPACITOR, CERAMIC 100PF/50V CH |
| C934 | 1-162-927-11 | s CAPACITOR, CERAMIC 100PF/50V CH |
| C935 | 1-162-927-11 | s CAPACITOR, CERAMIC 100PF/50V CH |
| C936 | 1-162-927-11 | s CAPACITOR, CERAMIC 100PF/50V CH |
| C937 | 1-162-927-11 | s CAPACITOR, CERAMIC 100PF/50V CH |
| C938 | 1-162-927-11 | s CAPACITOR, CERAMIC 100PF/50V CH |
| C939 | 1-104-546-11 | s CAPACITOR, FILM 0.0039MF/16V |
| C940 | 1-104-546-11 | s CAPACITOR, FILM 0.0039MF/16V |
| C941 | 1-164-392-11 | s CAPACITOR, CERAMIC 390PF/50V CH |
| C942 | 1-164-392-11 | s CAPACITOR, CERAMIC 390PF/50V CH |
| C943 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C944 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C945 | 1-162-959-11 | s CAPACITOR, CERAMIC 330PF/50V SL |
| C946 | 1-162-959-11 | s CAPACITOR, CERAMIC 330PF/50V SL |
| C947 | 1-162-927-11 | s CAPACITOR, CERAMIC 100PF/50V CH |
| C948 | 1-162-927-11 | s CAPACITOR, CERAMIC 100PF/50V CH |
| C949 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C950 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C951 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C952 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C954 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C955 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C956 | 1-110-569-11 | s CAPACITOR, TANTALUM 47MF/6.3V |
| C957 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C958 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C959 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C960 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C961 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C962 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C963 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C964 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| CN3 | 1-770-452-21 | o CONNECTOR, BOARD TO BOARD 30P |
| CN4 | 1-774-391-11 | o CONNECTOR, BOARD TO BOARD 60P |
| CN5 | 1-580-267-11 | o CONNECTOR, BOARD TO BOARD 20P |
| CN6 | 1-793-091-11 | o CONNECTOR, BOARD TO BOARD 60P |
| CN9 | 1-785-849-11 | o CONNECTOR, BOARD TO BOARD 40P |

(DPR-141A BOARD suffix 11)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-----------------------------|
| D101 | 8-719-029-63 | s ZENER DIODE RD4.3UH-T1 |
| D102 | 8-719-029-63 | s ZENER DIODE RD4.3UH-T1 |
| D301 | 8-719-421-69 | s DIODE MA133 |
| D302 | 8-719-421-69 | s DIODE MA133 |
| D303 | 8-719-421-69 | s DIODE MA133 |
| D304 | 8-719-421-69 | s DIODE MA133 |
| D701 | 8-719-027-95 | s DIODE HSM88WK |
| D702 | 8-719-041-39 | s DIODE KV1470 (5MA) |
| D713 | 8-719-041-39 | s DIODE KV1470 (5MA) |
| D714 | 8-719-027-95 | s DIODE HSM88WK |
| D821 | 8-719-041-39 | s DIODE KV1470 (5MA) |
| FB301 | 1-414-445-11 | s FERRITE, EMI (SMD) |
| FB302 | 1-414-445-11 | s FERRITE, EMI (SMD) |
| FB303 | 1-414-445-11 | s FERRITE, EMI (SMD) |
| FB304 | 1-414-445-11 | s FERRITE, EMI (SMD) |
| FL301 | 1-233-740-11 | s FILTER, LOW PASS |
| FL303 | 1-233-740-11 | s FILTER, LOW PASS |
| FL305 | 1-233-740-11 | s FILTER, LOW PASS |
| FL307 | 1-233-740-11 | s FILTER, LOW PASS |
| FL501 | 1-233-345-21 | s FILTER, LOW PASS (5.5MHZ) |
| FL502 | 1-233-776-11 | s FILTER, LOW PASS |
| FL503 | 1-233-776-11 | s FILTER, LOW PASS |
| IC101 | 8-759-185-42 | s IC LM4040AIM3-2.5 |
| IC102 | 8-759-669-72 | s IC TL064CPWR |
| IC103 | 8-759-669-45 | s IC TL062CPWR-12 |
| IC104 | 8-759-659-94 | s IC SN74HC04APWR |
| IC105 | 8-759-523-95 | s IC TC74VHC74FT (EL) |
| IC106 | 8-752-376-32 | s IC CXD2310AR |
| IC107 | 8-752-376-32 | s IC CXD2310AR |
| IC108 | 8-752-376-32 | s IC CXD2310AR |
| IC201 | 8-759-049-86 | s IC SN74HCT244APW (E05) |
| IC202 | 8-759-669-72 | s IC TL064CPWR |
| IC204 | 8-759-491-46 | s IC TC74VHCT04AFT (EL) |
| IC205 | 8-759-058-54 | s IC TC7S00FU-TE85R |
| IC208 | 8-759-058-54 | s IC TC7S00FU-TE85R |
| IC209 | 8-759-447-77 | s IC TC7WH74FU (TR12R) |
| IC211 | 8-752-360-44 | s IC CXK1203AR |
| IC212 | 8-752-360-44 | s IC CXK1203AR |
| IC213 | 8-752-360-44 | s IC CXK1203AR |
| IC214 | 8-752-360-44 | s IC CXK1203AR |
| IC215 | 8-759-196-96 | s IC TC7SH08FU (TE85R) |
| IC217 | 8-759-491-46 | s IC TC74VHCT04AFT (EL) |
| IC218 | 8-759-049-86 | s IC SN74HCT244APW (E05) |
| IC219 | 8-759-196-93 | s IC TC7SH00FU-TE85R |
| IC301 | 8-759-678-06 | s IC CAT24WC02JI-TE13 |
| IC302 | 8-759-064-36 | s IC MB88346BPFV |
| IC303 | 8-759-523-04 | s IC TC74HC4538AFT |
| IC304 | 8-759-058-58 | s IC TC7S04FU-TE85R |
| IC305 | 8-759-485-79 | s IC TC7SET08FU (TE85L) |
| IC306 | 8-759-673-37 | s IC MM74HC00MTCX |
| IC307 | 8-752-363-60 | s IC CXD2307R-T4 |
| IC308 | 8-759-523-02 | s IC TC74HC4053AFT (EL) |
| IC309 | 8-759-531-92 | s IC TC7WH04FU (TE12R) |
| IC310 | 8-752-381-65 | o IC CXD606-101R |
| IC311 | 8-759-485-79 | s IC TC7SET08FU (TE85L) |
| IC312 | 8-759-184-64 | s IC TC4W66FU |
| IC313 | 8-759-669-45 | s IC TL062CPWR-12 |

(DPR-141A BOARD suffix 11)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| IC314 | 8-759-271-86 | s IC TC7SH04FU |
| IC315 | 8-759-491-46 | s IC TC74VHCT04AFT (EL) |
| IC316 | 8-759-523-95 | s IC TC74VHC74FT (EL) |
| IC317 | 8-759-485-79 | s IC TC7SET08FU (TE85L) |
| IC318 | 8-759-546-74 | s IC TC7WH157FU (TE12R) |
| IC319 | 8-752-334-64 | s IC CXD1171M |
| IC320 | 8-759-196-96 | s IC TC7SH08FU (TE85R) |
| IC321 | 8-759-196-96 | s IC TC7SH08FU (TE85R) |
| IC324 | 8-759-058-54 | s IC TC7S00FU-TE85R |
| IC501 | 8-759-464-95 | s IC AK6420AF-E2 |
| IC502 | 8-759-498-27 | s IC TK16074MTL |
| IC503 | 8-759-498-27 | s IC TK16074MTL |
| IC504 | 8-759-271-86 | s IC TC7SH04FU |
| IC505 | 8-759-457-61 | s IC CXD8628BR |
| IC506 | 8-759-485-79 | s IC TC7SET08FU (TE85L) |
| IC509 | 8-759-524-50 | s IC TC74VHC541FT (EL) |
| IC510 | 8-759-271-86 | s IC TC7SH04FU |
| IC511 | 8-759-386-27 | s IC 74LCX04MTCX |
| IC512 | 8-759-524-50 | s IC TC74VHC541FT (EL) |
| IC513 | 8-759-485-79 | s IC TC7SET08FU (TE85L) |
| IC514 | 8-752-363-60 | s IC CXD2307R-T4 |
| IC517 | 8-759-524-04 | s IC TC74VHC125FT (EL) |
| IC518 | 8-759-524-04 | s IC TC74VHC125FT (EL) |
| IC521 | 8-759-196-96 | s IC TC7SH08FU (TE85R) |
| IC601 | 8-759-327-31 | s IC CXD2183R |
| IC611 | 8-752-378-68 | s IC CXD3101R |
| IC621 | 8-759-328-28 | s IC ZA4024 |
| IC631 | 8-759-328-28 | s IC ZA4024 |
| IC651 | 8-759-426-26 | s IC CXD8608R |
| IC652 | 8-759-524-52 | s IC TC74VHC574FT (EL) |
| IC653 | 8-759-524-52 | s IC TC74VHC574FT (EL) |
| IC711 | 8-752-375-05 | s IC CXD2191R |
| IC751 | 8-752-864-20 | s IC CXP911016-015Q |
| IC752 | 8-759-464-95 | s IC AK6420AF-E2 |
| IC771 | 8-759-385-90 | s IC CXD2187AR |
| IC772 | 8-759-585-05 | s IC CXD8627BR |
| IC773 | 8-759-082-60 | s IC TC7S66FU |
| IC781 | 8-759-433-17 | s IC UPD482445LG4-B10-9MH-E2-HDC |
| IC801 | 8-759-529-45 | s IC IDT71V256SA15PZ-TL |
| IC811 | 8-752-374-96 | s IC CXD2190R |
| IC821 | 8-759-271-86 | s IC TC7SH04FU |
| IC822 | 8-759-271-86 | s IC TC7SH04FU |
| IC823 | 8-759-362-16 | s IC CXD2913AQ |
| IC824 | 8-759-327-01 | s IC NJM062V-TE2 |
| IC825 | 8-759-429-28 | s IC CXD8630R |
| IC826 | 8-759-082-60 | s IC TC7S66FU |
| IC901 | 8-759-422-21 | s IC NJM4580VTE2 |
| IC903 | 8-759-357-73 | s IC TL32088CNS (E20) |
| IC904 | 8-759-357-74 | s IC TLC320AD58CDWR |
| IC905 | 8-759-173-51 | s IC SM5872AS (ET) |
| IC906 | 8-759-422-21 | s IC NJM4580VTE2 |
| IC907 | 8-759-422-21 | s IC NJM4580VTE2 |
| IC908 | 8-759-422-21 | s IC NJM4580VTE2 |
| IC909 | 8-759-184-64 | s IC TC4W66FU |
| IC910 | 8-759-184-64 | s IC TC4W66FU |
| IC911 | 8-752-374-97 | s IC CXD2705AR |
| IC912 | 8-759-051-49 | s IC SN74HCT541APW (R) |
| IC913 | 8-759-523-94 | s IC TC74VHC32FT (EL) |
| IC915 | 8-759-184-64 | s IC TC4W66FU |

(DPR-141A BOARD suffix 11)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|--------------------------------|
| IC916 | 8-759-184-64 | s IC TC4W66FU |
| L101 | 1-412-951-11 | s INDUCTOR 10UH (2520) |
| L102 | 1-412-951-11 | s INDUCTOR 10UH (2520) |
| L103 | 1-412-951-11 | s INDUCTOR 10UH (2520) |
| L104 | 1-412-951-11 | s INDUCTOR 10UH (2520) |
| L105 | 1-412-951-11 | s INDUCTOR 10UH (2520) |
| L106 | 1-412-951-11 | s INDUCTOR 10UH (2520) |
| L107 | 1-412-951-11 | s INDUCTOR 10UH (2520) |
| L201 | 1-424-643-11 | s COIL, CHOKE 10UH |
| L301 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| L302 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| L303 | 1-410-737-31 | s INDUCTOR, CHIP 0.47UH (3225) |
| L305 | 1-410-385-11 | s INDUCTOR, CHIP 22UH (3225) |
| L306 | 1-424-643-11 | s COIL, CHOKE 10UH |
| L307 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| L308 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| L309 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| L310 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| L501 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L502 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L503 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L601 | 1-410-381-11 | s INDUCTOR, CHIP 10UH (3225) |
| L611 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L651 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L701 | 1-410-378-11 | s INDUCTOR, CHIP 5.6UH (3225) |
| L711 | 1-414-402-11 | s INDUCTOR (SMD) 47UH |
| L713 | 1-410-740-31 | s INDUCTOR, CHIP 0.82UH |
| L751 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L771 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L772 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L781 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L801 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L811 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L821 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L823 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L824 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L826 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L827 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L901 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L902 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L903 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L904 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L905 | 1-410-393-11 | s INDUCTOR, CHIP 100UH (3225) |
| L906 | 1-410-393-11 | s INDUCTOR, CHIP 100UH (3225) |
| L907 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L908 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L909 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L980 | 1-414-392-21 | s INDUCTOR (SMD) 1.0UH |
| L981 | 1-414-392-21 | s INDUCTOR (SMD) 1.0UH |
| L982 | 1-414-392-21 | s INDUCTOR (SMD) 1.0UH |
| L983 | 1-414-392-21 | s INDUCTOR (SMD) 1.0UH |
| L984 | 1-414-392-21 | s INDUCTOR (SMD) 1.0UH |
| LV825 | 1-411-984-11 | s COIL, VARIABLE |
| Q101 | 8-729-101-07 | s TRANSISTOR 2SB798 |
| Q102 | 8-729-101-07 | s TRANSISTOR 2SB798 |
| Q103 | 8-729-101-07 | s TRANSISTOR 2SB798 |
| Q104 | 8-729-807-51 | s TRANSISTOR 2SD1623-S |

(DPR-141A BOARD suffix 11)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|--------------------------------|
| Q105 | 8-729-427-74 s | TRANSISTOR XP4601-TXE |
| Q106 | 8-729-427-74 s | TRANSISTOR XP4601-TXE |
| Q107 | 8-729-427-74 s | TRANSISTOR XP4601-TXE |
| Q108 | 8-729-427-74 s | TRANSISTOR XP4601-TXE |
| Q301 | 8-729-427-83 s | TRANSISTOR XP6501-TXE |
| Q302 | 8-729-143-13 s | TRANSISTOR 2SC4176-B34 |
| Q303 | 8-729-026-32 s | TRANSISTOR XP6534-TX |
| Q304 | 8-729-026-34 s | TRANSISTOR XP6435-TX |
| Q305 | 8-729-427-83 s | TRANSISTOR XP6501-TXE |
| Q306 | 8-729-143-13 s | TRANSISTOR 2SC4176-B34 |
| Q307 | 8-729-026-32 s | TRANSISTOR XP6534-TX |
| Q308 | 8-729-026-34 s | TRANSISTOR XP6435-TX |
| Q309 | 8-729-427-83 s | TRANSISTOR XP6501-TXE |
| Q310 | 8-729-143-13 s | TRANSISTOR 2SC4176-B34 |
| Q311 | 8-729-026-32 s | TRANSISTOR XP6534-TX |
| Q312 | 8-729-026-34 s | TRANSISTOR XP6435-TX |
| Q313 | 8-729-026-52 s | TRANSISTOR 2SA1576A-T106-R |
| Q501 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q502 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q503 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q504 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q505 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q506 | 8-729-026-52 s | TRANSISTOR 2SA1576A-T106-R |
| Q507 | 8-729-055-85 s | TRANSISTOR UMT1N-TN |
| Q508 | 8-729-055-85 s | TRANSISTOR UMT1N-TN |
| Q823 | 8-729-029-14 s | TRANSISTOR DTC144EUA-T106 |
| Q901 | 8-729-015-88 s | TRANSISTOR UMC3TL |
| Q902 | 8-729-013-37 s | TRANSISTOR 2SC4213-AB-TE85L |
| Q903 | 8-729-013-37 s | TRANSISTOR 2SC4213-AB-TE85L |
| Q904 | 8-729-013-37 s | TRANSISTOR 2SC4213-AB-TE85L |
| Q905 | 8-729-013-37 s | TRANSISTOR 2SC4213-AB-TE85L |
| Q906 | 8-729-015-88 s | TRANSISTOR UMC3TL |
| R101 | 1-218-881-11 s | RESISTOR,CHIP 27K 1/16W(1608) |
| R102 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R103 | 1-218-881-11 s | RESISTOR,CHIP 27K 1/16W(1608) |
| R104 | 1-218-861-11 s | RESISTOR,CHIP 3.9K 1/16W(1608) |
| R105 | 1-218-879-11 s | RESISTOR,CHIP 22K 1/16W (1608) |
| R106 | 1-216-823-11 s | RESISTOR,CHIP 1.5K 1/16W |
| R107 | 1-218-863-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R108 | 1-218-853-11 s | RESISTOR,CHIP 1.8K 1/16W(1608) |
| R109 | 1-218-883-11 s | RESISTOR,CHIP 33K 1/16W (1608) |
| R110 | 1-216-823-11 s | RESISTOR,CHIP 1.5K 1/16W |
| R111 | 1-218-881-11 s | RESISTOR,CHIP 27K 1/16W(1608) |
| R112 | 1-218-863-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R113 | 1-218-883-11 s | RESISTOR,CHIP 33K 1/16W (1608) |
| R114 | 1-218-885-11 s | RESISTOR,CHIP 39K 1/16W (1608) |
| R115 | 1-218-884-11 s | RESISTOR,CHIP 36K 1/16W (1608) |
| R116 | 1-218-875-11 s | RESISTOR,CHIP 15K 1/16W (1608) |
| R117 | 1-218-883-11 s | RESISTOR,CHIP 33K 1/16W (1608) |
| R118 | 1-218-883-11 s | RESISTOR,CHIP 33K 1/16W (1608) |
| R119 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R120 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R121 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R122 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| R123 | 1-216-857-11 s | RESISTOR,CHIP 1M 1/16W(1608) |
| R124 | 1-216-857-11 s | RESISTOR,CHIP 1M 1/16W(1608) |
| R125 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R126 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |

(DPR-141A BOARD suffix 11)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|--------------------------------|
| R128 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| R130 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| R131 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| R132 | 1-216-797-11 s | RESISTOR,CHIP 10 1/16W 1608 |
| R134 | 1-216-805-11 s | RESISTOR,CHIP 47 1/16W 1608 |
| R135 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| R137 | 1-216-827-11 s | RESISTOR,CHIP 3.3K 1/16W 1608 |
| R138 | 1-218-835-11 s | RESISTOR,CHIP 330 1/16W (1608) |
| R139 | 1-216-827-11 s | RESISTOR,CHIP 3.3K 1/16W 1608 |
| R140 | 1-216-801-11 s | RESISTOR,CHIP 22 1/16W (1608) |
| R141 | 1-216-813-11 s | RESISTOR,CHIP 220 1/16W 1608 |
| R142 | 1-216-797-11 s | RESISTOR,CHIP 10 1/16W 1608 |
| R143 | 1-216-827-11 s | RESISTOR,CHIP 3.3K 1/16W 1608 |
| R144 | 1-218-835-11 s | RESISTOR,CHIP 330 1/16W (1608) |
| R145 | 1-216-827-11 s | RESISTOR,CHIP 3.3K 1/16W 1608 |
| R146 | 1-216-801-11 s | RESISTOR,CHIP 22 1/16W (1608) |
| R147 | 1-216-797-11 s | RESISTOR,CHIP 10 1/16W 1608 |
| R148 | 1-216-813-11 s | RESISTOR,CHIP 220 1/16W 1608 |
| R149 | 1-216-827-11 s | RESISTOR,CHIP 3.3K 1/16W 1608 |
| R150 | 1-218-835-11 s | RESISTOR,CHIP 330 1/16W (1608) |
| R151 | 1-216-827-11 s | RESISTOR,CHIP 3.3K 1/16W 1608 |
| R152 | 1-216-801-11 s | RESISTOR,CHIP 22 1/16W (1608) |
| R153 | 1-216-797-11 s | RESISTOR,CHIP 10 1/16W 1608 |
| R154 | 1-216-813-11 s | RESISTOR,CHIP 220 1/16W 1608 |
| R155 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| R202 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| R203 | 1-218-843-11 s | RESISTOR,CHIP 680 1/16W (1608) |
| R204 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| R206 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R208 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R209 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| R210 | 1-218-871-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R211 | 1-218-871-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R212 | 1-218-871-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R213 | 1-218-871-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R214 | 1-218-871-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R215 | 1-218-871-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R216 | 1-218-867-11 s | RESISTOR,CHIP 6.8K 1/16W(1608) |
| R217 | 1-218-867-11 s | RESISTOR,CHIP 6.8K 1/16W(1608) |
| R218 | 1-218-867-11 s | RESISTOR,CHIP 6.8K 1/16W(1608) |
| R219 | 1-218-867-11 s | RESISTOR,CHIP 6.8K 1/16W(1608) |
| R220 | 1-218-867-11 s | RESISTOR,CHIP 6.8K 1/16W(1608) |
| R221 | 1-218-867-11 s | RESISTOR,CHIP 6.8K 1/16W(1608) |
| R222 | 1-216-797-11 s | RESISTOR,CHIP 10 1/16W 1608 |
| R224 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| R225 | 1-218-883-11 s | RESISTOR,CHIP 33K 1/16W (1608) |
| R226 | 1-218-883-11 s | RESISTOR,CHIP 33K 1/16W (1608) |
| R227 | 1-218-883-11 s | RESISTOR,CHIP 33K 1/16W (1608) |
| R229 | 1-218-883-11 s | RESISTOR,CHIP 33K 1/16W (1608) |
| R230 | 1-218-883-11 s | RESISTOR,CHIP 33K 1/16W (1608) |
| R231 | 1-218-883-11 s | RESISTOR,CHIP 33K 1/16W (1608) |
| R232 | 1-216-805-11 s | RESISTOR,CHIP 47 1/16W 1608 |
| R234 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R238 | 1-216-797-11 s | RESISTOR,CHIP 10 1/16W 1608 |
| R239 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| R240 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R241 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R242 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R243 | 1-218-823-11 s | RESISTOR,CHIP 100 1/16W (1608) |

(DPR-141A BOARD suffix 11)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| R244 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R245 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R246 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R247 | 1-216-805-11 | s RESISTOR,CHIP 47 1/16W 1608 |
| R248 | 1-216-805-11 | s RESISTOR,CHIP 47 1/16W 1608 |
| R249 | 1-216-805-11 | s RESISTOR,CHIP 47 1/16W 1608 |
| R250 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R251 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R252 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R253 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R254 | 1-216-805-11 | s RESISTOR,CHIP 47 1/16W 1608 |
| R255 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R256 | 1-218-830-11 | s RESISTOR,CHIP 200 1/16W (1608) |
| R257 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R258 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R301 | 1-216-827-11 | s RESISTOR,CHIP 3.3K 1/16W 1608 |
| R302 | 1-216-839-11 | s RESISTOR,CHIP 33K 1/16W 1608 |
| R303 | 1-218-879-11 | s RESISTOR,CHIP 22K 1/16W (1608) |
| R304 | 1-218-887-11 | s RESISTOR,CHIP 47K 1/16W (1608) |
| R305 | 1-218-885-11 | s RESISTOR,CHIP 39K 1/16W (1608) |
| R306 | 1-218-875-11 | s RESISTOR,CHIP 15K 1/16W (1608) |
| R308 | 1-218-887-11 | s RESISTOR,CHIP 47K 1/16W (1608) |
| R309 | 1-218-885-11 | s RESISTOR,CHIP 39K 1/16W (1608) |
| R310 | 1-218-875-11 | s RESISTOR,CHIP 15K 1/16W (1608) |
| R312 | 1-218-887-11 | s RESISTOR,CHIP 47K 1/16W (1608) |
| R313 | 1-218-885-11 | s RESISTOR,CHIP 39K 1/16W (1608) |
| R316 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R317 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R318 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R319 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R320 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R321 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R322 | 1-218-827-11 | s RESISTOR,CHIP 150 1/16W (1608) |
| R323 | 1-218-827-11 | s RESISTOR,CHIP 150 1/16W (1608) |
| R324 | 1-218-827-11 | s RESISTOR,CHIP 150 1/16W (1608) |
| R325 | 1-218-859-11 | s RESISTOR,CHIP 3.3K 1/16W(1608) |
| R326 | 1-218-859-11 | s RESISTOR,CHIP 3.3K 1/16W(1608) |
| R327 | 1-218-859-11 | s RESISTOR,CHIP 3.3K 1/16W(1608) |
| R328 | 1-211-977-11 | s RESISTOR,CHIP 22 1/16W (1608) |
| R329 | 1-216-825-11 | s RESISTOR,CHIP 2.2K 1/16W 1608 |
| R330 | 1-216-827-11 | s RESISTOR,CHIP 3.3K 1/16W 1608 |
| R331 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R332 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R334 | 1-211-977-11 | s RESISTOR,CHIP 22 1/16W (1608) |
| R335 | 1-218-863-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R339 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R340 | 1-218-874-11 | s RESISTOR,CHIP 13K 1/16W (1608) |
| R343 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R346 | 1-218-895-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R347 | 1-216-829-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R348 | 1-216-801-11 | s RESISTOR,CHIP 22 1/16W (1608) |
| R349 | 1-216-857-11 | s RESISTOR,CHIP 1M 1/16W(1608) |
| R350 | 1-216-825-11 | s RESISTOR,CHIP 2.2K 1/16W 1608 |
| R351 | 1-216-827-11 | s RESISTOR,CHIP 3.3K 1/16W 1608 |
| R352 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R353 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R355 | 1-211-977-11 | s RESISTOR,CHIP 22 1/16W (1608) |
| R356 | 1-218-863-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R360 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |

(DPR-141A BOARD suffix 11)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| R361 | 1-218-874-11 | s RESISTOR,CHIP 13K 1/16W (1608) |
| R364 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R367 | 1-218-895-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R368 | 1-216-829-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R369 | 1-216-801-11 | s RESISTOR,CHIP 22 1/16W (1608) |
| R370 | 1-216-825-11 | s RESISTOR,CHIP 2.2K 1/16W 1608 |
| R371 | 1-216-827-11 | s RESISTOR,CHIP 3.3K 1/16W 1608 |
| R372 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R373 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R375 | 1-211-977-11 | s RESISTOR,CHIP 22 1/16W (1608) |
| R376 | 1-218-863-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R380 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R381 | 1-218-874-11 | s RESISTOR,CHIP 13K 1/16W (1608) |
| R384 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R387 | 1-218-895-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R388 | 1-216-829-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R389 | 1-216-801-11 | s RESISTOR,CHIP 22 1/16W (1608) |
| R390 | 1-218-843-11 | s RESISTOR,CHIP 680 1/16W (1608) |
| R391 | 1-218-843-11 | s RESISTOR,CHIP 680 1/16W (1608) |
| R392 | 1-216-805-11 | s RESISTOR,CHIP 47 1/16W 1608 |
| R393 | 1-216-805-11 | s RESISTOR,CHIP 47 1/16W 1608 |
| R394 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R395 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R396 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R397 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R398 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R399 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R400 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R401 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R402 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R403 | 1-216-839-11 | s RESISTOR,CHIP 33K 1/16W 1608 |
| R404 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R405 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R406 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R407 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R408 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R409 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R410 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R411 | 1-216-857-11 | s RESISTOR,CHIP 1M 1/16W(1608) |
| R412 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R413 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R414 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R415 | 1-216-797-11 | s RESISTOR,CHIP 10 1/16W 1608 |
| R417 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R420 | 1-216-797-11 | s RESISTOR,CHIP 10 1/16W 1608 |
| R424 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R425 | 1-216-817-11 | s RESISTOR,CHIP 470 1/16W 1608 |
| R426 | 1-216-813-11 | s RESISTOR,CHIP 220 1/16W 1608 |
| R428 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R430 | 1-218-869-11 | s RESISTOR,CHIP 8.2K 1/16W(1608) |
| R431 | 1-218-879-11 | s RESISTOR,CHIP 22K 1/16W (1608) |
| R432 | 1-218-857-11 | s RESISTOR,CHIP 2.7K 1/16W(1608) |
| R433 | 1-218-873-11 | s RESISTOR,CHIP 12K 1/16W (1608) |
| R434 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R435 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R436 | 1-216-829-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R437 | 1-216-805-11 | s RESISTOR,CHIP 47 1/16W 1608 |
| R438 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R439 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |

(DPR-141A BOARD suffix 11)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| R444 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R501 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R502 | 1-216-817-11 | s RESISTOR,CHIP 470 1/16W 1608 |
| R503 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R504 | 1-216-817-11 | s RESISTOR,CHIP 470 1/16W 1608 |
| R505 | 1-216-817-11 | s RESISTOR,CHIP 470 1/16W 1608 |
| R506 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R507 | 1-216-817-11 | s RESISTOR,CHIP 470 1/16W 1608 |
| R508 | 1-216-817-11 | s RESISTOR,CHIP 470 1/16W 1608 |
| R509 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R510 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R511 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R512 | 1-216-829-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R513 | 1-216-829-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R514 | 1-216-829-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R515 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R516 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R517 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R518 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R519 | 1-216-823-11 | s RESISTOR,CHIP 1.5K 1/16W |
| R520 | 1-216-823-11 | s RESISTOR,CHIP 1.5K 1/16W |
| R521 | 1-216-823-11 | s RESISTOR,CHIP 1.5K 1/16W |
| R522 | 1-216-825-11 | s RESISTOR,CHIP 2.2K 1/16W 1608 |
| R523 | 1-216-825-11 | s RESISTOR,CHIP 2.2K 1/16W 1608 |
| R524 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R525 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R526 | 1-216-823-11 | s RESISTOR,CHIP 1.5K 1/16W |
| R527 | 1-216-823-11 | s RESISTOR,CHIP 1.5K 1/16W |
| R528 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R529 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R532 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R533 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R534 | 1-216-825-11 | s RESISTOR,CHIP 2.2K 1/16W 1608 |
| R535 | 1-216-825-11 | s RESISTOR,CHIP 2.2K 1/16W 1608 |
| R536 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R537 | 1-218-830-11 | s RESISTOR,CHIP 200 1/16W (1608) |
| R538 | 1-218-830-11 | s RESISTOR,CHIP 200 1/16W (1608) |
| R539 | 1-218-830-11 | s RESISTOR,CHIP 200 1/16W (1608) |
| R540 | 1-218-859-11 | s RESISTOR,CHIP 3.3K 1/16W(1608) |
| R541 | 1-218-859-11 | s RESISTOR,CHIP 3.3K 1/16W(1608) |
| R542 | 1-218-859-11 | s RESISTOR,CHIP 3.3K 1/16W(1608) |
| R543 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R544 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R545 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R548 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R550 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R551 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R552 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R553 | 1-216-825-11 | s RESISTOR,CHIP 2.2K 1/16W 1608 |
| R559 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R560 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R561 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R563 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R564 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R565 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R568 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R569 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R571 | 1-216-817-11 | s RESISTOR,CHIP 470 1/16W 1608 |
| R572 | 1-216-830-11 | s RESISTOR,CHIP 5.6K 1/16W 1608 |

(DPR-141A BOARD suffix 11)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| R573 | 1-216-830-11 | s RESISTOR,CHIP 5.6K 1/16W 1608 |
| R575 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R602 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R616 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R617 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R651 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R658 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R701 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R702 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R703 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R704 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R705 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R706 | 1-216-829-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R707 | 1-216-815-11 | s RESISTOR,CHIP 330 1/16W 1608 |
| R708 | 1-216-805-11 | s RESISTOR,CHIP 47 1/16W 1608 |
| R709 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R711 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R712 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R713 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R715 | 1-216-805-11 | s RESISTOR,CHIP 47 1/16W 1608 |
| R720 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R723 | 1-216-805-11 | s RESISTOR,CHIP 47 1/16W 1608 |
| R724 | 1-216-805-11 | s RESISTOR,CHIP 47 1/16W 1608 |
| R725 | 1-216-817-11 | s RESISTOR,CHIP 470 1/16W 1608 |
| R726 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R727 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R728 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R729 | 1-216-829-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R730 | 1-216-805-11 | s RESISTOR,CHIP 47 1/16W 1608 |
| R731 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R732 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R733 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R734 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R751 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R752 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R753 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R754 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R755 | 1-216-857-11 | s RESISTOR,CHIP 1M 1/16W(1608) |
| R758 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R759 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R760 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R761 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R763 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R764 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R765 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R766 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R767 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R771 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R772 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R776 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R777 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R778 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R779 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R801 | 1-216-841-11 | s RESISTOR,CHIP 47K 1/16W 1608 |
| R802 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R803 | 1-216-841-11 | s RESISTOR,CHIP 47K 1/16W 1608 |
| R804 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R805 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R806 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |

(DPR-141A BOARD suffix 11)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| R807 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R808 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R809 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R811 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R812 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R813 | 1-216-841-11 | s RESISTOR,CHIP 47K 1/16W 1608 |
| R814 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R815 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R816 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R817 | 1-216-841-11 | s RESISTOR,CHIP 47K 1/16W 1608 |
| R818 | 1-216-841-11 | s RESISTOR,CHIP 47K 1/16W 1608 |
| R819 | 1-216-841-11 | s RESISTOR,CHIP 47K 1/16W 1608 |
| R820 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R821 | 1-218-887-11 | s RESISTOR,CHIP 47K 1/16W (1608) |
| R822 | 1-218-887-11 | s RESISTOR,CHIP 47K 1/16W (1608) |
| R823 | 1-216-841-11 | s RESISTOR,CHIP 47K 1/16W 1608 |
| R824 | 1-216-841-11 | s RESISTOR,CHIP 47K 1/16W 1608 |
| R825 | 1-218-879-11 | s RESISTOR,CHIP 22K 1/16W (1608) |
| R826 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R827 | 1-218-883-11 | s RESISTOR,CHIP 33K 1/16W (1608) |
| R828 | 1-216-841-11 | s RESISTOR,CHIP 47K 1/16W 1608 |
| R829 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R830 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R901 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R902 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R904 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R906 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R907 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R908 | 1-218-879-11 | s RESISTOR,CHIP 22K 1/16W (1608) |
| R909 | 1-216-805-11 | s RESISTOR,CHIP 47 1/16W 1608 |
| R910 | 1-216-805-11 | s RESISTOR,CHIP 47 1/16W 1608 |
| R911 | 1-218-872-11 | s RESISTOR,CHIP 11K 1/16W (1608) |
| R912 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R913 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R914 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R915 | 1-216-841-11 | s RESISTOR,CHIP 47K 1/16W 1608 |
| R916 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R917 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R918 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R919 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R920 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R921 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R922 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R923 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R924 | 1-218-880-11 | s RESISTOR,CHIP 24K 1/16W (1608) |
| R925 | 1-218-880-11 | s RESISTOR,CHIP 24K 1/16W (1608) |
| R926 | 1-218-880-11 | s RESISTOR,CHIP 24K 1/16W (1608) |
| R927 | 1-218-880-11 | s RESISTOR,CHIP 24K 1/16W (1608) |
| R928 | 1-218-857-11 | s RESISTOR,CHIP 2.7K 1/16W(1608) |
| R929 | 1-218-857-11 | s RESISTOR,CHIP 2.7K 1/16W(1608) |
| R930 | 1-218-857-11 | s RESISTOR,CHIP 2.7K 1/16W(1608) |
| R931 | 1-218-857-11 | s RESISTOR,CHIP 2.7K 1/16W(1608) |
| R932 | 1-218-857-11 | s RESISTOR,CHIP 2.7K 1/16W(1608) |
| R933 | 1-218-857-11 | s RESISTOR,CHIP 2.7K 1/16W(1608) |
| R934 | 1-218-860-11 | s RESISTOR,CHIP 3.6K 1/16W(1608) |
| R935 | 1-218-860-11 | s RESISTOR,CHIP 3.6K 1/16W(1608) |
| R936 | 1-218-859-11 | s RESISTOR,CHIP 3.3K 1/16W(1608) |
| R937 | 1-218-859-11 | s RESISTOR,CHIP 3.3K 1/16W(1608) |
| R939 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |

(DPR-141A BOARD suffix 11)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| R940 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R941 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R942 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R943 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R944 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R945 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R946 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R947 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R948 | 1-216-805-11 | s RESISTOR,CHIP 47 1/16W 1608 |
| R949 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R952 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R953 | 1-218-872-11 | s RESISTOR,CHIP 11K 1/16W (1608) |
| R954 | 1-218-879-11 | s RESISTOR,CHIP 22K 1/16W (1608) |
| R955 | 1-218-872-11 | s RESISTOR,CHIP 11K 1/16W (1608) |
| R957 | 1-218-872-11 | s RESISTOR,CHIP 11K 1/16W (1608) |
| R958 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R959 | 1-218-878-11 | s RESISTOR,CHIP 20K 1/16W (1608) |
| R960 | 1-216-841-11 | s RESISTOR,CHIP 47K 1/16W 1608 |
| R962 | 1-216-841-11 | s RESISTOR,CHIP 47K 1/16W 1608 |
| R963 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R964 | 1-218-878-11 | s RESISTOR,CHIP 20K 1/16W (1608) |
| R965 | 1-216-841-11 | s RESISTOR,CHIP 47K 1/16W 1608 |
| R967 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R968 | 1-216-841-11 | s RESISTOR,CHIP 47K 1/16W 1608 |
| R969 | 1-218-829-11 | s RESISTOR,CHIP 180 1/16W (1608) |
| R970 | 1-216-841-11 | s RESISTOR,CHIP 47K 1/16W 1608 |
| R971 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R972 | 1-218-872-11 | s RESISTOR,CHIP 11K 1/16W (1608) |
| R974 | 1-218-829-11 | s RESISTOR,CHIP 180 1/16W (1608) |
| R975 | 1-218-872-11 | s RESISTOR,CHIP 11K 1/16W (1608) |
| RB101 | 1-239-409-11 | s RESISTOR,NETWORK 47 (1608) |
| RB102 | 1-239-409-11 | s RESISTOR,NETWORK 47 (1608) |
| RB103 | 1-239-409-11 | s RESISTOR,NETWORK 47 (1608) |
| RB104 | 1-239-409-11 | s RESISTOR,NETWORK 47 (1608) |
| RB105 | 1-239-409-11 | s RESISTOR,NETWORK 47 (1608) |
| RB106 | 1-239-409-11 | s RESISTOR,NETWORK 47 (1608) |
| RB107 | 1-239-409-11 | s RESISTOR,NETWORK 47 (1608) |
| RB108 | 1-239-409-11 | s RESISTOR,NETWORK 47 (1608) |
| RB109 | 1-239-409-11 | s RESISTOR,NETWORK 47 (1608) |
| RB201 | 1-239-409-11 | s RESISTOR,NETWORK 47 (1608) |
| RB202 | 1-236-904-11 | s RESISTOR,NETWORK 1K (1608) |
| RB203 | 1-236-904-11 | s RESISTOR,NETWORK 1K (1608) |
| RB204 | 1-236-908-11 | s RESISTOR,NETWORK 10K (3216) |
| RB205 | 1-236-908-11 | s RESISTOR,NETWORK 10K (3216) |
| RB206 | 1-236-908-11 | s RESISTOR,NETWORK 10K (3216) |
| RB207 | 1-236-908-11 | s RESISTOR,NETWORK 10K (3216) |
| RB208 | 1-236-908-11 | s RESISTOR,NETWORK 10K (3216) |
| RB209 | 1-236-907-11 | s RESISTOR,BLOCK 100K (1608) |
| RB210 | 1-236-908-11 | s RESISTOR,NETWORK 10K (3216) |
| RB211 | 1-236-908-11 | s RESISTOR,NETWORK 10K (3216) |
| RB212 | 1-236-907-11 | s RESISTOR,BLOCK 100K (1608) |
| RB213 | 1-236-908-11 | s RESISTOR,NETWORK 10K (3216) |
| RB214 | 1-239-409-11 | s RESISTOR,NETWORK 47 (1608) |
| RB215 | 1-239-409-11 | s RESISTOR,NETWORK 47 (1608) |
| RB216 | 1-239-409-11 | s RESISTOR,NETWORK 47 (1608) |
| RB217 | 1-239-409-11 | s RESISTOR,NETWORK 47 (1608) |
| RB218 | 1-239-409-11 | s RESISTOR,NETWORK 47 (1608) |
| RB219 | 1-239-409-11 | s RESISTOR,NETWORK 47 (1608) |
| RB220 | 1-239-409-11 | s RESISTOR,NETWORK 47 (1608) |

(DPR-141A BOARD suffix 11)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|---------------------------------|
| RB221 | 1-236-908-11 | s RESISTOR, NETWORK 10K (3216) |
| RB222 | 1-236-908-11 | s RESISTOR, NETWORK 10K (3216) |
| RB223 | 1-239-409-11 | s RESISTOR, NETWORK 47 (1608) |
| RB224 | 1-236-907-11 | s RESISTOR, BLOCK 100K (1608) |
| RB225 | 1-236-907-11 | s RESISTOR, BLOCK 100K (1608) |
| RB226 | 1-236-907-11 | s RESISTOR, BLOCK 100K (1608) |
| RB227 | 1-236-907-11 | s RESISTOR, BLOCK 100K (1608) |
| RB228 | 1-236-907-11 | s RESISTOR, BLOCK 100K (1608) |
| RB229 | 1-236-907-11 | s RESISTOR, BLOCK 100K (1608) |
| RB230 | 1-236-907-11 | s RESISTOR, BLOCK 100K (1608) |
| RB231 | 1-236-907-11 | s RESISTOR, BLOCK 100K (1608) |
| RB232 | 1-239-409-11 | s RESISTOR, NETWORK 47 (1608) |
| RB233 | 1-239-409-11 | s RESISTOR, NETWORK 47 (1608) |
| RB234 | 1-239-409-11 | s RESISTOR, NETWORK 47 (1608) |
| RB235 | 1-239-409-11 | s RESISTOR, NETWORK 47 (1608) |
| RB236 | 1-239-409-11 | s RESISTOR, NETWORK 47 (1608) |
| RB237 | 1-239-409-11 | s RESISTOR, NETWORK 47 (1608) |
| RB238 | 1-239-409-11 | s RESISTOR, NETWORK 47 (1608) |
| RB239 | 1-239-409-11 | s RESISTOR, NETWORK 47 (1608) |
| RB240 | 1-239-409-11 | s RESISTOR, NETWORK 47 (1608) |
| RB241 | 1-239-409-11 | s RESISTOR, NETWORK 47 (1608) |
| RB301 | 1-236-904-11 | s RESISTOR, NETWORK 1K (1608) |
| RB302 | 1-236-907-11 | s RESISTOR, BLOCK 100K (1608) |
| RB303 | 1-239-309-11 | s RESISTOR, ARRAY, CHIP 100K |
| RB304 | 1-239-419-11 | s NETWORK, RESISTOR 470 (1608) |
| RB305 | 1-239-419-11 | s NETWORK, RESISTOR 470 (1608) |
| RB306 | 1-239-711-11 | s NETWORK, RESISTOR 0 (1608) |
| RB307 | 1-239-711-11 | s NETWORK, RESISTOR 0 (1608) |
| RB501 | 1-236-904-11 | s RESISTOR, NETWORK 1K (1608) |
| RB503 | 1-239-444-11 | s NETWORK, RESISTOR 220K (1608) |
| RB504 | 1-239-444-11 | s NETWORK, RESISTOR 220K (1608) |
| RB505 | 1-239-412-11 | s NETWORK, RESISTOR 100 (1608) |
| RB506 | 1-239-412-11 | s NETWORK, RESISTOR 100 (1608) |
| RB507 | 1-239-412-11 | s NETWORK, RESISTOR 100 (1608) |
| RB508 | 1-239-412-11 | s NETWORK, RESISTOR 100 (1608) |
| RB509 | 1-239-444-11 | s NETWORK, RESISTOR 220K (1608) |
| RB510 | 1-239-412-11 | s NETWORK, RESISTOR 100 (1608) |
| RB511 | 1-239-412-11 | s NETWORK, RESISTOR 100 (1608) |
| RB512 | 1-239-412-11 | s NETWORK, RESISTOR 100 (1608) |
| RB513 | 1-239-412-11 | s NETWORK, RESISTOR 100 (1608) |
| RB514 | 1-239-412-11 | s NETWORK, RESISTOR 100 (1608) |
| RB515 | 1-239-412-11 | s NETWORK, RESISTOR 100 (1608) |
| RB516 | 1-239-409-11 | s RESISTOR, NETWORK 47 (1608) |
| RB517 | 1-239-409-11 | s RESISTOR, NETWORK 47 (1608) |
| RB518 | 1-239-409-11 | s RESISTOR, NETWORK 47 (1608) |
| RB519 | 1-239-409-11 | s RESISTOR, NETWORK 47 (1608) |
| RB520 | 1-239-409-11 | s RESISTOR, NETWORK 47 (1608) |
| RB521 | 1-239-409-11 | s RESISTOR, NETWORK 47 (1608) |
| RB522 | 1-239-409-11 | s RESISTOR, NETWORK 47 (1608) |
| RB611 | 1-236-904-11 | s RESISTOR, NETWORK 1K (1608) |
| RB711 | 1-236-904-11 | s RESISTOR, NETWORK 1K (1608) |
| RB712 | 1-236-904-11 | s RESISTOR, NETWORK 1K (1608) |
| RB713 | 1-239-444-11 | s NETWORK, RESISTOR 220K (1608) |
| RB753 | 1-239-444-11 | s NETWORK, RESISTOR 220K (1608) |
| RB755 | 1-239-412-11 | s NETWORK, RESISTOR 100 (1608) |
| RB756 | 1-239-444-11 | s NETWORK, RESISTOR 220K (1608) |
| RB771 | 1-236-904-11 | s RESISTOR, NETWORK 1K (1608) |
| RB772 | 1-236-904-11 | s RESISTOR, NETWORK 1K (1608) |
| RB774 | 1-236-904-11 | s RESISTOR, NETWORK 1K (1608) |

(DPR-141A BOARD suffix 11)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-------------------------------|
| RB775 | 1-236-904-11 | s RESISTOR, NETWORK 1K (1608) |
| RB802 | 1-236-904-11 | s RESISTOR, NETWORK 1K (1608) |
| TP201 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP501 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP502 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP503 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP712 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| X401 | 1-767-695-21 | s OSCILLATOR, CRYSTAL |
| X711 | 1-760-654-21 | s VIBRATOR, CRYSTAL |
| X751 | 1-760-655-21 | s VIBRATOR, CRYSTAL |

DPR-141C BOARD

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-----------------------------------|
| 1pc | A-8344-130-A | s MOUNTED CIRCUIT BOARD, DPR-141C |
| 5pcs | 3-729-013-41 | s SCREW(M1.4X3.5),WASHERHEAD(+P) |
| 4pcs | 7-622-205-05 | s NUT M2 TYPE2 |
| 4pcs | 7-628-253-20 | s SCREW +PS 2X6 |
| C101 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C102 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C103 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C104 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C105 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C106 | 1-104-912-11 | s CAPACITOR TANTALUM 3.3MF/16V |
| C107 | 1-107-689-21 | s CAPACITOR,TANTALUM 1MF/35V |
| C108 | 1-137-689-11 | s CAP, CHIP TANTALUM ELECT 47MF |
| C109 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C110 | 1-104-912-11 | s CAPACITOR TANTALUM 3.3MF/16V |
| C111 | 1-113-682-11 | s CAPACITOR,TANTALUM 33MF/10V |
| C112 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C113 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C114 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C115 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C116 | 1-104-912-11 | s CAPACITOR TANTALUM 3.3MF/16V |
| C117 | 1-104-912-11 | s CAPACITOR TANTALUM 3.3MF/16V |
| C118 | 1-113-682-11 | s CAPACITOR,TANTALUM 33MF/10V |
| C119 | 1-113-682-11 | s CAPACITOR,TANTALUM 33MF/10V |
| C120 | 1-135-177-21 | s CAPACITOR TANTALUM 1MF/25V |
| C121 | 1-135-177-21 | s CAPACITOR TANTALUM 1MF/25V |
| C122 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C123 | 1-135-957-11 | s CAP, CHIP TANTALUM ELECT 10MF |
| C124 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C125 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C131 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C133 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C134 | 1-162-921-11 | s CAPACITOR,CERAMIC 33PF/50V CH |
| C135 | 1-113-682-11 | s CAPACITOR,TANTALUM 33MF/10V |
| C136 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C137 | 1-107-686-11 | s CAPACITOR,TANTALUM 4.7MF/16V |
| C138 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C139 | 1-107-686-11 | s CAPACITOR,TANTALUM 4.7MF/16V |
| C140 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C141 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C142 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C143 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C144 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C145 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C146 | 1-162-921-11 | s CAPACITOR,CERAMIC 33PF/50V CH |
| C147 | 1-113-682-11 | s CAPACITOR,TANTALUM 33MF/10V |
| C148 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C149 | 1-107-686-11 | s CAPACITOR,TANTALUM 4.7MF/16V |
| C150 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C151 | 1-107-686-11 | s CAPACITOR,TANTALUM 4.7MF/16V |
| C152 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C153 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C154 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C155 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C156 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C157 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C158 | 1-162-921-11 | s CAPACITOR,CERAMIC 33PF/50V CH |
| C159 | 1-113-682-11 | s CAPACITOR,TANTALUM 33MF/10V |
| C160 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C161 | 1-107-686-11 | s CAPACITOR,TANTALUM 4.7MF/16V |

(DPR-141C BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| C162 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C163 | 1-107-686-11 | s CAPACITOR,TANTALUM 4.7MF/16V |
| C164 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C165 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C166 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C167 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C168 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C169 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C201 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C202 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C204 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C209 | 1-113-682-11 | s CAPACITOR,TANTALUM 33MF/10V |
| C210 | 1-113-682-11 | s CAPACITOR,TANTALUM 33MF/10V |
| C211 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C212 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C213 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C214 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C215 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C216 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C220 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C221 | 1-113-682-11 | s CAPACITOR,TANTALUM 33MF/10V |
| C222 | 1-113-682-11 | s CAPACITOR,TANTALUM 33MF/10V |
| C223 | 1-113-682-11 | s CAPACITOR,TANTALUM 33MF/10V |
| C224 | 1-104-851-11 | s CAPACITOR,TANTALUM 10MF/10V |
| C225 | 1-104-851-11 | s CAPACITOR,TANTALUM 10MF/10V |
| C226 | 1-104-851-11 | s CAPACITOR,TANTALUM 10MF/10V |
| C231 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C232 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C233 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C234 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C235 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C236 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C237 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C238 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C239 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C240 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C241 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C242 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C243 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C244 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C245 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C246 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C247 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C248 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C249 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C250 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C251 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C252 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C255 | 1-162-962-11 | s CAPACITOR,CERAMIC 470PF/50V(B) |
| C256 | 1-162-962-11 | s CAPACITOR,CERAMIC 470PF/50V(B) |
| C257 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C258 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C301 | 1-137-689-11 | s CAP, CHIP TANTALUM ELECT 47MF |
| C302 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C303 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C304 | 1-113-682-11 | s CAPACITOR,TANTALUM 33MF/10V |
| C305 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C306 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C307 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |

(DPR-141C BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-----------------------------------|
| C548 | 1-162-922-11 | s CAPACITOR, CERAMIC 39PF/50V CH |
| C549 | 1-162-922-11 | s CAPACITOR, CERAMIC 39PF/50V CH |
| C601 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C603 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C604 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C605 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C606 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C611 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C612 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C613 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C614 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C615 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C621 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C622 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C623 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C631 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C632 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C633 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C651 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C652 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C653 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C654 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C655 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C656 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C657 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C658 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C701 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C702 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C703 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C704 | 1-165-176-11 | s CAPACITOR, CERAMIC 47000PF/16V |
| C705 | 1-135-149-21 | s CAPACITOR TANTALUM 2.2MF/10V |
| C711 | 1-162-910-11 | s CAPACITOR, CERAMIC 5PF/50V 1608 |
| C712 | 1-162-910-11 | s CAPACITOR, CERAMIC 5PF/50V 1608 |
| C714 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C715 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C716 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C717 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C727 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C728 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C731 | 1-162-966-11 | s CAPACITOR, CERAMIC 2200PF/50V B |
| C732 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C733 | 1-165-176-11 | s CAPACITOR, CERAMIC 47000PF/16V |
| C734 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C735 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C736 | 1-135-149-21 | s CAPACITOR TANTALUM 2.2MF/10V |
| C751 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C752 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C753 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C754 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C755 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C756 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C757 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C758 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C759 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C771 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C772 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C773 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C774 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C775 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |

(DPR-141C BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-----------------------------------|
| C776 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C777 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C778 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C779 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C780 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C781 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C782 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C783 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C784 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C785 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C786 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C801 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C802 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C803 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C804 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C805 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C806 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C807 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C808 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C809 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C810 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C811 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C812 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C813 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C814 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C815 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C816 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C817 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C818 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C819 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C821 | 1-109-994-11 | s CAPACITOR, CHIP CERAMIC 2.2MF B |
| C822 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C823 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C824 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C825 | 1-162-927-11 | s CAPACITOR, CERAMIC 100PF/50V CH |
| C826 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C827 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C828 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C829 | 1-104-823-11 | s CAPACITOR, TANTALUM 47MF/16V |
| C830 | 1-107-689-21 | s CAPACITOR, TANTALUM 1MF/35V |
| C831 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C832 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C833 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C834 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C835 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C836 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C837 | 1-110-569-21 | s CAPACITOR CHIP TANTAL47MF/6.3V |
| C901 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C902 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C903 | 1-113-991-11 | s CAPACITOR TANTALUM 33MF/16V |
| C904 | 1-113-991-11 | s CAPACITOR TANTALUM 33MF/16V |
| C923 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C924 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C925 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C926 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C927 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C928 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C929 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C930 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |

(DPR-141C BOARD)

| Ref. No. or Q'ty | Part No. | SP | Description |
|---------------------|--------------|----|---------------------------------|
| C931 | 1-162-927-11 | s | CAPACITOR, CERAMIC 100PF/50V CH |
| C932 | 1-162-927-11 | s | CAPACITOR, CERAMIC 100PF/50V CH |
| C933 | 1-162-927-11 | s | CAPACITOR, CERAMIC 100PF/50V CH |
| C934 | 1-162-927-11 | s | CAPACITOR, CERAMIC 100PF/50V CH |
| C935 | 1-162-927-11 | s | CAPACITOR, CERAMIC 100PF/50V CH |
| C936 | 1-162-927-11 | s | CAPACITOR, CERAMIC 100PF/50V CH |
| C937 | 1-162-927-11 | s | CAPACITOR, CERAMIC 100PF/50V CH |
| C938 | 1-162-927-11 | s | CAPACITOR, CERAMIC 100PF/50V CH |
| C939 | 1-104-546-11 | s | CAPACITOR, FILM 0.0039MF/16V |
| C940 | 1-104-546-11 | s | CAPACITOR, FILM 0.0039MF/16V |
| C941 | 1-164-392-11 | s | CAPACITOR CERAMIC 390PF/50V CH |
| C942 | 1-164-392-11 | s | CAPACITOR CERAMIC 390PF/50V CH |
| C943 | 1-162-915-11 | s | CAPACITOR, CERAMIC 10PF/50V CH |
| C944 | 1-162-915-11 | s | CAPACITOR, CERAMIC 10PF/50V CH |
| C945 | 1-162-959-11 | s | CAPACITOR, CERAMIC 330PF/50V SL |
| C946 | 1-162-959-11 | s | CAPACITOR, CERAMIC 330PF/50V SL |
| C947 | 1-162-927-11 | s | CAPACITOR, CERAMIC 100PF/50V CH |
| C948 | 1-162-927-11 | s | CAPACITOR, CERAMIC 100PF/50V CH |
| C949 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C950 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C951 | 1-113-682-11 | s | CAPACITOR, TANTALUM 33MF/10V |
| C952 | 1-113-682-11 | s | CAPACITOR, TANTALUM 33MF/10V |
| C954 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C955 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C956 | 1-110-569-21 | s | CAPACITOR CHIP TANTAL47MF/6.3V |
| C957 | 1-113-682-11 | s | CAPACITOR, TANTALUM 33MF/10V |
| C958 | 1-113-682-11 | s | CAPACITOR, TANTALUM 33MF/10V |
| C959 | 1-164-315-11 | s | CAPACITOR, CERAMIC 470PF/50V CH |
| C960 | 1-164-315-11 | s | CAPACITOR, CERAMIC 470PF/50V CH |
| C961 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C962 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C965 | 1-104-913-11 | s | CAPACITOR, TANTALUM 10MF/16V |
| C966 | 1-104-913-11 | s | CAPACITOR, TANTALUM 10MF/16V |
| C971 | 1-104-913-11 | s | CAPACITOR, TANTALUM 10MF/16V |
| C972 | 1-104-913-11 | s | CAPACITOR, TANTALUM 10MF/16V |
| C973 | 1-104-913-11 | s | CAPACITOR, TANTALUM 10MF/16V |
| C985 | 1-162-923-11 | s | CAPACITOR, CERAMIC 47PF/50V CH |
| C986 | 1-162-923-11 | s | CAPACITOR, CERAMIC 47PF/50V CH |
| C987 | 1-162-927-11 | s | CAPACITOR, CERAMIC 100PF/50V CH |
| C988 | 1-162-927-11 | s | CAPACITOR, CERAMIC 100PF/50V CH |
| C989 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C990 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C991 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C992 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C993 | 1-162-965-11 | s | CAPACITOR, CERAMIC 1500PF/50V B |
| C994 | 1-162-965-11 | s | CAPACITOR, CERAMIC 1500PF/50V B |
| C995 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C996 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C997 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C998 | 1-162-966-11 | s | CAPACITOR, CERAMIC 2200PF/50V B |
| C999 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C1000 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C1001 | 1-162-966-11 | s | CAPACITOR, CERAMIC 2200PF/50V B |
| C1002 | 1-127-692-11 | s | CAP, CHIP CERAMIC 10MF B 3216 |
| C1003 | 1-127-692-11 | s | CAP, CHIP CERAMIC 10MF B 3216 |
| C1004 | 1-127-692-11 | s | CAP, CHIP CERAMIC 10MF B 3216 |
| C1005 | 1-127-692-11 | s | CAP, CHIP CERAMIC 10MF B 3216 |
| C1006 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |

(DPR-141C BOARD)

| Ref. No. or Q'ty | Part No. | SP | Description |
|---------------------|--------------|----|-------------------------------|
| CN3 | 1-770-452-21 | o | CONNECTOR, BOARD TO BOARD 30P |
| CN4 | 1-774-391-11 | o | CONNECTOR, BOARD TO BOARD 60P |
| CN5 | 1-580-267-11 | o | CONNECTOR, BOARD TO BOARD 20P |
| CN6 | 1-793-091-11 | o | CONNECTOR, BOARD TO BOARD 60P |
| CN9 | 1-785-849-11 | o | CONNECTOR, BOARD TO BOARD 40P |
| D101 | 8-719-033-73 | s | DIODE RD4.3UM-T1B1B2 |
| D102 | 8-719-033-73 | s | DIODE RD4.3UM-T1B1B2 |
| D301 | 8-719-421-69 | s | DIODE MA133 |
| D302 | 8-719-421-69 | s | DIODE MA133 |
| D303 | 8-719-421-69 | s | DIODE MA133 |
| D304 | 8-719-421-69 | s | DIODE MA133 |
| D701 | 8-719-027-95 | s | DIODE HSM88WK |
| D702 | 8-719-041-39 | s | DIODE KV1470 (5MA) |
| D713 | 8-719-041-39 | s | DIODE KV1470 (5MA) |
| D714 | 8-719-027-95 | s | DIODE HSM88WK |
| D821 | 8-719-041-39 | s | DIODE KV1470 (5MA) |
| D901 | 8-719-941-09 | s | DIODE DAP202U |
| D902 | 8-719-941-09 | s | DIODE DAP202U |
| FB301 | 1-414-445-11 | s | FERRITE, EMI (SMD) |
| FB302 | 1-414-445-11 | s | FERRITE, EMI (SMD) |
| FB303 | 1-414-445-11 | s | FERRITE, EMI (SMD) |
| FB304 | 1-414-445-11 | s | FERRITE, EMI (SMD) |
| FL301 | 1-233-740-11 | s | FILTER, LOW PASS |
| FL303 | 1-233-740-11 | s | FILTER, LOW PASS |
| FL305 | 1-233-740-11 | s | FILTER, LOW PASS |
| FL307 | 1-233-740-11 | s | FILTER, LOW PASS |
| FL501 | 1-233-345-21 | s | FILTER, LOW PASS (5.5MHZ) |
| FL502 | 1-233-776-11 | s | FILTER, LOW PASS |
| FL503 | 1-233-776-11 | s | FILTER, LOW PASS |
| IC101 | 8-759-185-42 | s | IC LM4040AIM3-2.5 |
| IC102 | 8-759-669-72 | s | IC TL064CPWR |
| IC103 | 8-759-669-45 | s | IC TL062CPWR-12 |
| IC104 | 8-759-673-43 | s | IC MM74HC04MTCX |
| IC105 | 8-759-523-95 | s | IC TC74VHC74FT(EL) |
| IC106 | 8-752-376-32 | s | IC CXD2310AR |
| IC107 | 8-752-376-32 | s | IC CXD2310AR |
| IC108 | 8-752-376-32 | s | IC CXD2310AR |
| IC201 | 8-759-674-44 | s | IC MM74HCT244MTCX |
| IC202 | 8-759-669-72 | s | IC TL064CPWR |
| IC204 | 8-759-491-46 | s | IC TC74VHCT04AFT (EL) |
| IC205 | 8-759-058-54 | s | IC TC7S00FU-TE85R |
| IC208 | 8-759-058-54 | s | IC TC7S00FU-TE85R |
| IC209 | 8-759-447-77 | s | IC TC7WH74FU (TE12R) |
| IC211 | 8-752-360-44 | s | IC CXK1203AR |
| IC212 | 8-752-360-44 | s | IC CXK1203AR |
| IC213 | 8-752-360-44 | s | IC CXK1203AR |
| IC214 | 8-752-360-44 | s | IC CXK1203AR |
| IC215 | 8-759-196-96 | s | IC TC7SH08FU (TE85R) |
| IC217 | 8-759-491-46 | s | IC TC74VHCT04AFT (EL) |
| IC218 | 8-759-674-44 | s | IC MM74HCT244MTCX |
| IC219 | 8-759-196-93 | s | IC TC7SH00FU-TE85R |
| IC301 | 8-759-678-06 | s | IC CAT24WC02JI-TE13 |
| IC302 | 8-759-064-36 | s | IC MB88346BPFV |
| IC303 | 8-759-523-04 | s | IC TC74HC4538AFT |
| IC304 | 8-759-058-58 | s | IC TC7S04FU-TE85R |
| IC305 | 8-759-485-79 | s | IC TC7SET08FU (TE85L) |
| IC306 | 8-759-673-37 | s | IC MM74HC00MTCX |
| IC307 | 8-752-363-60 | s | IC CXD2307R-T4 |

(DPR-141C BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| IC308 | 8-759-523-02 | s IC TC74HC4053AFT(EL) |
| IC309 | 8-759-531-92 | s IC TC7WH04FU(TE12R) |
| IC310 | 8-752-381-65 | o IC CXD606-101R |
| IC311 | 8-759-485-79 | s IC TC7SET08FU (TE85L) |
| IC312 | 8-759-184-64 | s IC TC4W66FU |
| IC313 | 8-759-669-45 | s IC TL062CPWR-12 |
| IC314 | 8-759-271-86 | s IC TC7SH04FU |
| IC315 | 8-759-491-46 | s IC TC74VHCT04AFT (EL) |
| IC316 | 8-759-523-95 | s IC TC74VHC74FT(EL) |
| IC317 | 8-759-485-79 | s IC TC7SET08FU (TE85L) |
| IC318 | 8-759-546-74 | s IC TC7WH157FU(TE12R) |
| IC319 | 8-752-334-64 | s IC CXD1171M |
| IC320 | 8-759-196-96 | s IC TC7SH08FU (TE85R) |
| IC321 | 8-759-196-96 | s IC TC7SH08FU (TE85R) |
| IC324 | 8-759-058-54 | s IC TC7S00FU-TE85R |
| IC501 | 8-759-464-95 | s IC AK6420AF-E2 |
| IC502 | 8-759-498-27 | s IC TK16074MTL |
| IC503 | 8-759-498-27 | s IC TK16074MTL |
| IC504 | 8-759-271-86 | s IC TC7SH04FU |
| IC505 | 8-759-457-61 | s IC CXD8628BR |
| IC506 | 8-759-485-79 | s IC TC7SET08FU (TE85L) |
| IC509 | 8-759-524-50 | s IC TC74VHC541FT(EL) |
| IC510 | 8-759-271-86 | s IC TC7SH04FU |
| IC511 | 8-759-386-27 | s IC 74LCX04MTCX |
| IC512 | 8-759-524-50 | s IC TC74VHC541FT(EL) |
| IC513 | 8-759-485-79 | s IC TC7SET08FU (TE85L) |
| IC514 | 8-752-363-60 | s IC CXD2307R-T4 |
| IC517 | 8-759-524-04 | s IC TC74VHC125FT (EL) |
| IC518 | 8-759-524-04 | s IC TC74VHC125FT (EL) |
| IC521 | 8-759-196-96 | s IC TC7SH08FU (TE85R) |
| IC601 | 8-759-327-31 | s IC CXD2183R |
| IC611 | 8-752-378-68 | s IC CXD3101R |
| IC621 | 8-759-328-28 | s IC ZA4024 |
| IC631 | 8-759-328-28 | s IC ZA4024 |
| IC651 | 8-759-426-26 | s IC CXD8608R |
| IC652 | 8-759-524-52 | s IC TC74VHC574FT(EL) |
| IC653 | 8-759-524-52 | s IC TC74VHC574FT(EL) |
| IC706 | 8-759-524-10 | s IC TC74VHC157FT (EL) |
| IC711 | 8-752-375-05 | s IC CXD2191R |
| IC751 | 8-752-929-66 | s IC CXP911016-016Q |
| IC752 | 8-759-464-95 | s IC AK6420AF-E2 |
| IC771 | 8-759-385-90 | s IC CXD2187AR |
| IC772 | 8-759-585-05 | s IC CXD8627BR |
| IC773 | 8-759-082-60 | s IC TC7S66FU |
| IC781 | 8-759-433-17 | s IC UPD482445LG4-B10-9MH-E2-HDC |
| IC801 | 8-759-529-45 | s IC IDT71V256SA15PZ-TL |
| IC811 | 8-752-374-96 | s IC CXD2190R |
| IC821 | 8-759-271-86 | s IC TC7SH04FU |
| IC822 | 8-759-271-86 | s IC TC7SH04FU |
| IC823 | 8-759-362-16 | s IC CXD2913AQ |
| IC824 | 8-759-327-01 | s IC NJM062V-TE2 |
| IC825 | 6-802-914-02 | s IC CXD8630AR |
| IC826 | 6-759-082-60 | s IC TC7S66FU |
| IC901 | 8-759-422-21 | s IC NJM4580VTE2 |
| IC905 | 8-759-173-51 | s IC SM5872AS (ET) |
| IC906 | 8-759-422-21 | s IC NJM4580VTE2 |
| IC907 | 8-759-422-21 | s IC NJM4580VTE2 |
| IC908 | 8-759-422-21 | s IC NJM4580VTE2 |
| IC911 | 8-752-374-97 | s IC CXD2705AR |

(DPR-141C BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-------------------------------|
| IC912 | 8-759-674-62 | s IC MM74HCT541MTCX |
| IC913 | 8-759-523-94 | s IC TC74VHC32FT(EL) |
| IC917 | 8-759-833-99 | s IC MC74HC4052ADTR2 |
| IC918 | 8-759-833-99 | s IC MC74HC4052ADTR2 |
| IC919 | 8-759-422-21 | s IC NJM4580VTE2 |
| IC921 | 8-759-422-21 | s IC NJM4580VTE2 |
| IC923 | 8-759-462-08 | s IC AK5352-VF (E2) |
| IC924 | 8-759-447-77 | s IC TC7WH74FU (TE12R) |
| L101 | 1-412-951-11 | s INDUCTOR 10UH (2520) |
| L102 | 1-412-951-11 | s INDUCTOR 10UH (2520) |
| L103 | 1-412-951-11 | s INDUCTOR 10UH (2520) |
| L104 | 1-412-951-11 | s INDUCTOR 10UH (2520) |
| L105 | 1-412-951-11 | s INDUCTOR 10UH (2520) |
| L106 | 1-412-951-11 | s INDUCTOR 10UH (2520) |
| L107 | 1-412-951-11 | s INDUCTOR 10UH (2520) |
| L201 | 1-424-643-11 | s COIL, CHOKE 10UH |
| L301 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| L302 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| L303 | 1-410-737-31 | s INDUCTOR,CHIP 0.47UH (3225) |
| L305 | 1-410-385-11 | s INDUCTOR,CHIP 22UH (3225) |
| L306 | 1-424-643-11 | s COIL, CHOKE 10UH |
| L307 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| L308 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| L309 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| L310 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| L501 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L502 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L503 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L601 | 1-410-381-11 | s INDUCTOR,CHIP 10UH (3225) |
| L611 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L651 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L701 | 1-410-378-11 | s INDUCTOR,CHIP 5.6UH (3225) |
| L711 | 1-410-389-31 | s INDUCTOR,CHIP 47UH (3225) |
| L713 | 1-410-740-31 | s INDUCTOR,CHIP 0.82UH |
| L751 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L771 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L772 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L781 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L801 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L811 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L821 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L823 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L824 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L826 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L827 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L901 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L902 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L903 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L904 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L905 | 1-410-393-11 | s INDUCTOR,CHIP 100UH (3225) |
| L906 | 1-410-393-11 | s INDUCTOR,CHIP 100UH (3225) |
| L907 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L908 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L909 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L980 | 1-414-392-31 | s INDUCTOR (SMD) 1.0UH |
| L981 | 1-414-392-31 | s INDUCTOR (SMD) 1.0UH |
| L982 | 1-414-392-31 | s INDUCTOR (SMD) 1.0UH |
| L983 | 1-414-392-31 | s INDUCTOR (SMD) 1.0UH |

(DPR-141C BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|------------------------------------|
| L984 | 1-414-392-31 | s INDUCTOR (SMD) 1.0UH |
| LV825 | 1-411-984-11 | s COIL, VARIABLE |
| Q101 | 8-729-101-07 | s TRANSISTOR 2SB798 |
| Q102 | 8-729-101-07 | s TRANSISTOR 2SB798 |
| Q103 | 8-729-101-07 | s TRANSISTOR 2SB798 |
| Q104 | 8-729-807-51 | s TRANSISTOR 2SD1623-S |
| Q105 | 8-729-427-74 | s TRANSISTOR XP4601-TXE |
| Q106 | 8-729-427-74 | s TRANSISTOR XP4601-TXE |
| Q107 | 8-729-427-74 | s TRANSISTOR XP4601-TXE |
| Q108 | 8-729-427-74 | s TRANSISTOR XP4601-TXE |
| Q301 | 8-729-427-83 | s TRANSISTOR XP6501-TXE |
| Q302 | 8-729-143-13 | s TRANSISTOR 2SC4176-B34 |
| Q303 | 8-729-026-32 | s TRANSISTOR XP6534-TX |
| Q304 | 8-729-026-34 | s TRANSISTOR XP6435-TX |
| Q305 | 8-729-427-83 | s TRANSISTOR XP6501-TXE |
| Q306 | 8-729-143-13 | s TRANSISTOR 2SC4176-B34 |
| Q307 | 8-729-026-32 | s TRANSISTOR XP6534-TX |
| Q308 | 8-729-026-34 | s TRANSISTOR XP6435-TX |
| Q309 | 8-729-427-83 | s TRANSISTOR XP6501-TXE |
| Q310 | 8-729-143-13 | s TRANSISTOR 2SC4176-B34 |
| Q311 | 8-729-026-32 | s TRANSISTOR XP6534-TX |
| Q312 | 8-729-026-34 | s TRANSISTOR XP6435-TX |
| Q313 | 8-729-026-53 | s TRANSISTOR 2SA1576A-T106-QR |
| Q501 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q502 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q503 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q504 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q505 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q506 | 8-729-026-53 | s TRANSISTOR 2SA1576A-T106-QR |
| Q507 | 8-729-055-85 | s TRANSISTOR UMT1N-TN |
| Q508 | 8-729-055-85 | s TRANSISTOR UMT1N-TN |
| Q823 | 8-729-029-14 | s TRANSISTOR DTC144EUA-T106 |
| Q901 | 6-550-007-01 | s TRANSISTOR UMC3NTR |
| Q902 | 8-729-013-37 | s TRANSISTOR 2SC4213-AB-TE85L |
| Q903 | 8-729-013-37 | s TRANSISTOR 2SC4213-AB-TE85L |
| Q904 | 8-729-013-37 | s TRANSISTOR 2SC4213-AB-TE85L |
| Q905 | 8-729-013-37 | s TRANSISTOR 2SC4213-AB-TE85L |
| Q906 | 6-550-007-01 | s TRANSISTOR UMC3NTR |
| Q907 | 6-550-007-01 | s TRANSISTOR UMC3NTR |
| Q908 | 6-550-007-01 | s TRANSISTOR UMC3NTR |
| R101 | 1-218-881-11 | s RESISTOR, CHIP 27K 1/16W (1608) |
| R102 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R103 | 1-218-881-11 | s RESISTOR, CHIP 27K 1/16W (1608) |
| R104 | 1-218-861-11 | s RESISTOR, CHIP 3.9K 1/16W (1608) |
| R105 | 1-218-879-11 | s RESISTOR, CHIP 22K 1/16W (1608) |
| R106 | 1-216-823-11 | s RESISTOR, CHIP 1.5K 1/16W |
| R107 | 1-218-863-11 | s RESISTOR, CHIP 4.7K 1/16W (1608) |
| R108 | 1-218-853-11 | s RESISTOR, CHIP 1.8K 1/16W (1608) |
| R109 | 1-218-883-11 | s RESISTOR, CHIP 33K 1/16W (1608) |
| R110 | 1-216-823-11 | s RESISTOR, CHIP 1.5K 1/16W |
| R111 | 1-218-881-11 | s RESISTOR, CHIP 27K 1/16W (1608) |
| R112 | 1-218-863-11 | s RESISTOR, CHIP 4.7K 1/16W (1608) |
| R113 | 1-218-883-11 | s RESISTOR, CHIP 33K 1/16W (1608) |
| R114 | 1-218-885-11 | s RESISTOR, CHIP 39K 1/16W (1608) |
| R115 | 1-218-884-11 | s RESISTOR, CHIP 36K 1/16W (1608) |
| R116 | 1-218-875-11 | s RESISTOR, CHIP 15K 1/16W (1608) |
| R117 | 1-218-883-11 | s RESISTOR, CHIP 33K 1/16W (1608) |

(DPR-141C BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|------------------------------------|
| R118 | 1-218-883-11 | s RESISTOR, CHIP 33K 1/16W (1608) |
| R119 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R120 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R121 | 1-216-845-11 | s RESISTOR, CHIP 100K 1/16W (1608) |
| R122 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R123 | 1-216-857-11 | s RESISTOR, CHIP 1M 1/16W (1608) |
| R124 | 1-216-857-11 | s RESISTOR, CHIP 1M 1/16W (1608) |
| R125 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R126 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R128 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R130 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R131 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R132 | 1-211-969-11 | s RESISTOR, CHIP 10 1/16W (1608) |
| R134 | 1-216-805-11 | s RESISTOR, CHIP 47 1/16W 1608 |
| R135 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R137 | 1-218-859-11 | s RESISTOR, CHIP 3.3K 1/16W (1608) |
| R138 | 1-218-835-11 | s RESISTOR, CHIP 330 1/16W (1608) |
| R139 | 1-218-859-11 | s RESISTOR, CHIP 3.3K 1/16W (1608) |
| R140 | 1-211-977-11 | s RESISTOR, CHIP 22 1/16W (1608) |
| R141 | 1-216-813-11 | s RESISTOR, CHIP 220 1/16W 1608 |
| R142 | 1-216-797-11 | s RESISTOR, CHIP 10 1/16W 1608 |
| R143 | 1-218-859-11 | s RESISTOR, CHIP 3.3K 1/16W (1608) |
| R144 | 1-218-835-11 | s RESISTOR, CHIP 330 1/16W (1608) |
| R145 | 1-218-859-11 | s RESISTOR, CHIP 3.3K 1/16W (1608) |
| R146 | 1-211-977-11 | s RESISTOR, CHIP 22 1/16W (1608) |
| R147 | 1-216-797-11 | s RESISTOR, CHIP 10 1/16W 1608 |
| R148 | 1-216-813-11 | s RESISTOR, CHIP 220 1/16W 1608 |
| R149 | 1-218-859-11 | s RESISTOR, CHIP 3.3K 1/16W (1608) |
| R150 | 1-218-835-11 | s RESISTOR, CHIP 330 1/16W (1608) |
| R151 | 1-218-859-11 | s RESISTOR, CHIP 3.3K 1/16W (1608) |
| R152 | 1-211-977-11 | s RESISTOR, CHIP 22 1/16W (1608) |
| R153 | 1-216-797-11 | s RESISTOR, CHIP 10 1/16W 1608 |
| R154 | 1-216-813-11 | s RESISTOR, CHIP 220 1/16W 1608 |
| R202 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R203 | 1-218-843-11 | s RESISTOR, CHIP 680 1/16W (1608) |
| R204 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R206 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R208 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R209 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R210 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R211 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R212 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R213 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R214 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R215 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R216 | 1-218-867-11 | s RESISTOR, CHIP 6.8K 1/16W (1608) |
| R217 | 1-218-867-11 | s RESISTOR, CHIP 6.8K 1/16W (1608) |
| R218 | 1-218-867-11 | s RESISTOR, CHIP 6.8K 1/16W (1608) |
| R219 | 1-218-867-11 | s RESISTOR, CHIP 6.8K 1/16W (1608) |
| R220 | 1-218-867-11 | s RESISTOR, CHIP 6.8K 1/16W (1608) |
| R221 | 1-218-867-11 | s RESISTOR, CHIP 6.8K 1/16W (1608) |
| R222 | 1-216-797-11 | s RESISTOR, CHIP 10 1/16W 1608 |
| R224 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R225 | 1-218-883-11 | s RESISTOR, CHIP 33K 1/16W (1608) |
| R226 | 1-218-883-11 | s RESISTOR, CHIP 33K 1/16W (1608) |
| R227 | 1-218-883-11 | s RESISTOR, CHIP 33K 1/16W (1608) |
| R229 | 1-218-883-11 | s RESISTOR, CHIP 33K 1/16W (1608) |
| R230 | 1-218-883-11 | s RESISTOR, CHIP 33K 1/16W (1608) |
| R231 | 1-218-883-11 | s RESISTOR, CHIP 33K 1/16W (1608) |

(DPR-141C BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| R232 | 1-216-805-11 | s RESISTOR,CHIP 47 1/16W 1608 |
| R234 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R238 | 1-216-797-11 | s RESISTOR,CHIP 10 1/16W 1608 |
| R239 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R240 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R241 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R242 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R243 | 1-218-835-11 | s RESISTOR,CHIP 330 1/16W (1608) |
| R244 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R245 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R246 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R247 | 1-216-805-11 | s RESISTOR,CHIP 47 1/16W 1608 |
| R248 | 1-216-805-11 | s RESISTOR,CHIP 47 1/16W 1608 |
| R249 | 1-216-805-11 | s RESISTOR,CHIP 47 1/16W 1608 |
| R250 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R251 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R252 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R253 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R254 | 1-216-805-11 | s RESISTOR,CHIP 47 1/16W 1608 |
| R255 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R256 | 1-218-830-11 | s RESISTOR,CHIP 200 1/16W (1608) |
| R257 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R258 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R259 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R301 | 1-218-859-11 | s RESISTOR,CHIP 3.3K 1/16W(1608) |
| R302 | 1-218-883-11 | s RESISTOR,CHIP 33K 1/16W (1608) |
| R303 | 1-218-879-11 | s RESISTOR,CHIP 22K 1/16W (1608) |
| R304 | 1-218-887-11 | s RESISTOR,CHIP 47K 1/16W (1608) |
| R305 | 1-218-885-11 | s RESISTOR,CHIP 39K 1/16W (1608) |
| R306 | 1-218-875-11 | s RESISTOR,CHIP 15K 1/16W (1608) |
| R308 | 1-218-887-11 | s RESISTOR,CHIP 47K 1/16W (1608) |
| R309 | 1-218-885-11 | s RESISTOR,CHIP 39K 1/16W (1608) |
| R310 | 1-218-875-11 | s RESISTOR,CHIP 15K 1/16W (1608) |
| R312 | 1-218-887-11 | s RESISTOR,CHIP 47K 1/16W (1608) |
| R313 | 1-218-885-11 | s RESISTOR,CHIP 39K 1/16W (1608) |
| R317 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R318 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R319 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R320 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R321 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R322 | 1-218-827-11 | s RESISTOR,CHIP 150 1/16W (1608) |
| R323 | 1-218-827-11 | s RESISTOR,CHIP 150 1/16W (1608) |
| R324 | 1-218-827-11 | s RESISTOR,CHIP 150 1/16W (1608) |
| R325 | 1-218-859-11 | s RESISTOR,CHIP 3.3K 1/16W(1608) |
| R326 | 1-218-859-11 | s RESISTOR,CHIP 3.3K 1/16W(1608) |
| R327 | 1-218-859-11 | s RESISTOR,CHIP 3.3K 1/16W(1608) |
| R328 | 1-211-977-11 | s RESISTOR,CHIP 22 1/16W (1608) |
| R329 | 1-216-825-11 | s RESISTOR,CHIP 2.2K 1/16W 1608 |
| R330 | 1-218-859-11 | s RESISTOR,CHIP 3.3K 1/16W(1608) |
| R331 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R332 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R334 | 1-211-977-11 | s RESISTOR,CHIP 22 1/16W (1608) |
| R335 | 1-218-863-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R339 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R340 | 1-218-874-11 | s RESISTOR,CHIP 13K 1/16W (1608) |
| R343 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R346 | 1-218-895-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R347 | 1-218-863-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R348 | 1-211-977-11 | s RESISTOR,CHIP 22 1/16W (1608) |

(DPR-141C BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| R349 | 1-216-857-11 | s RESISTOR,CHIP 1M 1/16W(1608) |
| R350 | 1-216-825-11 | s RESISTOR,CHIP 2.2K 1/16W 1608 |
| R351 | 1-218-859-11 | s RESISTOR,CHIP 3.3K 1/16W(1608) |
| R352 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R353 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R355 | 1-211-977-11 | s RESISTOR,CHIP 22 1/16W (1608) |
| R356 | 1-218-863-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R360 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R361 | 1-218-874-11 | s RESISTOR,CHIP 13K 1/16W (1608) |
| R364 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R367 | 1-218-895-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R368 | 1-218-863-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R369 | 1-211-977-11 | s RESISTOR,CHIP 22 1/16W (1608) |
| R370 | 1-216-825-11 | s RESISTOR,CHIP 2.2K 1/16W 1608 |
| R371 | 1-218-859-11 | s RESISTOR,CHIP 3.3K 1/16W(1608) |
| R372 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R373 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R375 | 1-211-977-11 | s RESISTOR,CHIP 22 1/16W (1608) |
| R376 | 1-218-863-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R380 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R381 | 1-218-874-11 | s RESISTOR,CHIP 13K 1/16W (1608) |
| R384 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R387 | 1-218-895-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R388 | 1-218-863-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R389 | 1-211-977-11 | s RESISTOR,CHIP 22 1/16W (1608) |
| R390 | 1-218-843-11 | s RESISTOR,CHIP 680 1/16W (1608) |
| R391 | 1-218-843-11 | s RESISTOR,CHIP 680 1/16W (1608) |
| R392 | 1-216-805-11 | s RESISTOR,CHIP 47 1/16W 1608 |
| R393 | 1-216-805-11 | s RESISTOR,CHIP 47 1/16W 1608 |
| R394 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R395 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R396 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R397 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R398 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R399 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R401 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R402 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R403 | 1-218-883-11 | s RESISTOR,CHIP 33K 1/16W (1608) |
| R404 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R405 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R406 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R407 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R408 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R409 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R410 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R411 | 1-216-857-11 | s RESISTOR,CHIP 1M 1/16W(1608) |
| R412 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R413 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R414 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R415 | 1-216-797-11 | s RESISTOR,CHIP 10 1/16W 1608 |
| R417 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R420 | 1-216-797-11 | s RESISTOR,CHIP 10 1/16W 1608 |
| R424 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R425 | 1-218-839-11 | s RESISTOR,CHIP 470 1/16W (1608) |
| R426 | 1-216-813-11 | s RESISTOR, CHIP 220 1/16W 1608 |
| R430 | 1-218-869-11 | s RESISTOR,CHIP 8.2K 1/16W(1608) |
| R431 | 1-218-879-11 | s RESISTOR,CHIP 22K 1/16W (1608) |
| R432 | 1-218-857-11 | s RESISTOR,CHIP 2.7K 1/16W(1608) |
| R433 | 1-218-873-11 | s RESISTOR,CHIP 12K 1/16W (1608) |

(DPR-141C BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|------------------------------------|
| R434 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R435 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R436 | 1-218-863-11 | s RESISTOR, CHIP 4.7K 1/16W (1608) |
| R437 | 1-216-805-11 | s RESISTOR, CHIP 47 1/16W 1608 |
| R438 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| | | |
| R439 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R444 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R445 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R501 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R502 | 1-218-839-11 | s RESISTOR, CHIP 470 1/16W (1608) |
| | | |
| R503 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R504 | 1-218-839-11 | s RESISTOR, CHIP 470 1/16W (1608) |
| R505 | 1-218-839-11 | s RESISTOR, CHIP 470 1/16W (1608) |
| R507 | 1-218-839-11 | s RESISTOR, CHIP 470 1/16W (1608) |
| R508 | 1-218-839-11 | s RESISTOR, CHIP 470 1/16W (1608) |
| | | |
| R509 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R510 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R511 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R512 | 1-218-863-11 | s RESISTOR, CHIP 4.7K 1/16W (1608) |
| R513 | 1-218-863-11 | s RESISTOR, CHIP 4.7K 1/16W (1608) |
| | | |
| R514 | 1-218-863-11 | s RESISTOR, CHIP 4.7K 1/16W (1608) |
| R515 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R516 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| R517 | 1-216-845-11 | s RESISTOR, CHIP 100K 1/16W (1608) |
| R518 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| | | |
| R519 | 1-216-823-11 | s RESISTOR, CHIP 1.5K 1/16W |
| R520 | 1-216-823-11 | s RESISTOR, CHIP 1.5K 1/16W |
| R521 | 1-216-823-11 | s RESISTOR, CHIP 1.5K 1/16W |
| R522 | 1-216-825-11 | s RESISTOR, CHIP 2.2K 1/16W 1608 |
| R523 | 1-216-825-11 | s RESISTOR, CHIP 2.2K 1/16W 1608 |
| | | |
| R524 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R525 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R526 | 1-216-823-11 | s RESISTOR, CHIP 1.5K 1/16W |
| R527 | 1-216-823-11 | s RESISTOR, CHIP 1.5K 1/16W |
| R528 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| | | |
| R529 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R532 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R533 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R534 | 1-216-825-11 | s RESISTOR, CHIP 2.2K 1/16W 1608 |
| R535 | 1-216-825-11 | s RESISTOR, CHIP 2.2K 1/16W 1608 |
| | | |
| R536 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R537 | 1-218-830-11 | s RESISTOR, CHIP 200 1/16W (1608) |
| R538 | 1-218-830-11 | s RESISTOR, CHIP 200 1/16W (1608) |
| R539 | 1-218-830-11 | s RESISTOR, CHIP 200 1/16W (1608) |
| R540 | 1-218-859-11 | s RESISTOR, CHIP 3.3K 1/16W (1608) |
| | | |
| R541 | 1-218-859-11 | s RESISTOR, CHIP 3.3K 1/16W (1608) |
| R542 | 1-218-859-11 | s RESISTOR, CHIP 3.3K 1/16W (1608) |
| R543 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R544 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R545 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| | | |
| R548 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| R551 | 1-216-845-11 | s RESISTOR, CHIP 100K 1/16W (1608) |
| R552 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R553 | 1-216-825-11 | s RESISTOR, CHIP 2.2K 1/16W 1608 |
| R559 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| | | |
| R560 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R561 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R563 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R564 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |

(DPR-141C BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|------------------------------------|
| R565 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R568 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R569 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R571 | 1-218-839-11 | s RESISTOR, CHIP 470 1/16W (1608) |
| R572 | 1-216-830-11 | s RESISTOR, CHIP 5.6K 1/16W 1608 |
| | | |
| R573 | 1-216-830-11 | s RESISTOR, CHIP 5.6K 1/16W 1608 |
| R602 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R616 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| R651 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R658 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| | | |
| R702 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R703 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R704 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R705 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R706 | 1-218-863-11 | s RESISTOR, CHIP 4.7K 1/16W (1608) |
| | | |
| R707 | 1-218-835-11 | s RESISTOR, CHIP 330 1/16W (1608) |
| R708 | 1-216-805-11 | s RESISTOR, CHIP 47 1/16W 1608 |
| R709 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R711 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| R713 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| | | |
| R715 | 1-216-805-11 | s RESISTOR, CHIP 47 1/16W 1608 |
| R720 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R723 | 1-216-805-11 | s RESISTOR, CHIP 47 1/16W 1608 |
| R724 | 1-216-805-11 | s RESISTOR, CHIP 47 1/16W 1608 |
| R725 | 1-218-839-11 | s RESISTOR, CHIP 470 1/16W (1608) |
| | | |
| R726 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R727 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R728 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R729 | 1-218-863-11 | s RESISTOR, CHIP 4.7K 1/16W (1608) |
| R730 | 1-216-805-11 | s RESISTOR, CHIP 47 1/16W 1608 |
| | | |
| R731 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R732 | 1-216-845-11 | s RESISTOR, CHIP 100K 1/16W (1608) |
| R733 | 1-216-845-11 | s RESISTOR, CHIP 100K 1/16W (1608) |
| R734 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| R751 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| | | |
| R752 | 1-216-845-11 | s RESISTOR, CHIP 100K 1/16W (1608) |
| R753 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| R754 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R755 | 1-216-857-11 | s RESISTOR, CHIP 1M 1/16W (1608) |
| R758 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| | | |
| R759 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R760 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| R761 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R763 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R764 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| | | |
| R765 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R766 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| R767 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R771 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R772 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| | | |
| R776 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| R777 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| R778 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| R779 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R801 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| | | |
| R802 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R803 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R804 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R806 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |

(DPR-141C BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|------------------------------------|
| R808 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R812 | 1-216-845-11 | s RESISTOR, CHIP 100K 1/16W (1608) |
| R813 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R814 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R815 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| | | |
| R816 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| R817 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R818 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R819 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R820 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| | | |
| R821 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R822 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R823 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R824 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R825 | 1-218-879-11 | s RESISTOR, CHIP 22K 1/16W (1608) |
| | | |
| R826 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R827 | 1-218-883-11 | s RESISTOR, CHIP 33K 1/16W (1608) |
| R828 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R829 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| R830 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| | | |
| R901 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R902 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R904 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R906 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R913 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| | | |
| R914 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R916 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R917 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R918 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R919 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| | | |
| R920 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R921 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R922 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R923 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R924 | 1-218-880-11 | s RESISTOR, CHIP 24K 1/16W (1608) |
| | | |
| R925 | 1-218-880-11 | s RESISTOR, CHIP 24K 1/16W (1608) |
| R926 | 1-218-880-11 | s RESISTOR, CHIP 24K 1/16W (1608) |
| R927 | 1-218-880-11 | s RESISTOR, CHIP 24K 1/16W (1608) |
| R928 | 1-218-857-11 | s RESISTOR, CHIP 2.7K 1/16W (1608) |
| R929 | 1-218-857-11 | s RESISTOR, CHIP 2.7K 1/16W (1608) |
| | | |
| R930 | 1-218-857-11 | s RESISTOR, CHIP 2.7K 1/16W (1608) |
| R931 | 1-218-857-11 | s RESISTOR, CHIP 2.7K 1/16W (1608) |
| R932 | 1-218-857-11 | s RESISTOR, CHIP 2.7K 1/16W (1608) |
| R933 | 1-218-857-11 | s RESISTOR, CHIP 2.7K 1/16W (1608) |
| R934 | 1-218-860-11 | s RESISTOR, CHIP 3.6K 1/16W (1608) |
| | | |
| R935 | 1-218-860-11 | s RESISTOR, CHIP 3.6K 1/16W (1608) |
| R936 | 1-218-859-11 | s RESISTOR, CHIP 3.3K 1/16W (1608) |
| R937 | 1-218-859-11 | s RESISTOR, CHIP 3.3K 1/16W (1608) |
| R939 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R940 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| | | |
| R941 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R942 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R943 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R944 | 1-216-845-11 | s RESISTOR, CHIP 100K 1/16W (1608) |
| R945 | 1-216-845-11 | s RESISTOR, CHIP 100K 1/16W (1608) |
| | | |
| R946 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| R947 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R958 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R959 | 1-218-878-11 | s RESISTOR, CHIP 20K 1/16W (1608) |

(DPR-141C BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|------------------------------------|
| R960 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R963 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R964 | 1-218-878-11 | s RESISTOR, CHIP 20K 1/16W (1608) |
| R965 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R967 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| | | |
| R968 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R970 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R971 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R976 | 1-218-868-11 | s RESISTOR, CHIP 7.5K 1/16W (1608) |
| R977 | 1-218-875-11 | s RESISTOR, CHIP 15K 1/16W (1608) |
| | | |
| R978 | 1-218-877-11 | s RESISTOR, CHIP 18K 1/16W (1608) |
| R980 | 1-218-868-11 | s RESISTOR, CHIP 7.5K 1/16W (1608) |
| R981 | 1-218-875-11 | s RESISTOR, CHIP 15K 1/16W (1608) |
| R982 | 1-218-877-11 | s RESISTOR, CHIP 18K 1/16W (1608) |
| R988 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| | | |
| R989 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R990 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R991 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R992 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R993 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| | | |
| R994 | 1-218-882-11 | s RESISTOR, CHIP 30K 1/16W (1608) |
| R995 | 1-218-882-11 | s RESISTOR, CHIP 30K 1/16W (1608) |
| R996 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R997 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R998 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| | | |
| R999 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R1000 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R1001 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R1002 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R1003 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| | | |
| R1004 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R1005 | 1-218-823-11 | s RESISTOR, CHIP 100 1/16W (1608) |
| R1006 | 1-216-797-11 | s RESISTOR, CHIP 10 1/16W 1608 |
| R1007 | 1-218-837-11 | s RESISTOR, CHIP 390 1/16W (1608) |
| R1008 | 1-218-841-11 | s RESISTOR, CHIP 560 1/16W (1608) |
| | | |
| R1009 | 1-218-852-11 | s RESISTOR, CHIP 1.6K 1/16W (1608) |
| R1010 | 1-218-837-11 | s RESISTOR, CHIP 390 1/16W (1608) |
| R1011 | 1-218-841-11 | s RESISTOR, CHIP 560 1/16W (1608) |
| R1012 | 1-218-852-11 | s RESISTOR, CHIP 1.6K 1/16W (1608) |
| R1015 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| | | |
| R1016 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R1019 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R1020 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| | | |
| RB101 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB102 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB103 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB104 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB105 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| | | |
| RB106 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB107 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB108 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB109 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB201 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| | | |
| RB202 | 1-236-904-11 | s RESISTOR NETWORK 1K (1608) |
| RB203 | 1-236-904-11 | s RESISTOR NETWORK 1K (1608) |
| RB204 | 1-236-908-11 | s RESISTOR, NETWORK 10K (3216) |
| RB205 | 1-236-908-11 | s RESISTOR, NETWORK 10K (3216) |
| RB206 | 1-236-908-11 | s RESISTOR, NETWORK 10K (3216) |

(DPR-141C BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|---------------------------------|
| RB207 | 1-236-908-11 | s RESISTOR, NETWORK 10K (3216) |
| RB208 | 1-236-908-11 | s RESISTOR, NETWORK 10K (3216) |
| RB209 | 1-236-907-11 | s RESISTOR BLOCK 100K (1608) |
| RB210 | 1-236-908-11 | s RESISTOR, NETWORK 10K (3216) |
| RB211 | 1-236-908-11 | s RESISTOR, NETWORK 10K (3216) |
| RB212 | 1-236-907-11 | s RESISTOR BLOCK 100K (1608) |
| RB213 | 1-236-908-11 | s RESISTOR, NETWORK 10K (3216) |
| RB214 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB215 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB216 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB217 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB218 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB219 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB220 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB221 | 1-236-908-11 | s RESISTOR, NETWORK 10K (3216) |
| RB222 | 1-236-908-11 | s RESISTOR, NETWORK 10K (3216) |
| RB223 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB224 | 1-236-907-11 | s RESISTOR BLOCK 100K (1608) |
| RB225 | 1-236-907-11 | s RESISTOR BLOCK 100K (1608) |
| RB226 | 1-236-907-11 | s RESISTOR BLOCK 100K (1608) |
| RB227 | 1-236-907-11 | s RESISTOR BLOCK 100K (1608) |
| RB228 | 1-236-907-11 | s RESISTOR BLOCK 100K (1608) |
| RB229 | 1-236-907-11 | s RESISTOR BLOCK 100K (1608) |
| RB230 | 1-236-907-11 | s RESISTOR BLOCK 100K (1608) |
| RB231 | 1-236-907-11 | s RESISTOR BLOCK 100K (1608) |
| RB232 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB233 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB234 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB235 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB236 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB237 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB238 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB239 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB240 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB241 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB301 | 1-236-904-11 | s RESISTOR NETWORK 1K (1608) |
| RB302 | 1-236-907-11 | s RESISTOR BLOCK 100K (1608) |
| RB303 | 1-239-309-11 | s RESISTOR ARRAY, CHIP 100K |
| RB304 | 1-239-419-11 | s NETWORK RESISTOR 470 (1608) |
| RB305 | 1-239-419-11 | s NETWORK RESISTOR 470 (1608) |
| RB306 | 1-239-711-11 | s NETWORK, RESISTOR 0 (1608) |
| RB307 | 1-239-711-11 | s NETWORK, RESISTOR 0 (1608) |
| RB501 | 1-236-904-11 | s RESISTOR NETWORK 1K (1608) |
| RB503 | 1-239-444-11 | s NETWORK, RESISTOR 220K (1608) |
| RB504 | 1-239-444-11 | s NETWORK, RESISTOR 220K (1608) |
| RB505 | 1-239-412-11 | s NETWORK, RESISTOR 100 (1608) |
| RB506 | 1-239-412-11 | s NETWORK, RESISTOR 100 (1608) |
| RB507 | 1-239-412-11 | s NETWORK, RESISTOR 100 (1608) |
| RB508 | 1-239-412-11 | s NETWORK, RESISTOR 100 (1608) |
| RB509 | 1-239-444-11 | s NETWORK, RESISTOR 220K (1608) |
| RB510 | 1-239-412-11 | s NETWORK, RESISTOR 100 (1608) |
| RB511 | 1-239-412-11 | s NETWORK, RESISTOR 100 (1608) |
| RB512 | 1-239-412-11 | s NETWORK, RESISTOR 100 (1608) |
| RB513 | 1-239-412-11 | s NETWORK, RESISTOR 100 (1608) |
| RB514 | 1-239-412-11 | s NETWORK, RESISTOR 100 (1608) |
| RB515 | 1-239-412-11 | s NETWORK, RESISTOR 100 (1608) |
| RB516 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB517 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB518 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |

(DPR-141C BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|---------------------------------|
| RB519 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB520 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB521 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB522 | 1-239-409-11 | s RESISTOR NETWORK 47 (1608) |
| RB611 | 1-236-904-11 | s RESISTOR NETWORK 1K (1608) |
| RB711 | 1-236-904-11 | s RESISTOR NETWORK 1K (1608) |
| RB712 | 1-236-904-11 | s RESISTOR NETWORK 1K (1608) |
| RB713 | 1-239-444-11 | s NETWORK, RESISTOR 220K (1608) |
| RB753 | 1-239-444-11 | s NETWORK, RESISTOR 220K (1608) |
| RB755 | 1-239-412-11 | s NETWORK, RESISTOR 100 (1608) |
| RB756 | 1-239-444-11 | s NETWORK, RESISTOR 220K (1608) |
| RB771 | 1-236-904-11 | s RESISTOR NETWORK 1K (1608) |
| RB772 | 1-236-904-11 | s RESISTOR NETWORK 1K (1608) |
| RB774 | 1-236-904-11 | s RESISTOR NETWORK 1K (1608) |
| RB775 | 1-236-904-11 | s RESISTOR NETWORK 1K (1608) |
| RB802 | 1-236-904-11 | s RESISTOR NETWORK 1K (1608) |
| TP201 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP501 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP502 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP503 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP712 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| X401 | 1-767-695-21 | s OSCILLATOR, CRYSTAL |
| X711 | 1-760-654-21 | s VIBRATOR, CRYSTAL |
| X751 | 1-760-655-21 | s VIBRATOR, CRYSTAL |

DU-36 BOARD

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|--------------------------------|
| 1pc | 1-673-954-11 | o PRINTED WIRING BOARD, DU-36 |
| C1 | 1-128-339-11 | s CAPACITOR, ELECT 2200MF/16V |
| C2 | 1-128-339-11 | s CAPACITOR, ELECT 2200MF/16V |
| C3 | 1-128-339-11 | s CAPACITOR, ELECT 2200MF/16V |
| CN1 | 1-566-757-11 | s PIN, CONNECTOR (PC BOARD) 2P |

DV-21C/21A BOARD

*a: [Lot No. 911-274, 2A1-]
*b: [Lot No. 281-294]

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|-----------------|--|
| 1pc | A-8325-104-A | o MOUNTED CIRCUIT BOARD, DV-21A [for DSR-300A/300AP] |
| | A-8344-127-A | s MOUNTED CIRCUIT BOARD, DV-21C [for DSR-390/390P/370/370P] |
| C106 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C107 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C108 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C109 | 1-110-569-11 | s CAPACITOR, TANTALUM 47MF/6.3V |
| C110 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C111 | 1-135-177-21 | s CAPACITOR, TANTALUM 1MF/25V |
| C112 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C113 | 1-164-230-11 | s CAPACITOR, CERAMIC 220PF/50V |
| C114 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C115 | 1-110-569-11 | s CAPACITOR, TANTALUM 47MF/6.3V |
| C116 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C117 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C118 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C119 | 1-110-569-11 | s CAPACITOR, TANTALUM 47MF/6.3V |
| C120 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C121 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C122 | *b 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| | *a 1-162-919-11 | s CAPACITOR, CERAMIC 22PF/50V CH |
| C123 | *b 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| | *a 1-162-919-11 | s CAPACITOR, CERAMIC 22PF/50V CH |
| C124 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C125 | 1-104-852-11 | s CAPACITOR, TANTALUM 22MF/10V |
| C126 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C127 | 1-164-346-11 | s CAPACITOR, CHIP CERAMIC 1MF/16V |
| C128 | 1-164-230-11 | s CAPACITOR, CERAMIC 220PF/50V |
| C129 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| CN101 | 1-764-095-11 | o PIN, CONNECTOR (PC BOARD) 10P |
| CN102 | 1-580-789-21 | o PIN, CONNECTOR (SMD) 6P |
| CN103 | 1-785-846-91 | o CONNECTOR, BOARD TO BOARD 40P |
| D101 | 8-719-938-72 | s DIODE SB01-05CP (RECTI) |
| D102 | 8-719-941-86 | s DIODE DAN202U |
| IC101 | 8-759-430-56 | s IC CXD2194AR-TEB |
| IC102 | 8-759-432-00 | s IC TSB11LV01PT-TEB |
| IC104 | 8-759-524-27 | s IC TC74VHC244FT(EL) |
| IC105 | 8-759-524-04 | s IC TC74VHC125FT(EL) |
| IC106 | 8-759-196-96 | s IC TC7SH08FU (TE85R) |
| IC107 | 8-759-445-93 | s IC AK6440AM (E2) |
| L106 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L107 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L108 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L109 | 1-414-392-21 | s INDUCTOR (SMD) 1.0UH |
| R101 | 1-216-864-11 | s RESISTOR, CHIP 0 1/16W (1608) |
| R102 | 1-216-864-11 | s RESISTOR, CHIP 0 1/16W (1608) |
| R103 | 1-216-864-11 | s RESISTOR, CHIP 0 1/16W (1608) |
| R104 | 1-216-864-11 | s RESISTOR, CHIP 0 1/16W (1608) |
| R105 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| R106 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| R107 | 1-216-839-11 | s RESISTOR, CHIP 33K 1/16W 1608 |
| R108 | 1-216-839-11 | s RESISTOR, CHIP 33K 1/16W 1608 |
| R109 | 1-218-840-11 | s RESISTOR, CHIP 510 1/16W (1608) |
| R110 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |

(DV-21C/21A BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|------------------------------------|
| R111 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| R112 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| R113 | 1-216-864-11 | s RESISTOR, CHIP 0 1/16W (1608) |
| R114 | 1-216-864-11 | s RESISTOR, CHIP 0 1/16W (1608) |
| R115 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| R116 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| R117 | 1-216-839-11 | s RESISTOR, CHIP 33K 1/16W 1608 |
| R118 | 1-216-839-11 | s RESISTOR, CHIP 33K 1/16W 1608 |
| R119 | 1-216-839-11 | s RESISTOR, CHIP 33K 1/16W 1608 |
| R120 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| R121 | 1-216-809-11 | s RESISTOR, CHIP 100 1/16W 1608 |
| R122 | 1-216-809-11 | s RESISTOR, CHIP 100 1/16W 1608 |
| R123 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| R124 | 1-216-834-11 | s RESISTOR, CHIP 12K 1/16W 1608 |
| R125 | 1-216-834-11 | s RESISTOR, CHIP 12K 1/16W 1608 |
| R126 | 1-216-834-11 | s RESISTOR, CHIP 12K 1/16W 1608 |
| R127 | 1-216-821-11 | s RESISTOR, CHIP 1.0K 1/16W (1608) |
| R128 | 1-216-821-11 | s RESISTOR, CHIP 1.0K 1/16W (1608) |
| R129 | 1-216-821-11 | s RESISTOR, CHIP 1.0K 1/16W (1608) |
| R130 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| R131 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| R132 | 1-216-809-11 | s RESISTOR, CHIP 100 1/16W 1608 |
| R133 | 1-216-809-11 | s RESISTOR, CHIP 100 1/16W 1608 |
| R134 | 1-216-821-11 | s RESISTOR, CHIP 1.0K 1/16W (1608) |
| R135 | 1-216-845-11 | s RESISTOR, CHIP 100K 1/16W (1608) |
| R136 | 1-216-864-11 | s RESISTOR, CHIP 0 1/16W (1608) |
| R137 | 1-216-845-11 | s RESISTOR, CHIP 100K 1/16W (1608) |
| R138 | 1-216-845-11 | s RESISTOR, CHIP 100K 1/16W (1608) |
| R139 | 1-216-833-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R140 | 1-216-833-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R141 | 1-216-833-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R142 | 1-216-845-11 | s RESISTOR, CHIP 100K 1/16W (1608) |
| R143 | 1-216-845-11 | s RESISTOR, CHIP 100K 1/16W (1608) |
| R144 | 1-216-857-11 | s RESISTOR, CHIP 1M 1/16W (1608) |
| R145 | 1-218-873-11 | s RESISTOR, CHIP 12K 1/16W (1608) |
| R146 | 1-218-873-11 | s RESISTOR, CHIP 12K 1/16W (1608) |
| R147 | 1-211-987-11 | s RESISTOR, CHIP 56 1/16W (1608) |
| R148 | 1-211-987-11 | s RESISTOR, CHIP 56 1/16W (1608) |
| R149 | 1-216-833-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R150 | 1-216-833-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R151 | 1-211-987-11 | s RESISTOR, CHIP 56 1/16W (1608) |
| R152 | 1-211-987-11 | s RESISTOR, CHIP 56 1/16W (1608) |
| RB101 | 1-239-310-11 | s RESISTOR, ARRAY, CHIP 220K |
| TP1 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| X101 | 1-760-735-11 | s VIBRATOR, CRYSTAL |
| X102 | 1-579-922-11 | s VIBRATOR, CERAMIC (CHIP TYPE) |

 ES-31/31P BOARD

*a: [Lot No. 911-135]
 *b: [Lot No. 141-]

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|---|
| 1pc | A-8324-990-A | o MOUNTED CIRCUIT BOARD, ES-31 [for UC,J] |
| | A-8324-992-A | o MOUNTED CIRCUIT BOARD, ES-31(P) [for CE,SY,CN] |
| 2pcs | 3-614-239-01 | o PUSH RIVETS(D=2.1) |
| 1pc | 7-628-253-20 | s SCREW +PS 2X6 |
| 1pc | 7-622-205-05 | s NUT M2 TYPE2 |
| C101 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C102 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C103 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C104 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C105 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C106 | 1-104-851-11 | s CAPACITOR,TANTALUM 10MF/10V |
| C107 | 1-104-823-11 | s CAPACITOR,TANTALUM 47MF/16V |
| C108 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C109 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C110 | 1-104-851-11 | s CAPACITOR,TANTALUM 10MF/10V |
| C111 | 1-104-851-11 | s CAPACITOR,TANTALUM 10MF/10V |
| C112 | 1-113-682-11 | s CAPACITOR,TANTALUM 33MF/10V |
| C113 | 1-113-682-11 | s CAPACITOR,TANTALUM 33MF/10V |
| C114 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C115 | 1-113-682-11 | s CAPACITOR,TANTALUM 33MF/10V |
| C116 | 1-113-682-11 | s CAPACITOR,TANTALUM 33MF/10V |
| C117 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C118 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C119 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C120 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C121 | 1-104-851-11 | s CAPACITOR,TANTALUM 10MF/10V |
| C122 | 1-104-851-11 | s CAPACITOR,TANTALUM 10MF/10V |
| C123 | 1-104-851-11 | s CAPACITOR,TANTALUM 10MF/10V |
| C124 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C125 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C126 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C127 | 1-137-910-11 | s CAPACITOR,TANTALUM ELECT 10MF |
| C128 | 1-137-910-11 | s CAPACITOR,TANTALUM ELECT 10MF |
| C129 | 1-104-608-11 | s CAPACITOR,ELECT 33MF/6.3V |
| C130 | 1-162-927-11 | s CAPACITOR,CERAMIC 100PF/50V CH |
| C131 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C132 | 1-113-682-11 | s CAPACITOR,TANTALUM 33MF/10V |
| C133 | 1-113-682-11 | s CAPACITOR,TANTALUM 33MF/10V |
| C134 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C135 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C136 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C137 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C138 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C139 | 1-162-921-11 | s CAPACITOR,CERAMIC 33PF/50V CH |
| C140 | 1-162-921-11 | s CAPACITOR,CERAMIC 33PF/50V CH |
| C141 | 1-162-921-11 | s CAPACITOR,CERAMIC 33PF/50V CH |
| C143 | 1-135-145-11 | s CAPACITOR,TANTALUM 0.47MF/35V |
| C144 | 1-104-851-11 | s CAPACITOR,TANTALUM 10MF/10V |
| C145 | 1-126-393-11 | s CAPACITOR,ELECT 33MF/10V(CHIP) |
| C146 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C147 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C148 | 1-126-391-11 | s CAPACITOR,ELECT 47MF/6.3V(105) |
| C149 | 1-104-913-11 | s CAPACITOR,TANTALUM 10MF/16V [for CE,SY,CN] |

(ES-31/31P BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|---|
| C150 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C151 | 1-162-970-11 | s CAPACITOR,CERAMIC 0.01MF/25V B |
| C152 | 1-162-970-11 | s CAPACITOR,CERAMIC 0.01MF/25V B |
| C153 | 1-126-393-11 | s CAPACITOR,ELECT 33MF/10V(CHIP) |
| C155 | 1-104-913-11 | s CAPACITOR,TANTALUM 10MF/16V |
| C156 | 1-162-909-11 | s CAPACITOR,CERAMIC 4PF/50V CH |
| C157 | 1-104-851-11 | s CAPACITOR,TANTALUM 10MF/10V |
| C158 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C159 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C160 | 1-137-910-11 | s CAPACITOR,TANTALUM ELECT 10MF |
| C161 | 1-137-910-11 | s CAPACITOR,TANTALUM ELECT 10MF |
| C162 | 1-104-608-11 | s CAPACITOR,ELECT 33MF/6.3V |
| C163 | 1-162-927-11 | s CAPACITOR,CERAMIC 100PF/50V CH |
| C164 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C165 | 1-113-682-11 | s CAPACITOR,TANTALUM 33MF/10V |
| C166 | 1-113-682-11 | s CAPACITOR,TANTALUM 33MF/10V |
| C167 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C168 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C169 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C170 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C171 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C172 | 1-162-921-11 | s CAPACITOR,CERAMIC 33PF/50V CH |
| C173 | 1-162-921-11 | s CAPACITOR,CERAMIC 33PF/50V CH |
| C174 | 1-162-921-11 | s CAPACITOR,CERAMIC 33PF/50V CH |
| C176 | 1-135-145-11 | s CAPACITOR,TANTALUM 0.47MF/35V |
| C177 | 1-104-851-11 | s CAPACITOR,TANTALUM 10MF/10V |
| C178 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C179 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C180 | 1-162-927-11 | s CAPACITOR,CERAMIC 100PF/50V CH |
| C181 | 1-162-915-11 | s CAPACITOR,CERAMIC 10PF/50V CH |
| C182 | 1-113-682-11 | s CAPACITOR,TANTALUM 33MF/10V |
| C183 | 1-113-682-11 | s CAPACITOR,TANTALUM 33MF/10V |
| C184 | 1-126-412-11 | s CAPACITOR,ELECT 220MF/4V(CHIP) |
| C185 | 1-162-927-11 | s CAPACITOR,CERAMIC 100PF/50V CH |
| C186 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C187 | 1-162-923-11 | s CAPACITOR,CERAMIC 47PF/50V CH |
| C188 | 1-162-923-11 | s CAPACITOR,CERAMIC 47PF/50V CH |
| C189 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C190 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C191 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C192 | 1-162-922-11 | s CAPACITOR,CERAMIC 39PF/50V CH [for UC,J] |
| | 1-162-926-11 | s CAPACITOR,CERAMIC 82PF/50V CH [for CE,SY,CN] |
| C193 | 1-162-911-11 | s CAPACITOR,CERAMIC 6PF/50V 1608 [for UC,J] |
| | 1-162-917-11 | s CAPACITOR,CERAMIC 15PF/50V CH [for CE,SY,CN] |
| C195 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C196 | 1-104-852-11 | s CAPACITOR,TANTALUM 22MF/10V |
| C197 | 1-137-910-11 | s CAPACITOR,TANTALUM ELECT 10MF |
| C198 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C199 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C200 | 1-162-913-11 | s CAPACITOR,CHIP CERAMIC 8PF/50V |
| C201 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C202 | 1-162-907-11 | s CAPACITOR,CERAMIC 2PF/50V(CK) |
| C203 | 1-162-910-11 | s CAPACITOR,CERAMIC 5PF/50V 1608 |
| C204 | 1-104-913-11 | s CAPACITOR,TANTALUM 10MF/16V |
| C205 | 1-126-391-11 | s CAPACITOR,ELECT 47MF/6.3V(105) |
| C206 | 1-126-393-11 | s CAPACITOR,ELECT 33MF/10V(CHIP) |

(ES-31/31P BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|--|
| C207 | 1-162-906-11 | s CAPACITOR, CERAMIC 1.5PFCK |
| C208 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C209 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C210 | 1-162-909-11 | s CAPACITOR, CERAMIC 4PF/50V CH |
| C211 | 1-162-910-11 | s CAPACITOR, CERAMIC 5PF/50V 1608 [for UC, J] |
| C218 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C219 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C220 | 1-113-500-11 | s CAPACITOR, TANTALUM 100MF/10V |
| C221 | 1-113-500-11 | s CAPACITOR, TANTALUM 100MF/10V |
| C401 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C402 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C403 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C404 | 1-115-154-11 | s CAPACITOR, ELECT 10MF/16V (BP) |
| C405 | 1-115-154-11 | s CAPACITOR, ELECT 10MF/16V (BP) |
| C406 | 1-162-927-11 | s CAPACITOR, CERAMIC 100PF/50V CH |
| C407 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C408 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C410 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C411 | 1-162-917-11 | s CAPACITOR, CERAMIC 15PF/50V CH |
| C412 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C413 | 1-117-139-11 | s CAPACITOR, ELECT 2.2MF/35V (BP) |
| C414 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C415 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C416 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C417 | 1-117-139-11 | s CAPACITOR, ELECT 2.2MF/35V (BP) |
| C418 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C419 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C420 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C421 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C422 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C423 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C424 | 1-137-910-11 | s CAPACITOR, TANTALUM ELECT 10MF |
| C425 | 1-137-910-11 | s CAPACITOR, TANTALUM ELECT 10MF |
| C426 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C427 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C428 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C429 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C430 | 1-126-395-11 | s CAPACITOR, ELECT 22MF/16V (CHIP) |
| C431 | 1-162-911-11 | s CAPACITOR, CERAMIC 6PF/50V 1608 |
| C601 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C602 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C603 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C604 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C605 | 1-164-346-11 | s CAPACITOR, CHIP CERAMIC 1MF/16V |
| C606 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C607 | 1-164-346-11 | s CAPACITOR, CHIP CERAMIC 1MF/16V |
| C609 | 1-164-346-11 | s CAPACITOR, CHIP CERAMIC 1MF/16V |
| C610 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C611 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C612 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C613 | 1-164-346-11 | s CAPACITOR, CHIP CERAMIC 1MF/16V |
| C614 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C615 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C616 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C617 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C618 | 1-164-346-11 | s CAPACITOR, CHIP CERAMIC 1MF/16V |
| C619 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C620 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |

(ES-31/31P BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|---|
| C621 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C622 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C623 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C624 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C625 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C626 | 1-137-910-11 | s CAPACITOR, TANTALUM ELECT 10MF |
| C627 | 1-137-910-11 | s CAPACITOR, TANTALUM ELECT 10MF |
| C628 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C650 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C651 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C652 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C653 | 1-162-918-11 | s CAPACITOR, CERAMIC 18PF/50V CH [for UC, J] |
| C654 | 1-162-921-11 | s CAPACITOR, CERAMIC 33PF/50V CH [for CE, SY, CN] |
| C654 | 1-162-928-11 | s CAPACITOR, CERAMIC 120PF/50V CH [for UC, J] |
| C654 | 1-164-816-11 | s CAPACITOR, CERAMIC 220PF/50V CH [for CE, SY, CN] |
| C655 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C656 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C657 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C658 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C659 | 1-110-569-11 | s CAPACITOR, TANTALUM 47MF/6.3V |
| C660 | 1-110-569-11 | s CAPACITOR, TANTALUM 47MF/6.3V |
| C661 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C662 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C663 | 1-110-569-11 | s CAPACITOR, TANTALUM 47MF/6.3V |
| C665 | 1-162-918-11 | s CAPACITOR, CERAMIC 18PF/50V CH |
| C680 | 1-135-259-11 | s CAPACITOR, TANTALUM 10MF/6.3V |
| C681 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C682 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C683 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C684 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C685 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C686 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C687 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C688 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C689 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C690 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C691 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C692 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C693 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C695 | 1-162-918-11 | s CAPACITOR, CERAMIC 18PF/50V CH |
| C696 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C697 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C698 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C701 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C702 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C703 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C704 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C705 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C706 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C707 | 1-162-927-11 | s CAPACITOR, CERAMIC 100PF/50V CH |
| C708 | 1-162-927-11 | s CAPACITOR, CERAMIC 100PF/50V CH |
| C709 | 1-162-917-11 | s CAPACITOR, CERAMIC 15PF/50V CH |
| C710 | 1-162-917-11 | s CAPACITOR, CERAMIC 15PF/50V CH |
| C801 | 1-137-910-11 | s CAPACITOR, TANTALUM ELECT 10MF |
| C802 | 1-113-985-11 | s CAPACITOR, TANTALUM 10MF/20V |
| C803 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |

(ES-31/31P BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|--|
| C804 | 1-115-154-11 | s CAPACITOR, ELECT 10MF/16V (BP) |
| C805 | 1-126-393-11 | s CAPACITOR, ELECT 33MF/10V (CHIP) |
| C806 | 1-162-917-11 | s CAPACITOR, CERAMIC 15PF/50V CH |
| C807 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C808 | 1-104-914-11 | s CAPACITOR, TANTALUM 22MF/16V |
| C809 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C810 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C811 | 1-162-923-11 | s CAPACITOR, CERAMIC 47PF/50V CH |
| C812 | 1-162-925-11 | s CAPACITOR, CERAMIC 68PF/50V CH [for UC, J] |
| | 1-162-921-11 | s CAPACITOR, CERAMIC 33PF/50V CH [for CE, SY, CN] |
| C813 | 1-135-145-11 | s CAPACITOR, TANTALUM 0.47MF/35V |
| C814 | 1-162-922-11 | s CAPACITOR, CERAMIC 39PF/50V CH |
| C815 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C816 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C817 | 1-135-210-11 | s CAPACITOR, TANTALUM 4.7MF/10V |
| C818 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C819 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C820 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C821 | 1-126-395-11 | s CAPACITOR, ELECT 22MF/16V (CHIP) |
| C822 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C823 | 1-135-210-11 | s CAPACITOR, TANTALUM 4.7MF/10V |
| C824 | 1-126-391-11 | s CAPACITOR, ELECT 47MF/6.3V (105) |
| C825 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C826 | 1-137-910-11 | s CAPACITOR, TANTALUM ELECT 10MF |
| C827 | 1-107-689-21 | s CAPACITOR, TANTALUM 1MF/35V |
| C828 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C829 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C832 | 1-137-910-11 | s CAPACITOR, TANTALUM ELECT 10MF |
| C833 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C834 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C835 | 1-137-910-11 | s CAPACITOR, TANTALUM ELECT 10MF |
| C836 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C837 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C840 | 1-162-923-11 | s CAPACITOR, CERAMIC 47PF/50V CH |
| C841 | 1-162-919-11 | s CAPACITOR, CERAMIC 22PF/50V CH [for UC, J] |
| | 1-162-926-11 | s CAPACITOR, CERAMIC 82PF/50V CH [for CE, SY, CN] |
| C842 | 1-162-923-11 | s CAPACITOR, CERAMIC 47PF/50V CH |
| C843 | 1-162-923-11 | s CAPACITOR, CERAMIC 47PF/50V CH |
| C844 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C845 | 1-162-917-11 | s CAPACITOR, CERAMIC 15PF/50V CH |
| C846 | 1-137-910-11 | s CAPACITOR, TANTALUM ELECT 10MF |
| C847 | 1-113-985-11 | s CAPACITOR, TANTALUM 10MF/20V |
| C848 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C849 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C850 | 1-104-913-11 | s CAPACITOR, TANTALUM 10MF/16V |
| C851 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C852 | 1-162-919-11 | s CAPACITOR, CERAMIC 22PF/50V CH |
| C853 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C854 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C855 | 1-104-913-11 | s CAPACITOR, TANTALUM 10MF/16V |
| C856 | 1-162-919-11 | s CAPACITOR, CERAMIC 22PF/50V CH |
| C857 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C858 | 1-164-739-11 | s CAPACITOR, CERAMIC 560PF (1608) |
| C859 | 1-104-913-11 | s CAPACITOR, TANTALUM 10MF/16V |
| C860 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C861 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |

(ES-31/31P BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|--|
| C862 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C863 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C864 | 1-162-919-11 | s CAPACITOR, CERAMIC 22PF/50V CH [for UC, J] |
| | 1-162-918-11 | s CAPACITOR, CERAMIC 18PF/50V CH [for CE, SY, CN] |
| C865 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C871 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| CP801 | 1-760-267-11 | s OSCILLATOR, CRYSTAL (VCO TYPE) [for UC, J] |
| | 1-760-269-11 | s OSCILLATOR, CRYSTAL (VCO TYPE) [for CE, SY, CN] |
| D101 | 8-719-033-73 | s DIODE RD4.3UM-T1B1B2 |
| D102 | 8-719-033-73 | s DIODE RD4.3UM-T1B1B2 |
| D103 | 8-719-033-73 | s DIODE RD4.3UM-T1B1B2 |
| D104 | 8-719-421-67 | s DIODE MA132WK |
| D105 | 8-719-059-52 | s DIODE MA3J14300LSO |
| D401 | 8-719-059-52 | s DIODE MA3J14300LSO |
| D402 | 8-719-057-01 | s DIODE RD2.0UM-T1B |
| D405 | 8-719-800-76 | s DIODE 1SS226 |
| D406 | 8-719-157-36 | s DIODE RD6.8M-B |
| D407 | 8-719-057-01 | s DIODE RD2.0UM-T1B |
| D702 | 8-719-941-04 | s DIODE SB007-03CP |
| D703 | 8-719-059-52 | s DIODE MA3J14300LSO |
| D801 | 8-719-059-51 | s DIODE MA3J142E0LSO |
| D802 | 8-719-059-51 | s DIODE MA3J142E0LSO |
| D803 | 8-719-059-51 | s DIODE MA3J142E0LSO |
| D804 | 8-719-059-52 | s DIODE MA3J14300LSO |
| DL101 | 1-411-271-21 | s DELAY LINE |
| DL102 | 1-411-272-21 | s DELAY LINE |
| DL401 | 1-415-761-21 | s DELAY LINE, LC |
| DL402 | 1-415-760-21 | s DELAY LINE, LC |
| E601 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| E801 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| FL101 | 1-402-647-11 | s DELAY LINE (90C) (NTSC) [for UC, J] |
| | 1-402-646-21 | s DELAY LINE (90C) (PAL) [for CE, SY, CN] |
| FL102 | 1-233-737-11 | s FILTER, BAND PASS [for UC, J] |
| | 1-233-738-11 | s FILTER, BAND PASS [for CE, SY, CN] |
| FL401 | 1-233-342-11 | s FILTER, TRAP |
| FL402 | 1-239-896-12 | s FILTER, EMI (SMD) |
| FL403 | 1-239-896-12 | s FILTER, EMI (SMD) |
| FL404 | 1-239-896-12 | s FILTER, EMI (SMD) |
| FL405 | 1-239-896-12 | s FILTER, EMI (SMD) |
| FL406 | 1-239-896-12 | s FILTER, EMI (SMD) |
| FL407 | 1-239-896-12 | s FILTER, EMI (SMD) |
| FL408 | 1-239-896-12 | s FILTER, EMI (SMD) |
| FL601 | 1-233-346-21 | s FILTER, BAND PASS (3.58MHZ) [for UC, J] |
| | 1-233-390-21 | s FILTER, BAND PASS [for CE, SY, CN] |
| IC101 | 8-759-185-42 | s IC LM4040AIM3-2.5 |
| IC102 | 8-759-669-72 | s IC TL064CPWR |
| IC103 | 8-759-678-06 | s IC CAT24WC02JI-TE13 |
| IC104 | 8-759-064-36 | s IC MB88346BPFV |
| IC105 | 8-759-669-45 | s IC TL062CPWR-12 |
| IC106 | 8-759-064-36 | s IC MB88346BPFV |
| IC107 | 8-759-523-02 | s IC TC74HC4053AFT (EL) |
| IC108 | 8-759-523-02 | s IC TC74HC4053AFT (EL) |
| IC109 | 8-759-530-27 | s IC TC4052BFT (EL, N) |

(ES-31/31P BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|----------------------------------|
| IC110 | 8-759-082-61 s | IC TC4W53FU |
| IC111 | 8-752-090-56 s | IC CXA3178M-T4 |
| IC112 | 8-759-082-61 s | IC TC4W53FU |
| IC113 | 8-759-530-05 s | IC TC4053BFT (EL.N) |
| IC114 | 8-759-082-61 s | IC TC4W53FU |
| IC115 | 8-759-058-62 s | IC TC7S08FU-TE85R |
| IC116 | 8-759-058-58 s | IC TC7S04FU-TE85R |
| IC117 | 8-759-523-02 s | IC TC74HC4053AFT(EL) |
| IC401 | 8-759-082-60 s | IC TC7S66FU |
| IC402 | 8-759-082-60 s | IC TC7S66FU |
| IC403 | 8-759-523-02 s | IC TC74HC4053AFT(EL) |
| IC404 | 8-759-058-58 s | IC TC7S04FU-TE85R |
| IC405 | 8-759-523-02 s | IC TC74HC4053AFT(EL) |
| IC406 | 8-759-488-48 s | IC NJM2249V(Te2) |
| IC407 | 8-759-488-48 s | IC NJM2249V(Te2) |
| IC408 | 8-759-523-02 s | IC TC74HC4053AFT(EL) |
| IC409 | 8-759-258-43 s | IC LT1253CS8 (E2) |
| IC410 | 8-759-260-44 s | IC LT1254CS (E2) |
| IC411 | 8-759-082-61 s | IC TC4W53FU |
| IC412 | 8-759-258-43 s | IC LT1253CS8 (E2) |
| IC413 | 8-759-082-61 s | IC TC4W53FU |
| IC414 | 8-759-058-58 s | IC TC7S04FU-TE85R |
| IC601 | 8-752-056-59 s | IC CXA1592R |
| IC602 | 8-759-082-61 s | IC TC4W53FU [for UC,J] |
| IC603 | 8-759-082-61 s | IC TC4W53FU [for UC,J] |
| IC604 | 8-759-660-23 s | IC SN74HCT08APWR |
| IC605 | 8-759-064-36 s | IC MB88346BPFV |
| IC606 | 8-759-498-26 s | IC NJM2534V(Te2) |
| IC607 | 8-759-392-64 s | IC AD828AR |
| IC608 | 8-752-053-21 s | IC CXA1211M |
| IC609 | 8-759-498-26 s | IC NJM2534V(Te2) |
| IC610 | 8-759-392-64 s | IC AD828AR |
| IC701 | 8-752-054-80 s | IC CXA1521M |
| IC702 | 8-759-082-61 s | IC TC4W53FU |
| IC801 | 8-759-058-58 s | IC TC7S04FU-TE85R |
| IC802 | 8-759-101-12 s | IC UPC311G2 |
| IC803 | 8-759-064-36 s | IC MB88346BPFV |
| IC804 | 8-752-335-47 s | IC CXD1216M |
| IC805 | 8-759-082-61 s | IC TC4W53FU |
| IC806 | 8-759-510-71 s | IC BA10358F-E2 |
| IC807 | 8-759-082-61 s | IC TC4W53FU |
| IC808 | 8-752-341-58 s | IC CXD1217Q |
| IC809 | 8-759-058-64 s | IC TC7S32FU-TE85R |
| IC810 | 8-759-058-58 s | IC TC7S04FU-TE85R |
| IC811 | 8-759-058-58 s | IC TC7S04FU-TE85R [for CE,SY,CN] |
| IC812 | 8-759-058-58 s | IC TC7S04FU-TE85R |
| IC813 | 8-759-195-81 s | IC TC7S86FU |
| IC814 | 8-759-510-71 s | IC BA10358F-E2 |
| IC815 | 8-759-902-88 s | IC SN74LS123NS |
| IC816 | 8-759-082-61 s | IC TC4W53FU |
| IC817 | 8-759-523-04 s | IC TC74HC4538AFT |
| IC818 | 8-759-112-66 s | IC UPC812G2 |
| IC819 | 8-759-673-37 s | IC MM74HC00MTCX |
| IC825 | 8-759-058-62 s | IC TC7S08FU-TE85R |
| IC826 | 8-759-447-77 s | IC TC7WH74FU (TR12R) |
| IC827 | 8-759-209-57 s | IC TC4S69F |
| L101 | 1-412-280-31 s | INDUCTOR,CHIP 330UH (3225) |
| L102 | 1-412-959-11 s | INDUCTOR 47UH (2520) |

(ES-31/31P BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|---|
| L103 | 1-412-959-11 s | INDUCTOR 47UH (2520) |
| L104 | 1-412-959-11 s | INDUCTOR 47UH (2520) |
| L105 | 1-412-280-31 s | INDUCTOR,CHIP 330UH (3225) |
| L106 | 1-410-392-11 s | INDUCTOR,CHIP 82UH (3225) |
| | 1-410-656-11 s | INDUCTOR,CHIP 150UH (3225) [for UC,J] |
| | | [for CE,SY,CN] |
| L107 | 1-412-955-11 s | INDUCTOR 22UH (2520) |
| L108 | 1-412-955-11 s | INDUCTOR 22UH (2520) |
| L109 | 1-412-955-11 s | INDUCTOR 22UH (2520) |
| L601 | 1-414-402-11 s | INDUCTOR (SMD) 47UH |
| L602 | 1-414-398-11 s | INDUCTOR (SMD) 10UH |
| L603 | 1-414-402-11 s | INDUCTOR (SMD) 47UH |
| L650 | 1-414-402-11 s | INDUCTOR (SMD) 47UH |
| L651 | 1-412-960-21 s | INDUCTOR (SMALL TYPE)56UH [for UC,J] |
| | 1-412-963-11 s | INDUCTOR 100UH (2520) [for CE,SY,CN] |
| L652 | 1-414-404-11 s | INDUCTOR (SMD) 100UH |
| L653 | 1-414-404-11 s | INDUCTOR (SMD) 100UH |
| L680 | 1-414-404-11 s | INDUCTOR (SMD) 100UH |
| L681 | 1-414-404-11 s | INDUCTOR (SMD) 100UH |
| L701 | 1-414-402-11 s | INDUCTOR (SMD) 47UH |
| L702 | 1-414-402-11 s | INDUCTOR (SMD) 47UH |
| L801 | 1-412-955-11 s | INDUCTOR 22UH (2520) |
| L802 | 1-412-955-11 s | INDUCTOR 22UH (2520) |
| L803 | 1-410-656-11 s | INDUCTOR,CHIP 150UH (3225) [for UC,J] |
| | 1-410-393-11 s | INDUCTOR,CHIP 100UH (3225) [for CE,SY,CN] |
| L804 | 1-412-957-11 s | INDUCTOR 33UH (2520) |
| L805 | 1-412-959-11 s | INDUCTOR 47UH (2520) |
| L806 | 1-412-959-11 s | INDUCTOR 47UH (2520) |
| L807 | 1-412-959-11 s | INDUCTOR 47UH (2520) |
| L808 | 1-412-959-11 s | INDUCTOR 47UH (2520) |
| L809 | 1-412-955-11 s | INDUCTOR 22UH (2520) |
| L810 | 1-412-955-11 s | INDUCTOR 22UH (2520) |
| L811 | 1-412-959-11 s | INDUCTOR 47UH (2520) |
| Q101 | 8-729-101-07 s | TRANSISTOR 2SB798 |
| Q102 | 8-729-101-07 s | TRANSISTOR 2SB798 |
| Q103 | 8-729-807-51 s | TRANSISTOR 2SD1623-S |
| Q104 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q105 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q106 | 8-729-402-84 s | TRANSISTOR XN4601 |
| Q107 | 8-729-402-78 s | TRANSISTOR XN6401 |
| Q109 | 8-729-026-52 s | TRANSISTOR 2SA1576A-T106-R |
| Q110 | 8-729-026-52 s | TRANSISTOR 2SA1576A-T106-R |
| Q111 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q112 | 8-729-402-78 s | TRANSISTOR XN6401 |
| Q113 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q114 | 8-729-402-84 s | TRANSISTOR XN4601 |
| Q115 | 8-729-402-84 s | TRANSISTOR XN4601 |
| Q116 | 8-729-402-19 s | TRANSISTOR XN6501 |
| Q117 | 8-729-402-19 s | TRANSISTOR XN6501 |
| Q118 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q119 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q120 | 8-729-402-84 s | TRANSISTOR XN4601 |
| Q121 | 8-729-402-78 s | TRANSISTOR XN6401 |
| Q122 | 8-729-026-52 s | TRANSISTOR 2SA1576A-T106-R |
| Q123 | 8-729-026-52 s | TRANSISTOR 2SA1576A-T106-R |
| Q124 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |

(ES-31/31P BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|----------------------------|
| Q125 | 8-729-402-78 s | TRANSISTOR XN6401 |
| Q126 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q127 | 8-729-402-19 s | TRANSISTOR XN6501 |
| Q128 | 8-729-402-84 s | TRANSISTOR XN4601 |
| Q129 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q130 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q131 | 8-729-402-78 s | TRANSISTOR XN6401 |
| Q132 | 8-729-402-78 s | TRANSISTOR XN6401 |
| Q133 | 8-729-403-32 s | TRANSISTOR XN6534 |
| Q134 | 8-729-402-84 s | TRANSISTOR XN4601 |
| Q135 | 8-729-402-84 s | TRANSISTOR XN4601 |
| Q136 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q137 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q138 | 8-729-402-84 s | TRANSISTOR XN4601 |
| Q140 | 8-729-026-52 s | TRANSISTOR 2SA1576A-T106-R |
| Q141 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q142 | 8-729-026-52 s | TRANSISTOR 2SA1576A-T106-R |
| Q143 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q144 | 8-729-403-29 s | TRANSISTOR XN6435 |
| Q145 | 8-729-026-52 s | TRANSISTOR 2SA1576A-T106-R |
| Q146 | 8-729-402-84 s | TRANSISTOR XN4601 |
| Q147 | 8-729-026-52 s | TRANSISTOR 2SA1576A-T106-R |
| Q148 | 8-729-402-19 s | TRANSISTOR XN6501 |
| Q149 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q150 | 8-729-403-32 s | TRANSISTOR XN6534 |
| Q151 | 8-729-122-63 s | TRANSISTOR 2SA1226-E4 |
| Q152 | 8-729-402-19 s | TRANSISTOR XN6501 |
| Q153 | 8-729-402-78 s | TRANSISTOR XN6401 |
| Q155 | 8-729-026-52 s | TRANSISTOR 2SA1576A-T106-R |
| Q156 | 8-729-026-52 s | TRANSISTOR 2SA1576A-T106-R |
| Q401 | 8-729-117-32 s | TRANSISTOR 2SC4177 |
| Q402 | 8-729-403-29 s | TRANSISTOR XN6435 |
| Q403 | 8-729-117-32 s | TRANSISTOR 2SC4177 |
| Q404 | 8-729-402-19 s | TRANSISTOR XN6501 |
| Q405 | 8-729-117-32 s | TRANSISTOR 2SC4177 |
| Q406 | 8-729-403-32 s | TRANSISTOR XN6534 |
| Q407 | 8-729-403-29 s | TRANSISTOR XN6435 |
| Q408 | 8-729-402-84 s | TRANSISTOR XN4601 |
| Q410 | 8-729-402-78 s | TRANSISTOR XN6401 |
| Q411 | 8-729-402-84 s | TRANSISTOR XN4601 |
| Q412 | 8-729-403-29 s | TRANSISTOR XN6435 |
| Q413 | 8-729-403-32 s | TRANSISTOR XN6534 |
| Q414 | 8-729-117-32 s | TRANSISTOR 2SC4177 |
| Q415 | 8-729-403-29 s | TRANSISTOR XN6435 |
| Q416 | 8-729-402-84 s | TRANSISTOR XN4601 |
| Q417 | 8-729-402-84 s | TRANSISTOR XN4601 |
| Q418 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q419 | 8-729-101-07 s | TRANSISTOR 2SB798 |
| Q420 | 8-729-807-51 s | TRANSISTOR 2SD1623-S |
| Q421 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q422 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q423 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q424 | 8-729-402-19 s | TRANSISTOR XN6501 |
| Q426 | 8-729-026-52 s | TRANSISTOR 2SA1576A-T106-R |
| Q427 | 8-729-402-19 s | TRANSISTOR XN6501 |
| Q428 | 8-729-026-52 s | TRANSISTOR 2SA1576A-T106-R |
| Q429 | 8-729-026-52 s | TRANSISTOR 2SA1576A-T106-R |
| Q601 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q602 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |

(ES-31/31P BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|--------------------------------|
| Q603 | 8-729-026-52 s | TRANSISTOR 2SA1576A-T106-R |
| Q604 | 8-729-026-52 s | TRANSISTOR 2SA1576A-T106-R |
| Q650 | 8-729-402-78 s | TRANSISTOR XN6401 |
| Q651 | 8-729-402-19 s | TRANSISTOR XN6501 |
| Q652 | 8-729-402-84 s | TRANSISTOR XN4601 |
| Q653 | 8-729-026-52 s | TRANSISTOR 2SA1576A-T106-R |
| Q680 | 6-550-007-01 s | TRANSISTOR UMC3NTR |
| Q701 | 8-729-402-78 s | TRANSISTOR XN6401 |
| Q702 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q703 | 8-729-402-84 s | TRANSISTOR XN4601 |
| Q801 | 8-729-026-52 s | TRANSISTOR 2SA1576A-T106-R |
| Q802 | 8-729-026-52 s | TRANSISTOR 2SA1576A-T106-R |
| Q803 | 8-729-402-19 s | TRANSISTOR XN6501 |
| Q804 | 8-729-403-29 s | TRANSISTOR XN6435 |
| Q805 | 8-729-026-52 s | TRANSISTOR 2SA1576A-T106-R |
| Q806 | 8-729-402-19 s | TRANSISTOR XN6501 |
| Q807 | 8-729-403-29 s | TRANSISTOR XN6435 |
| Q808 | 8-729-402-84 s | TRANSISTOR XN4601 |
| Q809 | 8-729-141-53 s | TRANSISTOR 2SK94-X2X3X4 |
| Q810 | 8-729-402-84 s | TRANSISTOR XN4601 [for UC,J] |
| Q811 | 8-729-402-84 s | TRANSISTOR XN4601 |
| R101 | 1-218-881-11 s | RESISTOR,CHIP 27K 1/16W(1608) |
| R102 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R103 | 1-218-889-11 s | RESISTOR,CHIP 56K 1/16W(1608) |
| R104 | 1-218-879-11 s | RESISTOR,CHIP 22K 1/16W (1608) |
| R105 | 1-218-883-11 s | RESISTOR,CHIP 33K 1/16W (1608) |
| R106 | 1-216-827-11 s | RESISTOR,CHIP 3.3K 1/16W 1608 |
| R107 | 1-218-881-11 s | RESISTOR,CHIP 27K 1/16W(1608) |
| R108 | 1-218-863-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R109 | 1-218-883-11 s | RESISTOR,CHIP 33K 1/16W (1608) |
| R110 | 1-218-873-11 s | RESISTOR,CHIP 12K 1/16W (1608) |
| R111 | 1-218-884-11 s | RESISTOR,CHIP 36K 1/16W (1608) |
| R112 | 1-216-839-11 s | RESISTOR,CHIP 33K 1/16W 1608 |
| R113 | 1-218-871-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R114 | 1-218-865-11 s | RESISTOR,CHIP 5.6K 1/16W(1608) |
| R115 | 1-218-855-11 s | RESISTOR,CHIP 2.2K 1/16W(1608) |
| R116 | 1-218-859-11 s | RESISTOR,CHIP 3.3K 1/16W(1608) |
| R117 | 1-218-886-11 s | RESISTOR,CHIP 43K 1/16W (1608) |
| R118 | 1-218-883-11 s | RESISTOR,CHIP 33K 1/16W (1608) |
| R119 | 1-218-855-11 s | RESISTOR,CHIP 2.2K 1/16W(1608) |
| R120 | 1-218-887-11 s | RESISTOR,CHIP 47K 1/16W (1608) |
| R121 | 1-218-893-11 s | RESISTOR,CHIP 82K 1/16W(1608) |
| R122 | 1-218-887-11 s | RESISTOR,CHIP 47K 1/16W (1608) |
| R123 | 1-218-893-11 s | RESISTOR,CHIP 82K 1/16W(1608) |
| R124 | 1-218-887-11 s | RESISTOR,CHIP 47K 1/16W (1608) |
| R125 | 1-218-893-11 s | RESISTOR,CHIP 82K 1/16W(1608) |
| R126 | 1-216-797-11 s | RESISTOR,CHIP 10 1/16W 1608 |
| R127 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R128 | 1-216-839-11 s | RESISTOR,CHIP 33K 1/16W 1608 |
| R129 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R130 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R131 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R132 | 1-216-823-11 s | RESISTOR,CHIP 1.5K 1/16W |
| R133 | 1-211-990-11 s | RESISTOR,CHIP 75 1/16W (1608) |
| R134 | 1-218-846-11 s | RESISTOR,CHIP 910 1/16W (1608) |
| R135 | 1-211-973-11 s | RESISTOR,CHIP 15 1/16W (1608) |
| R136 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R137 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |

(ES-31/31P BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|---|
| R138 | 1-216-823-11 s | RESISTOR,CHIP 1.5K 1/16W |
| R139 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R140 | 1-211-987-11 s | RESISTOR,CHIP 56 1/16W (1608) |
| R141 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R142 | 1-218-828-11 s | RESISTOR,CHIP 160 1/16W (1608) |
| R143 | 1-211-973-11 s | RESISTOR,CHIP 15 1/16W (1608) |
| R144 | 1-218-840-11 s | RESISTOR,CHIP 510 1/16W (1608) |
| R145 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| R146 | 1-211-973-11 s | RESISTOR,CHIP 15 1/16W (1608) |
| R147 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R148 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R149 | 1-216-827-11 s | RESISTOR,CHIP 3.3K 1/16W 1608 |
| R150 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R151 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R152 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R153 | 1-218-871-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R154 | 1-218-855-11 s | RESISTOR,CHIP 2.2K 1/16W(1608) |
| R155 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R156 | 1-218-859-11 s | RESISTOR,CHIP 3.3K 1/16W(1608) |
| R157 | 1-218-857-11 s | RESISTOR,CHIP 2.7K 1/16W(1608) |
| R158 | 1-216-826-11 s | RESISTOR,CHIP 2.7K 1/16W(1608) |
| R159 | 1-218-883-11 s | RESISTOR,CHIP 33K 1/16W (1608) |
| R160 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R161 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R162 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) [for UC,J] |
| R163 | 1-216-837-11 s | RESISTOR,CHIP 22K 1/16W 1608 [for CE,SY,CN] |
| R164 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R165 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R166 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R167 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R168 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R169 | 1-216-801-11 s | RESISTOR,CHIP 22 1/16W (1608) |
| R170 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R171 | 1-218-855-11 s | RESISTOR,CHIP 2.2K 1/16W(1608) [for UC,J] [for CE,SY,CN] |
| R172 | 1-216-823-11 s | RESISTOR,CHIP 1.5K 1/16W [for UC,J] 1-216-829-11 s RESISTOR,CHIP 4.7K 1/16W(1608) [for CE,SY,CN] |
| R173 | 1-218-865-11 s | RESISTOR,CHIP 5.6K 1/16W(1608) |
| R174 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R175 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R176 | 1-218-851-11 s | RESISTOR,CHIP 1.5K 1/16W(1608) [for UC,J] 1-218-853-11 s RESISTOR,CHIP 1.8K 1/16W(1608) [for CE,SY,CN] |
| R177 | 1-218-875-11 s | RESISTOR,CHIP 15K 1/16W (1608) |
| R178 | 1-218-865-11 s | RESISTOR,CHIP 5.6K 1/16W(1608) |
| R179 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R180 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 |
| R181 | 1-216-835-11 s | RESISTOR,CHIP 15K 1/16W |
| R182 | 1-216-828-11 s | RESISTOR,CHIP 3.9K 1/16W 1608 |
| R183 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 |
| R184 | 1-218-854-11 s | RESISTOR,CHIP 2K 1/16W (1608) |
| R185 | 1-216-812-11 s | RESISTOR,CHIP 180 1/16W 1608 |
| R186 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 |
| R187 | 1-216-797-11 s | RESISTOR,CHIP 10 1/16W 1608 |

(ES-31/31P BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|---|
| R188 | 1-216-797-11 s | RESISTOR,CHIP 10 1/16W 1608 |
| R189 | 1-216-797-11 s | RESISTOR,CHIP 10 1/16W 1608 |
| R192 | 1-216-797-11 s | RESISTOR,CHIP 10 1/16W 1608 |
| R193 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R194 | 1-216-839-11 s | RESISTOR,CHIP 33K 1/16W 1608 |
| R195 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R196 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R197 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R198 | 1-216-823-11 s | RESISTOR,CHIP 1.5K 1/16W |
| R199 | 1-211-990-11 s | RESISTOR,CHIP 75 1/16W (1608) |
| R200 | 1-218-846-11 s | RESISTOR,CHIP 910 1/16W (1608) |
| R201 | 1-211-973-11 s | RESISTOR,CHIP 15 1/16W (1608) |
| R202 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R203 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R204 | 1-216-823-11 s | RESISTOR,CHIP 1.5K 1/16W |
| R205 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R206 | 1-211-987-11 s | RESISTOR,CHIP 56 1/16W (1608) |
| R207 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R208 | 1-218-828-11 s | RESISTOR,CHIP 160 1/16W (1608) |
| R209 | 1-211-973-11 s | RESISTOR,CHIP 15 1/16W (1608) |
| R210 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| R211 | 1-218-840-11 s | RESISTOR,CHIP 510 1/16W (1608) |
| R212 | 1-211-973-11 s | RESISTOR,CHIP 15 1/16W (1608) |
| R213 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R214 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R215 | 1-216-827-11 s | RESISTOR,CHIP 3.3K 1/16W 1608 |
| R216 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R217 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R218 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R219 | 1-218-871-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R220 | 1-218-855-11 s | RESISTOR,CHIP 2.2K 1/16W(1608) |
| R221 | 1-218-863-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) [for UC,J] 1-218-867-11 s RESISTOR,CHIP 6.8K 1/16W(1608) [for CE,SY,CN] |
| R222 | 1-218-859-11 s | RESISTOR,CHIP 3.3K 1/16W(1608) |
| R223 | 1-218-851-11 s | RESISTOR,CHIP 1.5K 1/16W(1608) |
| R224 | 1-216-826-11 s | RESISTOR,CHIP 2.7K 1/16W(1608) |
| R225 | 1-218-883-11 s | RESISTOR,CHIP 33K 1/16W (1608) |
| R226 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R227 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R228 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R229 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R230 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R231 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R232 | 1-216-841-11 s | RESISTOR,CHIP 47K 1/16W 1608 |
| R233 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R234 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R235 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R236 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R237 | 1-216-807-11 s | RESISTOR,CHIP 68 1/16W 1608 |
| R238 | 1-216-807-11 s | RESISTOR,CHIP 68 1/16W 1608 |
| R239 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R240 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R241 | 1-216-836-11 s | RESISTOR,CHIP 18K 1/16W 1608 |
| R242 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R243 | 1-216-797-11 s | RESISTOR,CHIP 10 1/16W 1608 |
| R244 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R245 | 1-216-839-11 s | RESISTOR,CHIP 33K 1/16W 1608 |

(ES-31/31P BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|--|
| R246 | 1-218-855-11 s | RESISTOR,CHIP 2.2K 1/16W(1608) |
| R247 | 1-218-917-11 s | RESISTOR,CHIP 820K 1/16W(1608) |
| R248 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R249 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R250 | 1-216-839-11 s | RESISTOR,CHIP 33K 1/16W 1608 |
| R251 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R252 | 1-216-823-11 s | RESISTOR,CHIP 1.5K 1/16W |
| R253 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R254 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R255 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R256 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R257 | 1-216-823-11 s | RESISTOR,CHIP 1.5K 1/16W |
| R258 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R259 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R260 | 1-216-826-11 s | RESISTOR,CHIP 2.7K 1/16W(1608) |
| R261 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R262 | 1-218-844-11 s | RESISTOR,CHIP 750 1/16W (1608) |
| R263 | 1-218-859-11 s | RESISTOR,CHIP 3.3K 1/16W(1608) |
| R264 | 1-218-861-11 s | RESISTOR,CHIP 3.9K 1/16W(1608) |
| R265 | 1-216-824-11 s | RESISTOR,CHIP 1.8K 1/16W 1608 |
| R266 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R267 | 1-216-805-11 s | RESISTOR,CHIP 47 1/16W 1608 |
| R268 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R269 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R270 | 1-216-823-11 s | RESISTOR,CHIP 1.5K 1/16W |
| R271 | 1-211-987-11 s | RESISTOR,CHIP 56 1/16W (1608) |
| R272 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R273 | 1-211-969-11 s | RESISTOR,CHIP 10 1/16W (1608) |
| R274 | 1-218-846-11 s | RESISTOR,CHIP 910 1/16W (1608) |
| R275 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| R276 | 1-216-824-11 s | RESISTOR,CHIP 1.8K 1/16W 1608 |
| R277 | 1-216-826-11 s | RESISTOR,CHIP 2.7K 1/16W(1608) |
| R278 | 1-218-855-11 s | RESISTOR,CHIP 2.2K 1/16W(1608) |
| R279 | 1-218-855-11 s | RESISTOR,CHIP 2.2K 1/16W(1608) |
| R280 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R281 | 1-218-833-11 s | RESISTOR,CHIP 270 1/16W (1608) [for UC,J] |
| | 1-218-834-11 s | RESISTOR,CHIP 300 1/16W (1608) [for CE,SY,CN] |
| R282 | 1-211-974-11 s | RESISTOR,CHIP 16 1/16W (1608) [for UC,J] |
| | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) [for CE,SY,CN] |
| R283 | 1-218-843-11 s | RESISTOR,CHIP 680 1/16W (1608) |
| R284 | 1-211-981-11 s | RESISTOR,CHIP 33 1/16W (1608) [for UC,J] |
| | 1-211-990-11 s | RESISTOR,CHIP 75 1/16W (1608) [for CE,SY,CN] |
| R286 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R287 | 1-216-823-11 s | RESISTOR,CHIP 1.5K 1/16W |
| R288 | 1-218-853-11 s | RESISTOR,CHIP 1.8K 1/16W(1608) |
| R289 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R290 | 1-218-855-11 s | RESISTOR,CHIP 2.2K 1/16W(1608) |
| R291 | 1-218-855-11 s | RESISTOR,CHIP 2.2K 1/16W(1608) |
| R292 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R293 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R294 | 1-216-837-11 s | RESISTOR,CHIP 22K 1/16W 1608 |
| R295 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 |
| R296 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R297 | 1-216-827-11 s | RESISTOR,CHIP 3.3K 1/16W 1608 |

(ES-31/31P BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|--|
| R298 | 1-216-819-11 s | RESISTOR,CHIP 680 1/16W 1608 |
| R299 | 1-218-854-11 s | RESISTOR,CHIP 2K 1/16W (1608) |
| R300 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R301 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 |
| R302 | 1-218-839-11 s | RESISTOR,CHIP 470 1/16W (1608) |
| R303 | 1-218-839-11 s | RESISTOR,CHIP 470 1/16W (1608) |
| R304 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R305 | 1-216-813-11 s | RESISTOR,CHIP 220 1/16W 1608 |
| R306 | 1-216-813-11 s | RESISTOR,CHIP 220 1/16W 1608 |
| R307 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R308 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R309 | 1-218-855-11 s | RESISTOR,CHIP 2.2K 1/16W(1608) |
| R310 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R311 | 1-216-827-11 s | RESISTOR,CHIP 3.3K 1/16W 1608 |
| R312 | 1-218-856-11 s | RESISTOR,CHIP 2.4K 1/16W(1608) |
| R313 | 1-211-985-11 s | RESISTOR,CHIP 47 1/16W (1608) |
| R314 | 1-216-813-11 s | RESISTOR,CHIP 220 1/16W 1608 |
| R315 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| R316 | 1-216-827-11 s | RESISTOR,CHIP 3.3K 1/16W 1608 |
| R317 | 1-218-855-11 s | RESISTOR,CHIP 2.2K 1/16W(1608) |
| R318 | 1-218-856-11 s | RESISTOR,CHIP 2.4K 1/16W(1608) |
| R319 | 1-218-863-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R320 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R321 | 1-216-823-11 s | RESISTOR,CHIP 1.5K 1/16W |
| R323 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R324 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 |
| R325 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R326 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R327 | 1-216-794-11 s | RESISTOR,CHIP 5.6 1/16W 1608 |
| R328 | 1-216-794-11 s | RESISTOR,CHIP 5.6 1/16W 1608 |
| R329 | 1-216-805-11 s | RESISTOR,CHIP 47 1/16W 1608 |
| R330 | 1-218-831-11 s | RESISTOR,CHIP 220 1/16W(1608) |
| R331 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R332 | 1-211-990-11 s | RESISTOR,CHIP 75 1/16W (1608) |
| R333 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R334 | 1-218-831-11 s | RESISTOR,CHIP 220 1/16W(1608) |
| R335 | 1-216-837-11 s | RESISTOR,CHIP 22K 1/16W 1608 |
| R336 | 1-216-837-11 s | RESISTOR,CHIP 22K 1/16W 1608 |
| R337 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R338 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R339 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R340 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R341 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R342 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R343 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R344 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R345 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| R350 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R354 | 1-216-827-11 s | RESISTOR,CHIP 3.3K 1/16W 1608 |
| R355 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 |
| R356 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) [for CE,SY,CN] |
| R357 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) [for UC,J] |
| R358 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R359 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| R362 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| R401 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R402 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 |

(ES-31/31P BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|--------------------------------|
| R403 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R404 | 1-216-840-11 s | RESISTOR,CHIP 39K 1/16W 1608 |
| R405 | 1-216-827-11 s | RESISTOR,CHIP 3.3K 1/16W 1608 |
| R406 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R407 | 1-216-822-11 s | RESISTOR,CHIP 1.2K 1/16W 1608 |
| | | |
| R408 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R409 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R410 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R411 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R412 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 |
| | | |
| R413 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 |
| R414 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R415 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R416 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R417 | 1-216-837-11 s | RESISTOR,CHIP 22K 1/16W 1608 |
| | | |
| R418 | 1-216-813-11 s | RESISTOR,CHIP 220 1/16W 1608 |
| R419 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 |
| R421 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R422 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R423 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| | | |
| R424 | 1-216-827-11 s | RESISTOR,CHIP 3.3K 1/16W 1608 |
| R425 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R426 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 |
| R427 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R428 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| | | |
| R429 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R430 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R431 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| R432 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 |
| R433 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| | | |
| R435 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R436 | 1-216-813-11 s | RESISTOR,CHIP 220 1/16W 1608 |
| R437 | 1-218-859-11 s | RESISTOR,CHIP 3.3K 1/16W(1608) |
| R438 | 1-218-855-11 s | RESISTOR,CHIP 2.2K 1/16W(1608) |
| R439 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 |
| | | |
| R440 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R441 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 |
| R442 | 1-218-873-11 s | RESISTOR,CHIP 12K 1/16W (1608) |
| R443 | 1-218-845-11 s | RESISTOR,CHIP 820 1/16W (1608) |
| R444 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| | | |
| R445 | 1-216-827-11 s | RESISTOR,CHIP 3.3K 1/16W 1608 |
| R446 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R447 | 1-216-822-11 s | RESISTOR,CHIP 1.2K 1/16W 1608 |
| R448 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R449 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| | | |
| R450 | 1-218-851-11 s | RESISTOR,CHIP 1.5K 1/16W(1608) |
| R451 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R452 | 1-218-855-11 s | RESISTOR,CHIP 2.2K 1/16W(1608) |
| R453 | 1-218-855-11 s | RESISTOR,CHIP 2.2K 1/16W(1608) |
| R454 | 1-218-855-11 s | RESISTOR,CHIP 2.2K 1/16W(1608) |
| | | |
| R455 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 |
| R456 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R457 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 |
| R458 | 1-218-851-11 s | RESISTOR,CHIP 1.5K 1/16W(1608) |
| R459 | 1-218-879-11 s | RESISTOR,CHIP 22K 1/16W (1608) |
| | | |
| R460 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R461 | 1-218-887-11 s | RESISTOR,CHIP 47K 1/16W (1608) |
| R462 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 |
| R463 | 1-218-885-11 s | RESISTOR,CHIP 39K 1/16W (1608) |

(ES-31/31P BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|--------------------------------|
| R464 | 1-218-883-11 s | RESISTOR,CHIP 33K 1/16W (1608) |
| R465 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| R466 | 1-218-887-11 s | RESISTOR,CHIP 47K 1/16W (1608) |
| R467 | 1-216-805-11 s | RESISTOR,CHIP 47 1/16W 1608 |
| R468 | 1-216-805-11 s | RESISTOR,CHIP 47 1/16W 1608 |
| | | |
| R471 | 1-216-841-11 s | RESISTOR,CHIP 47K 1/16W 1608 |
| R472 | 1-216-841-11 s | RESISTOR,CHIP 47K 1/16W 1608 |
| R473 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R474 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R475 | 1-211-990-11 s | RESISTOR,CHIP 75 1/16W (1608) |
| | | |
| R476 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 |
| R477 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R478 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R479 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 |
| R480 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| | | |
| R481 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R482 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 |
| R483 | 1-216-805-11 s | RESISTOR,CHIP 47 1/16W 1608 |
| R484 | 1-218-838-11 s | RESISTOR,CHIP 430 1/16W (1608) |
| R485 | 1-218-855-11 s | RESISTOR,CHIP 2.2K 1/16W(1608) |
| | | |
| R486 | 1-216-813-11 s | RESISTOR,CHIP 220 1/16W 1608 |
| R487 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R488 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R489 | 1-216-813-11 s | RESISTOR,CHIP 220 1/16W 1608 |
| R490 | 1-211-990-11 s | RESISTOR,CHIP 75 1/16W (1608) |
| | | |
| R491 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R492 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R493 | 1-211-990-11 s | RESISTOR,CHIP 75 1/16W (1608) |
| R494 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R495 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| | | |
| R496 | 1-216-840-11 s | RESISTOR,CHIP 39K 1/16W 1608 |
| R497 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R498 | 1-216-837-11 s | RESISTOR,CHIP 22K 1/16W 1608 |
| R499 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R500 | 1-216-841-11 s | RESISTOR,CHIP 47K 1/16W 1608 |
| | | |
| R501 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R502 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R503 | 1-216-815-11 s | RESISTOR,CHIP 330 1/16W 1608 |
| R504 | 1-216-827-11 s | RESISTOR,CHIP 3.3K 1/16W 1608 |
| R505 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| | | |
| R506 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R507 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R508 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| R509 | 1-211-990-11 s | RESISTOR,CHIP 75 1/16W (1608) |
| R510 | 1-216-815-11 s | RESISTOR,CHIP 330 1/16W 1608 |
| | | |
| R511 | 1-216-827-11 s | RESISTOR,CHIP 3.3K 1/16W 1608 |
| R512 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R513 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R514 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R515 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| | | |
| R516 | 1-211-990-11 s | RESISTOR,CHIP 75 1/16W (1608) |
| R517 | 1-216-815-11 s | RESISTOR,CHIP 330 1/16W 1608 |
| R518 | 1-216-827-11 s | RESISTOR,CHIP 3.3K 1/16W 1608 |
| R519 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R520 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| | | |
| R521 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R522 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| R523 | 1-211-990-11 s | RESISTOR,CHIP 75 1/16W (1608) |
| R524 | 1-216-827-11 s | RESISTOR,CHIP 3.3K 1/16W 1608 |

(ES-31/31P BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|--|
| R525 | 1-216-827-11 | s RESISTOR,CHIP 3.3K 1/16W 1608 |
| R526 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R527 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R528 | 1-216-813-11 | s RESISTOR,CHIP 220 1/16W 1608 |
| R529 | 1-216-827-11 | s RESISTOR,CHIP 3.3K 1/16W 1608 |
| R530 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R531 | 1-218-846-11 | s RESISTOR,CHIP 910 1/16W (1608) |
| R532 | 1-218-846-11 | s RESISTOR,CHIP 910 1/16W (1608) |
| R533 | 1-211-985-11 | s RESISTOR,CHIP 47 1/16W (1608) |
| R534 | 1-211-990-11 | s RESISTOR,CHIP 75 1/16W (1608) |
| R535 | 1-216-827-11 | s RESISTOR,CHIP 3.3K 1/16W 1608 |
| R536 | 1-216-827-11 | s RESISTOR,CHIP 3.3K 1/16W 1608 |
| R537 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R539 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R540 | 1-216-813-11 | s RESISTOR,CHIP 220 1/16W 1608 |
| R541 | 1-216-827-11 | s RESISTOR,CHIP 3.3K 1/16W 1608 |
| R542 | 1-216-837-11 | s RESISTOR,CHIP 22K 1/16W 1608 |
| R543 | 1-218-845-11 | s RESISTOR,CHIP 820 1/16W (1608) |
| R544 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R545 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R546 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R547 | 1-211-990-11 | s RESISTOR,CHIP 75 1/16W (1608) |
| R548 | 1-211-987-11 | s RESISTOR,CHIP 56 1/16W (1608) |
| R549 | 1-162-916-11 | s CAPACITOR,CERAMIC 12PF/50V CH |
| R601 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R602 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R603 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R605 | 1-218-835-11 | s RESISTOR,CHIP 330 1/16W (1608) |
| R606 | 1-211-987-11 | s RESISTOR,CHIP 56 1/16W (1608) |
| R607 | 1-218-843-11 | s RESISTOR,CHIP 680 1/16W (1608) |
| R608 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) [for CE,SY,CN] |
| R609 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R611 | 1-211-991-11 | s RESISTOR,CHIP 82 1/16W (1608) |
| R612 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R613 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) [for CE,SY,CN] |
| R614 | 1-216-823-11 | s RESISTOR,CHIP 1.5K 1/16W |
| R615 | 1-216-823-11 | s RESISTOR,CHIP 1.5K 1/16W |
| R616 | 1-216-840-11 | s RESISTOR,CHIP 39K 1/16W 1608 |
| R617 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R620 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R621 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R622 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R623 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R624 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R625 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) [for CE,SY,CN] |
| R626 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) [for UC,J] |
| R627 | 1-216-839-11 | s RESISTOR,CHIP 33K 1/16W 1608 |
| R628 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R629 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) [for CE,SY,CN] |
| R630 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) [for UC,J] |
| R631 | 1-216-837-11 | s RESISTOR,CHIP 22K 1/16W 1608 |
| R632 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R633 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R634 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |

(ES-31/31P BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|--|
| R635 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R636 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R637 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R638 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R639 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R640 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R641 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R642 | 1-216-797-11 | s RESISTOR,CHIP 10 1/16W 1608 |
| R643 | 1-216-797-11 | s RESISTOR,CHIP 10 1/16W 1608 |
| R644 | 1-216-797-11 | s RESISTOR,CHIP 10 1/16W 1608 |
| R645 | 1-216-797-11 | s RESISTOR,CHIP 10 1/16W 1608 |
| R650 | 1-216-829-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R651 | 1-216-829-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R652 | 1-216-823-11 | s RESISTOR,CHIP 1.5K 1/16W |
| R653 | 1-216-838-11 | s RESISTOR,CHIP 27K 1/16W(1608) |
| R654 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R655 | 1-216-836-11 | s RESISTOR,CHIP 18K 1/16W 1608 |
| R656 | 1-216-841-11 | s RESISTOR,CHIP 47K 1/16W 1608 |
| R657 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R658 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R659 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R660 | 1-216-827-11 | s RESISTOR,CHIP 3.3K 1/16W 1608 |
| R661 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R662 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R663 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R664 | 1-216-813-11 | s RESISTOR,CHIP 220 1/16W 1608 |
| R665 | 1-216-817-11 | s RESISTOR,CHIP 470 1/16W 1608 |
| R666 | 1-216-823-11 | s RESISTOR,CHIP 1.5K 1/16W |
| R667 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R668 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R669 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R670 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R671 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R672 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R673 | 1-216-825-11 | s RESISTOR,CHIP 2.2K 1/16W 1608 |
| R674 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R678 | 1-211-990-11 | s RESISTOR,CHIP 75 1/16W (1608) |
| R680 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R681 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R682 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R683 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R684 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R685 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R686 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R687 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) [for UC,J] |
| | 1-218-846-11 | s RESISTOR,CHIP 910 1/16W (1608) [for CE,SY,CN] |
| R688 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R689 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R690 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R691 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R692 | 1-211-990-11 | s RESISTOR,CHIP 75 1/16W (1608) |
| R701 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R702 | 1-216-825-11 | s RESISTOR,CHIP 2.2K 1/16W 1608 |
| R703 | 1-216-825-11 | s RESISTOR,CHIP 2.2K 1/16W 1608 |
| R704 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R705 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R706 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |

(ES-31/31P BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|---|
| R707 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R708 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R709 | 1-216-825-11 | s RESISTOR,CHIP 2.2K 1/16W 1608 |
| R710 | 1-216-835-11 | s RESISTOR,CHIP 15K 1/16W |
| R711 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R712 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R713 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R714 | 1-218-867-11 | s RESISTOR,CHIP 6.8K 1/16W(1608) |
| R715 | 1-218-867-11 | s RESISTOR,CHIP 6.8K 1/16W(1608) |
| R716 | 1-216-857-11 | s RESISTOR,CHIP 1M 1/16W(1608) |
| R717 | 1-216-857-11 | s RESISTOR,CHIP 1M 1/16W(1608) |
| R718 | 1-216-857-11 | s RESISTOR,CHIP 1M 1/16W(1608) |
| R719 | 1-216-857-11 | s RESISTOR,CHIP 1M 1/16W(1608) |
| R720 | 1-218-823-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R721 | 1-218-851-11 | s RESISTOR,CHIP 1.5K 1/16W(1608) |
| R722 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R723 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R724 | 1-218-855-11 | s RESISTOR,CHIP 2.2K 1/16W(1608) |
| R726 | 1-218-874-11 | s RESISTOR,CHIP 13K 1/16W (1608) |
| R727 | 1-218-854-11 | s RESISTOR,CHIP 2K 1/16W (1608) |
| R801 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R802 | 1-216-822-11 | s RESISTOR,CHIP 1.2K 1/16W 1608 |
| R803 | 1-216-829-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R804 | 1-218-853-11 | s RESISTOR,CHIP 1.8K 1/16W(1608) |
| R805 | 1-218-859-11 | s RESISTOR,CHIP 3.3K 1/16W(1608) |
| R806 | 1-218-848-11 | s RESISTOR,CHIP 1.1K 1/16W(1608) |
| R807 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R808 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R809 | 1-216-825-11 | s RESISTOR,CHIP 2.2K 1/16W 1608 |
| R810 | 1-216-836-11 | s RESISTOR,CHIP 18K 1/16W 1608 |
| R811 | 1-216-829-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R812 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R813 | 1-216-815-11 | s RESISTOR,CHIP 330 1/16W 1608 |
| R814 | 1-216-827-11 | s RESISTOR,CHIP 3.3K 1/16W 1608 |
| R815 | 1-216-848-11 | s RESISTOR,CHIP 180K 1/16 (1608) |
| R816 | 1-216-822-11 | s RESISTOR,CHIP 1.2K 1/16W 1608 |
| R817 | 1-216-823-11 | s RESISTOR,CHIP 1.5K 1/16W [for UC,J] |
| | 1-216-827-11 | s RESISTOR,CHIP 3.3K 1/16W 1608 [for CE,SY,CN] |
| R818 | 1-216-826-11 | s RESISTOR,CHIP 2.7K 1/16W(1608) |
| R819 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R820 | 1-216-837-11 | s RESISTOR,CHIP 22K 1/16W 1608 |
| R821 | 1-216-827-11 | s RESISTOR,CHIP 3.3K 1/16W 1608 |
| R822 | 1-216-823-11 | s RESISTOR,CHIP 1.5K 1/16W |
| R823 | 1-218-895-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R824 | 1-218-831-11 | s RESISTOR,CHIP 220 1/16W(1608) |
| R825 | 1-216-829-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R826 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R827 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R828 | 1-218-866-11 | s RESISTOR,CHIP 6.2K 1/16W(1608) |
| R829 | 1-216-848-11 | s RESISTOR,CHIP 180K 1/16 (1608) |
| R830 | 1-216-825-11 | s RESISTOR,CHIP 2.2K 1/16W 1608 |
| R831 | 1-218-867-11 | s RESISTOR,CHIP 6.8K 1/16W(1608) |
| R832 | 1-218-863-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R833 | 1-216-857-11 | s RESISTOR,CHIP 1M 1/16W(1608) |
| R834 | 1-218-863-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R835 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R836 | 1-218-865-11 | s RESISTOR,CHIP 5.6K 1/16W(1608) |

(ES-31/31P BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|--|
| R837 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R838 | 1-216-829-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R839 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R840 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) [for UC,J] |
| R841 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R842 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) [for CE,SY,CN] |
| R843 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R844 | 1-218-865-11 | s RESISTOR,CHIP 5.6K 1/16W(1608) |
| R845 | 1-216-827-11 | s RESISTOR,CHIP 3.3K 1/16W 1608 |
| R846 | 1-216-825-11 | s RESISTOR,CHIP 2.2K 1/16W 1608 |
| R847 | 1-218-867-11 | s RESISTOR,CHIP 6.8K 1/16W(1608) |
| R848 | 1-218-883-11 | s RESISTOR,CHIP 33K 1/16W (1608) |
| R849 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R850 | 1-218-883-11 | s RESISTOR,CHIP 33K 1/16W (1608) [for UC,J] |
| R851 | 1-218-879-11 | s RESISTOR,CHIP 22K 1/16W (1608) [for UC,J] |
| R852 | 1-218-879-11 | s RESISTOR,CHIP 22K 1/16W (1608) [for UC,J] |
| R853 | 1-218-854-11 | s RESISTOR,CHIP 2K 1/16W (1608) |
| R854 | 1-216-826-11 | s RESISTOR,CHIP 2.7K 1/16W(1608) [for CE,SY,CN] |
| R855 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) [for CE,SY,CN] |
| R856 | 1-216-826-11 | s RESISTOR,CHIP 2.7K 1/16W(1608) [for CE,SY,CN] |
| R857 | 1-216-841-11 | s RESISTOR,CHIP 47K 1/16W 1608 [for UC,J] |
| R858 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) [for UC,J] |
| R859 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R860 | 1-216-834-11 | s RESISTOR,CHIP 12K 1/16W 1608 [for UC,J] |
| R861 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) [for CE,SY,CN] |
| R862 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R863 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) [for CE,SY,CN] |
| R864 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) [for UC,J] |
| R865 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) [for CE,SY,CN] |
| R866 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R867 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) [for UC,J] |
| R868 | 1-216-857-11 | s RESISTOR,CHIP 1M 1/16W(1608) |
| R869 | 1-216-857-11 | s RESISTOR,CHIP 1M 1/16W(1608) |
| R870 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) [for CE,SY,CN] |
| R871 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R872 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R873 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) [for UC,J] |
| | 1-216-820-11 | s RESISTOR,CHIP 820 1/16W(1608) [for CE,SY,CN] |
| R874 | 1-218-865-11 | s RESISTOR,CHIP 5.6K 1/16W(1608) |
| R875 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R876 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R877 | 1-216-827-11 | s RESISTOR,CHIP 3.3K 1/16W 1608 |
| R878 | 1-218-839-11 | s RESISTOR,CHIP 470 1/16W (1608) |

(ES-31/31P BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|---|
| R879 | 1-216-797-11 s | RESISTOR,CHIP 10 1/16W 1608 |
| R880 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R881 | 1-216-797-11 s | RESISTOR,CHIP 10 1/16W 1608 |
| R882 | 1-218-882-11 s | RESISTOR,CHIP 30K 1/16W(1608) |
| R883 | 1-218-881-11 s | RESISTOR,CHIP 27K 1/16W(1608) |
| R884 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R885 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R886 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 |
| R887 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R888 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) [for CE,SY,CN] |
| R889 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R890 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) [for UC,J] |
| R891 | 1-218-866-11 s | RESISTOR,CHIP 6.2K 1/16W(1608) |
| R892 | 1-218-883-11 s | RESISTOR,CHIP 33K 1/16W (1608) |
| R893 | 1-218-879-11 s | RESISTOR,CHIP 22K 1/16W (1608) |
| R894 | 1-218-871-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R895 | 1-218-883-11 s | RESISTOR,CHIP 33K 1/16W (1608) |
| R896 | 1-218-879-11 s | RESISTOR,CHIP 22K 1/16W (1608) |
| R897 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R898 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R899 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R900 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 |
| R902 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R903 | 1-216-835-11 s | RESISTOR,CHIP 15K 1/16W |
| R904 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R905 | 1-218-856-11 s | RESISTOR,CHIP 2.4K 1/16W(1608) |
| R906 | 1-218-872-11 s | RESISTOR,CHIP 11K 1/16W (1608) |
| R907 | 1-218-874-11 s | RESISTOR,CHIP 13K 1/16W (1608) |
| R908 | 1-216-835-11 s | RESISTOR,CHIP 15K 1/16W |
| R909 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R910 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R911 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 |
| R912 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R913 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 |
| R915 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 [for CE,SY,CN] |
| R916 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R917 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R918 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 [for UC,J] |
| R922 | 1-218-823-11 s | RESISTOR,CHIP 100 1/16W (1608) |
| R924 | 1-216-805-11 s | RESISTOR,CHIP 47 1/16W 1608 |
| R925 | 1-216-805-11 s | RESISTOR,CHIP 47 1/16W (1608) |
| R926 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| R927 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R928 | 1-216-805-11 s | RESISTOR,CHIP 47 1/16W 1608 [for UC,J] |
| R929 | 1-216-805-11 s | RESISTOR,CHIP 47 1/16W 1608 |
| R931 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| R932 | 1-216-828-11 s | RESISTOR,CHIP 3.9K 1/16W 1608 |
| R933 | 1-216-828-11 s | RESISTOR,CHIP 3.9K 1/16W 1608 |
| R934 | 1-216-828-11 s | RESISTOR,CHIP 3.9K 1/16W 1608 |
| R935 | 1-216-828-11 s | RESISTOR,CHIP 3.9K 1/16W 1608 |
| R936 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| RB101 | 1-236-904-11 s | RESISTOR,NETWORK 1K (1608) |
| RB102 | 1-236-904-11 s | RESISTOR,NETWORK 1K (1608) |
| RB103 | 1-236-907-11 s | RESISTOR,BLOCK 100K (1608) |

(ES-31/31P BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|-------------------|----------------------------|
| RB104 | 1-236-907-11 s | RESISTOR,BLOCK 100K (1608) |
| RB601 | 1-236-907-11 s | RESISTOR,BLOCK 100K (1608) |
| RV101 | 1-241-261-41 s | RESISTOR,ADJ, CERMET 1K |
| RV103 | 1-241-261-41 s | RESISTOR,ADJ, CERMET 1K |
| RV104 | *b 1-214-261-11 s | RESISTOR,ADJ 1K (CERMET) |
| | *a 1-241-260-11 s | RESISTOR,ADJ 500 (CERMET) |
| S401 | 1-571-275-11 s | SWITCH, SLIDE (1-1-2) |
| TP801 | 1-535-757-11 s | CHIP, CHECKER (CONNECTOR) |

FP-118A BOARD

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|------------------------------------|
| 1pc | A-8329-963-A | s MOUNTED CIRCUIT BOARD, FP-118A |
| 1pc | 3-604-372-01 | o SPACER LCD (ABS) |
| C1 | 1-126-394-11 | s CAPACITOR, ELECT 10MF/16V(CHIP) |
| C2 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C3 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C4 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C5 | 1-126-394-11 | s CAPACITOR, ELECT 10MF/16V(CHIP) |
| C7 | 1-126-394-11 | s CAPACITOR, ELECT 10MF/16V(CHIP) |
| C8 | 1-126-394-11 | s CAPACITOR, ELECT 10MF/16V(CHIP) |
| C9 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C10 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C11 | 1-162-912-11 | s CAPACITOR, CERAMIC 7PF/50V 1608 |
| C12 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C13 | 1-162-912-11 | s CAPACITOR, CERAMIC 7PF/50V 1608 |
| C14 | 1-162-912-11 | s CAPACITOR, CERAMIC 7PF/50V 1608 |
| C15 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C16 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C17 | 1-162-912-11 | s CAPACITOR, CERAMIC 7PF/50V 1608 |
| C18 | 1-126-394-11 | s CAPACITOR, ELECT 10MF/16V(CHIP) |
| C19 | 1-126-394-11 | s CAPACITOR, ELECT 10MF/16V(CHIP) |
| C20 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C21 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C200 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C201 | 1-126-394-11 | s CAPACITOR, ELECT 10MF/16V(CHIP) |
| C202 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C203 | 1-126-394-11 | s CAPACITOR, ELECT 10MF/16V(CHIP) |
| C204 | 1-162-918-11 | s CAPACITOR, CERAMIC 18PF/50V CH |
| C205 | 1-162-917-11 | s CAPACITOR, CERAMIC 15PF/50V CH |
| C206 | 1-162-918-11 | s CAPACITOR, CERAMIC 18PF/50V CH |
| C207 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C208 | 1-126-394-11 | s CAPACITOR, ELECT 10MF/16V(CHIP) |
| C209 | 1-126-397-11 | s CAPACITOR, ELECT 33MF/25V(CHIP) |
| C210 | 1-126-397-11 | s CAPACITOR, ELECT 33MF/25V(CHIP) |
| C211 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C212 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C213 | 1-164-739-11 | s CAPACITOR, CERAMIC 560PF (1608) |
| C214 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C215 | 1-126-394-11 | s CAPACITOR, ELECT 10MF/16V(CHIP) |
| C216 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C217 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C218 | 1-162-919-11 | s CAPACITOR, CERAMIC 22PF/50V CH |
| C219 | 1-162-919-11 | s CAPACITOR, CERAMIC 22PF/50V CH |
| C220 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C221 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C222 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C223 | 1-165-112-11 | s CAPACITOR, CERAMIC 0.33MF/16V F |
| C224 | 1-113-642-11 | s CAPACITOR, TANTALUM 47MF/10V |
| C225 | 1-164-730-11 | s CAPACITOR, CERAMIC 1200RF (M-) |
| C226 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C227 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C228 | 1-113-642-11 | s CAPACITOR, TANTALUM 47MF/10V |
| C229 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C300 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C301 | 1-126-394-11 | s CAPACITOR, ELECT 10MF/16V(CHIP) |
| C302 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C303 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C304 | 1-126-394-11 | s CAPACITOR, ELECT 10MF/16V(CHIP) |
| C305 | 1-126-392-11 | s CAPACITOR, CHIP ELECT 100MF/6.3V |

(FP-118A BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-----------------------------------|
| C306 | 1-126-394-11 | s CAPACITOR, ELECT 10MF/16V(CHIP) |
| C307 | 1-126-402-11 | s CAPACITOR, ELECT 2.2MF/50V |
| C308 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C309 | 1-126-402-11 | s CAPACITOR, ELECT 2.2MF/50V |
| C310 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C311 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C312 | 1-126-395-11 | s CAPACITOR, ELECT 22MF/16V(CHIP) |
| C313 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C314 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C315 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C316 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C317 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C318 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C401 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C402 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C403 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C404 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C405 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C406 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C407 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C408 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C409 | 1-115-581-11 | s CAPACITOR, CHIP ELECT 100MF/16V |
| C410 | 1-115-581-11 | s CAPACITOR, CHIP ELECT 100MF/16V |
| C411 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C412 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C413 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C414 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C415 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C416 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C417 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C418 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C419 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C420 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C421 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C422 | 1-115-581-11 | s CAPACITOR, CHIP ELECT 100MF/16V |
| C423 | 1-162-921-11 | s CAPACITOR, CERAMIC 33PF/50V CH |
| C424 | 1-162-921-11 | s CAPACITOR, CERAMIC 33PF/50V CH |
| C425 | 1-113-642-11 | s CAPACITOR, TANTALUM 47MF/10V |
| C426 | 1-113-642-11 | s CAPACITOR, TANTALUM 47MF/10V |
| C427 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C428 | 1-126-394-11 | s CAPACITOR, ELECT 10MF/16V(CHIP) |
| C429 | 1-126-394-11 | s CAPACITOR, ELECT 10MF/16V(CHIP) |
| C430 | 1-162-923-11 | s CAPACITOR, CERAMIC 47PF/50V CH |
| C431 | 1-162-923-11 | s CAPACITOR, CERAMIC 47PF/50V CH |
| C434 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C435 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C436 | 1-135-210-11 | s CAPACITOR, TANTALUM 4.7MF/10V |
| C437 | 1-135-210-11 | s CAPACITOR, TANTALUM 4.7MF/10V |
| C438 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C439 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C440 | 1-113-642-11 | s CAPACITOR, TANTALUM 47MF/10V |
| C441 | 1-113-642-11 | s CAPACITOR, TANTALUM 47MF/10V |
| C442 | 1-126-393-11 | s CAPACITOR, ELECT 33MF/10V(CHIP) |
| C443 | 1-115-581-11 | s CAPACITOR, CHIP ELECT 100MF/16V |
| C444 | 1-115-581-11 | s CAPACITOR, CHIP ELECT 100MF/16V |
| C445 | 1-115-154-11 | s CAPACITOR, ELECT 10MF/16V(BP) |
| C446 | 1-115-154-11 | s CAPACITOR, ELECT 10MF/16V(BP) |
| C447 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C448 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |

(FP-118A BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-----------------------------------|
| C449 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C451 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C453 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C454 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C455 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C456 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C457 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C601 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C602 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C603 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C604 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C605 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C606 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C607 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C608 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C609 | 1-104-852-11 | s CAPACITOR, TANTALUM 22MF/10V |
| C610 | 1-115-581-11 | s CAPACITOR CHIP ELECT 100MF/16V |
| C611 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C613 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C614 | 1-126-393-11 | s CAPACITOR ELECT 33MF/10V(CHIP) |
| C615 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C616 | 1-126-393-11 | s CAPACITOR ELECT 33MF/10V(CHIP) |
| C617 | 1-113-642-11 | s CAPACITOR, TANTALUM 47MF/10V |
| C618 | 1-126-395-11 | s CAPACITOR, ELECT 22MF/16V(CHIP) |
| C619 | 1-126-412-11 | s CAPACITOR, ELECT 220MF/4V(CHIP) |
| C620 | 1-165-176-11 | s CAPACITOR, CERAMIC 47000PF/16V |
| C621 | 1-115-581-11 | s CAPACITOR CHIP ELECT 100MF/16V |
| C622 | 1-115-581-11 | s CAPACITOR CHIP ELECT 100MF/16V |
| C623 | 1-126-394-11 | s CAPACITOR, ELECT 10MF/16V(CHIP) |
| C624 | 1-164-346-11 | s CAPACITOR CHIP CERAMIC 1MF/16V |
| C625 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C706 | 1-126-394-11 | s CAPACITOR, ELECT 10MF/16V(CHIP) |
| C707 | 1-126-394-11 | s CAPACITOR, ELECT 10MF/16V(CHIP) |
| C718 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C719 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C801 | 1-126-394-11 | s CAPACITOR, ELECT 10MF/16V(CHIP) |
| C802 | 1-162-970-11 | s CAPACITOR CERAMIC 0.01MF/25V B |
| C804 | 1-162-970-11 | s CAPACITOR CERAMIC 0.01MF/25V B |
| C806 | 1-115-581-11 | s CAPACITOR CHIP ELECT 100MF/16V |
| C807 | 1-115-581-11 | s CAPACITOR CHIP ELECT 100MF/16V |
| CN1 | 1-778-652-11 | o CONNECTOR, FFC (ZIF) 50P |
| CN2 | 1-778-652-11 | o CONNECTOR, FFC (ZIF) 50P |
| CN3 | 1-778-651-11 | o CONNECTOR, FFC (ZIF) 40P |
| CN4 | 1-695-931-11 | o CONNECTOR, FPC (10P) |
| CN5 | 1-580-056-21 | o PIN, CONNECTOR 3P |
| CN6 | 1-580-056-21 | o PIN, CONNECTOR 3P |
| CN8 | 1-695-931-11 | o CONNECTOR, FPC (10P) |
| CV200 | 1-141-345-11 | s CAPACITOR, TRIMMER(CHIP) 40PF |
| D1 | 8-719-059-49 | s LED EBR3368S |
| D200 | 8-719-938-72 | s DIODE SB01-05CP (RECTI) |
| D201 | 8-719-106-31 | s DIODE RD8.2M-B1 |
| D202 | 8-719-105-90 | s DIODE RD5.6M-B1 |
| D203 | 8-719-106-61 | s DIODE RD11M-B1 |
| D204 | 8-719-105-90 | s DIODE RD5.6M-B1 |
| D205 | 8-719-059-52 | s DIODE MA3J14300LSO |
| D206 | 8-719-059-52 | s DIODE MA3J14300LSO |
| D207 | 8-719-105-28 | s DIODE RD2.4M-B |
| D208 | 8-719-105-28 | s DIODE RD2.4M-B |

(FP-118A BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-----------------------------------|
| D209 | 8-719-987-41 | s LED CL-150Y-CD |
| D210 | 8-719-987-41 | s LED CL-150Y-CD |
| D211 | 8-719-987-41 | s LED CL-150Y-CD |
| D212 | 8-719-987-41 | s LED CL-150Y-CD |
| D213 | 8-719-987-41 | s LED CL-150Y-CD |
| D214 | 8-719-987-41 | s LED CL-150Y-CD |
| D215 | 8-719-987-41 | s LED CL-150Y-CD |
| D216 | 8-719-987-41 | s LED CL-150Y-CD |
| D217 | 8-719-820-41 | s DIODE 1SS302 |
| D300 | 8-719-938-72 | s DIODE SB01-05CP (RECTI) |
| D301 | 8-719-938-72 | s DIODE SB01-05CP (RECTI) |
| D302 | 8-719-938-72 | s DIODE SB01-05CP (RECTI) |
| D303 | 8-719-059-51 | s DIODE MA3J142E0LSO |
| D401 | 8-719-059-52 | s DIODE MA3J14300LSO |
| D402 | 8-719-059-52 | s DIODE MA3J14300LSO |
| D403 | 8-719-059-52 | s DIODE MA3J14300LSO |
| D501 | 8-719-059-52 | s DIODE MA3J14300LSO |
| D502 | 8-719-801-78 | s DIODE 1SS184 |
| D503 | 8-719-801-78 | s DIODE 1SS184 |
| D504 | 8-719-801-78 | s DIODE 1SS184 |
| D605 | 8-719-820-41 | s DIODE 1SS302 |
| D703 | 8-719-820-41 | s DIODE 1SS302 |
| D704 | 8-719-820-41 | s DIODE 1SS302 |
| D801 | 8-719-941-86 | s DIODE DAN202U |
| E1 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| E2 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| E401 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| E501 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| F801 | 1-576-122-21 | s CIRCUIT PROTECTOR 0.4A(IC LINK) |
| FB801 | 1-414-135-11 | s MICRO INDUCTOR (CHIP)21A10 |
| IC2 | 8-759-327-65 | s IC CXD8525N (E2) |
| IC4 | 8-759-674-43 | s IC MM74HCT244SXX |
| IC6 | 8-759-524-04 | s IC TC74VHC125FT (EL) |
| IC200 | 6-801-427-01 | s IC UPD78064GF-201-3BA |
| IC201 | 8-759-175-77 | s IC CXD8384Q |
| IC202 | 8-759-289-80 | s IC LC75821W-DS |
| IC203 | 8-759-442-54 | s IC RH5RL50AA-T1 |
| IC204 | 8-759-464-95 | s IC AK6420AF-E2 |
| IC205 | 8-759-035-93 | s IC SC7832F |
| IC206 | 8-759-209-57 | s IC TC4869F |
| IC207 | 8-759-669-45 | s IC TL062CPWR-12 |
| IC208 | 8-759-745-64 | s IC NJM4560M |
| IC209 | 8-759-082-60 | s IC TC7866FU |
| IC210 | 8-759-058-64 | s IC TC7832FU-TE85R |
| IC300 | 8-759-087-73 | s IC S-80745AN-D9-S |
| IC301 | 8-759-504-40 | s IC S80741AL-A5 |
| IC302 | 8-759-442-54 | s IC RH5RL50AA-T1 |
| IC303 | 8-759-442-54 | s IC RH5RL50AA-T1 |
| IC401 | 8-759-422-21 | s IC NJM4580VTE2 |
| IC403 | 8-759-422-21 | s IC NJM4580VTE2 |
| IC404 | 8-759-422-21 | s IC NJM4580VTE2 |
| IC405 | 8-759-422-21 | s IC NJM4580VTE2 |
| IC406 | 8-759-082-61 | s IC TC4W53FU |
| IC407 | 8-759-082-61 | s IC TC4W53FU |
| IC408 | 8-759-701-01 | s IC NJM2904M |
| IC409 | 8-759-111-56 | s IC UPC4572G2 |
| IC410 | 8-759-111-56 | s IC UPC4572G2 |

(FP-118A BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|-----------------------------|
| IC411 | 8-759-422-21 s | IC NJM4580VTE2 |
| IC412 | 8-759-422-21 s | IC NJM4580VTE2 |
| IC413 | 8-759-422-21 s | IC NJM4580VTE2 |
| IC414 | 8-759-422-21 s | IC NJM4580VTE2 |
| IC415 | 8-759-431-95 s | IC S-812308GUP-DQB-T1 |
| IC416 | 8-759-422-21 s | IC NJM4580VTE2 |
| IC601 | 8-759-745-64 s | IC NJM4560M |
| IC602 | 8-759-745-64 s | IC NJM4560M |
| IC605 | 8-759-530-28 s | IC TC4066BFT |
| IC606 | 8-759-745-64 s | IC NJM4560M |
| IC607 | 8-759-431-97 s | IC NJM386M(TE2) |
| IC701 | 8-759-194-97 s | IC NJM4560M-D(TE2) |
| IC705 | 8-759-530-05 s | IC TC4053BFT (EL.N) |
| IC801 | 8-759-058-62 s | IC TC7S08FU-TE85R |
| IC802 | 8-759-058-58 s | IC TC7S04FU-TE85R |
| IC803 | 8-759-236-51 s | IC TC74HC165AF (EL) |
| IC804 | 8-759-236-51 s | IC TC74HC165AF (EL) |
| L1 | 1-410-381-11 s | INDUCTOR,CHIP 10UH (3225) |
| L2 | 1-410-381-11 s | INDUCTOR,CHIP 10UH (3225) |
| L3 | 1-410-381-11 s | INDUCTOR,CHIP 10UH (3225) |
| L200 | 1-410-393-11 s | INDUCTOR,CHIP 100UH (3225) |
| L300 | 1-410-381-11 s | INDUCTOR,CHIP 10UH (3225) |
| L301 | 1-410-381-11 s | INDUCTOR,CHIP 10UH (3225) |
| L501 | 1-412-282-41 s | INDUCTOR,CHIP 470UH (3225) |
| L601 | 1-414-402-11 s | INDUCTOR (SMD) 47UH |
| L701 | 1-412-955-11 s | INDUCTOR 22UH (2520) |
| LI300 | 1-550-414-31 s | HOLDER, BATTERY |
| ND200 | 1-801-621-21 o | DISPLAY, LCD |
| PH401 | 1-808-252-11 s | PHOTO COUPLER M30 |
| Q1 | 8-729-106-60 s | TRANSISTOR 2SB1115A |
| Q2 | 8-729-042-52 s | TRANSISTOR IMT1AT108 |
| Q3 | 8-729-029-14 s | TRANSISTOR DTC144EUA-T106 |
| Q4 | 8-729-028-91 s | TRANSISTOR DTA144EUA-T106 |
| Q5 | 8-729-028-91 s | TRANSISTOR DTA144EUA-T106 |
| Q6 | 8-729-929-73 s | TRANSISTOR UMG8-TL |
| Q7 | 8-729-029-14 s | TRANSISTOR DTC144EUA-T106 |
| Q8 | 8-729-929-73 s | TRANSISTOR UMG8-TL |
| Q9 | 8-729-929-52 s | TRANSISTOR UMA9-TR |
| Q10 | 8-729-927-74 s | TRANSISTOR UMG2 |
| Q11 | 8-729-028-73 s | TRANSISTOR DTA114EUA-T106 |
| Q12 | 8-729-029-14 s | TRANSISTOR DTC144EUA-T106 |
| Q13 | 8-729-029-14 s | TRANSISTOR DTC144EUA-T106 |
| Q201 | 8-729-029-14 s | TRANSISTOR DTC144EUA-T106 |
| Q202 | 8-729-029-14 s | TRANSISTOR DTC144EUA-T106 |
| Q203 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q204 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q205 | 8-729-028-91 s | TRANSISTOR DTA144EUA-T106 |
| Q300 | 8-729-029-14 s | TRANSISTOR DTC144EUA-T106 |
| Q301 | 8-729-029-14 s | TRANSISTOR DTC144EUA-T106 |
| Q302 | 8-729-026-53 s | TRANSISTOR 2SA1576A-T106-QR |
| Q303 | 8-729-142-90 s | TRANSISTOR 2SK853-K5 |
| Q304 | 8-729-042-52 s | TRANSISTOR IMT1AT108 |
| Q305 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q306 | 8-729-907-26 s | TRANSISTOR IMX1 |
| Q307 | 8-729-042-52 s | TRANSISTOR IMT1AT108 |
| Q308 | 8-729-029-14 s | TRANSISTOR DTC144EUA-T106 |

(FP-118A BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|--------------------------------|
| Q401 | 8-729-014-86 s | TRANSISTOR 2SC4207-YGR-TE85L |
| Q402 | 8-729-014-86 s | TRANSISTOR 2SC4207-YGR-TE85L |
| Q403 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q404 | 8-729-026-53 s | TRANSISTOR 2SA1576A-T106-QR |
| Q405 | 8-729-026-53 s | TRANSISTOR 2SA1576A-T106-QR |
| Q406 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q407 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q408 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q409 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q410 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q411 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q412 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q413 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q414 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q415 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q501 | 8-729-029-14 s | TRANSISTOR DTC144EUA-T106 |
| Q502 | 6-550-002-01 s | TRANSISTOR IMB2AT110 |
| Q504 | 8-729-209-07 s | TRANSISTOR 2SC4213-B |
| Q505 | 8-729-209-07 s | TRANSISTOR 2SC4213-B |
| Q506 | 8-729-026-53 s | TRANSISTOR 2SA1576A-T106-QR |
| Q507 | 8-729-026-53 s | TRANSISTOR 2SA1576A-T106-QR |
| Q508 | 8-729-141-75 s | TRANSISTOR 2SD596DV345 |
| Q509 | 8-729-026-53 s | TRANSISTOR 2SA1576A-T106-QR |
| Q510 | 8-729-141-48 s | TRANSISTOR 2SB624-BV345 |
| Q511 | 8-729-029-14 s | TRANSISTOR DTC144EUA-T106 |
| Q512 | 8-729-141-75 s | TRANSISTOR 2SD596DV345 |
| Q513 | 8-729-029-14 s | TRANSISTOR DTC144EUA-T106 |
| Q514 | 8-729-141-75 s | TRANSISTOR 2SD596DV345 |
| Q515 | 8-729-029-14 s | TRANSISTOR DTC144EUA-T106 |
| Q516 | 8-729-209-07 s | TRANSISTOR 2SC4213-B |
| Q701 | 8-729-209-07 s | TRANSISTOR 2SC4213-B |
| Q702 | 8-729-209-07 s | TRANSISTOR 2SC4213-B |
| Q801 | 8-729-029-14 s | TRANSISTOR DTC144EUA-T106 |
| Q802 | 8-729-029-14 s | TRANSISTOR DTC144EUA-T106 |
| Q803 | 8-729-101-07 s | TRANSISTOR 2SB798 |
| Q804 | 8-729-140-63 s | TRANSISTOR 2SA1611-MSM6 |
| R1 | 1-216-849-11 s | RESISTOR,CHIP 220K 1/16W 1608 |
| R2 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R3 | 1-216-849-11 s | RESISTOR,CHIP 220K 1/16W 1608 |
| R4 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R5 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R6 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R7 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R8 | 1-216-827-11 s | RESISTOR,CHIP 3.3K 1/16W 1608 |
| R9 | 1-216-797-11 s | RESISTOR,CHIP 10 1/16W 1608 |
| R10 | 1-216-797-11 s | RESISTOR,CHIP 10 1/16W 1608 |
| R11 | 1-216-797-11 s | RESISTOR,CHIP 10 1/16W 1608 |
| R12 | 1-216-849-11 s | RESISTOR,CHIP 220K 1/16W 1608 |
| R13 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 |
| R14 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R15 | 1-216-823-11 s | RESISTOR,CHIP 1.5K 1/16W |
| R16 | 1-216-830-11 s | RESISTOR,CHIP 5.6K 1/16W 1608 |
| R17 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R18 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R19 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R20 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R21 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R22 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |

(FP-118A BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| R23 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R24 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R25 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R26 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R27 | 1-216-827-11 | s RESISTOR, CHIP 3.3K 1/16W 1608 |
| R28 | 1-216-827-11 | s RESISTOR, CHIP 3.3K 1/16W 1608 |
| R29 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R30 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R31 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R32 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R33 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R34 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R35 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R36 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R37 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R38 | 1-216-857-11 | s RESISTOR,CHIP 1M 1/16W(1608) |
| R39 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R40 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R41 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R42 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R43 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R44 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R45 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R47 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R48 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R49 | 1-216-857-11 | s RESISTOR,CHIP 1M 1/16W(1608) |
| R50 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R51 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R52 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R53 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R54 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R55 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R56 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R57 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R58 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R59 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R60 | 1-216-816-11 | s RESISTOR, CHIP 390 1/16W 1608 |
| R61 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R62 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R63 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R64 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R65 | 1-216-841-11 | s RESISTOR, CHIP 47K 1/16W 1608 |
| R66 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R67 | 1-216-815-11 | s RESISTOR,CHIP 330 1/16W 1608 |
| R68 | 1-216-815-11 | s RESISTOR,CHIP 330 1/16W 1608 |
| R69 | 1-216-815-11 | s RESISTOR,CHIP 330 1/16W 1608 |
| R70 | 1-216-817-11 | s RESISTOR,CHIP 470 1/16W 1608 |
| R71 | 1-216-815-11 | s RESISTOR,CHIP 330 1/16W 1608 |
| R72 | 1-216-820-11 | s RESISTOR, CHIP 820 1/16W 1608 |
| R73 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R74 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R75 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R76 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R77 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R78 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R79 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R80 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R81 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R82 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |

(FP-118A BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| R83 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R84 | 1-216-817-11 | s RESISTOR,CHIP 470 1/16W 1608 |
| R85 | 1-216-817-11 | s RESISTOR,CHIP 470 1/16W 1608 |
| R86 | 1-216-817-11 | s RESISTOR,CHIP 470 1/16W 1608 |
| R87 | 1-216-817-11 | s RESISTOR,CHIP 470 1/16W 1608 |
| R88 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R89 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R90 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R91 | 1-216-841-11 | s RESISTOR, CHIP 47K 1/16W 1608 |
| R92 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R93 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R94 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R95 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R200 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R201 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R202 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R203 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R204 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R205 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R206 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R207 | 1-216-851-11 | s RESISTOR,CHIP 330K 1/16W 1608 |
| R208 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R209 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R210 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R211 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R212 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R213 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R214 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R215 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R216 | 1-216-861-11 | s RESISTOR,CHIP 2.2M 1/16W 1608 |
| R217 | 1-216-837-11 | s RESISTOR,CHIP 22K 1/16W 1608 |
| R218 | 1-216-837-11 | s RESISTOR,CHIP 22K 1/16W 1608 |
| R219 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R220 | 1-216-827-11 | s RESISTOR, CHIP 3.3K 1/16W 1608 |
| R221 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R222 | 1-216-838-11 | s RESISTOR CHIP 27K 1/16W(1608) |
| R223 | 1-216-827-11 | s RESISTOR, CHIP 3.3K 1/16W 1608 |
| R224 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R225 | 1-216-838-11 | s RESISTOR CHIP 27K 1/16W(1608) |
| R226 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R227 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R228 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R229 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R230 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R231 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R232 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R233 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R234 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R235 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R236 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R237 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R238 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R239 | 1-218-890-11 | s RESISTOR, CHIP 62K 1/16W(1608) |
| R240 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R241 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R242 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R243 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R244 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R245 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |

(FP-118A BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-----------------------------------|
| R246 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R247 | 1-216-857-11 | s RESISTOR, CHIP 1M 1/16W(1608) |
| R248 | 1-216-815-11 | s RESISTOR, CHIP 330 1/16W 1608 |
| R249 | 1-216-845-11 | s RESISTOR, CHIP 100K 1/16W(1608) |
| R250 | 1-216-857-11 | s RESISTOR, CHIP 1M 1/16W(1608) |
| R251 | 1-216-841-11 | s RESISTOR, CHIP 47K 1/16W 1608 |
| R252 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| R253 | 1-216-845-11 | s RESISTOR, CHIP 100K 1/16W(1608) |
| R254 | 1-216-845-11 | s RESISTOR, CHIP 100K 1/16W(1608) |
| R255 | 1-216-839-11 | s RESISTOR, CHIP 33K 1/16W 1608 |
| R256 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R257 | 1-218-882-11 | s RESISTOR, CHIP 30K 1/16W(1608) |
| R258 | 1-218-858-11 | s RESISTOR, CHIP 3K 1/16W (1608) |
| R259 | 1-218-851-11 | s RESISTOR, CHIP 1.5K 1/16W(1608) |
| R260 | 1-216-841-11 | s RESISTOR, CHIP 47K 1/16W 1608 |
| R261 | 1-211-990-11 | s RESISTOR, CHIP 75 1/16W (1608) |
| R262 | 1-216-826-11 | s RESISTOR, CHIP 2.7K 1/16W(1608) |
| R263 | 1-216-826-11 | s RESISTOR, CHIP 2.7K 1/16W(1608) |
| R264 | 1-216-809-11 | s RESISTOR, CHIP 100 1/16W 1608 |
| R265 | 1-216-826-11 | s RESISTOR, CHIP 2.7K 1/16W(1608) |
| R266 | 1-216-826-11 | s RESISTOR, CHIP 2.7K 1/16W(1608) |
| R267 | 1-216-809-11 | s RESISTOR, CHIP 100 1/16W 1608 |
| R268 | 1-216-821-11 | s RESISTOR, CHIP 1.0K 1/16W(1608) |
| R269 | 1-218-880-11 | s RESISTOR, CHIP 24K 1/16W (1608) |
| R270 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| R271 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| R272 | 1-216-821-11 | s RESISTOR, CHIP 1.0K 1/16W(1608) |
| R273 | 1-216-821-11 | s RESISTOR, CHIP 1.0K 1/16W(1608) |
| R274 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| R275 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| R276 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| R277 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| R278 | 1-216-821-11 | s RESISTOR, CHIP 1.0K 1/16W(1608) |
| R279 | 1-216-821-11 | s RESISTOR, CHIP 1.0K 1/16W(1608) |
| R280 | 1-216-821-11 | s RESISTOR, CHIP 1.0K 1/16W(1608) |
| R281 | 1-216-821-11 | s RESISTOR, CHIP 1.0K 1/16W(1608) |
| R282 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| R283 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| R300 | 1-216-833-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R301 | 1-216-843-11 | s RESISTOR, CHIP 68K 1/16W (1608) |
| R302 | 1-216-839-11 | s RESISTOR, CHIP 33K 1/16W 1608 |
| R303 | 1-216-841-11 | s RESISTOR, CHIP 47K 1/16W 1608 |
| R304 | 1-216-861-11 | s RESISTOR, CHIP 2.2M 1/16W 1608 |
| R305 | 1-216-861-11 | s RESISTOR, CHIP 2.2M 1/16W 1608 |
| R306 | 1-216-821-11 | s RESISTOR, CHIP 1.0K 1/16W(1608) |
| R307 | 1-216-809-11 | s RESISTOR, CHIP 100 1/16W 1608 |
| R308 | 1-216-845-11 | s RESISTOR, CHIP 100K 1/16W(1608) |
| R309 | 1-216-845-11 | s RESISTOR, CHIP 100K 1/16W(1608) |
| R310 | 1-216-833-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R311 | 1-216-851-11 | s RESISTOR, CHIP 330K 1/16W 1608 |
| R312 | 1-216-845-11 | s RESISTOR, CHIP 100K 1/16W(1608) |
| R313 | 1-216-845-11 | s RESISTOR, CHIP 100K 1/16W(1608) |
| R314 | 1-216-845-11 | s RESISTOR, CHIP 100K 1/16W(1608) |
| R315 | 1-216-821-11 | s RESISTOR, CHIP 1.0K 1/16W(1608) |
| R316 | 1-216-852-11 | s RESISTOR, CHIP 390K 1/16W 1608 |
| R317 | 1-216-845-11 | s RESISTOR, CHIP 100K 1/16W(1608) |
| R318 | 1-216-838-11 | s RESISTOR, CHIP 27K 1/16W(1608) |
| R319 | 1-216-857-11 | s RESISTOR, CHIP 1M 1/16W(1608) |
| R320 | 1-216-857-11 | s RESISTOR, CHIP 1M 1/16W(1608) |

(FP-118A BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-----------------------------------|
| R321 | 1-216-855-11 | s RESISTOR, CHIP 680K 1/16W 1608 |
| R322 | 1-216-855-11 | s RESISTOR, CHIP 680K 1/16W 1608 |
| R323 | 1-216-845-11 | s RESISTOR, CHIP 100K 1/16W(1608) |
| R324 | 1-216-841-11 | s RESISTOR, CHIP 47K 1/16W 1608 |
| R325 | 1-216-841-11 | s RESISTOR, CHIP 47K 1/16W 1608 |
| R326 | 1-216-797-11 | s RESISTOR, CHIP 10 1/16W 1608 |
| R327 | 1-216-809-11 | s RESISTOR, CHIP 100 1/16W 1608 |
| R328 | 1-216-809-11 | s RESISTOR, CHIP 100 1/16W 1608 |
| R329 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R330 | 1-216-821-11 | s RESISTOR, CHIP 1.0K 1/16W(1608) |
| R331 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R332 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| R333 | 1-216-845-11 | s RESISTOR, CHIP 100K 1/16W(1608) |
| R401 | 1-218-848-11 | s RESISTOR, CHIP 1.1K 1/16W(1608) |
| R402 | 1-218-848-11 | s RESISTOR, CHIP 1.1K 1/16W(1608) |
| R404 | 1-218-848-11 | s RESISTOR, CHIP 1.1K 1/16W(1608) |
| R405 | 1-218-848-11 | s RESISTOR, CHIP 1.1K 1/16W(1608) |
| R406 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R407 | 1-218-855-11 | s RESISTOR, CHIP 2.2K 1/16W(1608) |
| R408 | 1-218-855-11 | s RESISTOR, CHIP 2.2K 1/16W(1608) |
| R412 | 1-218-855-11 | s RESISTOR, CHIP 2.2K 1/16W(1608) |
| R413 | 1-218-855-11 | s RESISTOR, CHIP 2.2K 1/16W(1608) |
| R414 | 1-216-829-11 | s RESISTOR, CHIP 4.7K 1/16W(1608) |
| R415 | 1-216-829-11 | s RESISTOR, CHIP 4.7K 1/16W(1608) |
| R416 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R417 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R420 | 1-218-872-11 | s RESISTOR, CHIP 11K 1/16W (1608) |
| R421 | 1-218-872-11 | s RESISTOR, CHIP 11K 1/16W (1608) |
| R423 | 1-218-879-11 | s RESISTOR, CHIP 22K 1/16W (1608) |
| R425 | 1-218-866-11 | s RESISTOR, CHIP 6.2K 1/16W(1608) |
| R426 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R427 | 1-218-866-11 | s RESISTOR, CHIP 6.2K 1/16W(1608) |
| R428 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R429 | 1-218-879-11 | s RESISTOR, CHIP 22K 1/16W (1608) |
| R430 | 1-218-863-11 | s RESISTOR, CHIP 4.7K 1/16W(1608) |
| R431 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R432 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R433 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R434 | 1-218-887-11 | s RESISTOR, CHIP 47K 1/16W (1608) |
| R435 | 1-216-833-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R436 | 1-216-809-11 | s RESISTOR, CHIP 100 1/16W 1608 |
| R437 | 1-216-833-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R438 | 1-216-845-11 | s RESISTOR, CHIP 100K 1/16W(1608) |
| R439 | 1-216-837-11 | s RESISTOR, CHIP 22K 1/16W 1608 |
| R440 | 1-218-839-11 | s RESISTOR, CHIP 470 1/16W (1608) |
| R441 | 1-218-839-11 | s RESISTOR, CHIP 470 1/16W (1608) |
| R442 | 1-211-990-11 | s RESISTOR, CHIP 75 1/16W (1608) |
| R443 | 1-218-845-11 | s RESISTOR, CHIP 820 1/16W (1608) |
| R444 | 1-216-829-11 | s RESISTOR, CHIP 4.7K 1/16W(1608) |
| R445 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R446 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R447 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R448 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R451 | 1-216-833-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R452 | 1-216-833-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R453 | 1-216-821-11 | s RESISTOR, CHIP 1.0K 1/16W(1608) |
| R454 | 1-216-821-11 | s RESISTOR, CHIP 1.0K 1/16W(1608) |
| R455 | 1-216-829-11 | s RESISTOR, CHIP 4.7K 1/16W(1608) |
| R456 | 1-216-833-11 | s RESISTOR, CHIP 10K 1/16W (1608) |

(FP-118A BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|---------------------------------|
| R457 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R458 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R459 | 1-216-801-11 s | RESISTOR,CHIP 22 1/16W (1608) |
| R460 | 1-216-801-11 s | RESISTOR,CHIP 22 1/16W (1608) |
| R461 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R462 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R463 | 1-218-885-11 s | RESISTOR,CHIP 39K 1/16W (1608) |
| R464 | 1-216-837-11 s | RESISTOR,CHIP 22K 1/16W 1608 |
| R467 | 1-218-878-11 s | RESISTOR,CHIP 20K 1/16W (1608) |
| R468 | 1-218-839-11 s | RESISTOR,CHIP 470 1/16W (1608) |
| R469 | 1-218-878-11 s | RESISTOR,CHIP 20K 1/16W (1608) |
| R470 | 1-218-839-11 s | RESISTOR,CHIP 470 1/16W (1608) |
| R471 | 1-216-846-11 s | RESISTOR,CHIP 120K 1/16W (1608) |
| R472 | 1-218-907-11 s | RESISTOR,CHIP 330K 1/16W(1608) |
| R474 | 1-218-863-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R475 | 1-216-841-11 s | RESISTOR, CHIP 47K 1/16W 1608 |
| R476 | 1-218-863-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R477 | 1-216-841-11 s | RESISTOR, CHIP 47K 1/16W 1608 |
| R478 | 1-218-871-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R479 | 1-218-871-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R480 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R481 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R482 | 1-218-878-11 s | RESISTOR,CHIP 20K 1/16W (1608) |
| R483 | 1-218-878-11 s | RESISTOR,CHIP 20K 1/16W (1608) |
| R484 | 1-218-855-11 s | RESISTOR,CHIP 2.2K 1/16W(1608) |
| R485 | 1-218-855-11 s | RESISTOR,CHIP 2.2K 1/16W(1608) |
| R486 | 1-218-878-11 s | RESISTOR,CHIP 20K 1/16W (1608) |
| R487 | 1-218-857-11 s | RESISTOR,CHIP 2.7K 1/16W(1608) |
| R488 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R489 | 1-218-878-11 s | RESISTOR,CHIP 20K 1/16W (1608) |
| R490 | 1-218-857-11 s | RESISTOR,CHIP 2.7K 1/16W(1608) |
| R491 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R492 | 1-216-864-11 s | CONDUCTOR, CHIP (1608) |
| R493 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R494 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R497 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R498 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R499 | 1-216-849-11 s | RESISTOR,CHIP 220K 1/16W 1608 |
| R500 | 1-216-849-11 s | RESISTOR,CHIP 220K 1/16W 1608 |
| R501 | 1-216-817-11 s | RESISTOR,CHIP 470 1/16W 1608 |
| R502 | 1-216-817-11 s | RESISTOR,CHIP 470 1/16W 1608 |
| R503 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R504 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R505 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R506 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R507 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R508 | 1-218-879-11 s | RESISTOR,CHIP 22K 1/16W (1608) |
| R510 | 1-218-856-11 s | RESISTOR,CHIP 2.4K 1/16W(1608) |
| R512 | 1-218-856-11 s | RESISTOR,CHIP 2.4K 1/16W(1608) |
| R513 | 1-218-863-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R514 | 1-218-863-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R515 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R516 | 1-216-864-11 s | CONDUCTOR, CHIP (1608) |
| R517 | 1-216-864-11 s | CONDUCTOR, CHIP (1608) |
| R518 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R522 | 1-218-872-11 s | RESISTOR,CHIP 11K 1/16W (1608) |
| R523 | 1-218-872-11 s | RESISTOR,CHIP 11K 1/16W (1608) |
| R524 | 1-218-879-11 s | RESISTOR,CHIP 22K 1/16W (1608) |
| R601 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |

(FP-118A BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|--------------------------------|
| R602 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R603 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R604 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R605 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R608 | 1-218-855-11 s | RESISTOR,CHIP 2.2K 1/16W(1608) |
| R609 | 1-218-855-11 s | RESISTOR,CHIP 2.2K 1/16W(1608) |
| R610 | 1-218-851-11 s | RESISTOR,CHIP 1.5K 1/16W(1608) |
| R611 | 1-218-859-11 s | RESISTOR,CHIP 3.3K 1/16W(1608) |
| R612 | 1-218-859-11 s | RESISTOR,CHIP 3.3K 1/16W(1608) |
| R613 | 1-218-857-11 s | RESISTOR,CHIP 2.7K 1/16W(1608) |
| R614 | 1-218-857-11 s | RESISTOR,CHIP 2.7K 1/16W(1608) |
| R615 | 1-218-847-11 s | RESISTOR, CHIP 1K 1/16W (1608) |
| R616 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R617 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R618 | 1-218-855-11 s | RESISTOR,CHIP 2.2K 1/16W(1608) |
| R619 | 1-218-871-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R620 | 1-218-871-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R621 | 1-218-871-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R622 | 1-218-871-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R623 | 1-218-855-11 s | RESISTOR,CHIP 2.2K 1/16W(1608) |
| R624 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R625 | 1-216-817-11 s | RESISTOR,CHIP 470 1/16W 1608 |
| R626 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R627 | 1-216-817-11 s | RESISTOR,CHIP 470 1/16W 1608 |
| R628 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R629 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R630 | 1-218-877-11 s | RESISTOR,CHIP 18K 1/16W (1608) |
| R631 | 1-218-873-11 s | RESISTOR,CHIP 12K 1/16W (1608) |
| R632 | 1-218-881-11 s | RESISTOR, CHIP 27K 1/16W(1608) |
| R633 | 1-218-903-11 s | RESISTOR,CHIP 220K 1/16W(1608) |
| R635 | 1-216-864-11 s | CONDUCTOR, CHIP (1608) |
| R636 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R637 | 1-218-861-11 s | RESISTOR,CHIP 3.9K 1/16W(1608) |
| R638 | 1-218-827-11 s | RESISTOR,CHIP 150 1/16W (1608) |
| R639 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 |
| R640 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R641 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R642 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R643 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R644 | 1-216-864-11 s | CONDUCTOR, CHIP (1608) |
| R645 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R646 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R647 | 1-216-797-11 s | RESISTOR,CHIP 10 1/16W 1608 |
| R649 | 1-216-864-11 s | CONDUCTOR, CHIP (1608) |
| R650 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R651 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R652 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R653 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R654 | 1-211-969-11 s | RESISTOR,CHIP 10 1/16W (1608) |
| R656 | 1-216-864-11 s | CONDUCTOR, CHIP (1608) |
| R657 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R658 | 1-216-841-11 s | RESISTOR, CHIP 47K 1/16W 1608 |
| R659 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R660 | 1-218-476-11 s | RESISTOR, CHIP 180 1/4W (3225) |
| R661 | 1-218-866-11 s | RESISTOR,CHIP 6.2K 1/16W(1608) |
| R702 | 1-218-863-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R703 | 1-218-849-11 s | RESISTOR,CHIP 1.2K 1/16W(1608) |
| R705 | 1-218-863-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R707 | 1-218-861-11 s | RESISTOR,CHIP 3.9K 1/16W(1608) |

(FP-118A BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-------------------------------------|
| R708 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| R715 | 1-216-841-11 | s RESISTOR, CHIP 47K 1/16W 1608 |
| R717 | 1-216-841-11 | s RESISTOR, CHIP 47K 1/16W 1608 |
| R718 | 1-218-849-11 | s RESISTOR, CHIP 1.2K 1/16W (1608) |
| R719 | 1-218-849-11 | s RESISTOR, CHIP 1.2K 1/16W (1608) |
| R720 | 1-216-821-11 | s RESISTOR, CHIP 1.0K 1/16W (1608) |
| R721 | 1-216-833-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R722 | 1-216-841-11 | s RESISTOR, CHIP 47K 1/16W 1608 |
| R728 | 1-216-841-11 | s RESISTOR, CHIP 47K 1/16W 1608 |
| R729 | 1-216-829-11 | s RESISTOR, CHIP 4.7K 1/16W (1608) |
| R730 | 1-216-829-11 | s RESISTOR, CHIP 4.7K 1/16W (1608) |
| R731 | 1-216-841-11 | s RESISTOR, CHIP 47K 1/16W 1608 |
| R733 | 1-211-969-11 | s RESISTOR, CHIP 10 1/16W (1608) |
| R736 | 1-211-969-11 | s RESISTOR, CHIP 10 1/16W (1608) |
| R738 | 1-211-969-11 | s RESISTOR, CHIP 10 1/16W (1608) |
| R801 | 1-216-805-11 | s RESISTOR, CHIP 47 1/16W 1608 |
| R802 | 1-216-805-11 | s RESISTOR, CHIP 47 1/16W 1608 |
| R803 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| R804 | 1-218-740-11 | s RESISTOR, CHIP 100K 1/16W (1608) |
| R805 | 1-219-365-11 | s RESISTOR, CHIP |
| R806 | 1-218-740-11 | s RESISTOR, CHIP 100K 1/16W (1608) |
| R807 | 1-218-692-11 | s RESISTOR, CHIP 1.0K 1/16W (1608) |
| R808 | 1-218-740-11 | s RESISTOR, CHIP 100K 1/16W (1608) |
| R809 | 1-218-740-11 | s RESISTOR, CHIP 100K 1/16W (1608) |
| R812 | 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| RB1 | 1-236-907-11 | s RESISTOR BLOCK 100K (1608) |
| RB2 | 1-236-904-11 | s RESISTOR NETWORK 1K (1608) |
| RB3 | 1-239-444-11 | s NETWORK, RESISTOR 220K (1608) |
| RB4 | 1-239-444-11 | s NETWORK, RESISTOR 220K (1608) |
| RB5 | 1-236-904-11 | s RESISTOR NETWORK 1K (1608) |
| RB6 | 1-236-904-11 | s RESISTOR NETWORK 1K (1608) |
| RB7 | 1-239-444-11 | s NETWORK, RESISTOR 220K (1608) |
| RB8 | 1-239-444-11 | s NETWORK, RESISTOR 220K (1608) |
| RB9 | 1-239-444-11 | s NETWORK, RESISTOR 220K (1608) |
| RB10 | 1-239-412-11 | s NETWORK, RESISTOR 100 (1608) |
| RB11 | 1-239-412-11 | s NETWORK, RESISTOR 100 (1608) |
| RB12 | 1-236-904-11 | s RESISTOR NETWORK 1K (1608) |
| RB202 | 1-239-711-11 | s NETWORK, RESISTOR 0 (1608) |
| RB203 | 1-239-310-11 | s RESISTOR ARRAY, CHIP 220K |
| RB204 | 1-239-310-11 | s RESISTOR ARRAY, CHIP 220K |
| RB207 | 1-239-444-11 | s NETWORK, RESISTOR 220K (1608) |
| RB208 | 1-239-426-11 | s NETWORK RESISTOR 2.2K (1608) |
| RB209 | 1-239-426-11 | s NETWORK RESISTOR 2.2K (1608) |
| RB210 | 1-239-426-11 | s NETWORK RESISTOR 2.2K (1608) |
| RB211 | 1-239-426-11 | s NETWORK RESISTOR 2.2K (1608) |
| RB212 | 1-239-426-11 | s NETWORK RESISTOR 2.2K (1608) |
| RB801 | 1-239-621-11 | s NETWORK RESISTOR 22 (1608) |
| RB802 | 1-239-444-11 | s NETWORK, RESISTOR 220K (1608) |
| RB803 | 1-236-908-11 | s RESISTOR, NETWORK 10K (3216) |
| RB804 | 1-236-908-11 | s RESISTOR, NETWORK 10K (3216) |
| RB805 | 1-239-444-11 | s NETWORK, RESISTOR 220K (1608) |
| RB806 | 1-239-444-11 | s NETWORK, RESISTOR 220K (1608) |
| RB807 | 1-236-908-11 | s RESISTOR, NETWORK 10K (3216) |
| RB808 | 1-236-908-11 | s RESISTOR, NETWORK 10K (3216) |
| RB809 | 1-239-444-11 | s NETWORK, RESISTOR 220K (1608) |
| RV401 | 1-230-337-11 | s RESISTOR, VAR, CARBON 10K |
| RV402 | 1-230-337-11 | s RESISTOR, VAR, CARBON 10K |
| RV403 | 1-225-907-11 | s RESISTOR ADJ, CERMET (3TYPE) 100K |
| RV601 | 1-225-903-11 | s RESISTOR ADJ, CERMET 22K |

(FP-118A BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|--------------------------------|
| RV602 | 1-225-903-11 | s RESISTOR ADJ, CERMET 22K |
| RV603 | 1-230-337-11 | s RESISTOR, VAR, CARBON 10K |
| RV604 | 1-230-337-11 | s RESISTOR, VAR, CARBON 10K |
| S1 | 1-570-909-11 | s SWITCH, TACTIL (REFLOW TYPE) |
| S2 | 1-570-909-11 | s SWITCH, TACTIL (REFLOW TYPE) |
| S3 | 1-570-909-11 | s SWITCH, TACTIL (REFLOW TYPE) |
| S4 | 1-570-909-11 | s SWITCH, TACTIL (REFLOW TYPE) |
| S5 | 1-771-141-11 | s SWITCH, SLIDE |
| S6 | 1-771-141-11 | s SWITCH, SLIDE |
| S200 | 1-570-832-11 | s SWITCH, SLIDE (2-2-3) |
| S201 | 1-570-909-11 | s SWITCH, TACTIL (REFLOW TYPE) |
| S203 | 1-570-838-11 | s SWITCH, SLIDE (2-2-2) |
| S401 | 1-771-323-11 | s SWITCH, SLIDE |
| S402 | 1-771-323-11 | s SWITCH, SLIDE |
| S403 | 1-771-140-11 | s SWITCH, SLIDE |
| S404 | 1-771-140-11 | s SWITCH, SLIDE |
| S501 | 1-771-323-11 | s SWITCH, SLIDE |
| S801 | 1-771-141-11 | s SWITCH, SLIDE |
| S802 | 1-570-909-11 | s SWITCH, TACTIL (REFLOW TYPE) |
| S803 | 1-771-140-11 | s SWITCH, SLIDE |
| S804 | 1-771-140-11 | s SWITCH, SLIDE |
| S805 | 1-771-140-11 | s SWITCH, SLIDE |
| S806 | 1-771-140-11 | s SWITCH, SLIDE |
| S807 | 1-771-140-11 | s SWITCH, SLIDE |
| S808 | 1-771-141-11 | s SWITCH, SLIDE |
| S809 | 1-771-140-11 | s SWITCH, SLIDE |
| S810 | 1-570-909-11 | s SWITCH, TACTIL (REFLOW TYPE) |
| S811 | 1-570-711-11 | s SWITCH, SLIDE |
| TP1 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP2 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP200 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP201 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP401 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP402 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP601 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP602 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP603 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| X1 | 1-760-655-21 | s VIBRATOR, CRYSTAL |
| X2 | 1-760-655-21 | s VIBRATOR, CRYSTAL |
| X200 | 1-579-843-11 | s OSCILLATOR, CRYSTAL |
| X201 | 1-760-458-21 | s VIBRATOR, CRYSTAL |
| X202 | 1-760-272-22 | s VIBRATOR, CRYSTAL |

FP-122 BOARD

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|------------------------------------|
| 1pc | A-8324-994-A | o MOUNTED CIRCUIT BOARD, FP-122 |
| 1pc | 3-604-372-01 | o SPACER LCD (ABS) |
| 1pc | 3-679-501-01 | o COVER, RUBBER KEY BOARD |
| 2pcs | 7-685-102-19 | s SCREW +PTP2X4 |
| C1 | 1-126-394-11 | s CAPACITOR, ELECT 10MF/16V (CHIP) |
| C2 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C3 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C4 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C5 | 1-126-394-11 | s CAPACITOR, ELECT 10MF/16V (CHIP) |
| C7 | 1-126-394-11 | s CAPACITOR, ELECT 10MF/16V (CHIP) |
| C8 | 1-126-394-11 | s CAPACITOR, ELECT 10MF/16V (CHIP) |
| C9 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C10 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C11 | 1-162-912-11 | s CAPACITOR, CERAMIC 7PF/50V 1608 |
| C12 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C13 | 1-162-912-11 | s CAPACITOR, CERAMIC 7PF/50V 1608 |
| C14 | 1-162-912-11 | s CAPACITOR, CERAMIC 7PF/50V 1608 |
| C15 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C16 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C17 | 1-162-912-11 | s CAPACITOR, CERAMIC 7PF/50V 1608 |
| C18 | 1-126-394-11 | s CAPACITOR, ELECT 10MF/16V (CHIP) |
| C19 | 1-126-394-11 | s CAPACITOR, ELECT 10MF/16V (CHIP) |
| C20 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C21 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C200 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C201 | 1-126-394-11 | s CAPACITOR, ELECT 10MF/16V (CHIP) |
| C202 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C203 | 1-126-394-11 | s CAPACITOR, ELECT 10MF/16V (CHIP) |
| C204 | 1-162-918-11 | s CAPACITOR, CERAMIC 18PF/50V CH |
| C205 | 1-162-917-11 | s CAPACITOR, CERAMIC 15PF/50V CH |
| C206 | 1-162-918-11 | s CAPACITOR, CERAMIC 18PF/50V CH |
| C207 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C208 | 1-126-394-11 | s CAPACITOR, ELECT 10MF/16V (CHIP) |
| C209 | 1-126-397-11 | s CAPACITOR, ELECT 33MF/25V (CHIP) |
| C210 | 1-126-397-11 | s CAPACITOR, ELECT 33MF/25V (CHIP) |
| C211 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C212 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C213 | 1-164-739-11 | s CAPACITOR, CERAMIC 560PF (1608) |
| C214 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C215 | 1-126-394-11 | s CAPACITOR, ELECT 10MF/16V (CHIP) |
| C216 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C217 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C218 | 1-162-919-11 | s CAPACITOR, CERAMIC 22PF/50V CH |
| C219 | 1-162-919-11 | s CAPACITOR, CERAMIC 22PF/50V CH |
| C220 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C221 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C222 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C223 | 1-165-112-11 | s CAPACITOR, CERAMIC 0.33MF/16V F |
| C224 | 1-113-642-11 | s CAPACITOR, TANTALUM 47MF/10V |
| C225 | 1-164-730-11 | s CAPACITOR, CERAMIC 1200RF (M-) |
| C226 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C227 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C228 | 1-113-642-11 | s CAPACITOR, TANTALUM 47MF/10V |
| C229 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C300 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C301 | 1-126-394-11 | s CAPACITOR, ELECT 10MF/16V (CHIP) |
| C302 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C303 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C304 | 1-126-394-11 | s CAPACITOR, ELECT 10MF/16V (CHIP) |

(FP-122 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|------------------------------------|
| C305 | 1-126-392-11 | s CAPACITOR, CHIP ELECT 100MF/6.3V |
| C306 | 1-126-394-11 | s CAPACITOR, ELECT 10MF/16V (CHIP) |
| C307 | 1-126-402-11 | s CAPACITOR, ELECT 2.2MF/50V |
| C308 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C309 | 1-126-402-11 | s CAPACITOR, ELECT 2.2MF/50V |
| C310 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C311 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C312 | 1-126-395-11 | s CAPACITOR, ELECT 22MF/16V (CHIP) |
| C313 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C314 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C315 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C316 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C317 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C318 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C401 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C402 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C403 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C404 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C405 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C406 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C407 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C408 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C409 | 1-113-500-11 | s CAPACITOR, TANTALUM 100MF/10V |
| C410 | 1-113-500-11 | s CAPACITOR, TANTALUM 100MF/10V |
| C411 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C412 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C413 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C414 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C415 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C416 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C417 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C418 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C419 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C420 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C421 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C422 | 1-113-500-11 | s CAPACITOR, TANTALUM 100MF/10V |
| C423 | 1-162-921-11 | s CAPACITOR, CERAMIC 33PF/50V CH |
| C424 | 1-162-921-11 | s CAPACITOR, CERAMIC 33PF/50V CH |
| C425 | 1-113-642-11 | s CAPACITOR, TANTALUM 47MF/10V |
| C426 | 1-113-642-11 | s CAPACITOR, TANTALUM 47MF/10V |
| C427 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C428 | 1-126-394-11 | s CAPACITOR, ELECT 10MF/16V (CHIP) |
| C429 | 1-126-394-11 | s CAPACITOR, ELECT 10MF/16V (CHIP) |
| C430 | 1-162-923-11 | s CAPACITOR, CERAMIC 47PF/50V CH |
| C431 | 1-162-923-11 | s CAPACITOR, CERAMIC 47PF/50V CH |
| C434 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C435 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C436 | 1-135-210-11 | s CAPACITOR, TANTALUM 4.7MF/10V |
| C437 | 1-135-210-11 | s CAPACITOR, TANTALUM 4.7MF/10V |
| C438 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C439 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C440 | 1-113-642-11 | s CAPACITOR, TANTALUM 47MF/10V |
| C441 | 1-113-642-11 | s CAPACITOR, TANTALUM 47MF/10V |
| C442 | 1-126-393-11 | s CAPACITOR, ELECT 33MF/10V (CHIP) |
| C443 | 1-113-500-11 | s CAPACITOR, TANTALUM 100MF/10V |
| C444 | 1-113-500-11 | s CAPACITOR, TANTALUM 100MF/10V |
| C445 | 1-115-154-11 | s CAPACITOR, ELECT 10MF/16V (BP) |
| C446 | 1-115-154-11 | s CAPACITOR, ELECT 10MF/16V (BP) |
| C447 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |

(FP-122 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|------------------------------------|
| C448 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C449 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C451 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C453 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C454 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C455 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C456 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C457 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C601 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C602 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C603 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C604 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C605 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C606 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C607 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C608 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C609 | 1-104-852-11 | s CAPACITOR, TANTALUM 22MF/10V |
| C610 | 1-113-500-11 | s CAPACITOR, TANTALUM 100MF/10V |
| C611 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C613 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C614 | 1-126-393-11 | s CAPACITOR, ELECT 33MF/10V (CHIP) |
| C615 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C616 | 1-126-393-11 | s CAPACITOR, ELECT 33MF/10V (CHIP) |
| C617 | 1-113-642-11 | s CAPACITOR, TANTALUM 47MF/10V |
| C618 | 1-126-395-11 | s CAPACITOR, ELECT 22MF/16V (CHIP) |
| C619 | 1-126-412-11 | s CAPACITOR, ELECT 220MF/4V (CHIP) |
| C620 | 1-165-176-11 | s CAPACITOR, CERAMIC 47000PF/16V |
| C621 | 1-113-500-11 | s CAPACITOR, TANTALUM 100MF/10V |
| C622 | 1-113-500-11 | s CAPACITOR, TANTALUM 100MF/10V |
| C623 | 1-126-394-11 | s CAPACITOR, ELECT 10MF/16V (CHIP) |
| C624 | 1-164-346-11 | s CAPACITOR, CHIP CERAMIC 1MF/16V |
| C625 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C706 | 1-126-394-11 | s CAPACITOR, ELECT 10MF/16V (CHIP) |
| C707 | 1-126-394-11 | s CAPACITOR, ELECT 10MF/16V (CHIP) |
| C718 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C719 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C801 | 1-126-394-11 | s CAPACITOR, ELECT 10MF/16V (CHIP) |
| C802 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C804 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| CN1 | 1-778-652-11 | o CONNECTOR, FFC (ZIF) 50P |
| CN2 | 1-778-652-11 | o CONNECTOR, FFC (ZIF) 50P |
| CN3 | 1-778-651-11 | o CONNECTOR, FFC (ZIF) 40P |
| CN4 | 1-695-931-11 | o CONNECTOR, FPC (10P) |
| CN5 | 1-580-056-21 | o PIN, CONNECTOR 3P |
| CN8 | 1-695-931-11 | o CONNECTOR, FPC (10P) |
| CV200 | 1-141-345-11 | s CAPACITOR, TRIMMER (CHIP) 40PF |
| D1 | 8-719-059-49 | s LED EBR3368S |
| D200 | 8-719-938-72 | s DIODE SB01-05CP (RECTI) |
| D201 | 8-719-106-31 | s DIODE RD8.2M-B1 |
| D202 | 8-719-105-90 | s DIODE RD5.6M-B1 |
| D203 | 8-719-106-61 | s DIODE RD11M-B1 |
| D204 | 8-719-105-90 | s DIODE RD5.6M-B1 |
| D205 | 8-719-059-52 | s DIODE MA3J14300LSO |
| D206 | 8-719-059-52 | s DIODE MA3J14300LSO |
| D207 | 8-719-105-28 | s DIODE RD2.4M-B |
| D208 | 8-719-105-28 | s DIODE RD2.4M-B |
| D209 | 8-719-987-41 | s LED CL-150Y-CD |

(FP-122 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-------------------------------|
| D210 | 8-719-987-41 | s LED CL-150Y-CD |
| D211 | 8-719-987-41 | s LED CL-150Y-CD |
| D212 | 8-719-987-41 | s LED CL-150Y-CD |
| D213 | 8-719-987-41 | s LED CL-150Y-CD |
| D214 | 8-719-987-41 | s LED CL-150Y-CD |
| D215 | 8-719-987-41 | s LED CL-150Y-CD |
| D216 | 8-719-987-41 | s LED CL-150Y-CD |
| D217 | 8-719-820-41 | s DIODE 1SS302 |
| D300 | 8-719-938-72 | s DIODE SB01-05CP (RECTI) |
| D301 | 8-719-938-72 | s DIODE SB01-05CP (RECTI) |
| D302 | 8-719-938-72 | s DIODE SB01-05CP (RECTI) |
| D303 | 8-719-059-51 | s DIODE MA3J142E0LSO |
| D401 | 8-719-059-52 | s DIODE MA3J14300LSO |
| D402 | 8-719-059-52 | s DIODE MA3J14300LSO |
| D501 | 8-719-059-52 | s DIODE MA3J14300LSO |
| D502 | 8-719-404-35 | s DIODE MA141WK |
| D503 | 8-719-404-35 | s DIODE MA141WK |
| D504 | 8-719-404-35 | s DIODE MA141WK |
| D605 | 8-719-820-41 | s DIODE 1SS302 |
| D703 | 8-719-820-41 | s DIODE 1SS302 |
| D704 | 8-719-820-41 | s DIODE 1SS302 |
| E1 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| E2 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| E401 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| E501 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| FB801 | 1-414-135-11 | s MICRO INDUCTOR (CHIP) 21A10 |
| IC2 | 8-759-327-65 | s IC CXD8525N (E2) |
| IC3 | 8-752-913-33 | s IC CXP901016-605Q |
| IC4 | 8-759-927-12 | s IC SN74HCT244NS |
| IC6 | 8-759-524-04 | s IC TC74VHC125FT (EL) |
| IC200 | 8-759-643-27 | s IC UPD78064GF-146-3BA |
| IC201 | 8-759-175-77 | s IC CXD8384Q |
| IC202 | 8-759-289-80 | s IC LC75821W-DS |
| IC203 | 8-759-442-54 | s IC RH5RL50AA-T1 |
| IC204 | 8-759-464-95 | s IC AK6420AP-E2 |
| IC205 | 8-759-035-93 | s IC SC7S32F |
| IC206 | 8-759-209-57 | s IC TC4S69F |
| IC207 | 8-759-669-45 | s IC TL062CPWR-12 |
| IC208 | 8-759-745-64 | s IC NJM4560M |
| IC209 | 8-759-082-60 | s IC TC7S66FU |
| IC210 | 8-759-058-64 | s IC TC7S32FU-TE85R |
| IC300 | 8-759-087-73 | s IC S-80745AN-D9-S |
| IC301 | 8-759-504-40 | s IC S80741AL-A5 |
| IC302 | 8-759-442-54 | s IC RH5RL50AA-T1 |
| IC303 | 8-759-442-54 | s IC RH5RL50AA-T1 |
| IC401 | 8-759-422-21 | s IC NJM4580VTE2 |
| IC403 | 8-759-422-21 | s IC NJM4580VTE2 |
| IC404 | 8-759-422-21 | s IC NJM4580VTE2 |
| IC405 | 8-759-422-21 | s IC NJM4580VTE2 |
| IC406 | 8-759-082-61 | s IC TC4W53FU |
| IC407 | 8-759-082-61 | s IC TC4W53FU |
| IC408 | 8-759-701-01 | s IC NJM2904M |
| IC409 | 8-759-111-56 | s IC UPC4572G2 |
| IC410 | 8-759-111-56 | s IC UPC4572G2 |
| IC411 | 8-759-422-21 | s IC NJM4580VTE2 |
| IC412 | 8-759-422-21 | s IC NJM4580VTE2 |
| IC413 | 8-759-422-21 | s IC NJM4580VTE2 |

(FP-122 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| IC414 | 8-759-422-21 | s IC NJM4580VTE2 |
| IC415 | 8-759-431-95 | s IC S-81230SGUP-DQB-T1 |
| IC416 | 8-759-422-21 | s IC NJM4580VTE2 |
| IC601 | 8-759-745-64 | s IC NJM4560M |
| IC602 | 8-759-745-64 | s IC NJM4560M |
| IC605 | 8-759-530-28 | s IC TC4066BFT |
| IC606 | 8-759-745-64 | s IC NJM4560M |
| IC607 | 8-759-431-97 | s IC NJM386M(TB2) |
| IC701 | 8-759-710-77 | s IC NJM4560MD |
| IC705 | 8-759-530-05 | s IC TC4053BFT (EL.N) |
| IC801 | 8-759-058-62 | s IC TC7S08FU-TE85R |
| IC802 | 8-759-058-58 | s IC TC7S04FU-TE85R |
| IC803 | 8-759-236-51 | s IC TC74HC165AF (EL) |
| IC804 | 8-759-236-51 | s IC TC74HC165AF (EL) |
| L1 | 1-410-381-11 | s INDUCTOR,CHIP 10UH (3225) |
| L2 | 1-410-381-11 | s INDUCTOR,CHIP 10UH (3225) |
| L3 | 1-410-381-11 | s INDUCTOR,CHIP 10UH (3225) |
| L200 | 1-410-393-11 | s INDUCTOR,CHIP 100UH (3225) |
| L300 | 1-410-381-11 | s INDUCTOR,CHIP 10UH (3225) |
| L301 | 1-410-381-11 | s INDUCTOR,CHIP 10UH (3225) |
| L501 | 1-412-282-41 | s INDUCTOR INDUCTOR 470UH (3225) |
| L601 | 1-414-402-11 | s INDUCTOR (SMD) 47UH |
| L701 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| LI300 | 1-550-414-31 | s HOLDER, BATTERY |
| ND200 | 1-801-621-21 | o DISPLAY, LCD |
| PH401 | 1-808-252-11 | s PHOTO COUPLER M30 |
| Q1 | 8-729-106-60 | s TRANSISTOR 2SB1115A |
| Q2 | 8-729-042-52 | s TRANSISTOR IMT1AT108 |
| Q3 | 8-729-029-14 | s TRANSISTOR DTC144EUA-T106 |
| Q4 | 8-729-028-91 | s TRANSISTOR DTA144EUA-T106 |
| Q5 | 8-729-028-91 | s TRANSISTOR DTA144EUA-T106 |
| Q6 | 8-729-929-73 | s TRANSISTOR UMG8-TL |
| Q7 | 8-729-029-14 | s TRANSISTOR DTC144EUA-T106 |
| Q8 | 8-729-929-73 | s TRANSISTOR UMG8-TL |
| Q9 | 8-729-929-52 | s TRANSISTOR UMA9-TR |
| Q10 | 8-729-927-74 | s TRANSISTOR UMG2 |
| Q11 | 8-729-028-73 | s TRANSISTOR DTA114EUA-T106 |
| Q12 | 8-729-029-14 | s TRANSISTOR DTC144EUA-T106 |
| Q13 | 8-729-029-14 | s TRANSISTOR DTC144EUA-T106 |
| Q201 | 8-729-029-14 | s TRANSISTOR DTC144EUA-T106 |
| Q202 | 8-729-029-14 | s TRANSISTOR DTC144EUA-T106 |
| Q203 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q204 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q205 | 8-729-028-91 | s TRANSISTOR DTA144EUA-T106 |
| Q300 | 8-729-029-14 | s TRANSISTOR DTC144EUA-T106 |
| Q301 | 8-729-029-14 | s TRANSISTOR DTC144EUA-T106 |
| Q302 | 8-729-026-52 | s TRANSISTOR 2SA1576A-T106-R |
| Q303 | 8-729-142-90 | s TRANSISTOR 2SK853-K5 |
| Q304 | 8-729-042-52 | s TRANSISTOR IMT1AT108 |
| Q305 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q306 | 8-729-907-26 | s TRANSISTOR IMX1 |
| Q307 | 8-729-042-52 | s TRANSISTOR IMT1AT108 |
| Q308 | 8-729-029-14 | s TRANSISTOR DTC144EUA-T106 |
| Q401 | 8-729-014-86 | s TRANSISTOR 2SC4207-YGR-TE85L |
| Q402 | 8-729-014-86 | s TRANSISTOR 2SC4207-YGR-TE85L |
| Q403 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |

(FP-122 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| Q404 | 8-729-026-52 | s TRANSISTOR 2SA1576A-T106-R |
| Q405 | 8-729-026-52 | s TRANSISTOR 2SA1576A-T106-R |
| Q406 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q407 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q408 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q409 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q410 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q411 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q412 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q413 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q414 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q415 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q501 | 8-729-029-14 | s TRANSISTOR DTC144EUA-T106 |
| Q502 | 8-729-925-47 | s TRANSISTOR IMB2 |
| Q504 | 8-729-209-07 | s TRANSISTOR 2SC4213-B |
| Q505 | 8-729-209-07 | s TRANSISTOR 2SC4213-B |
| Q506 | 8-729-026-52 | s TRANSISTOR 2SA1576A-T106-R |
| Q507 | 8-729-026-52 | s TRANSISTOR 2SA1576A-T106-R |
| Q508 | 8-729-141-75 | s TRANSISTOR 2SD596DV345 |
| Q509 | 8-729-026-52 | s TRANSISTOR 2SA1576A-T106-R |
| Q510 | 8-729-141-48 | s TRANSISTOR 2SB624-BV345 |
| Q511 | 8-729-029-14 | s TRANSISTOR DTC144EUA-T106 |
| Q512 | 8-729-141-75 | s TRANSISTOR 2SD596DV345 |
| Q513 | 8-729-029-14 | s TRANSISTOR DTC144EUA-T106 |
| Q514 | 8-729-141-75 | s TRANSISTOR 2SD596DV345 |
| Q515 | 8-729-029-14 | s TRANSISTOR DTC144EUA-T106 |
| Q516 | 8-729-209-07 | s TRANSISTOR 2SC4213-B |
| Q701 | 8-729-209-07 | s TRANSISTOR 2SC4213-B |
| Q702 | 8-729-209-07 | s TRANSISTOR 2SC4213-B |
| R1 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R2 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R3 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R4 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R5 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R6 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R7 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R8 | 1-216-827-11 | s RESISTOR,CHIP 3.3K 1/16W 1608 |
| R9 | 1-216-797-11 | s RESISTOR,CHIP 10 1/16W 1608 |
| R10 | 1-216-797-11 | s RESISTOR,CHIP 10 1/16W 1608 |
| R11 | 1-216-797-11 | s RESISTOR,CHIP 10 1/16W 1608 |
| R12 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R13 | 1-216-825-11 | s RESISTOR,CHIP 2.2K 1/16W 1608 |
| R14 | 1-216-829-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R15 | 1-216-823-11 | s RESISTOR,CHIP 1.5K 1/16W |
| R16 | 1-216-830-11 | s RESISTOR,CHIP 5.6K 1/16W 1608 |
| R17 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R18 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R19 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R20 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R21 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R22 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R23 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R24 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R25 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R26 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R27 | 1-216-827-11 | s RESISTOR,CHIP 3.3K 1/16W 1608 |
| R28 | 1-216-827-11 | s RESISTOR,CHIP 3.3K 1/16W 1608 |
| R29 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R30 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |

(FP-122 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| R31 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R32 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R33 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R34 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R35 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R36 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R37 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R38 | 1-216-857-11 | s RESISTOR,CHIP 1M 1/16W(1608) |
| R39 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R40 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R41 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R42 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R43 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R44 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R45 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R47 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R48 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R49 | 1-216-857-11 | s RESISTOR,CHIP 1M 1/16W(1608) |
| R50 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R51 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R52 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R53 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R54 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R55 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R56 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R57 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R58 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R59 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R60 | 1-216-816-11 | s RESISTOR,CHIP 390 1/16W 1608 |
| R61 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R62 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R63 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R64 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R65 | 1-216-841-11 | s RESISTOR,CHIP 47K 1/16W 1608 |
| R66 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R67 | 1-216-815-11 | s RESISTOR,CHIP 330 1/16W 1608 |
| R68 | 1-216-815-11 | s RESISTOR,CHIP 330 1/16W 1608 |
| R69 | 1-216-815-11 | s RESISTOR,CHIP 330 1/16W 1608 |
| R70 | 1-216-817-11 | s RESISTOR,CHIP 470 1/16W 1608 |
| R71 | 1-216-815-11 | s RESISTOR,CHIP 330 1/16W 1608 |
| R72 | 1-216-820-11 | s RESISTOR,CHIP 820 1/16W 1608 |
| R73 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R74 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R75 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R76 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R77 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R78 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R79 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R80 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R81 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R82 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R83 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R84 | 1-216-817-11 | s RESISTOR,CHIP 470 1/16W 1608 |
| R85 | 1-216-817-11 | s RESISTOR,CHIP 470 1/16W 1608 |
| R86 | 1-216-817-11 | s RESISTOR,CHIP 470 1/16W 1608 |
| R87 | 1-216-817-11 | s RESISTOR,CHIP 470 1/16W 1608 |
| R88 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R89 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R90 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |

(FP-122 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| R91 | 1-216-841-11 | s RESISTOR,CHIP 47K 1/16W 1608 |
| R92 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R93 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R94 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R95 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R200 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R201 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R202 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R203 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R204 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R205 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R206 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R207 | 1-216-851-11 | s RESISTOR,CHIP 330K 1/16W 1608 |
| R208 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R209 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R210 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R211 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R212 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R213 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R214 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R215 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R216 | 1-216-861-11 | s RESISTOR,CHIP 2.2M 1/16W 1608 |
| R217 | 1-216-837-11 | s RESISTOR,CHIP 22K 1/16W 1608 |
| R218 | 1-216-837-11 | s RESISTOR,CHIP 22K 1/16W 1608 |
| R219 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R220 | 1-216-827-11 | s RESISTOR,CHIP 3.3K 1/16W 1608 |
| R221 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R222 | 1-216-838-11 | s RESISTOR,CHIP 27K 1/16W(1608) |
| R223 | 1-216-827-11 | s RESISTOR,CHIP 3.3K 1/16W 1608 |
| R224 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R225 | 1-216-838-11 | s RESISTOR,CHIP 27K 1/16W(1608) |
| R226 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R227 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R228 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R229 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R230 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R231 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R232 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R233 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R234 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R235 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R236 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R237 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R238 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R239 | 1-218-890-11 | s RESISTOR,CHIP 62K 1/16W(1608) |
| R240 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R241 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R242 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R243 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R244 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R245 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R246 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R247 | 1-216-857-11 | s RESISTOR,CHIP 1M 1/16W(1608) |
| R248 | 1-216-815-11 | s RESISTOR,CHIP 330 1/16W 1608 |
| R249 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R250 | 1-216-857-11 | s RESISTOR,CHIP 1M 1/16W(1608) |
| R251 | 1-216-841-11 | s RESISTOR,CHIP 47K 1/16W 1608 |
| R252 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R253 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |

(FP-122 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| R254 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R255 | 1-216-839-11 | s RESISTOR,CHIP 33K 1/16W 1608 |
| R256 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R257 | 1-218-882-11 | s RESISTOR,CHIP 30K 1/16W(1608) |
| R258 | 1-218-858-11 | s RESISTOR,CHIP 3K 1/16W (1608) |
| | | |
| R259 | 1-218-851-11 | s RESISTOR,CHIP 1.5K 1/16W(1608) |
| R260 | 1-216-841-11 | s RESISTOR,CHIP 47K 1/16W 1608 |
| R261 | 1-211-990-11 | s RESISTOR,CHIP 75 1/16W (1608) |
| R262 | 1-216-826-11 | s RESISTOR,CHIP 2.7K 1/16W(1608) |
| R263 | 1-216-826-11 | s RESISTOR,CHIP 2.7K 1/16W(1608) |
| | | |
| R264 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R265 | 1-216-826-11 | s RESISTOR,CHIP 2.7K 1/16W(1608) |
| R266 | 1-216-826-11 | s RESISTOR,CHIP 2.7K 1/16W(1608) |
| R267 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R268 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| | | |
| R269 | 1-218-880-11 | s RESISTOR,CHIP 24K 1/16W (1608) |
| R270 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R271 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R272 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R273 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| | | |
| R274 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R275 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R276 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R277 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R278 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| | | |
| R279 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R280 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R281 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R282 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R283 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| | | |
| R300 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R301 | 1-216-843-11 | s RESISTOR,CHIP 68K 1/16W (1608) |
| R302 | 1-216-839-11 | s RESISTOR,CHIP 33K 1/16W 1608 |
| R303 | 1-216-841-11 | s RESISTOR,CHIP 47K 1/16W 1608 |
| R304 | 1-216-861-11 | s RESISTOR,CHIP 2.2M 1/16W 1608 |
| | | |
| R305 | 1-216-861-11 | s RESISTOR,CHIP 2.2M 1/16W 1608 |
| R306 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R307 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R308 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R309 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| | | |
| R310 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R311 | 1-216-851-11 | s RESISTOR,CHIP 330K 1/16W 1608 |
| R312 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R313 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R314 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| | | |
| R315 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R316 | 1-216-852-11 | s RESISTOR,CHIP 390K 1/16W 1608 |
| R317 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R318 | 1-216-838-11 | s RESISTOR,CHIP 27K 1/16W(1608) |
| R319 | 1-216-857-11 | s RESISTOR,CHIP 1M 1/16W(1608) |
| | | |
| R320 | 1-216-857-11 | s RESISTOR,CHIP 1M 1/16W(1608) |
| R321 | 1-216-855-11 | s RESISTOR,CHIP 680K 1/16W 1608 |
| R322 | 1-216-855-11 | s RESISTOR,CHIP 680K 1/16W 1608 |
| R323 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R324 | 1-216-841-11 | s RESISTOR,CHIP 47K 1/16W 1608 |
| | | |
| R325 | 1-216-841-11 | s RESISTOR,CHIP 47K 1/16W 1608 |
| R326 | 1-216-797-11 | s RESISTOR,CHIP 10 1/16W 1608 |
| R327 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R328 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |

(FP-122 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| R329 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R330 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R331 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R332 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| R333 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| | | |
| R401 | 1-218-848-11 | s RESISTOR,CHIP 1.1K 1/16W(1608) |
| R402 | 1-218-848-11 | s RESISTOR,CHIP 1.1K 1/16W(1608) |
| R404 | 1-218-848-11 | s RESISTOR,CHIP 1.1K 1/16W(1608) |
| R405 | 1-218-848-11 | s RESISTOR,CHIP 1.1K 1/16W(1608) |
| R406 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| | | |
| R407 | 1-218-855-11 | s RESISTOR,CHIP 2.2K 1/16W(1608) |
| R408 | 1-218-855-11 | s RESISTOR,CHIP 2.2K 1/16W(1608) |
| R412 | 1-218-855-11 | s RESISTOR,CHIP 2.2K 1/16W(1608) |
| R413 | 1-218-855-11 | s RESISTOR,CHIP 2.2K 1/16W(1608) |
| R414 | 1-216-829-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| | | |
| R415 | 1-216-829-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R416 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R417 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R420 | 1-218-872-11 | s RESISTOR,CHIP 11K 1/16W (1608) |
| R421 | 1-218-872-11 | s RESISTOR,CHIP 11K 1/16W (1608) |
| | | |
| R423 | 1-218-879-11 | s RESISTOR,CHIP 22K 1/16W (1608) |
| R425 | 1-218-866-11 | s RESISTOR,CHIP 6.2K 1/16W(1608) |
| R426 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| R427 | 1-218-866-11 | s RESISTOR,CHIP 6.2K 1/16W(1608) |
| R428 | 1-218-847-11 | s RESISTOR,CHIP 1K 1/16W (1608) |
| | | |
| R429 | 1-218-879-11 | s RESISTOR,CHIP 22K 1/16W (1608) |
| R430 | 1-218-863-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R431 | 1-218-887-11 | s RESISTOR,CHIP 47K 1/16W (1608) |
| R432 | 1-218-887-11 | s RESISTOR,CHIP 47K 1/16W (1608) |
| R433 | 1-218-887-11 | s RESISTOR,CHIP 47K 1/16W (1608) |
| | | |
| R434 | 1-218-887-11 | s RESISTOR,CHIP 47K 1/16W (1608) |
| R435 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R436 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R437 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R438 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| | | |
| R439 | 1-216-837-11 | s RESISTOR,CHIP 22K 1/16W 1608 |
| R440 | 1-218-839-11 | s RESISTOR,CHIP 470 1/16W (1608) |
| R441 | 1-218-839-11 | s RESISTOR,CHIP 470 1/16W (1608) |
| R442 | 1-211-990-11 | s RESISTOR,CHIP 75 1/16W (1608) |
| R443 | 1-218-845-11 | s RESISTOR,CHIP 820 1/16W (1608) |
| | | |
| R444 | 1-216-829-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R445 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R446 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R447 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R448 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| | | |
| R451 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R452 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R453 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R454 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R455 | 1-216-829-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| | | |
| R456 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R457 | 1-216-829-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R458 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R459 | 1-216-801-11 | s RESISTOR,CHIP 22 1/16W (1608) |
| R460 | 1-216-801-11 | s RESISTOR,CHIP 22 1/16W (1608) |
| | | |
| R461 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R462 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R463 | 1-218-885-11 | s RESISTOR,CHIP 39K 1/16W (1608) |
| R464 | 1-216-837-11 | s RESISTOR,CHIP 22K 1/16W 1608 |

(FP-122 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|---------------------------------|
| R467 | 1-218-878-11 s | RESISTOR,CHIP 20K 1/16W (1608) |
| R468 | 1-218-839-11 s | RESISTOR,CHIP 470 1/16W (1608) |
| R469 | 1-218-878-11 s | RESISTOR,CHIP 20K 1/16W (1608) |
| R470 | 1-218-839-11 s | RESISTOR,CHIP 470 1/16W (1608) |
| R471 | 1-216-846-11 s | RESISTOR,CHIP 120K 1/16W (1608) |
| R472 | 1-218-907-11 s | RESISTOR,CHIP 330K 1/16W(1608) |
| R474 | 1-218-863-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R475 | 1-216-841-11 s | RESISTOR,CHIP 47K 1/16W 1608 |
| R476 | 1-218-863-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R477 | 1-216-841-11 s | RESISTOR,CHIP 47K 1/16W 1608 |
| R478 | 1-218-871-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R479 | 1-218-871-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R480 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R481 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R482 | 1-218-878-11 s | RESISTOR,CHIP 20K 1/16W (1608) |
| R483 | 1-218-878-11 s | RESISTOR,CHIP 20K 1/16W (1608) |
| R484 | 1-218-855-11 s | RESISTOR,CHIP 2.2K 1/16W(1608) |
| R485 | 1-218-855-11 s | RESISTOR,CHIP 2.2K 1/16W(1608) |
| R486 | 1-218-878-11 s | RESISTOR,CHIP 20K 1/16W (1608) |
| R487 | 1-218-857-11 s | RESISTOR,CHIP 2.7K 1/16W(1608) |
| R488 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R489 | 1-218-878-11 s | RESISTOR,CHIP 20K 1/16W (1608) |
| R490 | 1-218-857-11 s | RESISTOR,CHIP 2.7K 1/16W(1608) |
| R491 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R492 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| R493 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R494 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R497 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R498 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R499 | 1-216-849-11 s | RESISTOR,CHIP 220K 1/16W 1608 |
| R500 | 1-216-849-11 s | RESISTOR,CHIP 220K 1/16W 1608 |
| R501 | 1-216-817-11 s | RESISTOR,CHIP 470 1/16W 1608 |
| R502 | 1-216-817-11 s | RESISTOR,CHIP 470 1/16W 1608 |
| R503 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R504 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R505 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R506 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R507 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R508 | 1-218-879-11 s | RESISTOR,CHIP 22K 1/16W (1608) |
| R510 | 1-218-856-11 s | RESISTOR,CHIP 2.4K 1/16W(1608) |
| R512 | 1-218-856-11 s | RESISTOR,CHIP 2.4K 1/16W(1608) |
| R513 | 1-218-863-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R514 | 1-218-863-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R515 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R516 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| R517 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| R518 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R522 | 1-218-872-11 s | RESISTOR,CHIP 11K 1/16W (1608) |
| R523 | 1-218-872-11 s | RESISTOR,CHIP 11K 1/16W (1608) |
| R524 | 1-218-879-11 s | RESISTOR,CHIP 22K 1/16W (1608) |
| R601 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R602 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R603 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R604 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R605 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R608 | 1-218-855-11 s | RESISTOR,CHIP 2.2K 1/16W(1608) |
| R609 | 1-218-855-11 s | RESISTOR,CHIP 2.2K 1/16W(1608) |
| R610 | 1-218-851-11 s | RESISTOR,CHIP 1.5K 1/16W(1608) |
| R611 | 1-218-859-11 s | RESISTOR,CHIP 3.3K 1/16W(1608) |

(FP-122 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|--------------------------------|
| R612 | 1-218-859-11 s | RESISTOR,CHIP 3.3K 1/16W(1608) |
| R613 | 1-218-857-11 s | RESISTOR,CHIP 2.7K 1/16W(1608) |
| R614 | 1-218-857-11 s | RESISTOR,CHIP 2.7K 1/16W(1608) |
| R615 | 1-218-847-11 s | RESISTOR,CHIP 1K 1/16W (1608) |
| R616 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R617 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R618 | 1-218-855-11 s | RESISTOR,CHIP 2.2K 1/16W(1608) |
| R619 | 1-218-871-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R620 | 1-218-871-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R621 | 1-218-871-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R622 | 1-218-871-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R623 | 1-218-855-11 s | RESISTOR,CHIP 2.2K 1/16W(1608) |
| R624 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R625 | 1-216-817-11 s | RESISTOR,CHIP 470 1/16W 1608 |
| R626 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R627 | 1-216-817-11 s | RESISTOR,CHIP 470 1/16W 1608 |
| R628 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R629 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R630 | 1-218-877-11 s | RESISTOR,CHIP 18K 1/16W (1608) |
| R631 | 1-218-873-11 s | RESISTOR,CHIP 12K 1/16W (1608) |
| R632 | 1-218-881-11 s | RESISTOR,CHIP 27K 1/16W(1608) |
| R633 | 1-218-903-11 s | RESISTOR,CHIP 220K 1/16W(1608) |
| R635 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| R636 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R637 | 1-218-861-11 s | RESISTOR,CHIP 3.9K 1/16W(1608) |
| R638 | 1-218-827-11 s | RESISTOR,CHIP 150 1/16W (1608) |
| R639 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 |
| R640 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R641 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R642 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R643 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R644 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| R645 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R646 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R647 | 1-216-797-11 s | RESISTOR,CHIP 10 1/16W 1608 |
| R649 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| R650 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R651 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R652 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R653 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R654 | 1-211-969-11 s | RESISTOR,CHIP 10 1/16W (1608) |
| R656 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| R657 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R658 | 1-216-841-11 s | RESISTOR,CHIP 47K 1/16W 1608 |
| R659 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R660 | 1-218-476-11 s | RESISTOR,CHIP 180 1/4W (3225) |
| R661 | 1-218-866-11 s | RESISTOR,CHIP 6.2K 1/16W(1608) |
| R702 | 1-218-863-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R703 | 1-218-849-11 s | RESISTOR,CHIP 1.2K 1/16W(1608) |
| R705 | 1-218-863-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R707 | 1-218-861-11 s | RESISTOR,CHIP 3.9K 1/16W(1608) |
| R708 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| R715 | 1-216-841-11 s | RESISTOR,CHIP 47K 1/16W 1608 |
| R717 | 1-216-841-11 s | RESISTOR,CHIP 47K 1/16W 1608 |
| R718 | 1-218-849-11 s | RESISTOR,CHIP 1.2K 1/16W(1608) |
| R719 | 1-218-849-11 s | RESISTOR,CHIP 1.2K 1/16W(1608) |
| R720 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R721 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R722 | 1-216-841-11 s | RESISTOR,CHIP 47K 1/16W 1608 |

(FP-122 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| R728 | 1-216-841-11 | s RESISTOR,CHIP 47K 1/16W 1608 |
| R729 | 1-216-829-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R730 | 1-216-829-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R731 | 1-216-841-11 | s RESISTOR,CHIP 47K 1/16W 1608 |
| R733 | 1-211-969-11 | s RESISTOR,CHIP 10 1/16W (1608) |
| R736 | 1-211-969-11 | s RESISTOR,CHIP 10 1/16W (1608) |
| R738 | 1-211-969-11 | s RESISTOR,CHIP 10 1/16W (1608) |
| R801 | 1-216-805-11 | s RESISTOR,CHIP 47 1/16W 1608 |
| R802 | 1-216-805-11 | s RESISTOR,CHIP 47 1/16W 1608 |
| R803 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W 1608 |
| RB1 | 1-236-907-11 | s RESISTOR,BLOCK 100K (1608) |
| RB2 | 1-236-904-11 | s RESISTOR,NETWORK 1K (1608) |
| RB3 | 1-239-444-11 | s NETWORK,RESISTOR 220K (1608) |
| RB4 | 1-239-444-11 | s NETWORK,RESISTOR 220K (1608) |
| RB5 | 1-236-904-11 | s RESISTOR,NETWORK 1K (1608) |
| RB6 | 1-236-904-11 | s RESISTOR,NETWORK 1K (1608) |
| RB7 | 1-239-444-11 | s NETWORK,RESISTOR 220K (1608) |
| RB8 | 1-239-444-11 | s NETWORK,RESISTOR 220K (1608) |
| RB9 | 1-239-444-11 | s NETWORK,RESISTOR 220K (1608) |
| RB10 | 1-239-412-11 | s NETWORK,RESISTOR 100 (1608) |
| RB11 | 1-239-412-11 | s NETWORK,RESISTOR 100 (1608) |
| RB12 | 1-236-904-11 | s RESISTOR,NETWORK 1K (1608) |
| RB202 | 1-239-711-11 | s NETWORK,RESISTOR 0 (1608) |
| RB203 | 1-239-310-11 | s RESISTOR,ARRAY, CHIP 220K |
| RB204 | 1-239-310-11 | s RESISTOR,ARRAY, CHIP 220K |
| RB207 | 1-239-444-11 | s NETWORK,RESISTOR 220K (1608) |
| RB208 | 1-239-426-11 | s NETWORK,RESISTOR 2.2K (1608) |
| RB209 | 1-239-426-11 | s NETWORK,RESISTOR 2.2K (1608) |
| RB210 | 1-239-426-11 | s NETWORK,RESISTOR 2.2K (1608) |
| RB211 | 1-239-426-11 | s NETWORK,RESISTOR 2.2K (1608) |
| RB212 | 1-239-426-11 | s NETWORK,RESISTOR 2.2K (1608) |
| RB801 | 1-239-621-11 | s NETWORK,RESISTOR 22 (1608) |
| RB802 | 1-239-444-11 | s NETWORK,RESISTOR 220K (1608) |
| RB803 | 1-236-908-11 | s RESISTOR,NETWORK 10K (3216) |
| RB804 | 1-236-908-11 | s RESISTOR,NETWORK 10K (3216) |
| RB805 | 1-239-444-11 | s NETWORK,RESISTOR 220K (1608) |
| RB806 | 1-239-444-11 | s NETWORK,RESISTOR 220K (1608) |
| RB807 | 1-236-908-11 | s RESISTOR,NETWORK 10K (3216) |
| RB808 | 1-236-908-11 | s RESISTOR,NETWORK 10K (3216) |
| RB809 | 1-239-444-11 | s NETWORK,RESISTOR 220K (1608) |
| RV401 | 1-230-337-11 | s RESISTOR,VAR,CARBON 10K |
| RV402 | 1-230-337-11 | s RESISTOR,VAR,CARBON 10K |
| RV403 | 1-223-278-11 | s RESISTOR,ADJ,100K |
| RV601 | 1-223-276-11 | s RESISTOR,ADJ, 22K |
| RV602 | 1-223-276-11 | s RESISTOR,ADJ, 22K |
| RV603 | 1-230-337-11 | s RESISTOR,VAR,CARBON 10K |
| RV604 | 1-230-337-11 | s RESISTOR,VAR,CARBON 10K |
| S1 | 1-570-909-11 | s SWITCH, TACTIL (REFLOW TYPE) |
| S2 | 1-570-909-11 | s SWITCH, TACTIL (REFLOW TYPE) |
| S3 | 1-570-909-11 | s SWITCH, TACTIL (REFLOW TYPE) |
| S4 | 1-570-909-11 | s SWITCH, TACTIL (REFLOW TYPE) |
| S5 | 1-771-141-11 | s SWITCH, SLIDE |
| S6 | 1-771-141-11 | s SWITCH, SLIDE |
| S200 | 1-570-832-11 | s SWITCH,SLIDE (2-2-3) |
| S201 | 1-570-909-11 | s SWITCH, TACTIL (REFLOW TYPE) |
| S203 | 1-570-838-11 | s SWITCH,SLIDE (2-2-2) |
| S401 | 1-771-323-11 | s SWITCH, SLIDE |
| S402 | 1-771-323-11 | s SWITCH, SLIDE |

(FP-122 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|--------------------------------|
| S403 | 1-771-140-11 | s SWITCH, SLIDE |
| S404 | 1-771-140-11 | s SWITCH, SLIDE |
| S501 | 1-771-323-11 | s SWITCH, SLIDE |
| S801 | 1-771-141-11 | s SWITCH, SLIDE |
| S802 | 1-570-909-11 | s SWITCH, TACTIL (REFLOW TYPE) |
| S803 | 1-771-140-11 | s SWITCH, SLIDE |
| S804 | 1-771-141-11 | s SWITCH, SLIDE |
| S805 | 1-771-140-11 | s SWITCH, SLIDE |
| S806 | 1-771-140-11 | s SWITCH, SLIDE |
| S807 | 1-771-140-11 | s SWITCH, SLIDE |
| S808 | 1-771-141-11 | s SWITCH, SLIDE |
| S809 | 1-771-140-11 | s SWITCH, SLIDE |
| S810 | 1-570-909-11 | s SWITCH, TACTIL (REFLOW TYPE) |
| S811 | 1-570-711-11 | s SWITCH,SLIDE |
| TP1 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP2 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP200 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP201 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP401 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP402 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP601 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP602 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP603 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| X1 | 1-760-655-21 | s VIBRATOR, CRYSTAL |
| X2 | 1-760-655-21 | s VIBRATOR, CRYSTAL |
| X200 | 1-579-843-11 | s OSCILLATOR, CRYSTAL |
| X201 | 1-760-458-21 | s VIBRATOR, CRYSTAL |
| X202 | 1-760-272-22 | s VIBRATOR, CRYSTAL |

FP-99 BOARD

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-------------------------------------|
| 1pc | A-8318-233-A | o MOUNTED CIRCUIT BOARD, FP-99 |
| C801 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C802 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C803 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C805 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C808 | 1-162-923-11 | s CAPACITOR, CERAMIC 47PF/50V CH |
| C809 | 1-162-923-11 | s CAPACITOR, CERAMIC 47PF/50V CH |
| C810 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C811 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C812 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C813 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C814 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C815 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C816 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C817 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C818 | 1-162-962-11 | s CAPACITOR, CERAMIC 470PF/50V(B) |
| C819 | 1-162-962-11 | s CAPACITOR, CERAMIC 470PF/50V(B) |
| C820 | 1-162-962-11 | s CAPACITOR, CERAMIC 470PF/50V(B) |
| C821 | 1-162-962-11 | s CAPACITOR, CERAMIC 470PF/50V(B) |
| C822 | 1-162-962-11 | s CAPACITOR, CERAMIC 470PF/50V(B) |
| CN801 | 1-695-931-11 | o CONNECTOR, FPC (10P) |
| CN802 | 1-573-768-21 | o PIN, CONNECTOR (5P) (SMD) (1.5MM) |
| CN803 | 1-573-290-21 | s PIN, CONNECTOR (4P) (SMD) (1.5MM) |
| CN804 | 1-573-290-21 | s PIN, CONNECTOR (4P) (SMD) (1.5MM) |
| D801 | 8-719-989-97 | s LED CL-150SD-CD |
| D802 | 8-719-989-97 | s LED CL-150SD-CD |
| D803 | 8-719-047-59 | s LED CL-150G-CD |
| D804 | 8-719-989-97 | s LED CL-150SD-CD |
| D805 | 8-719-989-97 | s LED CL-150SD-CD |
| D806 | 8-719-989-97 | s LED CL-150SD-CD |
| FB801 | 1-414-135-11 | s MICRO INDUCTOR (CHIP) 21A10 |
| IC801 | 8-759-268-33 | s IC SN74HC595ADB (R) |
| IC802 | 8-759-659-71 | s IC SN74HC165APWR |
| IC803 | 8-759-659-71 | s IC SN74HC165APWR |
| IC804 | 8-759-926-37 | s IC SN74HC193ANS |
| IC805 | 8-759-082-59 | s IC TC7W32FU |
| IC806 | 8-759-523-04 | s IC TC74HC4538AFT |
| IC807 | 8-759-523-04 | s IC TC74HC4538AFT |
| IC808 | 8-759-058-64 | s IC TC7S32FU-TE85R |
| IC809 | 8-759-277-63 | s IC TC7W14FU (TE12R) |
| L801 | 1-412-955-11 | s INDUCTOR 22UH (2520) |
| Q801 | 8-729-907-26 | s TRANSISTOR IMX1 |
| Q802 | 8-729-907-26 | s TRANSISTOR IMX1 |
| Q803 | 8-729-907-26 | s TRANSISTOR IMX1 |
| R801 | 1-216-797-11 | s RESISTOR, CHIP 10 1/16W 1608 |
| R802 | 1-216-797-11 | s RESISTOR, CHIP 10 1/16W 1608 |
| R803 | 1-216-797-11 | s RESISTOR, CHIP 10 1/16W 1608 |
| R804 | 1-216-813-11 | s RESISTOR, CHIP 220 1/16W 1608 |
| R805 | 1-216-797-11 | s RESISTOR, CHIP 10 1/16W 1608 |
| R806 | 1-216-805-11 | s RESISTOR, CHIP 47 1/16W 1608 |
| R807 | 1-216-833-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R808 | 1-216-821-11 | s RESISTOR, CHIP 1.0K 1/16W (1608) |
| R809 | 1-216-821-11 | s RESISTOR, CHIP 1.0K 1/16W (1608) |
| R810 | 1-216-833-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R811 | 1-216-821-11 | s RESISTOR, CHIP 1.0K 1/16W (1608) |

(FP-99 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|------------------------------------|
| R812 | 1-216-821-11 | s RESISTOR, CHIP 1.0K 1/16W (1608) |
| R813 | 1-216-821-11 | s RESISTOR, CHIP 1.0K 1/16W (1608) |
| R814 | 1-216-821-11 | s RESISTOR, CHIP 1.0K 1/16W (1608) |
| R815 | 1-216-805-11 | s RESISTOR, CHIP 47 1/16W 1608 |
| R816 | 1-216-805-11 | s RESISTOR, CHIP 47 1/16W 1608 |
| R821 | 1-216-833-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R822 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| R823 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R824 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R825 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R826 | 1-218-912-11 | s RESISTOR, CHIP 510K 1/16W (1608) |
| R827 | 1-216-803-11 | s RESISTOR, CHIP 33 1/16W (1608) |
| R828 | 1-218-912-11 | s RESISTOR, CHIP 510K 1/16W (1608) |
| R829 | 1-216-803-11 | s RESISTOR, CHIP 33 1/16W (1608) |
| R830 | 1-216-864-11 | s RESISTOR, CHIP 0 1/16W (1608) |
| R831 | 1-216-864-11 | s RESISTOR, CHIP 0 1/16W (1608) |
| R834 | 1-216-849-11 | s RESISTOR, CHIP 220K 1/16W 1608 |
| RB801 | 1-236-908-11 | s RESISTOR, NETWORK 10K (3216) |
| RB802 | 1-239-444-11 | s NETWORK, RESISTOR 220K (1608) |
| RB803 | 1-236-908-11 | s RESISTOR, NETWORK 10K (3216) |
| RB804 | 1-236-908-11 | s RESISTOR, NETWORK 10K (3216) |
| RB805 | 1-239-444-11 | s NETWORK, RESISTOR 220K (1608) |
| RB806 | 1-239-444-11 | s NETWORK, RESISTOR 220K (1608) |
| RB807 | 1-236-908-11 | s RESISTOR, NETWORK 10K (3216) |
| RB808 | 1-236-908-11 | s RESISTOR, NETWORK 10K (3216) |
| RB809 | 1-239-444-11 | s NETWORK, RESISTOR 220K (1608) |
| S803 | 1-692-111-11 | s SWITCH, KEY BOARD |
| S804 | 1-692-111-11 | s SWITCH, KEY BOARD |
| S805 | 1-692-111-11 | s SWITCH, KEY BOARD |
| S806 | 1-692-111-11 | s SWITCH, KEY BOARD |
| S807 | 1-692-111-11 | s SWITCH, KEY BOARD |

GCN-16 BOARD

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|---------------------------------|
| 1pc | A-8322-170-A | o MOUNTED CIRCUIT BOARD, GCN-16 |
| R101 | 1-216-049-91 | s RESISTOR,CHIP 1K 1/10W(2125) |
| R102 | 1-216-049-91 | s RESISTOR,CHIP 1K 1/10W(2125) |
| R103 | 1-216-049-91 | s RESISTOR,CHIP 1K 1/10W(2125) |
| R104 | 1-216-049-91 | s RESISTOR,CHIP 1K 1/10W(2125) |
| R105 | 1-216-049-91 | s RESISTOR,CHIP 1K 1/10W(2125) |
| R106 | 1-216-049-91 | s RESISTOR,CHIP 1K 1/10W(2125) |
| R107 | 1-216-049-91 | s RESISTOR,CHIP 1K 1/10W(2125) |
| R108 | 1-216-049-91 | s RESISTOR,CHIP 1K 1/10W(2125) |
| S101 | 1-762-123-11 | s SWITCH, TOGGLE |
| S102 | 1-762-123-11 | s SWITCH, TOGGLE |
| S103 | 1-762-123-11 | s SWITCH, TOGGLE |
| S104 | 1-762-531-11 | s SWITCH, TOGGLE |
| W101 | 1-958-494-11 | o HARNESS, SUB (GCN15-1) |
| W102 | 1-958-495-11 | o HARNESS, SUB (GCN15-2) |

HN-227 BOARD

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|---------------------------------|
| 1pc | A-8277-853-A | o MOUNTED CIRCUIT BOARD, HN-227 |
| C1 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C2 | 1-110-569-11 | s CAPACITOR,TANTALUM 47MF/6.3V |
| C3 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| CN511 | 1-778-647-11 | o CONNECTOR, FFC (ZIF) 15P |
| CN512 | 1-778-647-11 | o CONNECTOR, FFC (ZIF) 15P |
| CN513 | 1-766-654-21 | s CONNECTOR, FFC/FPC 18P |
| CN514 | 1-778-646-11 | o CONNECTOR, FFC (ZIF) 10P |
| CN515 | 1-764-520-11 | s CONNECTOR, FFC/FPC (ZIF) 11P |
| CN516 | 1-695-320-21 | o PIN, CONNECTOR(1.5MM)SMD 2P |
| CN517 | 1-695-320-21 | o PIN, CONNECTOR(1.5MM)SMD 2P |
| IC1 | 8-759-469-26 | s IC AK6480AF (E2) |
| R1 | 1-216-025-91 | s RESISTOR,CHIP 100 1/10W(2125) |
| R2 | 1-216-049-91 | s RESISTOR,CHIP 1K 1/10W(2125) |
| RB1 | 1-239-444-11 | s NETWORK,RESISTOR 220K (1608) |

IR-33 BOARD

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|--------------------------------|
| C204 | 1-162-970-11 s | CAPACITOR CERAMIC 0.01MF/25V B |
| C205 | 1-162-970-11 s | CAPACITOR CERAMIC 0.01MF/25V B |
| C206 | 1-162-970-11 s | CAPACITOR CERAMIC 0.01MF/25V B |
| C208 | 1-162-970-11 s | CAPACITOR CERAMIC 0.01MF/25V B |
| C209 | 1-162-970-11 s | CAPACITOR CERAMIC 0.01MF/25V B |
| C210 | 1-162-970-11 s | CAPACITOR CERAMIC 0.01MF/25V B |
| C212 | 1-162-970-11 s | CAPACITOR CERAMIC 0.01MF/25V B |
| C213 | 1-162-970-11 s | CAPACITOR CERAMIC 0.01MF/25V B |
| C214 | 1-162-970-11 s | CAPACITOR CERAMIC 0.01MF/25V B |
| CN203 | 1-764-087-21 s | PIN, CONNECTOR (PC BOARD) 14P |
| FB201 | 1-414-445-11 s | FERRITE, EMI (SMD) |
| FB202 | 1-414-445-11 s | FERRITE, EMI (SMD) |
| FB203 | 1-414-445-11 s | FERRITE, EMI (SMD) |
| FB204 | 1-414-445-11 s | FERRITE, EMI (SMD) |
| FB205 | 1-414-445-11 s | FERRITE, EMI (SMD) |
| FB206 | 1-414-445-11 s | FERRITE, EMI (SMD) |
| FB207 | 1-414-445-11 s | FERRITE, EMI (SMD) |
| FB208 | 1-414-445-11 s | FERRITE, EMI (SMD) |
| FB209 | 1-414-445-11 s | FERRITE, EMI (SMD) |
| FB210 | 1-414-445-11 s | FERRITE, EMI (SMD) |
| FB211 | 1-414-445-11 s | FERRITE, EMI (SMD) |
| FB212 | 1-414-445-11 s | FERRITE, EMI (SMD) |
| FB213 | 1-414-445-11 s | FERRITE, EMI (SMD) |
| FB214 | 1-414-445-11 s | FERRITE, EMI (SMD) |

KY-405 BOARD

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|-------------------------------|
| 1pc | A-8318-188-A o | MOUNTED CIRCUIT BOARD, KY-405 |
| CN1 | 1-695-931-11 o | CONNECTOR, FPC (10P) |
| D1 | 8-719-989-97 s | LED CL-150SD-CD |
| D2 | 8-719-989-97 s | LED CL-150SD-CD |
| D3 | 8-719-989-97 s | LED CL-150SD-CD |
| R1 | 1-216-819-11 s | RESISTOR,CHIP 680 1/16W 1608 |
| R2 | 1-216-819-11 s | RESISTOR,CHIP 680 1/16W 1608 |
| R3 | 1-216-819-11 s | RESISTOR,CHIP 680 1/16W 1608 |
| S1 | 1-570-909-11 s | SWITCH, TACTIL (REFLOW TYPE) |
| S2 | 1-570-909-11 s | SWITCH, TACTIL (REFLOW TYPE) |
| S3 | 1-570-909-11 s | SWITCH, TACTIL (REFLOW TYPE) |
| S4 | 1-570-909-11 s | SWITCH, TACTIL (REFLOW TYPE) |
| S5 | 1-570-909-11 s | SWITCH, TACTIL (REFLOW TYPE) |

LE-221 BOARD

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|-------------------------------|
| 1pc | A-8322-171-A o | MOUNTED CIRCUIT BOARD, LE-221 |
| C701 | 1-163-021-91 s | CAPACITOR, CERAMIC 0.01MF/50V |
| C702 | 1-163-021-91 s | CAPACITOR, CERAMIC 0.01MF/50V |
| CN701 | 1-566-761-11 o | PIN,CONNECTOR (PC BOARD) 6P |
| CN702 | 1-566-758-11 o | PIN,CONNECTOR 3P |
| D701 | 8-719-032-78 s | LED GL3UR8 |
| D702 | 8-719-032-78 s | LED GL3UR8 |
| S701 | 1-570-608-11 s | SWITCH,TOGGLE |

MB-833 BOARD

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|----------------------------------|
| 1pc | A-8322-150-B o | MOUNTED CIRCUIT BOARD, MB-833 |
| CN1 | 1-778-652-11 o | CONNECTOR, FFC (ZIF) 50P |
| CN2 | 1-778-652-11 o | CONNECTOR, FFC (ZIF) 50P |
| CN3 | 1-778-651-11 o | CONNECTOR, FFC (ZIF) 40P |
| CN5 | 1-778-650-11 o | CONNECTOR, FFC (ZIF) 30P |
| CN9 | 1-764-177-11 o | PIN,CONNECTOR (7P) (SMD) (1.5MM) |
| CN10 | 1-778-652-11 o | CONNECTOR, FFC (ZIF) 50P |
| CN11 | 1-778-534-11 o | CONNECTOR, FFC (ZIF) 45P |
| CN13 | 1-784-629-11 o | CONNECTOR, BOARD TO BOARD 30P |
| CN14 | 1-778-652-11 o | CONNECTOR, FFC (ZIF) 50P |
| CN15 | 1-778-534-11 o | CONNECTOR, FFC (ZIF) 45P |
| CN16 | 1-778-652-11 o | CONNECTOR, FFC (ZIF) 50P |
| CN19 | 1-784-627-11 o | CONNECTOR, BOARD TO BOARD 60P |
| CN22 | 1-770-469-21 o | PIN, CONNECTOR (PC BOARD) 2P |
| CN23 | 1-695-320-21 o | PIN, CONNECTOR (1.5MM) SMD 2P |

MT-114 BOARD

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|---------------------|
| S1 | 1-572-288-11 s | SWITCH, PUSH0 (1-1) |

PA-205 BOARD

*a: [Lot No. 911-335]
*b: [Lot No. 341-]

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|-----------------|-----------------------------------|
| C1 | 1-113-500-11 | s CAPACITOR, TANTALUM 100MF/10V |
| C2 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C3 | 1-113-992-11 | s CAPACITOR, TANTALUM 3.3MF/35V |
| C4 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C5 | 1-135-177-21 | s CAPACITOR, TANTALUM 1MF/25V |
| C6 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C7 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C8 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C9 | 1-135-070-00 | s CAPACITOR, TANTALUM 0.1MF/35V |
| C10 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C11 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C12 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C13 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C14 | 1-162-911-11 | s CAPACITOR, CERAMIC 6PF/50V 1608 |
| C16 | 1-162-909-11 | s CAPACITOR, CERAMIC 4PF/50V CH |
| C17 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C18 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C20 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C21 | 1-137-910-11 | s CAPACITOR, TANTALUM ELECT 10MF |
| CN1 | 1-784-625-11 | o CONNECTOR, FFC (ZIF) 30P |
| CN2 | 1-695-320-31 | o PIN, CONNECTOR (1.5MM) (SMD) 2P |
| FB1 | 1-414-445-11 | s FERRITE, EMI (SMD) |
| IC1 | 8-759-523-07 | s IC TC74AC04FT (EL) |
| IC4 | 8-759-082-58 | s IC TC7W08FU |
| IC5 | 8-752-052-72 | s IC CXA1439M |
| L1 | 1-410-381-11 | s INDUCTOR, CHIP 10UH (3225) |
| Q1 | 8-729-101-25 | s TRANSISTOR 2SC1009A |
| Q3 | 8-729-026-52 | s TRANSISTOR 2SA1576A-T106-R |
| Q4 | 8-729-143-07 | s TRANSISTOR 2SA1610-Y33 |
| Q7 | 8-729-117-72 | s TRANSISTOR 2SC4178 |
| Q8 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q9 | 8-729-143-07 | s TRANSISTOR 2SA1610-Y33 |
| Q10 | 8-729-117-72 | s TRANSISTOR 2SC4178 |
| R1 | 1-216-789-11 | s RESISTOR, CHIP 2.2 1/16W(1608) |
| R2 | 1-216-789-11 | s RESISTOR, CHIP 2.2 1/16W(1608) |
| R3 | 1-216-797-11 | s RESISTOR, CHIP 10 1/16W 1608 |
| R4 | 1-218-901-11 | s RESISTOR, CHIP 180K 1/16W(1608) |
| R5 | 1-218-837-11 | s RESISTOR, CHIP 390 1/16W (1608) |
| R6 | 1-218-881-11 | s RESISTOR, CHIP 27K 1/16W(1608) |
| R7 | *b 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| | *a 1-216-821-11 | s RESISTOR, CHIP 1.0K 1/16W(1608) |
| R8 | 1-216-809-11 | s RESISTOR, CHIP 100 1/16W 1608 |
| R9 | 1-216-828-11 | s RESISTOR, CHIP 3.9K 1/16W 1608 |
| R10 | 1-216-813-11 | s RESISTOR, CHIP 220 1/16W 1608 |
| R11 | 1-216-797-11 | s RESISTOR, CHIP 10 1/16W 1608 |
| R12 | 1-216-797-11 | s RESISTOR, CHIP 10 1/16W 1608 |
| R13 | 1-216-864-11 | s RESISTOR, CHIP 0 1/16W (1608) |
| R16 | 1-218-855-11 | s RESISTOR, CHIP 2.2K 1/16W(1608) |
| R19 | 1-218-855-11 | s RESISTOR, CHIP 2.2K 1/16W(1608) |
| R20 | 1-218-879-11 | s RESISTOR, CHIP 22K 1/16W (1608) |
| R21 | 1-218-879-11 | s RESISTOR, CHIP 22K 1/16W (1608) |
| R22 | 1-218-855-11 | s RESISTOR, CHIP 2.2K 1/16W(1608) |
| R23 | 1-218-853-11 | s RESISTOR, CHIP 1.8K 1/16W(1608) |
| R24 | 1-218-855-11 | s RESISTOR, CHIP 2.2K 1/16W(1608) |

(PA-205 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-----------------------------------|
| R30 | 1-216-827-11 | s RESISTOR, CHIP 3.3K 1/16W 1608 |
| R31 | 1-216-827-11 | s RESISTOR, CHIP 3.3K 1/16W 1608 |
| R32 | 1-216-809-11 | s RESISTOR, CHIP 100 1/16W 1608 |
| R33 | 1-216-809-11 | s RESISTOR, CHIP 100 1/16W 1608 |
| R35 | 1-216-789-11 | s RESISTOR, CHIP 2.2 1/16W(1608) |
| R36 | 1-216-797-11 | s RESISTOR, CHIP 10 1/16W 1608 |
| R37 | 1-216-797-11 | s RESISTOR, CHIP 10 1/16W 1608 |
| R38 | 1-218-869-11 | s RESISTOR, CHIP 8.2K 1/16W(1608) |
| R39 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R40 | 1-218-855-11 | s RESISTOR, CHIP 2.2K 1/16W(1608) |
| R42 | 1-216-817-11 | s RESISTOR, CHIP 470 1/16W 1608 |
| RV1 | 1-241-263-11 | s RESISTOR, ADJ 5K (CERMET) |

PA-206 BOARD

*a: [Lot No. 911-335]
*b: [Lot No. 341-]

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|-----------------|-----------------------------------|
| C1 | 1-113-500-11 | s CAPACITOR, TANTALUM 100MF/10V |
| C2 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C3 | 1-113-992-11 | s CAPACITOR, TANTALUM 3.3MF/35V |
| C4 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C5 | 1-135-177-21 | s CAPACITOR, TANTALUM 1MF/25V |
| C6 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C7 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C8 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C9 | 1-135-070-00 | s CAPACITOR, TANTALUM 0.1MF/35V |
| C10 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C11 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C12 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C13 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C14 | 1-162-911-11 | s CAPACITOR, CERAMIC 6PF/50V 1608 |
| C16 | 1-162-909-11 | s CAPACITOR, CERAMIC 4PF/50V CH |
| C17 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C18 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C20 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C21 | 1-137-910-11 | s CAPACITOR, TANTALUM ELECT 10MF |
| CN1 | 1-784-625-11 | o CONNECTOR, FFC (ZIF) 30P |
| CN2 | 1-695-320-71 | o PIN, CONNECTOR (1.5MM) (SMD) 2P |
| FB1 | 1-414-445-11 | s FERRITE, EMI (SMD) |
| IC1 | 8-759-523-07 | s IC TC74AC04FT (EL) |
| IC3 | 8-759-075-53 | s IC LM35DM |
| IC4 | 8-759-082-58 | s IC TC7W08FU |
| IC5 | 8-752-052-72 | s IC CXA1439M |
| L1 | 1-410-381-11 | s INDUCTOR, CHIP 10UH (3225) |
| Q1 | 8-729-101-25 | s TRANSISTOR 2SC1009A |
| Q3 | 8-729-026-52 | s TRANSISTOR 2SA1576A-T106-R |
| Q4 | 8-729-143-07 | s TRANSISTOR 2SA1610-Y33 |
| Q7 | 8-729-117-72 | s TRANSISTOR 2SC4178 |
| Q8 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q9 | 8-729-143-07 | s TRANSISTOR 2SA1610-Y33 |
| Q10 | 8-729-117-72 | s TRANSISTOR 2SC4178 |
| R1 | 1-216-789-11 | s RESISTOR, CHIP 2.2 1/16W(1608) |
| R2 | 1-216-789-11 | s RESISTOR, CHIP 2.2 1/16W(1608) |
| R3 | 1-216-797-11 | s RESISTOR, CHIP 10 1/16W 1608 |
| R4 | 1-218-901-11 | s RESISTOR, CHIP 180K 1/16W(1608) |
| R5 | 1-218-837-11 | s RESISTOR, CHIP 390 1/16W (1608) |
| R6 | 1-218-881-11 | s RESISTOR, CHIP 27K 1/16W(1608) |
| R7 | *b 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| | *a 1-216-821-11 | s RESISTOR, CHIP 1.0K 1/16W(1608) |
| R8 | 1-216-809-11 | s RESISTOR, CHIP 100 1/16W 1608 |
| R9 | 1-216-828-11 | s RESISTOR, CHIP 3.9K 1/16W 1608 |
| R10 | 1-216-813-11 | s RESISTOR, CHIP 220 1/16W 1608 |
| R11 | 1-216-797-11 | s RESISTOR, CHIP 10 1/16W 1608 |
| R12 | 1-216-797-11 | s RESISTOR, CHIP 10 1/16W 1608 |
| R13 | 1-216-864-11 | s RESISTOR, CHIP 0 1/16W (1608) |
| R16 | 1-218-855-11 | s RESISTOR, CHIP 2.2K 1/16W(1608) |
| R19 | 1-218-846-11 | s RESISTOR, CHIP 910 1/16W (1608) |
| R20 | 1-218-879-11 | s RESISTOR, CHIP 22K 1/16W (1608) |
| R21 | 1-218-879-11 | s RESISTOR, CHIP 22K 1/16W (1608) |
| R22 | 1-218-855-11 | s RESISTOR, CHIP 2.2K 1/16W(1608) |

(PA-206 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-----------------------------------|
| R23 | 1-218-853-11 | s RESISTOR, CHIP 1.8K 1/16W(1608) |
| R24 | 1-218-855-11 | s RESISTOR, CHIP 2.2K 1/16W(1608) |
| R30 | 1-216-827-11 | s RESISTOR, CHIP 3.3K 1/16W 1608 |
| R31 | 1-216-827-11 | s RESISTOR, CHIP 3.3K 1/16W 1608 |
| R32 | 1-216-809-11 | s RESISTOR, CHIP 100 1/16W 1608 |
| R33 | 1-216-809-11 | s RESISTOR, CHIP 100 1/16W 1608 |
| R35 | 1-216-789-11 | s RESISTOR, CHIP 2.2 1/16W(1608) |
| R36 | 1-216-797-11 | s RESISTOR, CHIP 10 1/16W 1608 |
| R37 | 1-216-797-11 | s RESISTOR, CHIP 10 1/16W 1608 |
| R38 | 1-218-869-11 | s RESISTOR, CHIP 8.2K 1/16W(1608) |
| R39 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R40 | 1-218-855-11 | s RESISTOR, CHIP 2.2K 1/16W(1608) |
| R41 | 1-218-854-11 | s RESISTOR, CHIP 2K 1/16W (1608) |

PA-207 BOARD

*a: [Lot No. 911-335]
*b: [Lot No. 341-]

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|-----------------|-----------------------------------|
| C1 | 1-113-500-11 | s CAPACITOR, TANTALUM 100MF/10V |
| C2 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C3 | 1-113-992-11 | s CAPACITOR, TANTALUM 3.3MF/35V |
| C4 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C5 | 1-135-177-21 | s CAPACITOR, TANTALUM 1MF/25V |
| C6 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C7 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C8 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C9 | 1-135-070-00 | s CAPACITOR, TANTALUM 0.1MF/35V |
| C10 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C11 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C12 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C13 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C14 | 1-162-909-11 | s CAPACITOR, CERAMIC 4PF/50V CH |
| C16 | 1-162-909-11 | s CAPACITOR, CERAMIC 4PF/50V CH |
| C17 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C18 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C20 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C21 | 1-137-910-11 | s CAPACITOR, TANTALUM ELECT 10MF |
| CN1 | 1-784-625-11 | o CONNECTOR, FFC (ZIF) 30P |
| CN2 | 1-695-320-51 | o PIN, CONNECTOR (1.5MM) (SMD) 2P |
| FB1 | 1-414-445-11 | s FERRITE, EMI (SMD) |
| IC1 | 8-759-523-07 | s IC TC74AC04FT (EL) |
| IC4 | 8-759-082-58 | s IC TC7W08FU |
| IC5 | 8-752-052-72 | s IC CXA1439M |
| L1 | 1-410-381-11 | s INDUCTOR, CHIP 10UH (3225) |
| Q1 | 8-729-101-25 | s TRANSISTOR 2SC1009A |
| Q3 | 8-729-026-52 | s TRANSISTOR 2SA1576A-T106-R |
| Q4 | 8-729-143-07 | s TRANSISTOR 2SA1610-Y33 |
| Q7 | 8-729-117-72 | s TRANSISTOR 2SC4178 |
| Q8 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q9 | 8-729-143-07 | s TRANSISTOR 2SA1610-Y33 |
| Q10 | 8-729-117-72 | s TRANSISTOR 2SC4178 |
| R1 | 1-216-789-11 | s RESISTOR, CHIP 2.2 1/16W(1608) |
| R2 | 1-216-789-11 | s RESISTOR, CHIP 2.2 1/16W(1608) |
| R3 | 1-216-797-11 | s RESISTOR, CHIP 10 1/16W 1608 |
| R4 | 1-218-901-11 | s RESISTOR, CHIP 180K 1/16W(1608) |
| R5 | 1-218-837-11 | s RESISTOR, CHIP 390 1/16W (1608) |
| R6 | 1-218-881-11 | s RESISTOR, CHIP 27K 1/16W(1608) |
| R7 | *b 1-216-864-11 | s CONDUCTOR, CHIP (1608) |
| | *a 1-216-821-11 | s RESISTOR, CHIP 1.0K 1/16W(1608) |
| R8 | 1-216-809-11 | s RESISTOR, CHIP 100 1/16W 1608 |
| R9 | 1-216-828-11 | s RESISTOR, CHIP 3.9K 1/16W 1608 |
| R10 | 1-216-813-11 | s RESISTOR, CHIP 220 1/16W 1608 |
| R11 | 1-216-797-11 | s RESISTOR, CHIP 10 1/16W 1608 |
| R12 | 1-216-797-11 | s RESISTOR, CHIP 10 1/16W 1608 |
| R13 | 1-216-864-11 | s RESISTOR, CHIP 0 1/16W (1608) |
| R16 | 1-218-855-11 | s RESISTOR, CHIP 2.2K 1/16W(1608) |
| R19 | 1-218-851-11 | s RESISTOR, CHIP 1.5K 1/16W(1608) |
| R20 | 1-218-879-11 | s RESISTOR, CHIP 22K 1/16W (1608) |
| R21 | 1-218-879-11 | s RESISTOR, CHIP 22K 1/16W (1608) |
| R22 | 1-218-855-11 | s RESISTOR, CHIP 2.2K 1/16W(1608) |
| R23 | 1-218-853-11 | s RESISTOR, CHIP 1.8K 1/16W(1608) |
| R24 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |

(PA-207 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-----------------------------------|
| R30 | 1-216-827-11 | s RESISTOR, CHIP 3.3K 1/16W 1608 |
| R31 | 1-216-827-11 | s RESISTOR, CHIP 3.3K 1/16W 1608 |
| R32 | 1-216-809-11 | s RESISTOR, CHIP 100 1/16W 1608 |
| R33 | 1-216-809-11 | s RESISTOR, CHIP 100 1/16W 1608 |
| R35 | 1-216-789-11 | s RESISTOR, CHIP 2.2 1/16W(1608) |
| R36 | 1-216-797-11 | s RESISTOR, CHIP 10 1/16W 1608 |
| R37 | 1-216-797-11 | s RESISTOR, CHIP 10 1/16W 1608 |
| R38 | 1-218-869-11 | s RESISTOR, CHIP 8.2K 1/16W(1608) |
| R39 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R40 | 1-218-855-11 | s RESISTOR, CHIP 2.2K 1/16W(1608) |
| R42 | 1-216-822-11 | s RESISTOR, CHIP 1.2K 1/16W 1608 |
| RV1 | 1-241-263-11 | s RESISTOR, ADJ 5K (CERMET) |

PS-570 BOARD

*a: [Lot No. 245-264]
*b: [Lot No. 265-]

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|-----------------|----------------------------------|
| 1pc | A-8322-176-A | o MOUNTED CIRCUIT BOARD, PS-570 |
| 1pc | *b 9-911-863-01 | s FIBER SHEET, INSULATING(OTHER) |
| 1pc | *a 2-389-320-01 | s CUSION(SILICONE RBR) |
| 1pc | 3-846-067-21 | o SPACER(C) |
| C901 | 1-111-059-11 | s CAPACITOR,ELECT 220MF/25V |
| C902 | 1-163-038-00 | s CAPACITOR,CERAMIC 0.1MF/25V |
| C903 | 1-163-038-00 | s CAPACITOR,CERAMIC 0.1MF/25V |
| C904 | 1-163-038-00 | s CAPACITOR,CERAMIC 0.1MF/25V |
| C905 | 1-163-038-00 | s CAPACITOR,CERAMIC 0.1MF/25V |
| C906 | 1-127-520-11 | s CAPACITOR,ELECT (SOLID) 68MF |
| C907 | 1-163-037-11 | s CAPACITOR,CHIP CERAMIC 0.022MF |
| C908 | 1-163-275-11 | s CAPACITOR,CERAMIC 1000PF/50V |
| C909 | 1-107-690-11 | s CAPACITOR,TANTALUM 6.8MF/35V |
| C910 | 1-163-037-11 | s CAPACITOR,CHIP CERAMIC 0.022MF |
| C911 | 1-104-760-11 | s CAPACITOR,CERAMIC 0.047MF/50V |
| C912 | 1-135-145-11 | s CAPACITOR,TANTALUM 0.47MF/35V |
| C913 | 1-163-038-00 | s CAPACITOR,CERAMIC 0.1MF/25V |
| C914 | 1-163-237-11 | s CAPACITOR,CERAMIC 27PF/50V |
| C915 | 1-163-037-11 | s CAPACITOR,CHIP CERAMIC 0.022MF |
| CN901 | 1-506-703-11 | o CONNECTOR,POST HEADER,ILG (4P) |
| CN902 | 1-560-356-00 | o CONNECTOR,POST HEADER,ILG (2P) |
| D901 | 8-719-023-54 | s DIODE EA60QC06-F |
| D902 | 8-719-941-86 | s DIODE DAN202U |
| FL901 | 1-117-193-11 | s CAPACITOR,3 TERMINAL 1.5MF/50V |
| IC901 | 8-759-701-36 | s IC NJM3403AM |
| IC902 | 8-759-521-35 | s IC TL5001CD |
| L901 | 1-421-459-21 | s COIL,CHOKE |
| L902 | 1-411-968-11 | s COIL, CHOK 33UH |
| Q901 | 8-729-029-14 | s TRANSISTOR DTC144EUA-T106 |
| Q903 | 8-729-028-91 | s TRANSISTOR DTA144EUA-T106 |
| Q904 | 8-729-117-32 | s TRANSISTOR 2SC4177 |
| Q905 | 8-729-140-63 | s TRANSISTOR 2SA1611-M5M6 |
| Q906 | 8-729-043-74 | s TRANSISTOR SI4435DY-T1-REVA |
| Q907 | 8-729-117-32 | s TRANSISTOR 2SC4177 |
| Q908 | 8-729-045-16 | s TRANSISTOR SI4410DY-T1-REVA |
| R901 | 1-216-097-91 | s RESISTOR,CHIP 100K 1/10W(2012) |
| R902 | 1-216-073-00 | s RESISTOR,CHIP 10K 1/10W(2012) |
| R903 | 1-216-073-00 | s RESISTOR,CHIP 10K 1/10W(2012) |
| R904 | 1-216-073-00 | s RESISTOR,CHIP 10K 1/10W(2012) |
| R905 | 1-216-013-00 | s RESISTOR,CHIP 33 1/10W(2012) |
| R906 | 1-219-989-11 | s RESISTOR,SQUARE CHIP 0.02 1W |
| R907 | 1-216-029-00 | s RESISTOR,CHIP 150 1/10W(2012) |
| R908 | 1-208-807-11 | s RESISTOR,CHIP 11K 1/10W (2125) |
| R909 | 1-208-798-11 | s RESISTOR,CHIP 4.7K 1/10W(2012) |
| R910 | 1-208-830-11 | s RESISTOR,CHIP 100K 1/10W(2012) |
| R911 | 1-208-782-11 | s RESISTOR,CHIP 1K 1/10W (2012) |
| R912 | 1-216-025-91 | s RESISTOR,CHIP 100 1/10W(2125) |
| R913 | 1-216-105-91 | s RESISTOR,CHIP 220K 1/10W(2125) |
| R914 | 1-216-097-91 | s RESISTOR,CHIP 100K 1/10W(2012) |
| R915 | 1-216-073-00 | s RESISTOR,CHIP 10K 1/10W(2012) |
| R916 | 1-216-105-91 | s RESISTOR,CHIP 220K 1/10W(2125) |
| R917 | 1-216-065-91 | s RESISTOR,CHIP 4.7K 1/10W(2012) |
| R918 | 1-216-077-00 | s RESISTOR,CHIP 15K 1/10W(2012) |
| R919 | 1-216-049-91 | s RESISTOR,CHIP 1K 1/10W(2125) |
| R920 | 1-216-097-91 | s RESISTOR,CHIP 100K 1/10W(2012) |

PSW-71 BOARD

Ref. No.
or Q'ty Part No. SP Description

| | | |
|-------|--------------|----------------------------------|
| 1pc | A-8322-174-A | o MOUNTED CIRCUIT BOARD, PSW-71 |
| C301 | 1-163-021-91 | s CAPACITOR,CERAMIC 0.01MF/50V |
| C303 | 1-163-021-91 | s CAPACITOR,CERAMIC 0.01MF/50V |
| C305 | 1-163-021-91 | s CAPACITOR,CERAMIC 0.01MF/50V |
| C306 | 1-163-021-91 | s CAPACITOR,CERAMIC 0.01MF/50V |
| C307 | 1-163-038-00 | s CAPACITOR,CERAMIC 0.1MF/25V |
| C308 | 1-163-038-00 | s CAPACITOR,CERAMIC 0.1MF/25V |
| C309 | 1-163-005-11 | s CAPACITOR CHIP CERAMIC 470PF |
| C310 | 1-163-038-00 | s CAPACITOR,CERAMIC 0.1MF/25V |
| CN301 | 1-695-890-11 | o PIN, CONNECTOR (PC BOARD) 12P |
| CN302 | 1-764-087-21 | s PIN, CONNECTOR (PC BOARD) 14P |
| CN304 | 1-506-485-11 | s PIN,CONNECTOR 6P |
| CN305 | 1-506-491-11 | s PIN,CONNECTOR 12P |
| CN306 | 1-778-652-11 | o CONNECTOR, FFC (ZIF) 50P |
| D301 | 8-719-938-78 | s DIODE SB10-05PCP (RECTI) |
| D302 | 8-719-800-76 | s DIODE 1SS226 |
| D303 | 8-719-938-78 | s DIODE SB10-05PCP (RECTI) |
| D304 | 8-719-938-78 | s DIODE SB10-05PCP (RECTI) |
| D305 | 8-719-938-78 | s DIODE SB10-05PCP (RECTI) |
| IC301 | 8-759-530-05 | s IC TC4053BFT (EL.N) |
| IC302 | 8-759-659-71 | s IC SN74HC165APWR |
| IC303 | 8-759-268-33 | s IC SN74HC595ADB (R) |
| IC304 | 8-759-530-05 | s IC TC4053BFT (EL.N) |
| Q301 | 8-729-026-52 | s TRANSISTOR 2SA1576A-T106-R |
| Q302 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q303 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q304 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q308 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q309 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q310 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| R301 | 1-216-097-91 | s RESISTOR,CHIP 100K 1/10W(2012) |
| R302 | 1-216-001-00 | s RESISTOR,CHIP 10 1/10W(2012) |
| R303 | 1-216-073-00 | s RESISTOR,CHIP 10K 1/10W(2012) |
| R304 | 1-216-001-00 | s RESISTOR,CHIP 10 1/10W(2012) |
| R305 | 1-216-001-00 | s RESISTOR,CHIP 10 1/10W(2012) |
| R306 | 1-216-001-00 | s RESISTOR,CHIP 10 1/10W(2012) |
| R307 | 1-216-001-00 | s RESISTOR,CHIP 10 1/10W(2012) |
| R308 | 1-216-097-91 | s RESISTOR,CHIP 100K 1/10W(2012) |
| R309 | 1-216-001-00 | s RESISTOR,CHIP 10 1/10W(2012) |
| R310 | 1-216-001-00 | s RESISTOR,CHIP 10 1/10W(2012) |
| R311 | 1-216-001-00 | s RESISTOR,CHIP 10 1/10W(2012) |
| R312 | 1-216-065-91 | s RESISTOR,CHIP 4.7K 1/10W(2012) |
| R313 | 1-220-250-11 | s RESISTOR,CHIP 10 1/2W (4532) |
| R314 | 1-216-073-00 | s RESISTOR,CHIP 10K 1/10W(2012) |
| R315 | 1-216-089-91 | s RESISTOR,CHIP 47K 1/10W(2012) |
| R316 | 1-220-250-11 | s RESISTOR,CHIP 10 1/2W (4532) |
| R318 | 1-216-001-00 | s RESISTOR,CHIP 10 1/10W(2012) |
| R319 | 1-216-051-00 | s RESISTOR,CHIP 1.2K 1/10W(2012) |
| R320 | 1-216-025-91 | s RESISTOR,CHIP 100 1/10W(2125) |
| R321 | 1-216-025-91 | s RESISTOR,CHIP 100 1/10W(2125) |
| R322 | 1-208-793-11 | s RESISTOR,CHIP 3K 1/10W (2125) |
| R323 | 1-216-061-00 | s RESISTOR,CHIP 3.3K 1/10W(2012) |
| R324 | 1-216-097-91 | s RESISTOR,CHIP 100K 1/10W(2012) |
| R325 | 1-216-073-00 | s RESISTOR,CHIP 10K 1/10W(2012) |
| R326 | 1-216-057-00 | s RESISTOR,CHIP 2.2K 1/10W(2012) |
| R327 | 1-216-073-00 | s RESISTOR,CHIP 10K 1/10W(2012) |
| R328 | 1-216-097-91 | s RESISTOR,CHIP 100K 1/10W(2012) |

(PSW-71 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| R329 | 1-216-097-91 | s RESISTOR,CHIP 100K 1/10W(2012) |
| R330 | 1-208-782-11 | s RESISTOR,CHIP 1K 1/10W (2012) |
| R331 | 1-208-782-11 | s RESISTOR,CHIP 1K 1/10W (2012) |
| R333 | 1-216-025-91 | s RESISTOR,CHIP 100 1/10W(2125) |
| R334 | 1-216-105-91 | s RESISTOR,CHIP 220K 1/10W(2125) |
| R335 | 1-216-105-91 | s RESISTOR,CHIP 220K 1/10W(2125) |
| R336 | 1-216-049-91 | s RESISTOR,CHIP 1K 1/10W(2125) |
| R337 | 1-216-025-91 | s RESISTOR,CHIP 100 1/10W(2125) |
| R338 | 1-216-061-00 | s RESISTOR,CHIP 3.3K 1/10W(2012) |
| R339 | 1-216-073-00 | s RESISTOR,CHIP 10K 1/10W(2012) |
| R340 | 1-216-025-91 | s RESISTOR,CHIP 100 1/10W(2125) |
| R341 | 1-216-099-00 | s RESISTOR,CHIP 120K 1/10W(2012) |
| R342 | 1-216-109-00 | s RESISTOR,CHIP 330K 1/10W(2012) |
| R343 | 1-216-073-00 | s RESISTOR,CHIP 10K 1/10W(2012) |
| RB301 | 1-239-444-11 | s NETWORK,RESISTOR 220K (1608) |
| RB302 | 1-236-908-11 | s RESISTOR,NETWORK 10K (3216) |
| RB304 | 1-236-908-11 | s RESISTOR,NETWORK 10K (3216) |
| RB305 | 1-239-444-11 | s NETWORK,RESISTOR 220K (1608) |
| RB306 | 1-239-412-11 | s NETWORK, RESISTOR 100 (1608) |
| S301 | 1-771-356-11 | s SWITCH, TOGGLE |
| S304 | 1-692-827-11 | s SWITCH, TACT |
| S306 | 1-571-642-11 | s SWITCH, TOGGLE |

RP-91 BOARD

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| 1pc | A-8277-852-A | o MOUNTED CIRCUIT BOARD, RP-91 |
| C770 | 1-135-259-11 | s CAPACITOR,TANTALUM 10MF/6.3V |
| C771 | 1-162-970-11 | s CAPACITOR,CERAMIC 0.01MF/25V B |
| C772 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C773 | 1-162-969-11 | s CAPACITOR,CERAMIC 6800PF/25V B |
| C774 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C775 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C776 | 1-162-923-11 | s CAPACITOR,CERAMIC 47PF/50V CH |
| C777 | 1-162-923-11 | s CAPACITOR,CERAMIC 47PF/50V CH |
| C778 | 1-162-970-11 | s CAPACITOR,CERAMIC 0.01MF/25V B |
| C779 | 1-162-970-11 | s CAPACITOR,CERAMIC 0.01MF/25V B |
| C780 | 1-162-970-11 | s CAPACITOR,CERAMIC 0.01MF/25V B |
| C781 | 1-162-970-11 | s CAPACITOR,CERAMIC 0.01MF/25V B |
| C782 | 1-162-970-11 | s CAPACITOR,CERAMIC 0.01MF/25V B |
| C783 | 1-135-259-11 | s CAPACITOR,TANTALUM 10MF/6.3V |
| C784 | 1-162-970-11 | s CAPACITOR,CERAMIC 0.01MF/25V B |
| C785 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C786 | 1-162-970-11 | s CAPACITOR,CERAMIC 0.01MF/25V B |
| C787 | 1-135-259-11 | s CAPACITOR,TANTALUM 10MF/6.3V |
| C788 | 1-104-851-11 | s CAPACITOR,TANTALUM 10MF/10V |
| C789 | 1-162-970-11 | s CAPACITOR,CERAMIC 0.01MF/25V B |
| C791 | 1-162-970-11 | s CAPACITOR,CERAMIC 0.01MF/25V B |
| C792 | 1-110-569-11 | s CAPACITOR,TANTALUM 47MF/6.3V |
| C793 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C794 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C795 | 1-135-259-11 | s CAPACITOR,TANTALUM 10MF/6.3V |
| C796 | 1-162-970-11 | s CAPACITOR,CERAMIC 0.01MF/25V B |
| C797 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C798 | 1-162-970-11 | s CAPACITOR,CERAMIC 0.01MF/25V B |
| C799 | 1-164-217-11 | s CAPACITOR,CERAMIC 150PF/50V CH |
| C800 | 1-113-682-11 | s CAPACITOR,TANTALUM 33MF/10V |
| C801 | 1-162-970-11 | s CAPACITOR,CERAMIC 0.01MF/25V B |
| C802 | 1-162-970-11 | s CAPACITOR,CERAMIC 0.01MF/25V B |
| C803 | 1-164-217-11 | s CAPACITOR,CERAMIC 150PF/50V CH |
| C804 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C806 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C809 | 1-162-970-11 | s CAPACITOR,CERAMIC 0.01MF/25V B |
| C810 | 1-104-851-11 | s CAPACITOR,TANTALUM 10MF/10V |
| C811 | 1-135-145-11 | s CAPACITOR,TANTALUM 0.47MF/35V |
| C814 | 1-162-970-11 | s CAPACITOR,CERAMIC 0.01MF/25V B |
| C815 | 1-162-964-11 | s CAPACITOR,CERAMIC 1000PF/50V B |
| C816 | 1-162-964-11 | s CAPACITOR,CERAMIC 1000PF/50V B |
| C818 | 1-162-964-11 | s CAPACITOR,CERAMIC 1000PF/50V B |
| C819 | 1-162-970-11 | s CAPACITOR,CERAMIC 0.01MF/25V B |
| C821 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C822 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C823 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C824 | 1-162-970-11 | s CAPACITOR,CERAMIC 0.01MF/25V B |
| C825 | 1-164-315-11 | s CAPACITOR,CERAMIC 470PF/50V CH |
| C826 | 1-162-970-11 | s CAPACITOR,CERAMIC 0.01MF/25V B |
| C827 | 1-162-970-11 | s CAPACITOR,CERAMIC 0.01MF/25V B |
| C828 | 1-162-970-11 | s CAPACITOR,CERAMIC 0.01MF/25V B |
| C829 | 1-135-259-11 | s CAPACITOR,TANTALUM 10MF/6.3V |
| C830 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C831 | 1-135-259-11 | s CAPACITOR,TANTALUM 10MF/6.3V |
| C832 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C833 | 1-162-970-11 | s CAPACITOR,CERAMIC 0.01MF/25V B |
| C834 | 1-162-970-11 | s CAPACITOR,CERAMIC 0.01MF/25V B |

(RP-91 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-----------------------------------|
| C835 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C836 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C837 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C839 | 1-162-913-11 | s CAPACITOR, CHIP CERAMIC 8PF/50V |
| C841 | 1-162-923-11 | s CAPACITOR, CERAMIC 47PF/50V CH |
| C842 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C843 | 1-164-677-11 | s CAPACITOR, CERAMIC 0.033MF/16V |
| C844 | 1-164-677-11 | s CAPACITOR, CERAMIC 0.033MF/16V |
| C845 | 1-162-964-11 | s CAPACITOR, CERAMIC 1000PF/50V B |
| C847 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C848 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C849 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C850 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C853 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C854 | 1-113-642-11 | s CAPACITOR, TANTALUM 47MF/10V |
| C855 | 1-113-642-11 | s CAPACITOR, TANTALUM 47MF/10V |
| C857 | 1-162-927-11 | s CAPACITOR, CERAMIC 100PF/50V CH |
| C859 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C860 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C861 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C862 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C863 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C865 | 1-162-927-11 | s CAPACITOR, CERAMIC 100PF/50V CH |
| C869 | 1-162-925-11 | s CAPACITOR, CERAMIC 68PF/50V CH |
| C870 | 1-162-927-11 | s CAPACITOR, CERAMIC 100PF/50V CH |
| C871 | 1-162-925-11 | s CAPACITOR, CERAMIC 68PF/50V CH |
| C872 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C873 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C874 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C875 | 1-135-259-11 | s CAPACITOR, TANTALUM 10MF/6.3V |
| C876 | 1-135-259-11 | s CAPACITOR, TANTALUM 10MF/6.3V |
| C878 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C900 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C901 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C902 | 1-162-966-11 | s CAPACITOR, CERAMIC 2200PF/50V B |
| C903 | 1-164-217-11 | s CAPACITOR, CERAMIC 150PF/50V CH |
| C904 | 1-164-217-11 | s CAPACITOR, CERAMIC 150PF/50V CH |
| C905 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C906 | 1-164-227-11 | s CAPACITOR, CERAMIC 0.022MF/25V |
| C907 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C908 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C909 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C910 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C911 | 1-104-852-11 | s CAPACITOR, TANTALUM 22MF/10V |
| C912 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C913 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C914 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| CN771 | 1-566-542-31 | s CONNECTOR, FPC (NON ZIF) 10P |
| CN772 | 1-774-260-11 | o CONNECTOR, FPC (ZIF) 20P |
| CN773 | 1-778-535-11 | o CONNECTOR, FPC (ZIF) 45P |
| CN774 | 1-778-645-11 | o CONNECTOR, FPC (ZIF) 10P |
| CN775 | 1-573-371-21 | s CONNECTOR, BOARD TO BOARD 14P |
| D771 | 8-719-059-51 | s DIODE MA3J142E0LSO |
| D772 | 8-719-059-51 | s DIODE MA3J142E0LSO |
| D773 | 8-719-041-39 | s DIODE KV1470 (5MA) |
| D774 | 8-719-052-27 | s DIODE 1S8351-TB |
| D775 | 8-719-052-27 | s DIODE 1S8351-TB |
| D776 | 8-719-027-95 | s DIODE HSM88WK |

(RP-91 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|------------------------------------|
| FL770 | 1-411-274-21 | s DELAY LINE, LC (23NS) |
| FL771 | 1-233-343-21 | s FILTER, LOW PASS |
| FL772 | 1-233-344-21 | s FILTER, LOW PASS |
| FL900 | 1-233-351-21 | s FILTER, BAND PASS |
| FL901 | 1-233-350-21 | s FILTER, BAND PASS |
| IC770 | 8-759-469-25 | s IC AK6440AF (E2) |
| IC771 | 8-759-064-36 | s IC MB88346BPFV |
| IC772 | 8-752-371-18 | s IC CXD2302Q |
| IC773 | 8-752-070-12 | s IC CXA1762Q |
| IC774 | 8-752-379-36 | s IC CXD2189AR |
| IC775 | 8-752-070-11 | s IC CXA1761R |
| IC777 | 8-752-072-49 | s IC CXA1760Q-T6 |
| IC778 | 8-759-058-62 | s IC TC7S08FU-TE85R |
| IC900 | 8-759-327-00 | s IC CXA8044Q (T4) |
| IC901 | 8-759-082-60 | s IC TC7S66FU |
| L770 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L772 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L773 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L774 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L776 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L777 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L779 | 1-410-738-41 | s INDUCTOR, CHIP 0.56UH |
| L780 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L782 | 1-412-963-11 | s INDUCTOR 100UH (2520) |
| L783 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L787 | 1-410-381-11 | s INDUCTOR, CHIP 10UH (3225) |
| L788 | 1-410-380-31 | s INDUCTOR, CHIP 8.2UH (3225) |
| L789 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L791 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L900 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L901 | 1-412-282-41 | s INDUCTOR INDUCTOR 470UH (3225) |
| Q772 | 8-729-907-00 | s TRANSISTOR DTC114EU |
| Q773 | 8-729-141-48 | s TRANSISTOR 2SB624-BV345 |
| Q774 | 8-729-141-48 | s TRANSISTOR 2SB624-BV345 |
| Q775 | 8-729-907-00 | s TRANSISTOR DTC114EU |
| Q776 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q777 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q778 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q779 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| Q780 | 8-729-907-00 | s TRANSISTOR DTC114EU |
| Q781 | 8-729-026-52 | s TRANSISTOR 2SA1576A-T106-R |
| Q782 | 8-729-026-52 | s TRANSISTOR 2SA1576A-T106-R |
| Q784 | 8-729-026-52 | s TRANSISTOR 2SA1576A-T106-R |
| Q900 | 8-729-907-00 | s TRANSISTOR DTC114EU |
| Q901 | 8-729-037-92 | s TRANSISTOR 2SD2216J-R(TX).SO |
| R770 | 1-216-845-11 | s RESISTOR, CHIP 100K 1/16W (1608) |
| R771 | 1-216-864-11 | s RESISTOR, CHIP 0 1/16W (1608) |
| R774 | 1-216-841-11 | s RESISTOR, CHIP 47K 1/16W 1608 |
| R776 | 1-216-818-11 | s RESISTOR, CHIP 560 1/16W 1608 |
| R777 | 1-218-674-11 | s RESISTOR CHIP 180 1/16W (1608) |
| R778 | 1-216-864-11 | s RESISTOR, CHIP 0 1/16W (1608) |
| R779 | 1-218-744-11 | s RESISTOR, CHIP 150K 1/16W |
| R780 | 1-218-724-11 | s RESISTOR, CHIP 22K 1/16W (1608) |
| R781 | 1-216-821-11 | s RESISTOR, CHIP 1.0K 1/16W (1608) |
| R782 | 1-218-716-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R783 | 1-218-716-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R784 | 1-216-833-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R785 | 1-216-833-11 | s RESISTOR, CHIP 10K 1/16W (1608) |

(RP-91 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| R786 | 1-218-684-11 | s RESISTOR,CHIP 470 1/16W (1608) |
| R787 | 1-218-677-11 | s RESISTOR,CHIP 240 1/16W (1608) |
| R788 | 1-218-677-11 | s RESISTOR,CHIP 240 1/16W (1608) |
| R789 | 1-216-824-11 | s RESISTOR,CHIP 1.8K 1/16W 1608 |
| R790 | 1-216-841-11 | s RESISTOR,CHIP 47K 1/16W 1608 |
| R791 | 1-218-680-11 | s RESISTOR,CHIP 330 1/16W(1608) |
| R792 | 1-216-814-11 | s RESISTOR,CHIP 270 1/16W 1608 |
| R793 | 1-216-815-11 | s RESISTOR,CHIP 330 1/16W 1608 |
| R794 | 1-218-682-11 | s RESISTOR,CHIP 390 1/16W (1608) |
| R795 | 1-218-680-11 | s RESISTOR,CHIP 330 1/16W(1608) |
| R796 | 1-218-668-11 | s RESISTOR,CHIP 100 1/16W (1608) |
| R797 | 1-216-815-11 | s RESISTOR,CHIP 330 1/16W 1608 |
| R798 | 1-218-680-11 | s RESISTOR,CHIP 330 1/16W(1608) |
| R799 | 1-218-700-11 | s RESISTOR,CHIP 2.2K 1/16W(1608) |
| R800 | 1-218-732-11 | s RESISTOR,CHIP 47K 1/16W(1608) |
| R801 | 1-218-732-11 | s RESISTOR,CHIP 47K 1/16W(1608) |
| R802 | 1-218-732-11 | s RESISTOR,CHIP 47K 1/16W(1608) |
| R803 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R804 | 1-218-718-11 | s RESISTOR,CHIP 12K 1/16W (1608) |
| R805 | 1-218-718-11 | s RESISTOR,CHIP 12K 1/16W (1608) |
| R808 | 1-218-692-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R809 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R810 | 1-218-718-11 | s RESISTOR,CHIP 12K 1/16W (1608) |
| R811 | 1-218-718-11 | s RESISTOR,CHIP 12K 1/16W (1608) |
| R812 | 1-218-718-11 | s RESISTOR,CHIP 12K 1/16W (1608) |
| R813 | 1-218-718-11 | s RESISTOR,CHIP 12K 1/16W (1608) |
| R814 | 1-216-853-11 | s RESISTOR,CHIP 470K 1/16W(1608) |
| R815 | 1-216-853-11 | s RESISTOR,CHIP 470K 1/16W(1608) |
| R816 | 1-216-829-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R817 | 1-216-829-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R818 | 1-216-829-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R819 | 1-216-831-11 | s RESISTOR,CHIP 6.8K 1/16W(1608) |
| R820 | 1-216-803-11 | s RESISTOR,CHIP 33 1/16W (1608) |
| R821 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R822 | 1-216-834-11 | s RESISTOR,CHIP 12K 1/16W 1608 |
| R823 | 1-216-834-11 | s RESISTOR,CHIP 12K 1/16W 1608 |
| R824 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R825 | 1-216-835-11 | s RESISTOR,CHIP 15K 1/16W |
| R826 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R827 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R828 | 1-218-720-11 | s RESISTOR,CHIP 15K 1/16W(1608) |
| R829 | 1-218-720-11 | s RESISTOR,CHIP 15K 1/16W(1608) |
| R830 | 1-218-710-11 | s RESISTOR,CHIP 5.6K 1/16W(1608) |
| R831 | 1-218-710-11 | s RESISTOR,CHIP 5.6K 1/16W(1608) |
| R832 | 1-216-807-11 | s RESISTOR,CHIP 68 1/16W 1608 |
| R833 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R834 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R835 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R836 | 1-216-839-11 | s RESISTOR,CHIP 33K 1/16W 1608 |
| R837 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R838 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R839 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R841 | 1-216-837-11 | s RESISTOR,CHIP 22K 1/16W 1608 |
| R843 | 1-218-688-11 | s RESISTOR,CHIP 680 1/16W(1608) |
| R844 | 1-218-688-11 | s RESISTOR,CHIP 680 1/16W(1608) |
| R845 | 1-218-678-11 | s RESISTOR,CHIP 270 1/16W (1608) |
| R846 | 1-218-676-11 | s RESISTOR,CHIP 220 1/16W(1608) |
| R847 | 1-216-805-11 | s RESISTOR,CHIP 47 1/16W 1608 |
| R848 | 1-218-686-11 | s RESISTOR,CHIP 560 1/16W (1608) |

(RP-91 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| R849 | 1-218-682-11 | s RESISTOR,CHIP 390 1/16W (1608) |
| R850 | 1-218-680-11 | s RESISTOR,CHIP 330 1/16W(1608) |
| R851 | 1-218-680-11 | s RESISTOR,CHIP 330 1/16W(1608) |
| R852 | 1-218-682-11 | s RESISTOR,CHIP 390 1/16W (1608) |
| R855 | 1-218-718-11 | s RESISTOR,CHIP 12K 1/16W (1608) |
| R856 | 1-218-718-11 | s RESISTOR,CHIP 12K 1/16W (1608) |
| R858 | 1-218-682-11 | s RESISTOR,CHIP 390 1/16W (1608) |
| R859 | 1-216-853-11 | s RESISTOR,CHIP 470K 1/16W(1608) |
| R861 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R862 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R900 | 1-216-843-11 | s RESISTOR,CHIP 68K 1/16W (1608) |
| R901 | 1-216-831-11 | s RESISTOR,CHIP 6.8K 1/16W(1608) |
| R902 | 1-216-831-11 | s RESISTOR,CHIP 6.8K 1/16W(1608) |
| R903 | 1-216-839-11 | s RESISTOR,CHIP 33K 1/16W 1608 |
| R904 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R905 | 1-216-825-11 | s RESISTOR,CHIP 2.2K 1/16W 1608 |
| R906 | 1-216-825-11 | s RESISTOR,CHIP 2.2K 1/16W 1608 |
| R907 | 1-216-835-11 | s RESISTOR,CHIP 15K 1/16W |
| R908 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R909 | 1-216-834-11 | s RESISTOR,CHIP 12K 1/16W 1608 |
| R910 | 1-218-692-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R911 | 1-218-716-11 | s RESISTOR,CHIP 10K 1/16W(1608) |
| R912 | 1-216-837-11 | s RESISTOR,CHIP 22K 1/16W 1608 |
| R913 | 1-218-692-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R914 | 1-218-716-11 | s RESISTOR,CHIP 10K 1/16W(1608) |
| R915 | 1-216-837-11 | s RESISTOR,CHIP 22K 1/16W 1608 |
| R916 | 1-216-815-11 | s RESISTOR,CHIP 330 1/16W 1608 |
| R917 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R918 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R919 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R920 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |

SE-295 BOARD

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| 1pc | A-8344-460-A | s MOUNTED CIRCUIT BOARD, SE-295A |
| PH1 | 8-749-012-20 | s PHOTO INTERRUPTER GP2S27B |
| PH2 | 8-749-012-20 | s PHOTO INTERRUPTER GP2S27B |
| PH3 | 8-749-012-20 | s PHOTO INTERRUPTER GP2S27B |
| PH4 | 8-749-012-20 | s PHOTO INTERRUPTER GP2S27B |
| Q1 | 8-729-926-31 | s PHOTO TRANSISTOR PT483F1S |

SE-297 BOARD

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| 1pc | A-8344-461-A | s MOUNTED CIRCUIT BOARD, SE-297A |
| D1 | 8-719-989-52 | s LED GL4600S |
| PH1 | 8-749-012-20 | s PHOTO INTERRUPTER GP2S27B |
| PH2 | 8-749-012-20 | s PHOTO INTERRUPTER GP2S27B |
| PH3 | 8-749-012-20 | s PHOTO INTERRUPTER GP2S27B |
| PH4 | 8-749-012-20 | s PHOTO INTERRUPTER GP2S27B |
| S1 | 1-692-366-31 | s SWITCH, PUSH |
| TH1 | 1-808-656-11 | s THERMISTOR |

SE-566 BOARD

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-------------------------------------|
| CN301 | 1-573-806-21 | s PIN, CONNECTOR (6P) (SMD) (1.5MM) |
| PH301 | 8-749-925-05 | s PHOTO REFLEC.NJL5183KA-F20-TE1 |
| PH302 | 8-749-925-05 | s PHOTO REFLEC.NJL5183KA-F20-TE1 |

SV-213 BOARD

*a: [Lot No. 911-215]
*b: [Lot No. 221-]

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-----------------------------------|
| 1pc | A-8322-140-B | o MOUNTED CIRCUIT BOARD, SV-213 |
| C1 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C2 | 1-162-969-11 | s CAPACITOR, CERAMIC 6800PF/25V B |
| C3 | 1-162-969-11 | s CAPACITOR, CERAMIC 6800PF/25V B |
| C4 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C5 | 1-162-923-11 | s CAPACITOR, CERAMIC 47PF/50V CH |
| C6 | 1-162-923-11 | s CAPACITOR, CERAMIC 47PF/50V CH |
| C7 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C8 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C9 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C10 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C11 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C13 | 1-165-176-11 | s CAPACITOR, CERAMIC 47000PF/16V |
| C17 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C18 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C200 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C201 | 1-135-177-21 | s CAPACITOR, TANTALUM 1MF/25V |
| C202 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C203 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C204 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C205 | 1-162-923-11 | s CAPACITOR, CERAMIC 47PF/50V CH |
| C206 | 1-162-923-11 | s CAPACITOR, CERAMIC 47PF/50V CH |
| C207 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C208 | 1-162-923-11 | s CAPACITOR, CERAMIC 47PF/50V CH |
| C209 | 1-162-923-11 | s CAPACITOR, CERAMIC 47PF/50V CH |
| C210 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C211 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C212 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C300 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C301 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C302 | 1-162-968-11 | s CAPACITOR, CERAMIC 4700PF/50V B |
| C303 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C304 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C305 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C306 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C309 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C310 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C311 | 1-135-259-11 | s CAPACITOR, TANTALUM 10MF/6.3V |
| C312 | 1-135-259-11 | s CAPACITOR, TANTALUM 10MF/6.3V |
| C313 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C314 | 1-162-969-11 | s CAPACITOR, CERAMIC 6800PF/25V B |
| C315 | 1-162-969-11 | s CAPACITOR, CERAMIC 6800PF/25V B |
| C317 | 1-162-923-11 | s CAPACITOR, CERAMIC 47PF/50V CH |
| C318 | 1-162-923-11 | s CAPACITOR, CERAMIC 47PF/50V CH |
| C319 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C320 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C321 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C322 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C323 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C324 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C325 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C326 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C327 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C328 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C329 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |

(SV-213 BOARD)

| Ref. No. or Q'ty | Part No. | SP | Description |
|---------------------|--------------|----|---------------------------------|
| C331 | 1-162-970-11 | s | CAPACITOR, CERAMIC 0.01MF/25V B |
| C332 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C333 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C334 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C400 | 1-162-923-11 | s | CAPACITOR, CERAMIC 47PF/50V CH |
| C401 | 1-162-968-11 | s | CAPACITOR, CERAMIC 4700PF/50V B |
| C402 | 1-164-677-11 | s | CAPACITOR, CERAMIC 0.033MF/16V |
| C403 | 1-135-259-11 | s | CAPACITOR, TANTALUM 10MF/6.3V |
| C404 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C405 | 1-104-852-11 | s | CAPACITOR, TANTALUM 22MF/10V |
| C406 | 1-135-177-21 | s | CAPACITOR, TANTALUM 1MF/25V |
| C407 | 1-162-923-11 | s | CAPACITOR, CERAMIC 47PF/50V CH |
| C408 | 1-162-923-11 | s | CAPACITOR, CERAMIC 47PF/50V CH |
| C409 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C410 | 1-162-969-11 | s | CAPACITOR, CERAMIC 6800PF/25V B |
| C411 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C412 | 1-162-964-11 | s | CAPACITOR, CERAMIC 1000PF/50V B |
| C413 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C414 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C415 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C416 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C417 | 1-162-970-11 | s | CAPACITOR, CERAMIC 0.01MF/25V B |
| C418 | 1-162-970-11 | s | CAPACITOR, CERAMIC 0.01MF/25V B |
| C419 | 1-162-970-11 | s | CAPACITOR, CERAMIC 0.01MF/25V B |
| C420 | 1-165-176-11 | s | CAPACITOR, CERAMIC 47000PF/16V |
| C421 | 1-164-174-11 | s | CAPACITOR, CERAMIC 8200PF/25V B |
| C422 | 1-164-174-11 | s | CAPACITOR, CERAMIC 8200PF/25V B |
| C423 | 1-164-174-11 | s | CAPACITOR, CERAMIC 8200PF/25V B |
| C424 | 1-162-920-11 | s | CAPACITOR, CERAMIC 27PF/50V CH |
| C425 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C426 | 1-162-970-11 | s | CAPACITOR, CERAMIC 0.01MF/25V B |
| C427 | 1-162-970-11 | s | CAPACITOR, CERAMIC 0.01MF/25V B |
| C428 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C429 | 1-162-923-11 | s | CAPACITOR, CERAMIC 47PF/50V CH |
| C500 | 1-162-964-11 | s | CAPACITOR, CERAMIC 1000PF/50V B |
| C501 | 1-162-927-11 | s | CAPACITOR, CERAMIC 100PF/50V CH |
| C502 | 1-162-964-11 | s | CAPACITOR, CERAMIC 1000PF/50V B |
| C503 | 1-162-964-11 | s | CAPACITOR, CERAMIC 1000PF/50V B |
| C504 | 1-162-964-11 | s | CAPACITOR, CERAMIC 1000PF/50V B |
| C505 | 1-162-964-11 | s | CAPACITOR, CERAMIC 1000PF/50V B |
| C506 | 1-162-964-11 | s | CAPACITOR, CERAMIC 1000PF/50V B |
| C507 | 1-162-964-11 | s | CAPACITOR, CERAMIC 1000PF/50V B |
| C508 | 1-162-964-11 | s | CAPACITOR, CERAMIC 1000PF/50V B |
| C509 | 1-162-964-11 | s | CAPACITOR, CERAMIC 1000PF/50V B |
| C510 | 1-162-964-11 | s | CAPACITOR, CERAMIC 1000PF/50V B |
| C512 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C516 | 1-113-642-11 | s | CAPACITOR, TANTALUM 47MF/10V |
| C517 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C518 | 1-113-642-11 | s | CAPACITOR, TANTALUM 47MF/10V |
| C520 | 1-110-569-11 | s | CAPACITOR, TANTALUM 47MF/6.3V |
| C522 | 1-113-500-11 | s | CAPACITOR, TANTALUM 100MF/10V |
| C524 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C525 | 1-135-072-21 | s | CAPACITOR, TANTALUM 0.22MF/35V |
| C526 | 1-165-128-11 | s | CAPACITOR, CERAMIC 0.22MF/16V F |
| C527 | 1-164-315-11 | s | CAPACITOR, CERAMIC 470PF/50V CH |
| C528 | 1-110-569-11 | s | CAPACITOR, TANTALUM 47MF/6.3V |
| C529 | 1-162-970-11 | s | CAPACITOR, CERAMIC 0.01MF/25V B |
| C530 | 1-162-912-11 | s | CAPACITOR, CERAMIC 7PF/50V 1608 |
| C531 | 1-162-912-11 | s | CAPACITOR, CERAMIC 7PF/50V 1608 |

(SV-213 BOARD)

| Ref. No. or Q'ty | Part No. | SP | Description |
|---------------------|--------------|----|---------------------------------|
| C533 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C534 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C535 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C537 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C538 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C539 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C700 | 1-162-965-11 | s | CAPACITOR, CERAMIC 1500PF/50V B |
| C701 | 1-162-969-11 | s | CAPACITOR, CERAMIC 6800PF/25V B |
| C702 | 1-113-500-11 | s | CAPACITOR, TANTALUM 100MF/10V |
| C705 | 1-162-968-11 | s | CAPACITOR, CERAMIC 4700PF/50V B |
| C706 | 1-104-914-11 | s | CAPACITOR, TANTALUM 22MF/16V |
| C707 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C740 | 1-162-925-11 | s | CAPACITOR, CERAMIC 68PF/50V CH |
| C741 | 1-162-965-11 | s | CAPACITOR, CERAMIC 1500PF/50V B |
| C742 | 1-162-969-11 | s | CAPACITOR, CERAMIC 6800PF/25V B |
| C746 | 1-162-968-11 | s | CAPACITOR, CERAMIC 4700PF/50V B |
| C747 | 1-104-914-11 | s | CAPACITOR, TANTALUM 22MF/16V |
| C748 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C749 | 1-162-965-11 | s | CAPACITOR, CERAMIC 1500PF/50V B |
| C750 | 1-162-969-11 | s | CAPACITOR, CERAMIC 6800PF/25V B |
| C754 | 1-162-968-11 | s | CAPACITOR, CERAMIC 4700PF/50V B |
| C755 | 1-104-914-11 | s | CAPACITOR, TANTALUM 22MF/16V |
| C756 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C757 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C758 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C759 | 1-113-500-11 | s | CAPACITOR, TANTALUM 100MF/10V |
| C760 | 1-113-500-11 | s | CAPACITOR, TANTALUM 100MF/10V |
| C761 | 1-165-176-11 | s | CAPACITOR, CERAMIC 47000PF/16V |
| C801 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C802 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C901 | 1-162-970-11 | s | CAPACITOR, CERAMIC 0.01MF/25V B |
| C902 | 1-162-964-11 | s | CAPACITOR, CERAMIC 1000PF/50V B |
| C903 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C904 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C905 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C906 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C907 | 1-164-315-11 | s | CAPACITOR, CERAMIC 470PF/50V CH |
| C908 | 1-162-922-11 | s | CAPACITOR, CERAMIC 39PF/50V CH |
| C909 | 1-165-176-11 | s | CAPACITOR, CERAMIC 47000PF/16V |
| C910 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C911 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| C912 | 1-164-156-11 | s | CAPACITOR, CERAMIC 0.1MF/25V F |
| CN500 | 1-750-905-11 | o | CONNECTOR, BOARD TO BOARD 80P |
| CN501 | 1-778-648-11 | o | CONNECTOR, FFC (ZIF) 20P |
| CN502 | 1-778-652-11 | o | CONNECTOR, FFC (ZIF) 50P |
| CN504 | 1-764-526-11 | s | CONNECTOR, FFC/FPC (ZIF) 18P |
| CN505 | 1-778-646-11 | o | CONNECTOR, FFC (ZIF) 10P |
| D1 | 8-719-989-03 | s | DIODE DAN222 |
| D2 | 8-719-991-00 | s | DIODE DAP222 |
| D300 | 8-719-991-00 | s | DIODE DAP222 |
| D302 | 8-719-989-03 | s | DIODE DAN222 |
| D303 | 8-719-991-00 | s | DIODE DAP222 |
| D400 | 8-719-991-00 | s | DIODE DAP222 |
| D401 | 8-719-989-03 | s | DIODE DAN222 |
| D402 | 8-719-991-00 | s | DIODE DAP222 |
| D500 | 8-719-989-03 | s | DIODE DAN222 |
| D501 | 8-719-991-00 | s | DIODE DAP222 |
| D502 | 8-719-989-03 | s | DIODE DAN222 |

(SV-213 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-----------------------------|
| D503 | 8-719-991-00 | s DIODE DAP222 |
| D507 | 8-719-991-00 | s DIODE DAP222 |
| D508 | 8-719-105-91 | s DIODE RD5.6M-B2 |
| D701 | 8-719-981-56 | s DIODE SB05W05CP (RECTI) |
| D702 | 8-719-989-03 | s DIODE DAN222 |
| D801 | 8-719-989-03 | s DIODE DAN222 |
| D802 | 8-719-991-00 | s DIODE DAP222 |
| D803 | 8-719-989-03 | s DIODE DAN222 |
| D804 | 8-719-991-00 | s DIODE DAP222 |
| D805 | 8-719-989-03 | s DIODE DAN222 |
| D806 | 8-719-991-00 | s DIODE DAP222 |
| D807 | 8-719-989-03 | s DIODE DAN222 |
| D808 | 8-719-991-00 | s DIODE DAP222 |
| D809 | 8-719-989-03 | s DIODE DAN222 |
| D810 | 8-719-991-00 | s DIODE DAP222 |
| D811 | 8-719-989-03 | s DIODE DAN222 |
| D812 | 8-719-991-00 | s DIODE DAP222 |
| D813 | 8-719-989-03 | s DIODE DAN222 |
| D814 | 8-719-991-00 | s DIODE DAP222 |
| D815 | 8-719-989-03 | s DIODE DAN222 |
| D816 | 8-719-991-00 | s DIODE DAP222 |
| D901 | 8-719-048-43 | s DIODE MA795 |
| E1 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| E2 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| E3 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| IC1 | 8-759-326-99 | s IC MCD005AM-TLM |
| IC2 | 8-759-510-71 | s IC BA10358F-E2 |
| IC3 | 8-759-981-61 | s IC LM2901M |
| IC5 | 8-759-523-02 | s IC TC74HC4053AFT(EL) |
| IC6 | 8-759-700-07 | s IC NJM2903M |
| IC200 | 8-759-276-89 | s IC BA6285FP (E2) |
| IC201 | 8-759-276-89 | s IC BA6285FP (E2) |
| IC204 | 8-759-510-71 | s IC BA10358F-E2 |
| IC300 | 8-759-326-99 | s IC MCD005AM-TLM |
| IC301 | 8-759-278-58 | s IC NJM4558V (TE2) |
| IC302 | 8-759-981-61 | s IC LM2901M |
| IC303 | 8-759-523-02 | s IC TC74HC4053AFT(EL) |
| IC304 | 8-759-523-95 | s IC TC74VHC74FT (EL) |
| IC305 | 8-759-510-71 | s IC BA10358F-E2 |
| IC306 | 8-759-444-93 | s IC RH5RL33AA-T1 |
| IC307 | 8-759-523-02 | s IC TC74HC4053AFT(EL) |
| IC309 | 8-759-526-89 | s IC MB88347LPFV-ER |
| IC400 | 8-759-335-42 | s IC CXA1793N (E2) |
| IC401 | 8-759-100-95 | s IC UPC324G2 |
| IC402 | 8-759-700-07 | s IC NJM2903M |
| IC403 | 8-759-100-95 | s IC UPC324G2 |
| IC500 | 8-752-921-61 | s IC CXP913040-011R |
| IC501 | 8-759-524-10 | s IC TC74VHC157FT (EL) |
| IC502 | 8-759-524-10 | s IC TC74VHC157FT (EL) |
| IC505 | 8-759-431-26 | s IC MB3793-30PNF-ER |
| IC507 | 8-759-524-41 | s IC TC74VHC374FT (EL) |
| IC508 | 8-759-524-41 | s IC TC74VHC374FT (EL) |
| IC509 | 8-759-524-41 | s IC TC74VHC374FT (EL) |
| IC510 | 8-759-524-41 | s IC TC74VHC374FT (EL) |
| IC512 | 8-759-524-50 | s IC TC74VHC541FT(EL) |
| IC702 | 8-759-444-93 | s IC RH5RL33AA-T1 |
| IC740 | 8-759-273-87 | s IC NJM2901V (TE2) |
| IC741 | 8-759-444-87 | s IC NJM324V (TE2) |

(SV-213 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|-----------------|----------------------------------|
| IC801 | 8-759-523-01 | s IC TC74HC4052AFT(EL) |
| IC802 | 8-759-523-01 | s IC TC74HC4052AFT(EL) |
| IC901 | 8-759-466-53 | s IC NJM2060V(TE2) |
| IC902 | 8-759-338-95 | s IC NJM2903V (TE2) |
| IC903 | 8-759-523-02 | s IC TC74HC4053AFT(EL) |
| IC904 | 8-759-392-01 | s IC TC7SH86FU (TE85R) |
| L500 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L501 | *b 1-414-406-11 | s INDUCTOR (SMD) 220UH |
| | *a 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L502 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L700 | 1-409-678-11 | s COIL, CHOKE 68UH |
| L740 | 1-409-678-11 | s COIL, CHOKE 68UH |
| L741 | 1-409-678-11 | s COIL, CHOKE 68UH |
| Q700 | 8-729-030-78 | s TRANSISTOR FP102T-TL |
| Q701 | 6-550-367-01 | s TRANSISTOR UMB11N-TN |
| Q740 | 8-729-030-78 | s TRANSISTOR FP102T-TL |
| Q745 | 8-729-030-78 | s TRANSISTOR FP102T-TL |
| Q748 | 8-729-026-52 | s TRANSISTOR 2SA1576A-T106-R |
| Q749 | 8-729-807-51 | s TRANSISTOR 2SD1623-S |
| Q802 | 8-729-930-32 | s TRANSISTOR UMH11 |
| Q803 | 6-550-273-01 | s TRANSISTOR UM44NTN |
| Q804 | 6-550-273-01 | s TRANSISTOR UM44NTN |
| Q805 | 6-550-273-01 | s TRANSISTOR UM44NTN |
| Q806 | 8-729-930-32 | s TRANSISTOR UMH11 |
| Q901 | 8-729-029-14 | s TRANSISTOR DTC144EUA-T106 |
| R1 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R3 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R4 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R5 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R7 | 1-216-853-11 | s RESISTOR,CHIP 470K 1/16W(1608) |
| R8 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R10 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R11 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R12 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R13 | 1-216-853-11 | s RESISTOR,CHIP 470K 1/16W(1608) |
| R14 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R16 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R17 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R18 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R19 | 1-216-853-11 | s RESISTOR,CHIP 470K 1/16W(1608) |
| R20 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R21 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R27 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R28 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R29 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R30 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R31 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W(1608) |
| R32 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R33 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W(1608) |
| R34 | 1-216-849-11 | s RESISTOR,CHIP 220K 1/16W(1608) |
| R35 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W(1608) |
| R36 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R37 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R38 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R39 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R40 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R41 | 1-217-671-11 | s RESISTOR,CHIP 1 1/10W(2125) |

(SV-213 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|--------------------------------|
| R42 | 1-217-671-11 s | RESISTOR,CHIP 1 1/10W(2125) |
| R43 | 1-217-671-11 s | RESISTOR,CHIP 1 1/10W(2125) |
| R44 | 1-217-671-11 s | RESISTOR,CHIP 1 1/10W(2125) |
| R45 | 1-216-842-11 s | RESISTOR,CHIP 56K 1/16W(1608) |
| R47 | 1-216-839-11 s | RESISTOR,CHIP 33K 1/16W 1608 |
| R48 | 1-216-839-11 s | RESISTOR,CHIP 33K 1/16W 1608 |
| R49 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R203 | 1-216-827-11 s | RESISTOR,CHIP 3.3K 1/16W 1608 |
| R204 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R205 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R206 | 1-218-708-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R207 | 1-218-682-11 s | RESISTOR,CHIP 390 1/16W (1608) |
| R208 | 1-218-708-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R209 | 1-216-827-11 s | RESISTOR,CHIP 3.3K 1/16W 1608 |
| R210 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R211 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R219 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R220 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R222 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R223 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R225 | 1-216-852-11 s | RESISTOR,CHIP 390K 1/16W 1608 |
| R226 | 1-216-852-11 s | RESISTOR,CHIP 390K 1/16W 1608 |
| R227 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R228 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R229 | 1-217-671-11 s | RESISTOR,CHIP 1 1/10W(2125) |
| R230 | 1-217-671-11 s | RESISTOR,CHIP 1 1/10W(2125) |
| R231 | 1-217-671-11 s | RESISTOR,CHIP 1 1/10W(2125) |
| R232 | 1-217-671-11 s | RESISTOR,CHIP 1 1/10W(2125) |
| R233 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R234 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R235 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R236 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R238 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R239 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R241 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R242 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R244 | 1-216-852-11 s | RESISTOR,CHIP 390K 1/16W 1608 |
| R245 | 1-216-852-11 s | RESISTOR,CHIP 390K 1/16W 1608 |
| R246 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R247 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R248 | 1-217-671-11 s | RESISTOR,CHIP 1 1/10W(2125) |
| R249 | 1-217-671-11 s | RESISTOR,CHIP 1 1/10W(2125) |
| R250 | 1-217-671-11 s | RESISTOR,CHIP 1 1/10W(2125) |
| R251 | 1-217-671-11 s | RESISTOR,CHIP 1 1/10W(2125) |
| R252 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R253 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R254 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R255 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R300 | 1-218-708-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R301 | 1-218-708-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R302 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R303 | 1-216-842-11 s | RESISTOR,CHIP 56K 1/16W(1608) |
| R304 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R305 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R306 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R307 | 1-216-853-11 s | RESISTOR,CHIP 470K 1/16W(1608) |
| R308 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 |
| R309 | 1-216-839-11 s | RESISTOR,CHIP 33K 1/16W 1608 |
| R310 | 1-216-843-11 s | RESISTOR,CHIP 68K 1/16W (1608) |

(SV-213 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|--------------------------------|
| R311 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R312 | 1-216-853-11 s | RESISTOR,CHIP 470K 1/16W(1608) |
| R313 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 |
| R314 | 1-218-708-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R315 | 1-218-708-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R316 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R317 | 1-216-842-11 s | RESISTOR,CHIP 56K 1/16W(1608) |
| R318 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R323 | 1-216-839-11 s | RESISTOR,CHIP 33K 1/16W 1608 |
| R324 | 1-216-843-11 s | RESISTOR,CHIP 68K 1/16W (1608) |
| R325 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R326 | 1-216-853-11 s | RESISTOR,CHIP 470K 1/16W(1608) |
| R327 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 |
| R328 | 1-218-740-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R329 | 1-218-740-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R330 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R331 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R332 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R333 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| R337 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R339 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R340 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R341 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R342 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R343 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R344 | 1-217-671-11 s | RESISTOR,CHIP 1 1/10W(2125) |
| R345 | 1-217-671-11 s | RESISTOR,CHIP 1 1/10W(2125) |
| R346 | 1-217-671-11 s | RESISTOR,CHIP 1 1/10W(2125) |
| R347 | 1-217-671-11 s | RESISTOR,CHIP 1 1/10W(2125) |
| R348 | 1-216-842-11 s | RESISTOR,CHIP 56K 1/16W(1608) |
| R400 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R401 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R402 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R403 | 1-216-827-11 s | RESISTOR,CHIP 3.3K 1/16W 1608 |
| R404 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R405 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R406 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R407 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R408 | 1-216-853-11 s | RESISTOR,CHIP 470K 1/16W(1608) |
| R409 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 |
| R410 | 1-216-843-11 s | RESISTOR,CHIP 68K 1/16W (1608) |
| R411 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R412 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R413 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R414 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R415 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R416 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R417 | 1-216-838-11 s | RESISTOR,CHIP 27K 1/16W(1608) |
| R418 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R419 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R420 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R421 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R422 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R423 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R424 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R425 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R426 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R427 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R428 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |

(SV-213 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|---------------------------------|
| R429 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R430 | 1-216-846-11 s | RESISTOR,CHIP 120K 1/16W (1608) |
| R431 | 1-216-835-11 s | RESISTOR,CHIP 15K 1/16W |
| R432 | 1-216-843-11 s | RESISTOR,CHIP 68K 1/16W (1608) |
| R434 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| R436 | 1-216-836-11 s | RESISTOR,CHIP 18K 1/16W 1608 |
| R437 | 1-216-834-11 s | RESISTOR,CHIP 12K 1/16W 1608 |
| R438 | 1-217-671-11 s | RESISTOR,CHIP 1 1/10W(2125) |
| R439 | 1-217-671-11 s | RESISTOR,CHIP 1 1/10W(2125) |
| R440 | 1-217-671-11 s | RESISTOR,CHIP 1 1/10W(2125) |
| R441 | 1-217-671-11 s | RESISTOR,CHIP 1 1/10W(2125) |
| R442 | 1-217-671-11 s | RESISTOR,CHIP 1 1/10W(2125) |
| R443 | 1-217-671-11 s | RESISTOR,CHIP 1 1/10W(2125) |
| R444 | 1-217-671-11 s | RESISTOR,CHIP 1 1/10W(2125) |
| R445 | 1-217-671-11 s | RESISTOR,CHIP 1 1/10W(2125) |
| R501 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R502 | 1-216-849-11 s | RESISTOR,CHIP 220K 1/16W 1608 |
| R503 | 1-216-849-11 s | RESISTOR,CHIP 220K 1/16W 1608 |
| R504 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 |
| R505 | 1-216-849-11 s | RESISTOR,CHIP 220K 1/16W 1608 |
| R513 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R514 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R515 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R516 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R517 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R518 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R519 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R520 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R521 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R522 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R523 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R524 | 1-216-857-11 s | RESISTOR,CHIP 1M 1/16W(1608) |
| R525 | 1-216-849-11 s | RESISTOR,CHIP 220K 1/16W 1608 |
| R526 | 1-216-849-11 s | RESISTOR,CHIP 220K 1/16W 1608 |
| R529 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R533 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R534 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R535 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R536 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R537 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R540 | 1-216-849-11 s | RESISTOR,CHIP 220K 1/16W 1608 |
| R541 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R542 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R543 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R544 | 1-216-849-11 s | RESISTOR,CHIP 220K 1/16W 1608 |
| R545 | 1-216-849-11 s | RESISTOR,CHIP 220K 1/16W 1608 |
| R546 | 1-216-849-11 s | RESISTOR,CHIP 220K 1/16W 1608 |
| R547 | 1-216-849-11 s | RESISTOR,CHIP 220K 1/16W 1608 |
| R548 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R549 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R550 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R551 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R552 | 1-216-849-11 s | RESISTOR,CHIP 220K 1/16W 1608 |
| R553 | 1-216-849-11 s | RESISTOR,CHIP 220K 1/16W 1608 |
| R555 | 1-216-849-11 s | RESISTOR,CHIP 220K 1/16W 1608 |
| R556 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R557 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R558 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R559 | 1-216-841-11 s | RESISTOR,CHIP 47K 1/16W 1608 |

(SV-213 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|--------------------------------|
| R700 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R701 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R702 | 1-216-836-11 s | RESISTOR,CHIP 18K 1/16W 1608 |
| R703 | 1-216-843-11 s | RESISTOR,CHIP 68K 1/16W (1608) |
| R704 | 1-216-840-11 s | RESISTOR,CHIP 39K 1/16W 1608 |
| R705 | 1-216-837-11 s | RESISTOR,CHIP 22K 1/16W 1608 |
| R706 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R707 | 1-216-817-11 s | RESISTOR,CHIP 470 1/16W 1608 |
| R708 | 1-216-823-11 s | RESISTOR,CHIP 1.5K 1/16W |
| R709 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R710 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R711 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R714 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R715 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R716 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R740 | 1-216-853-11 s | RESISTOR,CHIP 470K 1/16W(1608) |
| R741 | 1-216-853-11 s | RESISTOR,CHIP 470K 1/16W(1608) |
| R742 | 1-216-854-11 s | RESISTOR,CHIP 560K 1/16W 1608 |
| R743 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R744 | 1-216-841-11 s | RESISTOR,CHIP 47K 1/16W 1608 |
| R745 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R746 | 1-216-839-11 s | RESISTOR,CHIP 33K 1/16W 1608 |
| R747 | 1-216-836-11 s | RESISTOR,CHIP 18K 1/16W 1608 |
| R748 | 1-216-843-11 s | RESISTOR,CHIP 68K 1/16W (1608) |
| R749 | 1-216-840-11 s | RESISTOR,CHIP 39K 1/16W 1608 |
| R750 | 1-216-837-11 s | RESISTOR,CHIP 22K 1/16W 1608 |
| R751 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R752 | 1-216-817-11 s | RESISTOR,CHIP 470 1/16W 1608 |
| R753 | 1-216-823-11 s | RESISTOR,CHIP 1.5K 1/16W |
| R754 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R759 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R760 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R761 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R762 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| R763 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R764 | 1-216-836-11 s | RESISTOR,CHIP 18K 1/16W 1608 |
| R765 | 1-216-843-11 s | RESISTOR,CHIP 68K 1/16W (1608) |
| R766 | 1-216-840-11 s | RESISTOR,CHIP 39K 1/16W 1608 |
| R767 | 1-216-837-11 s | RESISTOR,CHIP 22K 1/16W 1608 |
| R768 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R769 | 1-216-817-11 s | RESISTOR,CHIP 470 1/16W 1608 |
| R770 | 1-216-823-11 s | RESISTOR,CHIP 1.5K 1/16W |
| R771 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R772 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 |
| R773 | 1-216-830-11 s | RESISTOR,CHIP 5.6K 1/16W 1608 |
| R774 | 1-216-837-11 s | RESISTOR,CHIP 22K 1/16W 1608 |
| R775 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R776 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R777 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R778 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R801 | 1-216-849-11 s | RESISTOR,CHIP 220K 1/16W 1608 |
| R802 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R805 | 1-218-704-11 s | RESISTOR,CHIP 3.3K 1/16W(1608) |
| R806 | 1-218-692-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R810 | 1-218-727-11 s | RESISTOR,CHIP 30K 1/16W(1608) |
| R811 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R812 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R813 | 1-216-815-11 s | RESISTOR,CHIP 330 1/16W 1608 |
| R814 | 1-216-815-11 s | RESISTOR,CHIP 330 1/16W 1608 |

(SV-213 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| R818 | 1-216-851-11 | s RESISTOR,CHIP 330K 1/16W 1608 |
| R820 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R822 | 1-216-851-11 | s RESISTOR,CHIP 330K 1/16W 1608 |
| R824 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R901 | 1-216-841-11 | s RESISTOR,CHIP 47K 1/16W 1608 |
| R902 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R903 | 1-216-841-11 | s RESISTOR,CHIP 47K 1/16W 1608 |
| R904 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R905 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R906 | 1-216-853-11 | s RESISTOR,CHIP 470K 1/16W(1608) |
| R907 | 1-216-825-11 | s RESISTOR,CHIP 2.2K 1/16W 1608 |
| R908 | 1-216-825-11 | s RESISTOR,CHIP 2.2K 1/16W 1608 |
| R909 | 1-216-837-11 | s RESISTOR,CHIP 22K 1/16W 1608 |
| R910 | 1-216-837-11 | s RESISTOR,CHIP 22K 1/16W 1608 |
| R911 | 1-216-837-11 | s RESISTOR,CHIP 22K 1/16W 1608 |
| R912 | 1-216-839-11 | s RESISTOR,CHIP 33K 1/16W 1608 |
| R913 | 1-216-839-11 | s RESISTOR,CHIP 33K 1/16W 1608 |
| R914 | 1-216-839-11 | s RESISTOR,CHIP 33K 1/16W 1608 |
| R915 | 1-216-839-11 | s RESISTOR,CHIP 33K 1/16W 1608 |
| R916 | 1-216-841-11 | s RESISTOR,CHIP 47K 1/16W 1608 |
| R917 | 1-216-841-11 | s RESISTOR,CHIP 47K 1/16W 1608 |
| R918 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R919 | 1-216-853-11 | s RESISTOR,CHIP 470K 1/16W(1608) |
| R921 | 1-216-837-11 | s RESISTOR,CHIP 22K 1/16W 1608 |
| R922 | 1-216-837-11 | s RESISTOR,CHIP 22K 1/16W 1608 |
| R923 | 1-216-829-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| RB500 | 1-236-904-11 | s RESISTOR,NETWORK 1K (1608) |
| RB501 | 1-236-904-11 | s RESISTOR,NETWORK 1K (1608) |
| RB502 | 1-239-444-11 | s NETWORK,RESISTOR 220K (1608) |
| RB503 | 1-239-444-11 | s NETWORK,RESISTOR 220K (1608) |
| RB504 | 1-236-904-11 | s RESISTOR,NETWORK 1K (1608) |
| RB506 | 1-239-444-11 | s NETWORK,RESISTOR 220K (1608) |
| RB507 | 1-236-904-11 | s RESISTOR,NETWORK 1K (1608) |
| RB508 | 1-239-444-11 | s NETWORK,RESISTOR 220K (1608) |
| RB510 | 1-239-444-11 | s NETWORK,RESISTOR 220K (1608) |
| RB511 | 1-236-904-11 | s RESISTOR,NETWORK 1K (1608) |
| RB512 | 1-236-907-11 | s RESISTOR,BLOCK 100K (1608) |
| RB513 | 1-236-907-11 | s RESISTOR,BLOCK 100K (1608) |
| RB514 | 1-236-907-11 | s RESISTOR,BLOCK 100K (1608) |
| RB515 | 1-236-904-11 | s RESISTOR,NETWORK 1K (1608) |
| RB516 | 1-236-907-11 | s RESISTOR,BLOCK 100K (1608) |
| RB801 | 1-239-444-11 | s NETWORK,RESISTOR 220K (1608) |
| RB802 | 1-239-407-11 | s NETWORK RESISTOR(CHIP) 330 |
| RB803 | 1-236-908-11 | s RESISTOR,NETWORK 10K (3216) |
| RB804 | 1-236-908-11 | s RESISTOR,NETWORK 10K (3216) |
| RB805 | 1-236-908-11 | s RESISTOR,NETWORK 10K (3216) |
| RB806 | 1-236-908-11 | s RESISTOR,NETWORK 10K (3216) |
| RB808 | 1-239-444-11 | s NETWORK,RESISTOR 220K (1608) |
| RB810 | 1-239-446-11 | s NETWORK,RESISTOR 330K (1608) |
| RB811 | 1-236-907-11 | s RESISTOR,BLOCK 100K (1608) |
| S500 | 1-692-535-11 | s SWITCH DIP (4P) |
| TP1 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP2 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP3 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP300 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP301 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP302 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |

(SV-213 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-----------------------------|
| TP304 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP400 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP401 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP501 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP502 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP503 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP504 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP505 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP506 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP507 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP508 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP509 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP510 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP701 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP704 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| X500 | 1-760-655-21 | s VIBRATOR, CRYSTAL |

SW-18 BOARD

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|--------------------------------|
| 1pc | A-8322-166-A | o MOUNTED CIRCUIT BOARD, SW-18 |
| R561 | 1-216-049-91 | s RESISTOR,CHIP 1K 1/10W(2125) |
| S561 | 1-554-592-21 | s SWITCH, KEY BOARD |
| S562 | 1-554-592-21 | s SWITCH, KEY BOARD |
| S563 | 1-554-088-00 | s SWITCH, KEY BOARD |
| S564 | 1-571-642-11 | s SWITCH, TOGGLE |
| W561 | 1-958-489-11 | o HARNESS, SUB (SW923) |

SW-19 BOARD

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|--------------------------------|
| 1pc | A-8322-177-A | o MOUNTED CIRCUIT BOARD, SW-19 |
| 1pc | 3-612-604-01 | s KNOB,VR(AUDIO) |
| C201 | 1-163-038-00 | s CAPACITOR, CERAMIC 0.1MF/25V |
| C202 | 1-104-851-11 | s CAPACITOR,TANTALUM 10MF/10V |
| CN201 | 1-573-537-11 | s CONNECTOR, BOARD TO BOARD 6P |
| R201 | 1-216-049-91 | s RESISTOR,CHIP 1K 1/10W(2125) |
| R202 | 1-216-049-91 | s RESISTOR,CHIP 1K 1/10W(2125) |
| R203 | 1-216-049-91 | s RESISTOR,CHIP 1K 1/10W(2125) |
| R204 | 1-216-049-91 | s RESISTOR,CHIP 1K 1/10W(2125) |
| RV201 | 1-223-686-11 | s RESISTOR, VAR, CARBON 5K/5K |
| S201 | 1-572-471-11 | s SWITCH,PUSH |
| S202 | 1-572-471-11 | s SWITCH,PUSH |
| S203 | 1-570-984-11 | s SWITCH, TOGGLE |

SW-929 BOARD

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|------------------------------------|
| CN101 | 1-573-290-21 | s PIN,CONNECTOR (4P) (SMD) (1.5MM) |
| RV101 | 1-473-406-11 | s ENCODER, ED JOG(DIAL SHUTTLE) |

TG-187/187P BOARD

*a: [Lot No. 911-161]
*b: [Lot No. 162-]
*c: [Lot No. 911-335]
*d: [Lot No. 341-]

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|-----------------|--|
| 1pc | A-8318-219-A | s MOUNTED CIRCUIT BOARD, TG-187 [for UC,J] |
| | A-8318-242-A | s MOUNTED CIRCUIT BOARD, TG-187P [for CE,SY,CN] |
| C1 | 1-162-970-11 | s CAPACITOR,CERAMIC 0.01MF/25V B |
| C2 | 1-126-397-11 | s CAPACITOR,ELECT 33MF/25V(CHIP) |
| C3 | 1-162-970-11 | s CAPACITOR,CERAMIC 0.01MF/25V B |
| C4 | 1-113-985-11 | s CAPACITOR,TANTALUM 10MF/20V |
| C5 | 1-162-970-11 | s CAPACITOR,CERAMIC 0.01MF/25V B |
| C6 | 1-162-970-11 | s CAPACITOR,CERAMIC 0.01MF/25V B |
| C7 | 1-104-913-11 | s CAPACITOR,TANTALUM 10MF/16V |
| C8 | 1-104-913-11 | s CAPACITOR,TANTALUM 10MF/16V |
| C9 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C10 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C11 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C12 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C13 | 1-104-851-11 | s CAPACITOR,TANTALUM 10MF/10V |
| C15 | 1-135-181-21 | s CAPACITOR,TANTALUM 4.7MF/6.3V |
| C16 | 1-107-688-11 | s CAPACITOR,TANTALUM 1.5MF/25V |
| C17 | 1-113-500-11 | s CAPACITOR,TANTALUM 100MF/10V |
| C18 | 1-126-393-11 | s CAPACITOR,ELECT 33MF/10V(CHIP) |
| C19 | 1-162-927-11 | s CAPACITOR,CERAMIC 100PF/50V CH |
| C21 | 1-107-689-21 | s CAPACITOR,TANTALUM 1MF/35V |
| C22 | 1-126-397-11 | s CAPACITOR,ELECT 33MF/25V(CHIP) |
| C23 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C24 | 1-137-910-11 | s CAPACITOR,TANTALUM ELECT 10MF |
| C25 | 1-162-970-11 | s CAPACITOR,CERAMIC 0.01MF/25V B |
| C26 | 1-137-910-11 | s CAPACITOR,TANTALUM ELECT 10MF |
| C29 | 1-137-910-11 | s CAPACITOR,TANTALUM ELECT 10MF |
| C30 | 1-162-964-11 | s CAPACITOR,CERAMIC 1000PF/50V B |
| C31 | 1-162-964-11 | s CAPACITOR,CERAMIC 1000PF/50V B |
| C33 | 1-113-500-11 | s CAPACITOR,TANTALUM 100MF/10V |
| C34 | 1-162-970-11 | s CAPACITOR,CERAMIC 0.01MF/25V B |
| C37 | *d 1-162-915-11 | s CAPACITOR,CERAMIC 10PF/50V CH |
| C39 | 1-162-919-11 | s CAPACITOR,CERAMIC 22PF/50V CH |
| C40 | 1-162-970-11 | s CAPACITOR,CERAMIC 0.01MF/25V B |
| C41 | 1-162-970-11 | s CAPACITOR,CERAMIC 0.01MF/25V B |
| C42 | 1-162-970-11 | s CAPACITOR,CERAMIC 0.01MF/25V B |
| C43 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C44 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C45 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C46 | 1-113-992-11 | s CAPACITOR,TANTALUM 3.3MF/35V |
| C47 | 1-113-992-11 | s CAPACITOR,TANTALUM 3.3MF/35V |
| C48 | 1-113-992-11 | s CAPACITOR,TANTALUM 3.3MF/35V |
| C49 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C50 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C51 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C52 | 1-107-689-21 | s CAPACITOR,TANTALUM 1MF/35V |
| C53 | 1-107-689-21 | s CAPACITOR,TANTALUM 1MF/35V |
| C54 | 1-107-689-21 | s CAPACITOR,TANTALUM 1MF/35V |
| C55 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C56 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C57 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C58 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C59 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C60 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C61 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C62 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |

(TG-187/187P BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|--|
| C63 | 1-104-652-11 | s CAPACITOR, ELECT 470MF/16V(105) |
| C64 | 1-104-652-11 | s CAPACITOR, ELECT 470MF/16V(105) |
| C65 | 1-128-528-11 | s CAPACITOR, ELECT 470MF/25V |
| C66 | 1-104-823-11 | s CAPACITOR, TANTALUM 47MF/16V |
| C67 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C68 | 1-113-986-11 | s CAPACITOR, TANTALUM 2.2MF/25V |
| C69 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C70 | 1-113-986-11 | s CAPACITOR, TANTALUM 2.2MF/25V |
| C71 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C72 | 1-113-986-11 | s CAPACITOR, TANTALUM 2.2MF/25V |
| C73 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C74 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C75 | 1-137-910-11 | s CAPACITOR, TANTALUM ELECT 10MF |
| C76 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C77 | 1-113-986-11 | s CAPACITOR, TANTALUM 2.2MF/25V |
| C78 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| C79 | 1-164-315-11 | s CAPACITOR, CERAMIC 470PF/50V CH |
| CN1 | 1-778-651-11 | o CONNECTOR, FFC (ZIF) 40P |
| CP1 | 1-760-278-11 | s OSCILLATOR, CRYSTAL (VCO TYPE) [for UC,J] |
| | 1-767-206-11 | s OSCILLATOR, CRYSTAL [for CE,SY,CN] |
| D1 | 8-719-033-73 | s DIODE RD4.3UM-T1B1B2 |
| D2 | 8-719-404-40 | s DIODE MA121 |
| D3 | 8-719-404-40 | s DIODE MA121 |
| D4 | 8-719-404-40 | s DIODE MA121 |
| D5 | 8-719-421-67 | s DIODE MA132WK |
| D6 | 8-719-421-67 | s DIODE MA132WK |
| D7 | 8-719-421-67 | s DIODE MA132WK |
| D8 | 8-719-938-78 | s DIODE SB10-05PCP (RECTI) |
| D9 | 8-719-938-78 | s DIODE SB10-05PCP (RECTI) |
| D10 | 8-719-059-51 | s DIODE MA3J142EOLSO |
| D11 | 8-719-938-78 | s DIODE SB10-05PCP (RECTI) |
| D12 | 8-719-421-67 | s DIODE MA132WK |
| E1 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| FB6 | 1-543-775-11 | s BEAD, FERRITE |
| IC1 | 8-759-185-42 | s IC LM4040AIM3-2.5 |
| IC2 | 8-759-669-72 | s IC TL064CPWR |
| IC3 | 8-759-562-42 | s IC CAT24WC08J-TE13 |
| IC4 | 8-759-064-36 | s IC MB88346BPFV |
| IC6 | 8-759-082-57 | s IC TC7W04FU |
| IC7 | 8-759-058-56 | s IC TC7S02FU (TE85R) |
| IC8 | 8-759-082-58 | s IC TC7W08FU |
| IC9 | 8-752-353-25 | s IC CXD1265R |
| IC10 | 8-759-082-58 | s IC TC7W08FU |
| IC11 | 8-759-082-58 | s IC TC7W08FU |
| IC12 | 8-759-523-81 | s IC TC74VHC08FT (EL) |
| IC13 | 8-752-372-14 | s IC CXD1267AN |
| IC14 | 8-752-372-14 | s IC CXD1267AN |
| IC15 | 8-752-372-14 | s IC CXD1267AN |
| IC16 | 8-759-058-58 | s IC TC7S04FU-TE85R |
| IC17 | 8-759-659-96 | s IC SN74HC08APWR |
| IC18 | 8-759-659-70 | s IC SN74HC164APWR |
| R52 | 1-216-797-11 | s RESISTOR, CHIP 10 1/16W 1608 |
| R53 | 1-216-797-11 | s RESISTOR, CHIP 10 1/16W 1608 |
| R54 | 1-216-797-11 | s RESISTOR, CHIP 10 1/16W 1608 |

(TG-187/187P BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|-----------------|---|
| R55 | 1-216-813-11 | s RESISTOR, CHIP 220 1/16W 1608 |
| R56 | 1-216-845-11 | s RESISTOR, CHIP 100K 1/16W(1608) |
| IC19 | 8-759-195-81 | s IC TC7S86FU |
| IC20 | 8-759-058-54 | s IC TC7S00FU-TE85R |
| IC21 | 8-759-196-97 | s IC TC7SH32FU (TE85R) |
| L2 | 1-410-389-31 | s INDUCTOR, CHIP 47UH (3225) |
| L5 | 1-410-389-31 | s INDUCTOR, CHIP 47UH (3225) |
| L6 | 1-410-369-11 | s INDUCTOR, CHIP 1UH (3225) |
| L7 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L8 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L9 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L10 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| L11 | 1-414-398-11 | s INDUCTOR (SMD) 10UH |
| Q1 | 8-729-807-51 | s TRANSISTOR 2SD1623-S |
| Q2 | 8-729-101-07 | s TRANSISTOR 2SB798 |
| Q3 | 8-729-101-07 | s TRANSISTOR 2SB798 |
| Q4 | 8-729-905-35 | s TRANSISTOR 2SC4081-R |
| R1 | 1-218-881-11 | s RESISTOR, CHIP 27K 1/16W(1608) |
| R2 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R3 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R4 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R5 | *b 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| | *a 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R7 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R8 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R9 | 1-218-871-11 | s RESISTOR, CHIP 10K 1/16W (1608) |
| R10 | 1-218-880-11 | s RESISTOR, CHIP 24K 1/16W (1608) |
| R11 | 1-218-891-11 | s RESISTOR, CHIP 68K 1/16W (1608) |
| R12 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R13 | 1-218-859-11 | s RESISTOR, CHIP 3.3K 1/16W(1608) |
| R15 | 1-218-847-11 | s RESISTOR, CHIP 1K 1/16W (1608) |
| R16 | 1-218-896-11 | s RESISTOR, CHIP 110K 1/16W(1608) |
| R17 | 1-218-879-11 | s RESISTOR, CHIP 22K 1/16W (1608) |
| R18 | 1-216-827-11 | s RESISTOR, CHIP 3.3K 1/16W 1608 |
| R20 | 1-216-839-11 | s RESISTOR, CHIP 33K 1/16W 1608 |
| R28 | 1-216-797-11 | s RESISTOR, CHIP 10 1/16W 1608 |
| R29 | 1-216-821-11 | s RESISTOR, CHIP 1.0K 1/16W(1608) |
| R30 | 1-216-821-11 | s RESISTOR, CHIP 1.0K 1/16W(1608) |
| R31 | 1-216-857-11 | s RESISTOR, CHIP 1M 1/16W(1608) |
| R32 | 1-216-857-11 | s RESISTOR, CHIP 1M 1/16W(1608) |
| R33 | 1-216-803-11 | s RESISTOR, CHIP 33 1/16W (1608) |
| R34 | 1-216-818-11 | s RESISTOR, CHIP 560 1/16W 1608 |
| R35 | 1-216-797-11 | s RESISTOR, CHIP 10 1/16W (1608) |
| R36 | 1-216-845-11 | s RESISTOR, CHIP 100K 1/16W(1608) |
| R37 | 1-216-797-11 | s RESISTOR, CHIP 10 1/16W 1608 |
| R38 | 1-216-797-11 | s RESISTOR, CHIP 10 1/16W 1608 |
| R39 | 1-216-845-11 | s RESISTOR, CHIP 100K 1/16W(1608) |
| R40 | 1-216-845-11 | s RESISTOR, CHIP 100K 1/16W(1608) |
| R41 | 1-216-809-11 | s RESISTOR, CHIP 100 1/16W 1608 |
| R42 | 1-216-821-11 | s RESISTOR, CHIP 1.0K 1/16W(1608) |
| R43 | 1-216-864-11 | s RESISTOR, CHIP 0 1/16W (1608) [for CE,SY,CN] |
| R44 | 1-216-864-11 | s RESISTOR, CHIP 0 1/16W (1608) [for UC,J] |
| R45 | 1-216-801-11 | s RESISTOR, CHIP 22 1/16W (1608) |
| R46 | 1-216-801-11 | s RESISTOR, CHIP 22 1/16W (1608) |
| R47 | 1-216-845-11 | s RESISTOR, CHIP 100K 1/16W(1608) |
| R48 | 1-216-845-11 | s RESISTOR, CHIP 100K 1/16W(1608) |

(TG-187/187P BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|-----------------|--|
| R49 | 1-216-797-11 | s RESISTOR,CHIP 10 1/16W 1608 |
| R50 | 1-216-797-11 | s RESISTOR,CHIP 10 1/16W 1608 |
| R51 | *d 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| | *c 1-216-797-11 | s RESISTOR,CHIP 10 1/16W 1608 |
| R57 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R58 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R59 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R60 | 1-216-857-11 | s RESISTOR,CHIP 1M 1/16W(1608) |
| R61 | 1-216-857-11 | s RESISTOR,CHIP 1M 1/16W(1608) |
| R62 | 1-216-857-11 | s RESISTOR,CHIP 1M 1/16W(1608) |
| R63 | 1-216-823-11 | s RESISTOR,CHIP 1.5K 1/16W |
| R64 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) [for CE,SY,CN] |
| R65 | 1-216-845-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R66 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) [for UC,J] |
| R67 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) [for CE,SY,CN] |
| R69 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R71 | 1-216-797-11 | s RESISTOR,CHIP 10 1/16W 1608 |
| R72 | 1-216-797-11 | s RESISTOR,CHIP 10 1/16W 1608 |
| R73 | 1-216-801-11 | s RESISTOR,CHIP 22 1/16W (1608) |
| R74 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| RB1 | 1-236-904-11 | s RESISTOR,NETWORK 1K (1608) |
| RB2 | 1-236-907-11 | s RESISTOR,BLOCK 100K (1608) |

VA-199 BOARD

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| 1pc | A-8324-984-A | o MOUNTED CIRCUIT BOARD, VA-199 |
| C1 | 1-104-823-11 | s CAPACITOR,TANTALUM 47MF/16V |
| C2 | 1-113-682-11 | s CAPACITOR,TANTALUM 33MF/10V |
| C3 | 1-113-682-11 | s CAPACITOR,TANTALUM 33MF/10V |
| C4 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C5 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C6 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C7 | 1-135-181-21 | s CAPACITOR,TANTALUM 4.7MF/6.3V |
| C8 | 1-110-569-11 | s CAPACITOR,TANTALUM 47MF/6.3V |
| C9 | 1-104-563-11 | s CAPACITOR,CHIP FILM 0.1MF |
| C10 | 1-104-563-11 | s CAPACITOR,CHIP FILM 0.1MF |
| C11 | 1-104-563-11 | s CAPACITOR,CHIP FILM 0.1MF |
| C12 | 1-164-230-11 | s CAPACITOR,CERAMIC 220PF/50V |
| C13 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C14 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C15 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C16 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C17 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C18 | 1-162-968-11 | s CAPACITOR,CERAMIC 4700PF/50V B |
| C19 | 1-162-968-11 | s CAPACITOR,CERAMIC 4700PF/50V B |
| C33 | 1-113-682-11 | s CAPACITOR,TANTALUM 33MF/10V |
| C34 | 1-113-682-11 | s CAPACITOR,TANTALUM 33MF/10V |
| C35 | 1-104-852-11 | s CAPACITOR,TANTALUM 22MF/10V |
| C36 | 1-104-852-11 | s CAPACITOR,TANTALUM 22MF/10V |
| C37 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C38 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C39 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C40 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C44 | 1-104-823-11 | s CAPACITOR,TANTALUM 47MF/16V |
| C45 | 1-104-852-11 | s CAPACITOR,TANTALUM 22MF/10V |
| C46 | 1-135-208-11 | s CAPACITOR,TANTALUM 1MF/10V |
| C47 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C48 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C50 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C51 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C52 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C53 | 1-162-923-11 | s CAPACITOR,CERAMIC 47PF/50V CH |
| C54 | 1-162-923-11 | s CAPACITOR,CERAMIC 47PF/50V CH |
| C55 | 1-162-923-11 | s CAPACITOR,CERAMIC 47PF/50V CH |
| C56 | 1-113-682-11 | s CAPACITOR,TANTALUM 33MF/10V |
| C57 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C58 | 1-162-915-11 | s CAPACITOR,CERAMIC 10PF/50V CH |
| C59 | 1-162-915-11 | s CAPACITOR,CERAMIC 10PF/50V CH |
| C60 | 1-162-915-11 | s CAPACITOR,CERAMIC 10PF/50V CH |
| C101 | 1-113-682-11 | s CAPACITOR,TANTALUM 33MF/10V |
| C102 | 1-113-682-11 | s CAPACITOR,TANTALUM 33MF/10V |
| C103 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C107 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C108 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C109 | 1-104-851-11 | s CAPACITOR,TANTALUM 10MF/10V |
| C110 | 1-162-917-11 | s CAPACITOR,CERAMIC 15PF/50V CH |
| C111 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C113 | 1-162-907-11 | s CAPACITOR,CERAMIC 2PF/50V (CK) |
| C114 | 1-162-912-11 | s CAPACITOR,CERAMIC 7PF/50V 1608 |
| C115 | 1-162-915-11 | s CAPACITOR,CERAMIC 10PF/50V CH |
| C116 | 1-164-156-11 | s CAPACITOR,CERAMIC 0.1MF/25V F |
| C117 | 1-162-911-11 | s CAPACITOR,CERAMIC 6PF/50V 1608 |
| C118 | 1-135-181-21 | s CAPACITOR,TANTALUM 4.7MF/6.3V |

(VA-199 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-----------------------------------|
| C119 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C120 | 1-162-919-11 | s CAPACITOR, CERAMIC 22PF/50V CH |
| C121 | 1-135-181-21 | s CAPACITOR, TANTALUM 4.7MF/6.3V |
| C122 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C123 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C124 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C125 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C126 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C127 | 1-162-919-11 | s CAPACITOR, CERAMIC 22PF/50V CH |
| C128 | 1-135-208-11 | s CAPACITOR, TANTALUM 1MF/10V |
| C129 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C130 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C131 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C132 | 1-135-181-21 | s CAPACITOR, TANTALUM 4.7MF/6.3V |
| C133 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C134 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C135 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C137 | 1-117-136-11 | s CAPACITOR, ELECT 10MF/6.3V(BP) |
| C138 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C139 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C140 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C141 | 1-162-907-11 | s CAPACITOR, CERAMIC 2PF/50V(CK) |
| C144 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C145 | 1-135-181-21 | s CAPACITOR, TANTALUM 4.7MF/6.3V |
| C146 | 1-113-991-11 | s CAPACITOR, TANTALUM 33MF/16V |
| C147 | 1-135-181-21 | s CAPACITOR, TANTALUM 4.7MF/6.3V |
| C148 | 1-135-181-21 | s CAPACITOR, TANTALUM 4.7MF/6.3V |
| C149 | 1-117-139-11 | s CAPACITOR, ELECT 2.2MF/35V(BP) |
| C150 | 1-135-181-21 | s CAPACITOR, TANTALUM 4.7MF/6.3V |
| C151 | 1-135-181-21 | s CAPACITOR, TANTALUM 4.7MF/6.3V |
| C152 | 1-117-136-11 | s CAPACITOR, ELECT 10MF/6.3V(BP) |
| C168 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C169 | 1-162-910-11 | s CAPACITOR, CERAMIC 5PF/50V 1608 |
| C170 | 1-164-217-11 | s CAPACITOR, CERAMIC 150PF/50V CH |
| C172 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C173 | 1-162-910-11 | s CAPACITOR, CERAMIC 5PF/50V 1608 |
| C174 | 1-162-916-11 | s CAPACITOR, CERAMIC 12PF/50V CH |
| C175 | 1-162-919-11 | s CAPACITOR, CERAMIC 22PF/50V CH |
| C176 | 1-162-917-11 | s CAPACITOR, CERAMIC 15PF/50V CH |
| C177 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C178 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C179 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C180 | 1-162-923-11 | s CAPACITOR, CERAMIC 47PF/50V CH |
| C181 | 1-162-927-11 | s CAPACITOR, CERAMIC 100PF/50V CH |
| C201 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C202 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C203 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C207 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C208 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C209 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C210 | 1-162-917-11 | s CAPACITOR, CERAMIC 15PF/50V CH |
| C211 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C213 | 1-162-907-11 | s CAPACITOR, CERAMIC 2PF/50V(CK) |
| C214 | 1-162-912-11 | s CAPACITOR, CERAMIC 7PF/50V 1608 |
| C215 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C216 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C217 | 1-162-911-11 | s CAPACITOR, CERAMIC 6PF/50V 1608 |
| C218 | 1-135-181-21 | s CAPACITOR, TANTALUM 4.7MF/6.3V |
| C219 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |

(VA-199 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-----------------------------------|
| C220 | 1-162-919-11 | s CAPACITOR, CERAMIC 22PF/50V CH |
| C221 | 1-135-181-21 | s CAPACITOR, TANTALUM 4.7MF/6.3V |
| C222 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C223 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C224 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C225 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C226 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C227 | 1-162-919-11 | s CAPACITOR, CERAMIC 22PF/50V CH |
| C228 | 1-135-208-11 | s CAPACITOR, TANTALUM 1MF/10V |
| C229 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C230 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C231 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C232 | 1-135-181-21 | s CAPACITOR, TANTALUM 4.7MF/6.3V |
| C233 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C234 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C235 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C237 | 1-117-136-11 | s CAPACITOR, ELECT 10MF/6.3V(BP) |
| C238 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C239 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C240 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C241 | 1-162-907-11 | s CAPACITOR, CERAMIC 2PF/50V(CK) |
| C244 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C245 | 1-135-181-21 | s CAPACITOR, TANTALUM 4.7MF/6.3V |
| C246 | 1-113-991-11 | s CAPACITOR, TANTALUM 33MF/16V |
| C247 | 1-135-181-21 | s CAPACITOR, TANTALUM 4.7MF/6.3V |
| C248 | 1-135-181-21 | s CAPACITOR, TANTALUM 4.7MF/6.3V |
| C249 | 1-117-139-11 | s CAPACITOR, ELECT 2.2MF/35V(BP) |
| C250 | 1-135-181-21 | s CAPACITOR, TANTALUM 4.7MF/6.3V |
| C251 | 1-135-181-21 | s CAPACITOR, TANTALUM 4.7MF/6.3V |
| C252 | 1-117-136-11 | s CAPACITOR, ELECT 10MF/6.3V(BP) |
| C268 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C269 | 1-162-910-11 | s CAPACITOR, CERAMIC 5PF/50V 1608 |
| C270 | 1-164-217-11 | s CAPACITOR, CERAMIC 150PF/50V CH |
| C272 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C273 | 1-162-910-11 | s CAPACITOR, CERAMIC 5PF/50V 1608 |
| C274 | 1-162-916-11 | s CAPACITOR, CERAMIC 12PF/50V CH |
| C275 | 1-162-919-11 | s CAPACITOR, CERAMIC 22PF/50V CH |
| C276 | 1-162-917-11 | s CAPACITOR, CERAMIC 15PF/50V CH |
| C277 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C278 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C279 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C280 | 1-162-923-11 | s CAPACITOR, CERAMIC 47PF/50V CH |
| C281 | 1-162-927-11 | s CAPACITOR, CERAMIC 100PF/50V CH |
| C301 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C302 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C303 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C307 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C308 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C309 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C310 | 1-162-917-11 | s CAPACITOR, CERAMIC 15PF/50V CH |
| C311 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C313 | 1-162-907-11 | s CAPACITOR, CERAMIC 2PF/50V(CK) |
| C314 | 1-162-912-11 | s CAPACITOR, CERAMIC 7PF/50V 1608 |
| C315 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C316 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C317 | 1-162-911-11 | s CAPACITOR, CERAMIC 6PF/50V 1608 |
| C318 | 1-135-181-21 | s CAPACITOR, TANTALUM 4.7MF/6.3V |
| C319 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C320 | 1-162-919-11 | s CAPACITOR, CERAMIC 22PF/50V CH |

(VA-199 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|-----------------------------------|
| C321 | 1-135-181-21 | s CAPACITOR, TANTALUM 4.7MF/6.3V |
| C322 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C323 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C324 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C325 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C326 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C327 | 1-162-919-11 | s CAPACITOR, CERAMIC 22PF/50V CH |
| C328 | 1-135-208-11 | s CAPACITOR, TANTALUM 1MF/10V |
| C329 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C330 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C331 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C332 | 1-135-181-21 | s CAPACITOR, TANTALUM 4.7MF/6.3V |
| C333 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C334 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C335 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C337 | 1-117-136-11 | s CAPACITOR, ELECT 10MF/6.3V (BP) |
| C338 | 1-164-156-11 | s CAPACITOR, CERAMIC 0.1MF/25V F |
| C339 | 1-162-970-11 | s CAPACITOR, CERAMIC 0.01MF/25V B |
| C340 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C341 | 1-162-907-11 | s CAPACITOR, CERAMIC 2PF/50V (CK) |
| C344 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C345 | 1-135-181-21 | s CAPACITOR, TANTALUM 4.7MF/6.3V |
| C346 | 1-113-991-11 | s CAPACITOR, TANTALUM 33MF/16V |
| C347 | 1-135-181-21 | s CAPACITOR, TANTALUM 4.7MF/6.3V |
| C348 | 1-135-181-21 | s CAPACITOR, TANTALUM 4.7MF/6.3V |
| C349 | 1-117-139-11 | s CAPACITOR, ELECT 2.2MF/35V (BP) |
| C350 | 1-135-181-21 | s CAPACITOR, TANTALUM 4.7MF/6.3V |
| C351 | 1-135-181-21 | s CAPACITOR, TANTALUM 4.7MF/6.3V |
| C352 | 1-117-136-11 | s CAPACITOR, ELECT 10MF/6.3V (BP) |
| C368 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C369 | 1-162-910-11 | s CAPACITOR, CERAMIC 5PF/50V 1608 |
| C370 | 1-164-217-11 | s CAPACITOR, CERAMIC 150PF/50V CH |
| C372 | 1-104-851-11 | s CAPACITOR, TANTALUM 10MF/10V |
| C373 | 1-162-910-11 | s CAPACITOR, CERAMIC 5PF/50V 1608 |
| C374 | 1-162-916-11 | s CAPACITOR, CERAMIC 12PF/50V CH |
| C375 | 1-162-919-11 | s CAPACITOR, CERAMIC 22PF/50V CH |
| C376 | 1-162-917-11 | s CAPACITOR, CERAMIC 15PF/50V CH |
| C377 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C378 | 1-113-682-11 | s CAPACITOR, TANTALUM 33MF/10V |
| C379 | 1-162-915-11 | s CAPACITOR, CERAMIC 10PF/50V CH |
| C380 | 1-162-923-11 | s CAPACITOR, CERAMIC 47PF/50V CH |
| C381 | 1-162-927-11 | s CAPACITOR, CERAMIC 100PF/50V CH |
| CN1 | 1-695-320-31 | o PIN, CONNECTOR (1.5MM) (SMD) 2P |
| CN2 | 1-695-320-71 | o PIN, CONNECTOR (1.5MM) (SMD) 2P |
| CN3 | 1-695-320-21 | o PIN, CONNECTOR (1.5MM) SMD 2P |
| CN4 | 1-778-650-11 | o CONNECTOR, FFC (ZIF) 30P |
| D1 | 8-719-421-69 | s DIODE MA133 |
| D4 | 8-719-033-73 | s DIODE RD4.3UM-T1B1E2 |
| D5 | 8-719-033-73 | s DIODE RD4.3UM-T1B1E2 |
| D103 | 8-719-421-71 | s DIODE MA132WA |
| D104 | 8-719-421-71 | s DIODE MA132WA |
| D203 | 8-719-421-71 | s DIODE MA132WA |
| D204 | 8-719-421-71 | s DIODE MA132WA |
| D303 | 8-719-421-71 | s DIODE MA132WA |
| D304 | 8-719-421-71 | s DIODE MA132WA |
| E2 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| E3 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |

(VA-199 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|------------------------------|
| FL101 | 1-233-342-11 | s FILTER, TRAP |
| FL201 | 1-233-342-11 | s FILTER, TRAP |
| FL301 | 1-233-342-11 | s FILTER, TRAP |
| IC1 | 8-759-064-36 | s IC MB88346BPFV |
| IC2 | 8-759-064-36 | s IC MB88346BPFV |
| IC3 | 8-759-530-05 | s IC TC4053BFT (EL.N) |
| IC4 | 8-759-669-72 | s IC TL064CPWR |
| IC5 | 8-759-530-05 | s IC TC4053BFT (EL.N) |
| IC7 | 8-759-659-74 | s IC SN74HC175APWR |
| IC9 | 8-759-058-58 | s IC TC7S04FU-TE85R |
| IC10 | 8-759-659-96 | s IC SN74HC08APWR |
| IC11 | 8-759-659-85 | s IC SN74HC32APWR |
| IC12 | 8-759-669-45 | s IC TL062CPWR-12 |
| IC15 | 8-759-669-67 | s IC TL074CPWR-12 |
| IC16 | 8-759-530-05 | s IC TC4053BFT (EL.N) |
| IC101 | 8-759-530-05 | s IC TC4053BFT (EL.N) |
| IC102 | 8-759-271-18 | s IC NJM1496V |
| IC103 | 8-759-530-05 | s IC TC4053BFT (EL.N) |
| IC105 | 8-759-271-18 | s IC NJM1496V |
| IC106 | 8-759-530-05 | s IC TC4053BFT (EL.N) |
| IC107 | 8-759-669-72 | s IC TL064CPWR |
| IC201 | 8-759-530-05 | s IC TC4053BFT (EL.N) |
| IC202 | 8-759-271-18 | s IC NJM1496V |
| IC203 | 8-759-530-05 | s IC TC4053BFT (EL.N) |
| IC205 | 8-759-271-18 | s IC NJM1496V |
| IC206 | 8-759-530-05 | s IC TC4053BFT (EL.N) |
| IC207 | 8-759-669-72 | s IC TL064CPWR |
| IC301 | 8-759-530-05 | s IC TC4053BFT (EL.N) |
| IC302 | 8-759-271-18 | s IC NJM1496V |
| IC303 | 8-759-530-05 | s IC TC4053BFT (EL.N) |
| IC305 | 8-759-271-18 | s IC NJM1496V |
| IC306 | 8-759-530-05 | s IC TC4053BFT (EL.N) |
| IC307 | 8-759-669-72 | s IC TL064CPWR |
| IC309 | 8-759-185-42 | s IC LM4040AIM3-2.5 |
| L101 | 1-412-957-11 | s INDUCTOR 33UH (2520) |
| L102 | 1-412-961-11 | s INDUCTOR (SMALL TYPE) 68UH |
| L201 | 1-412-957-11 | s INDUCTOR 33UH (2520) |
| L202 | 1-412-961-11 | s INDUCTOR (SMALL TYPE) 68UH |
| L301 | 1-412-957-11 | s INDUCTOR 33UH (2520) |
| L302 | 1-412-961-11 | s INDUCTOR (SMALL TYPE) 68UH |
| Q1 | 8-729-402-84 | s TRANSISTOR XN4601 |
| Q2 | 8-729-420-20 | s TRANSISTOR XN4312 |
| Q3 | 8-729-402-19 | s TRANSISTOR XN6501 |
| Q6 | 8-729-101-07 | s TRANSISTOR 2SB798 |
| Q7 | 8-729-807-51 | s TRANSISTOR 2SD1623-S |
| Q9 | 8-729-101-07 | s TRANSISTOR 2SB798 |
| Q101 | 8-729-402-78 | s TRANSISTOR XN6401 |
| Q102 | 8-729-402-19 | s TRANSISTOR XN6501 |
| Q103 | 8-729-117-72 | s TRANSISTOR 2SC4178 |
| Q104 | 8-729-142-90 | s TRANSISTOR 2SK853-K5 |
| Q105 | 8-729-143-07 | s TRANSISTOR 2SA1610-Y33 |
| Q106 | 8-729-026-52 | s TRANSISTOR 2SA1576A-T106-R |
| Q107 | 8-729-143-07 | s TRANSISTOR 2SA1610-Y33 |
| Q108 | 8-729-117-72 | s TRANSISTOR 2SC4178 |
| Q109 | 8-729-143-07 | s TRANSISTOR 2SA1610-Y33 |
| Q110 | 8-729-026-52 | s TRANSISTOR 2SA1576A-T106-R |
| Q111 | 8-729-143-07 | s TRANSISTOR 2SA1610-Y33 |

(VA-199 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|----------------------------|
| Q112 | 8-729-143-07 s | TRANSISTOR 2SA1610-Y33 |
| Q113 | 8-729-026-52 s | TRANSISTOR 2SA1576A-T106-R |
| Q114 | 8-729-143-07 s | TRANSISTOR 2SA1610-Y33 |
| Q115 | 8-729-117-72 s | TRANSISTOR 2SC4178 |
| Q116 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q117 | 8-729-403-29 s | TRANSISTOR XN6435 |
| Q118 | 8-729-403-32 s | TRANSISTOR XN6534 |
| Q119 | 8-729-143-07 s | TRANSISTOR 2SA1610-Y33 |
| Q120 | 8-729-402-19 s | TRANSISTOR XN6501 |
| Q121 | 8-729-402-78 s | TRANSISTOR XN6401 |
| Q122 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q123 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q124 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q201 | 8-729-402-78 s | TRANSISTOR XN6401 |
| Q202 | 8-729-402-19 s | TRANSISTOR XN6501 |
| Q203 | 8-729-117-72 s | TRANSISTOR 2SC4178 |
| Q204 | 8-729-142-90 s | TRANSISTOR 2SK853-K5 |
| Q205 | 8-729-143-07 s | TRANSISTOR 2SA1610-Y33 |
| Q206 | 8-729-026-52 s | TRANSISTOR 2SA1576A-T106-R |
| Q207 | 8-729-143-07 s | TRANSISTOR 2SA1610-Y33 |
| Q208 | 8-729-117-72 s | TRANSISTOR 2SC4178 |
| Q209 | 8-729-143-07 s | TRANSISTOR 2SA1610-Y33 |
| Q210 | 8-729-026-52 s | TRANSISTOR 2SA1576A-T106-R |
| Q211 | 8-729-143-07 s | TRANSISTOR 2SA1610-Y33 |
| Q212 | 8-729-143-07 s | TRANSISTOR 2SA1610-Y33 |
| Q213 | 8-729-026-52 s | TRANSISTOR 2SA1576A-T106-R |
| Q214 | 8-729-143-07 s | TRANSISTOR 2SA1610-Y33 |
| Q215 | 8-729-117-72 s | TRANSISTOR 2SC4178 |
| Q216 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q217 | 8-729-403-29 s | TRANSISTOR XN6435 |
| Q218 | 8-729-403-32 s | TRANSISTOR XN6534 |
| Q219 | 8-729-143-07 s | TRANSISTOR 2SA1610-Y33 |
| Q220 | 8-729-402-19 s | TRANSISTOR XN6501 |
| Q221 | 8-729-402-78 s | TRANSISTOR XN6401 |
| Q222 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q223 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q224 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q301 | 8-729-402-78 s | TRANSISTOR XN6401 |
| Q302 | 8-729-402-19 s | TRANSISTOR XN6501 |
| Q303 | 8-729-117-72 s | TRANSISTOR 2SC4178 |
| Q304 | 8-729-142-90 s | TRANSISTOR 2SK853-K5 |
| Q305 | 8-729-143-07 s | TRANSISTOR 2SA1610-Y33 |
| Q306 | 8-729-026-52 s | TRANSISTOR 2SA1576A-T106-R |
| Q307 | 8-729-143-07 s | TRANSISTOR 2SA1610-Y33 |
| Q308 | 8-729-117-72 s | TRANSISTOR 2SC4178 |
| Q309 | 8-729-143-07 s | TRANSISTOR 2SA1610-Y33 |
| Q310 | 8-729-026-52 s | TRANSISTOR 2SA1576A-T106-R |
| Q311 | 8-729-143-07 s | TRANSISTOR 2SA1610-Y33 |
| Q312 | 8-729-143-07 s | TRANSISTOR 2SA1610-Y33 |
| Q313 | 8-729-026-52 s | TRANSISTOR 2SA1576A-T106-R |
| Q314 | 8-729-143-07 s | TRANSISTOR 2SA1610-Y33 |
| Q315 | 8-729-117-72 s | TRANSISTOR 2SC4178 |
| Q316 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q317 | 8-729-403-29 s | TRANSISTOR XN6435 |
| Q318 | 8-729-403-32 s | TRANSISTOR XN6534 |
| Q319 | 8-729-143-07 s | TRANSISTOR 2SA1610-Y33 |
| Q320 | 8-729-402-19 s | TRANSISTOR XN6501 |
| Q321 | 8-729-402-78 s | TRANSISTOR XN6401 |
| Q322 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |

(VA-199 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|--------------------------------|
| Q323 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| Q324 | 8-729-905-35 s | TRANSISTOR 2SC4081-R |
| R2 | 1-218-883-11 s | RESISTOR,CHIP 33K 1/16W (1608) |
| R3 | 1-218-883-11 s | RESISTOR,CHIP 33K 1/16W (1608) |
| R4 | 1-216-827-11 s | RESISTOR,CHIP 3.3K 1/16W 1608 |
| R5 | 1-218-894-11 s | RESISTOR,CHIP 91K 1/16W (1608) |
| R6 | 1-218-883-11 s | RESISTOR,CHIP 33K 1/16W (1608) |
| R7 | 1-218-883-11 s | RESISTOR,CHIP 33K 1/16W (1608) |
| R8 | 1-218-887-11 s | RESISTOR,CHIP 47K 1/16W (1608) |
| R9 | 1-218-875-11 s | RESISTOR,CHIP 15K 1/16W (1608) |
| R10 | 1-218-894-11 s | RESISTOR,CHIP 91K 1/16W (1608) |
| R11 | 1-218-883-11 s | RESISTOR,CHIP 33K 1/16W (1608) |
| R12 | 1-218-883-11 s | RESISTOR,CHIP 33K 1/16W (1608) |
| R13 | 1-218-887-11 s | RESISTOR,CHIP 47K 1/16W (1608) |
| R14 | 1-218-875-11 s | RESISTOR,CHIP 15K 1/16W (1608) |
| R15 | 1-218-894-11 s | RESISTOR,CHIP 91K 1/16W (1608) |
| R16 | 1-218-883-11 s | RESISTOR,CHIP 33K 1/16W (1608) |
| R17 | 1-218-883-11 s | RESISTOR,CHIP 33K 1/16W (1608) |
| R18 | 1-218-887-11 s | RESISTOR,CHIP 47K 1/16W (1608) |
| R19 | 1-218-875-11 s | RESISTOR,CHIP 15K 1/16W (1608) |
| R21 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R22 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R23 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R24 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R25 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R26 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R27 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R28 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R29 | 1-218-867-11 s | RESISTOR,CHIP 6.8K 1/16W(1608) |
| R30 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R32 | 1-218-862-11 s | RESISTOR,CHIP 4.3K 1/16W(1608) |
| R33 | 1-218-857-11 s | RESISTOR,CHIP 2.7K 1/16W(1608) |
| R34 | 1-218-877-11 s | RESISTOR,CHIP 18K 1/16W (1608) |
| R35 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R36 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R37 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R38 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R40 | 1-216-828-11 s | RESISTOR,CHIP 3.9K 1/16W 1608 |
| R41 | 1-216-828-11 s | RESISTOR,CHIP 3.9K 1/16W 1608 |
| R42 | 1-216-857-11 s | RESISTOR,CHIP 1M 1/16W(1608) |
| R43 | 1-216-857-11 s | RESISTOR,CHIP 1M 1/16W(1608) |
| R58 | 1-218-885-11 s | RESISTOR,CHIP 39K 1/16W (1608) |
| R59 | 1-218-884-11 s | RESISTOR,CHIP 36K 1/16W (1608) |
| R60 | 1-218-881-11 s | RESISTOR,CHIP 27K 1/16W(1608) |
| R61 | 1-218-863-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R62 | 1-218-883-11 s | RESISTOR,CHIP 33K 1/16W (1608) |
| R63 | 1-216-823-11 s | RESISTOR,CHIP 1.5K 1/16W |
| R68 | 1-218-886-11 s | RESISTOR,CHIP 43K 1/16W (1608) |
| R69 | 1-218-831-11 s | RESISTOR,CHIP 220 1/16W(1608) |
| R70 | 1-218-877-11 s | RESISTOR,CHIP 18K 1/16W (1608) |
| R71 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R72 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R73 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R75 | 1-216-797-11 s | RESISTOR,CHIP 10 1/16W 1608 |
| R76 | 1-216-797-11 s | RESISTOR,CHIP 10 1/16W 1608 |
| R77 | 1-216-797-11 s | RESISTOR,CHIP 10 1/16W 1608 |
| R78 | 1-216-838-11 s | RESISTOR CHIP 27K 1/16W(1608) |
| R79 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |

(VA-199 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|--------------------------------|
| R81 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R82 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R83 | 1-218-859-11 s | RESISTOR,CHIP 3.3K 1/16W(1608) |
| R84 | 1-218-852-11 s | RESISTOR,CHIP 1.6K 1/16W(1608) |
| R85 | 1-218-857-11 s | RESISTOR,CHIP 2.7K 1/16W(1608) |
| R86 | 1-218-859-11 s | RESISTOR,CHIP 3.3K 1/16W(1608) |
| R87 | 1-218-852-11 s | RESISTOR,CHIP 1.6K 1/16W(1608) |
| R88 | 1-218-848-11 s | RESISTOR,CHIP 1.1K 1/16W(1608) |
| R90 | 1-218-883-11 s | RESISTOR,CHIP 33K 1/16W (1608) |
| R91 | 1-218-887-11 s | RESISTOR,CHIP 47K 1/16W (1608) |
| R92 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R93 | 1-216-845-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R101 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R102 | 1-216-824-11 s | RESISTOR,CHIP 1.8K 1/16W 1608 |
| R103 | 1-216-842-11 s | RESISTOR,CHIP 56K 1/16W(1608) |
| R104 | 1-216-839-11 s | RESISTOR,CHIP 33K 1/16W 1608 |
| R105 | 1-218-849-11 s | RESISTOR,CHIP 1.2K 1/16W(1608) |
| R106 | 1-218-885-11 s | RESISTOR,CHIP 39K 1/16W (1608) |
| R107 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R109 | 1-216-827-11 s | RESISTOR,CHIP 3.3K 1/16W 1608 |
| R110 | 1-218-852-11 s | RESISTOR,CHIP 1.6K 1/16W(1608) |
| R111 | 1-218-907-11 s | RESISTOR,CHIP 330K 1/16W(1608) |
| R112 | 1-218-907-11 s | RESISTOR,CHIP 330K 1/16W(1608) |
| R113 | 1-218-867-11 s | RESISTOR,CHIP 6.8K 1/16W(1608) |
| R114 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R115 | 1-218-875-11 s | RESISTOR,CHIP 15K 1/16W (1608) |
| R116 | 1-216-857-11 s | RESISTOR,CHIP 1M 1/16W(1608) |
| R117 | 1-218-856-11 s | RESISTOR,CHIP 2.4K 1/16W(1608) |
| R118 | 1-218-877-11 s | RESISTOR,CHIP 18K 1/16W (1608) |
| R119 | 1-218-829-11 s | RESISTOR,CHIP 180 1/16W (1608) |
| R120 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R121 | 1-218-849-11 s | RESISTOR,CHIP 1.2K 1/16W(1608) |
| R122 | 1-216-823-11 s | RESISTOR,CHIP 1.5K 1/16W |
| R123 | 1-216-827-11 s | RESISTOR,CHIP 3.3K 1/16W 1608 |
| R125 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R126 | 1-216-837-11 s | RESISTOR,CHIP 22K 1/16W 1608 |
| R127 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 |
| R128 | 1-218-839-11 s | RESISTOR,CHIP 470 1/16W (1608) |
| R129 | 1-218-839-11 s | RESISTOR,CHIP 470 1/16W (1608) |
| R130 | 1-218-837-11 s | RESISTOR,CHIP 390 1/16W (1608) |
| R131 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 |
| R132 | 1-218-895-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R133 | 1-218-857-11 s | RESISTOR,CHIP 2.7K 1/16W(1608) |
| R134 | 1-218-851-11 s | RESISTOR,CHIP 1.5K 1/16W(1608) |
| R135 | 1-218-837-11 s | RESISTOR,CHIP 390 1/16W (1608) |
| R136 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R137 | 1-218-870-11 s | RESISTOR,CHIP 9.1K 1/16W(1608) |
| R138 | 1-218-857-11 s | RESISTOR,CHIP 2.7K 1/16W(1608) |
| R139 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R140 | 1-216-825-11 s | RESISTOR,CHIP 2.2K 1/16W 1608 |
| R141 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| R142 | 1-211-984-11 s | RESISTOR,CHIP 43 1/16W (1608) |
| R143 | 1-211-985-11 s | RESISTOR,CHIP 47 1/16W (1608) |
| R144 | 1-218-838-11 s | RESISTOR,CHIP 430 1/16W (1608) |
| R145 | 1-218-838-11 s | RESISTOR,CHIP 430 1/16W (1608) |
| R146 | 1-218-837-11 s | RESISTOR,CHIP 390 1/16W (1608) |
| R147 | 1-218-857-11 s | RESISTOR,CHIP 2.7K 1/16W(1608) |
| R148 | 1-218-849-11 s | RESISTOR,CHIP 1.2K 1/16W(1608) |
| R149 | 1-218-903-11 s | RESISTOR,CHIP 220K 1/16W(1608) |

(VA-199 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|--------------------------------|
| R150 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R154 | 1-216-839-11 s | RESISTOR,CHIP 33K 1/16W 1608 |
| R155 | 1-218-855-11 s | RESISTOR,CHIP 2.2K 1/16W(1608) |
| R156 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R157 | 1-216-827-11 s | RESISTOR,CHIP 3.3K 1/16W 1608 |
| R158 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R159 | 1-218-839-11 s | RESISTOR,CHIP 470 1/16W (1608) |
| R160 | 1-218-839-11 s | RESISTOR,CHIP 470 1/16W (1608) |
| R161 | 1-218-851-11 s | RESISTOR,CHIP 1.5K 1/16W(1608) |
| R162 | 1-218-871-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R163 | 1-218-857-11 s | RESISTOR,CHIP 2.7K 1/16W(1608) |
| R164 | 1-218-857-11 s | RESISTOR,CHIP 2.7K 1/16W(1608) |
| R165 | 1-218-837-11 s | RESISTOR,CHIP 390 1/16W (1608) |
| R166 | 1-218-843-11 s | RESISTOR,CHIP 680 1/16W (1608) |
| R167 | 1-218-851-11 s | RESISTOR,CHIP 1.5K 1/16W(1608) |
| R168 | 1-216-824-11 s | RESISTOR,CHIP 1.8K 1/16W 1608 |
| R169 | 1-216-823-11 s | RESISTOR,CHIP 1.5K 1/16W |
| R170 | 1-218-863-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R171 | 1-218-873-11 s | RESISTOR,CHIP 12K 1/16W (1608) |
| R172 | 1-216-823-11 s | RESISTOR,CHIP 1.5K 1/16W |
| R173 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R174 | 1-216-809-11 s | RESISTOR,CHIP 100 1/16W 1608 |
| R175 | 1-216-864-11 s | RESISTOR,CHIP 0 1/16W (1608) |
| R176 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R177 | 1-218-869-11 s | RESISTOR,CHIP 8.2K 1/16W(1608) |
| R178 | 1-218-876-11 s | RESISTOR,CHIP 16K 1/16W (1608) |
| R180 | 1-218-839-11 s | RESISTOR,CHIP 470 1/16W (1608) |
| R181 | 1-218-831-11 s | RESISTOR,CHIP 220 1/16W(1608) |
| R182 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R183 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R191 | 1-216-861-11 s | RESISTOR,CHIP 2.2M 1/16W 1608 |
| R192 | 1-216-860-11 s | RESISTOR,CHIP 1.8M 1/16W 1698 |
| R194 | 1-218-907-11 s | RESISTOR,CHIP 330K 1/16W(1608) |
| R195 | 1-218-901-11 s | RESISTOR,CHIP 180K 1/16W(1608) |
| R197 | 1-218-895-11 s | RESISTOR,CHIP 100K 1/16W(1608) |
| R198 | 1-218-865-11 s | RESISTOR,CHIP 5.6K 1/16W(1608) |
| R199 | 1-216-863-11 s | RESISTOR,CHIP 3.3M 1/16W 1608 |
| R201 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R202 | 1-216-824-11 s | RESISTOR,CHIP 1.8K 1/16W 1608 |
| R203 | 1-216-842-11 s | RESISTOR,CHIP 56K 1/16W(1608) |
| R204 | 1-216-839-11 s | RESISTOR,CHIP 33K 1/16W 1608 |
| R205 | 1-218-849-11 s | RESISTOR,CHIP 1.2K 1/16W(1608) |
| R206 | 1-218-885-11 s | RESISTOR,CHIP 39K 1/16W (1608) |
| R207 | 1-216-829-11 s | RESISTOR,CHIP 4.7K 1/16W(1608) |
| R209 | 1-216-827-11 s | RESISTOR,CHIP 3.3K 1/16W 1608 |
| R210 | 1-218-852-11 s | RESISTOR,CHIP 1.6K 1/16W(1608) |
| R211 | 1-218-907-11 s | RESISTOR,CHIP 330K 1/16W(1608) |
| R212 | 1-218-907-11 s | RESISTOR,CHIP 330K 1/16W(1608) |
| R213 | 1-218-867-11 s | RESISTOR,CHIP 6.8K 1/16W(1608) |
| R214 | 1-216-833-11 s | RESISTOR,CHIP 10K 1/16W (1608) |
| R215 | 1-218-875-11 s | RESISTOR,CHIP 15K 1/16W (1608) |
| R216 | 1-216-857-11 s | RESISTOR,CHIP 1M 1/16W(1608) |
| R217 | 1-218-856-11 s | RESISTOR,CHIP 2.4K 1/16W(1608) |
| R218 | 1-218-877-11 s | RESISTOR,CHIP 18K 1/16W (1608) |
| R219 | 1-218-829-11 s | RESISTOR,CHIP 180 1/16W (1608) |
| R220 | 1-216-821-11 s | RESISTOR,CHIP 1.0K 1/16W(1608) |
| R221 | 1-218-849-11 s | RESISTOR,CHIP 1.2K 1/16W(1608) |
| R222 | 1-216-823-11 s | RESISTOR,CHIP 1.5K 1/16W |
| R223 | 1-216-827-11 s | RESISTOR,CHIP 3.3K 1/16W 1608 |

(VA-199 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| R225 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R226 | 1-216-837-11 | s RESISTOR,CHIP 22K 1/16W 1608 |
| R227 | 1-216-825-11 | s RESISTOR,CHIP 2.2K 1/16W 1608 |
| R228 | 1-218-839-11 | s RESISTOR,CHIP 470 1/16W (1608) |
| R229 | 1-218-839-11 | s RESISTOR,CHIP 470 1/16W (1608) |
| R230 | 1-218-837-11 | s RESISTOR,CHIP 390 1/16W (1608) |
| R231 | 1-216-825-11 | s RESISTOR,CHIP 2.2K 1/16W 1608 |
| R232 | 1-218-895-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R233 | 1-218-857-11 | s RESISTOR,CHIP 2.7K 1/16W(1608) |
| R234 | 1-218-851-11 | s RESISTOR,CHIP 1.5K 1/16W(1608) |
| R235 | 1-218-837-11 | s RESISTOR,CHIP 390 1/16W (1608) |
| R236 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R237 | 1-218-870-11 | s RESISTOR,CHIP 9.1K 1/16W(1608) |
| R238 | 1-218-857-11 | s RESISTOR,CHIP 2.7K 1/16W(1608) |
| R239 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R240 | 1-216-825-11 | s RESISTOR,CHIP 2.2K 1/16W 1608 |
| R241 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R242 | 1-211-984-11 | s RESISTOR,CHIP 43 1/16W (1608) |
| R243 | 1-211-985-11 | s RESISTOR,CHIP 47 1/16W (1608) |
| R244 | 1-218-838-11 | s RESISTOR,CHIP 430 1/16W (1608) |
| R245 | 1-218-838-11 | s RESISTOR,CHIP 430 1/16W (1608) |
| R246 | 1-218-837-11 | s RESISTOR,CHIP 390 1/16W (1608) |
| R247 | 1-218-857-11 | s RESISTOR,CHIP 2.7K 1/16W(1608) |
| R248 | 1-218-849-11 | s RESISTOR,CHIP 1.2K 1/16W(1608) |
| R249 | 1-218-903-11 | s RESISTOR,CHIP 220K 1/16W(1608) |
| R250 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R254 | 1-216-839-11 | s RESISTOR,CHIP 33K 1/16W 1608 |
| R255 | 1-218-855-11 | s RESISTOR,CHIP 2.2K 1/16W(1608) |
| R256 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R257 | 1-216-827-11 | s RESISTOR,CHIP 3.3K 1/16W 1608 |
| R258 | 1-216-829-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R259 | 1-218-839-11 | s RESISTOR,CHIP 470 1/16W (1608) |
| R260 | 1-218-839-11 | s RESISTOR,CHIP 470 1/16W (1608) |
| R261 | 1-218-851-11 | s RESISTOR,CHIP 1.5K 1/16W(1608) |
| R262 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R263 | 1-218-857-11 | s RESISTOR,CHIP 2.7K 1/16W(1608) |
| R264 | 1-218-857-11 | s RESISTOR,CHIP 2.7K 1/16W(1608) |
| R265 | 1-218-837-11 | s RESISTOR,CHIP 390 1/16W (1608) |
| R266 | 1-218-843-11 | s RESISTOR,CHIP 680 1/16W (1608) |
| R267 | 1-218-851-11 | s RESISTOR,CHIP 1.5K 1/16W(1608) |
| R268 | 1-216-824-11 | s RESISTOR,CHIP 1.8K 1/16W 1608 |
| R269 | 1-216-823-11 | s RESISTOR,CHIP 1.5K 1/16W |
| R270 | 1-218-863-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R271 | 1-218-873-11 | s RESISTOR,CHIP 12K 1/16W (1608) |
| R272 | 1-216-823-11 | s RESISTOR,CHIP 1.5K 1/16W |
| R273 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R274 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R275 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R276 | 1-216-829-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R277 | 1-218-869-11 | s RESISTOR,CHIP 8.2K 1/16W(1608) |
| R278 | 1-218-876-11 | s RESISTOR,CHIP 16K 1/16W (1608) |
| R280 | 1-218-839-11 | s RESISTOR,CHIP 470 1/16W (1608) |
| R281 | 1-218-831-11 | s RESISTOR,CHIP 220 1/16W(1608) |
| R282 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R283 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R291 | 1-216-861-11 | s RESISTOR,CHIP 2.2M 1/16W 1608 |
| R292 | 1-216-860-11 | s RESISTOR,CHIP 1.8M 1/16W 1698 |
| R294 | 1-218-907-11 | s RESISTOR,CHIP 330K 1/16W(1608) |
| R295 | 1-218-901-11 | s RESISTOR,CHIP 180K 1/16W(1608) |

(VA-199 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| R297 | 1-218-895-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R298 | 1-218-865-11 | s RESISTOR,CHIP 5.6K 1/16W(1608) |
| R299 | 1-216-863-11 | s RESISTOR,CHIP 3.3M 1/16W 1608 |
| R301 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R302 | 1-216-824-11 | s RESISTOR,CHIP 1.8K 1/16W 1608 |
| R303 | 1-216-842-11 | s RESISTOR,CHIP 56K 1/16W(1608) |
| R304 | 1-216-839-11 | s RESISTOR,CHIP 33K 1/16W 1608 |
| R305 | 1-218-849-11 | s RESISTOR,CHIP 1.2K 1/16W(1608) |
| R306 | 1-218-885-11 | s RESISTOR,CHIP 39K 1/16W (1608) |
| R307 | 1-216-829-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R309 | 1-216-827-11 | s RESISTOR,CHIP 3.3K 1/16W 1608 |
| R310 | 1-218-852-11 | s RESISTOR,CHIP 1.6K 1/16W(1608) |
| R311 | 1-218-907-11 | s RESISTOR,CHIP 330K 1/16W(1608) |
| R312 | 1-218-907-11 | s RESISTOR,CHIP 330K 1/16W(1608) |
| R313 | 1-218-867-11 | s RESISTOR,CHIP 6.8K 1/16W(1608) |
| R314 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R315 | 1-218-875-11 | s RESISTOR,CHIP 15K 1/16W (1608) |
| R316 | 1-216-857-11 | s RESISTOR,CHIP 1M 1/16W(1608) |
| R317 | 1-218-856-11 | s RESISTOR,CHIP 2.4K 1/16W(1608) |
| R318 | 1-218-877-11 | s RESISTOR,CHIP 18K 1/16W (1608) |
| R319 | 1-218-829-11 | s RESISTOR,CHIP 180 1/16W (1608) |
| R320 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R321 | 1-218-849-11 | s RESISTOR,CHIP 1.2K 1/16W(1608) |
| R322 | 1-216-823-11 | s RESISTOR,CHIP 1.5K 1/16W |
| R323 | 1-216-827-11 | s RESISTOR,CHIP 3.3K 1/16W 1608 |
| R325 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R326 | 1-216-837-11 | s RESISTOR,CHIP 22K 1/16W 1608 |
| R327 | 1-216-825-11 | s RESISTOR,CHIP 2.2K 1/16W 1608 |
| R328 | 1-218-839-11 | s RESISTOR,CHIP 470 1/16W (1608) |
| R329 | 1-218-839-11 | s RESISTOR,CHIP 470 1/16W (1608) |
| R330 | 1-218-837-11 | s RESISTOR,CHIP 390 1/16W (1608) |
| R331 | 1-216-825-11 | s RESISTOR,CHIP 2.2K 1/16W 1608 |
| R332 | 1-218-895-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R333 | 1-218-857-11 | s RESISTOR,CHIP 2.7K 1/16W(1608) |
| R334 | 1-218-851-11 | s RESISTOR,CHIP 1.5K 1/16W(1608) |
| R335 | 1-218-837-11 | s RESISTOR,CHIP 390 1/16W (1608) |
| R336 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R337 | 1-218-870-11 | s RESISTOR,CHIP 9.1K 1/16W(1608) |
| R338 | 1-218-857-11 | s RESISTOR,CHIP 2.7K 1/16W(1608) |
| R339 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R340 | 1-216-825-11 | s RESISTOR,CHIP 2.2K 1/16W 1608 |
| R341 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R342 | 1-211-984-11 | s RESISTOR,CHIP 43 1/16W (1608) |
| R343 | 1-211-985-11 | s RESISTOR,CHIP 47 1/16W (1608) |
| R344 | 1-218-838-11 | s RESISTOR,CHIP 430 1/16W (1608) |
| R345 | 1-218-838-11 | s RESISTOR,CHIP 430 1/16W (1608) |
| R346 | 1-218-837-11 | s RESISTOR,CHIP 390 1/16W (1608) |
| R347 | 1-218-857-11 | s RESISTOR,CHIP 2.7K 1/16W(1608) |
| R348 | 1-218-849-11 | s RESISTOR,CHIP 1.2K 1/16W(1608) |
| R349 | 1-218-903-11 | s RESISTOR,CHIP 220K 1/16W(1608) |
| R350 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R354 | 1-216-839-11 | s RESISTOR,CHIP 33K 1/16W 1608 |
| R355 | 1-218-855-11 | s RESISTOR,CHIP 2.2K 1/16W(1608) |
| R356 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R357 | 1-216-827-11 | s RESISTOR,CHIP 3.3K 1/16W 1608 |
| R358 | 1-216-829-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R359 | 1-218-839-11 | s RESISTOR,CHIP 470 1/16W (1608) |
| R360 | 1-218-839-11 | s RESISTOR,CHIP 470 1/16W (1608) |
| R361 | 1-218-851-11 | s RESISTOR,CHIP 1.5K 1/16W(1608) |

(VA-199 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| R362 | 1-218-871-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R363 | 1-218-857-11 | s RESISTOR,CHIP 2.7K 1/16W(1608) |
| R364 | 1-218-857-11 | s RESISTOR,CHIP 2.7K 1/16W(1608) |
| R365 | 1-218-837-11 | s RESISTOR,CHIP 390 1/16W (1608) |
| R366 | 1-218-843-11 | s RESISTOR,CHIP 680 1/16W (1608) |
| R367 | 1-218-851-11 | s RESISTOR,CHIP 1.5K 1/16W(1608) |
| R368 | 1-216-824-11 | s RESISTOR,CHIP 1.8K 1/16W 1608 |
| R369 | 1-216-823-11 | s RESISTOR,CHIP 1.5K 1/16W |
| R370 | 1-218-863-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R371 | 1-218-873-11 | s RESISTOR,CHIP 12K 1/16W (1608) |
| R372 | 1-216-823-11 | s RESISTOR,CHIP 1.5K 1/16W |
| R373 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R374 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R375 | 1-216-864-11 | s RESISTOR,CHIP 0 1/16W (1608) |
| R376 | 1-216-829-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R377 | 1-218-869-11 | s RESISTOR,CHIP 8.2K 1/16W(1608) |
| R378 | 1-218-876-11 | s RESISTOR,CHIP 16K 1/16W (1608) |
| R380 | 1-218-839-11 | s RESISTOR,CHIP 470 1/16W (1608) |
| R381 | 1-218-831-11 | s RESISTOR,CHIP 220 1/16W(1608) |
| R382 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R383 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R391 | 1-216-861-11 | s RESISTOR,CHIP 2.2M 1/16W 1608 |
| R392 | 1-216-860-11 | s RESISTOR,CHIP 1.8M 1/16W 1698 |
| R394 | 1-218-907-11 | s RESISTOR,CHIP 330K 1/16W(1608) |
| R395 | 1-218-901-11 | s RESISTOR,CHIP 180K 1/16W(1608) |
| R397 | 1-218-895-11 | s RESISTOR,CHIP 100K 1/16W(1608) |
| R398 | 1-218-865-11 | s RESISTOR,CHIP 5.6K 1/16W(1608) |
| R399 | 1-216-863-11 | s RESISTOR,CHIP 3.3M 1/16W 1608 |
| R400 | 1-218-849-11 | s RESISTOR,CHIP 1.2K 1/16W(1608) |
| R401 | 1-218-885-11 | s RESISTOR,CHIP 39K 1/16W (1608) |
| R402 | 1-216-829-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R403 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R404 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R405 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R406 | 1-218-865-11 | s RESISTOR,CHIP 5.6K 1/16W(1608) |
| R407 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R500 | 1-218-849-11 | s RESISTOR,CHIP 1.2K 1/16W(1608) |
| R501 | 1-218-885-11 | s RESISTOR,CHIP 39K 1/16W (1608) |
| R502 | 1-216-829-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R503 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R504 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R505 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R506 | 1-218-865-11 | s RESISTOR,CHIP 5.6K 1/16W(1608) |
| R507 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R600 | 1-218-849-11 | s RESISTOR,CHIP 1.2K 1/16W(1608) |
| R601 | 1-218-885-11 | s RESISTOR,CHIP 39K 1/16W (1608) |
| R602 | 1-216-829-11 | s RESISTOR,CHIP 4.7K 1/16W(1608) |
| R603 | 1-216-821-11 | s RESISTOR,CHIP 1.0K 1/16W(1608) |
| R604 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R605 | 1-216-809-11 | s RESISTOR,CHIP 100 1/16W 1608 |
| R606 | 1-218-865-11 | s RESISTOR,CHIP 5.6K 1/16W(1608) |
| R607 | 1-216-833-11 | s RESISTOR,CHIP 10K 1/16W (1608) |
| R700 | 1-218-903-11 | s RESISTOR,CHIP 220K 1/16W(1608) |
| R701 | 1-218-833-11 | s RESISTOR,CHIP 270 1/16W (1608) |
| R702 | 1-218-833-11 | s RESISTOR,CHIP 270 1/16W (1608) |
| R703 | 1-218-834-11 | s RESISTOR,CHIP 300 1/16W (1608) |
| R704 | 1-218-834-11 | s RESISTOR,CHIP 300 1/16W (1608) |
| R707 | 1-218-917-11 | s RESISTOR,CHIP 820K 1/16W(1608) |
| R800 | 1-218-903-11 | s RESISTOR,CHIP 220K 1/16W(1608) |

(VA-199 BOARD)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|----------------------------------|
| R801 | 1-218-833-11 | s RESISTOR,CHIP 270 1/16W (1608) |
| R802 | 1-218-833-11 | s RESISTOR,CHIP 270 1/16W (1608) |
| R803 | 1-218-834-11 | s RESISTOR,CHIP 300 1/16W (1608) |
| R804 | 1-218-834-11 | s RESISTOR,CHIP 300 1/16W (1608) |
| R807 | 1-218-917-11 | s RESISTOR,CHIP 820K 1/16W(1608) |
| R900 | 1-218-903-11 | s RESISTOR,CHIP 220K 1/16W(1608) |
| R901 | 1-218-833-11 | s RESISTOR,CHIP 270 1/16W (1608) |
| R902 | 1-218-833-11 | s RESISTOR,CHIP 270 1/16W (1608) |
| R903 | 1-218-834-11 | s RESISTOR,CHIP 300 1/16W (1608) |
| R904 | 1-218-834-11 | s RESISTOR,CHIP 300 1/16W (1608) |
| R907 | 1-218-917-11 | s RESISTOR,CHIP 820K 1/16W(1608) |
| RB1 | 1-236-904-11 | s RESISTOR,NETWORK 1K (1608) |
| RB2 | 1-236-907-11 | s RESISTOR,BLOCK 100K (1608) |
| TP1 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP2 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP102 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP202 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |
| TP302 | 1-535-757-11 | s CHIP, CHECKER (CONNECTOR) |

FRAME

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|---|
| 1pc | 1-528-174-31 | s BATTERY, LITHIUM CR2032 |
| HN101 | 1-783-283-13 | s CABLE, FLEXIBLE FLAT (50-CORE) [CN14/MB board to CN504/AA board] |
| HN102 | | (CN506/AA board) |
| 1pc | 1-565-978-11 | o HOUSING, CONNNECTOR 6P |
| 6pcs | 1-565-977-11 | s TERMINAL, SOLDERLESS |
| | | (CN701/LE board) |
| 1pc | 1-565-978-11 | o HOUSING, CONNNECTOR 6P |
| 6pcs | 1-565-977-11 | s TERMINAL, SOLDERLESS |
| HN103 | | (CN503/AT board) |
| 1pc | 1-565-978-11 | o HOUSING, CONNNECTOR 6P |
| 6pcs | 1-565-977-11 | s TERMINAL, SOLDERLESS |
| | | (CN1/SE-566 board) |
| 1pc | 1-565-978-11 | o HOUSING, CONNNECTOR 6P |
| 6pcs | 1-565-977-11 | s TERMINAL, SOLDERLESS |
| HN104 | 1-677-405-11 | s PRINTED WIRING BOARD, CN-1981 [CN15/MB board to CN1/TG board] |
| HN105 | 1-783-288-13 | s CABLE, FLEXIBLE FLAT (30-CORE) [CN5/MB board to CN4/VA board] |
| HN106 | 1-783-285-13 | s CABLE, FLEXIBLE FLAT (50-CORE) [CN16/MB board to CN306/PSW board] |
| HN107 | | (CN305/PSW board) |
| 1pc | 1-695-892-11 | o HOUSING, CONNECTOR 12P |
| 12pcs | 1-695-215-11 | o TERMINAL, SOLDERLESS |
| | | (W401/CN-1864 board) |
| 1pc | 1-695-892-11 | o HOUSING, CONNECTOR 12P |
| 12pcs | 1-695-215-11 | o TERMINAL, SOLDERLESS |
| HN108 | 1-783-282-14 | s CABLE, FLEXIBLE FLAT (50-CORE) [CN3/MB board to CN3/FP-118A/122 board] |
| HN109 | 1-783-282-14 | s CABLE, FLEXIBLE FLAT (50-CORE) [CN2/MB board to CN2/FP-118A/122 board] |
| HN110 | 1-777-865-13 | s CABLE, FLEXIBLE FLAT (40-CORE) [CN1/MB board to CN1/FP-118A/122 board] |
| HN111 | | (CN5/FP-122 board) |
| 1pc | 1-569-618-11 | o HOUSING, CONNECTOR 3P |
| 3pcs | 1-565-977-11 | s TERMINAL, SOLDERLESS |
| HN112 | 1-777-902-11 | o WIRE, FLAT TYPE (10-CORE) [CN4/FP-118A/122 board to CN1/KY board] |
| HN113 | 1-783-363-11 | s WIRE, FLAT TYPE (10-CORE) [CN8/FP-118A/122 board to CN801/FP-99 board] |
| HN114 | 1-958-485-11 | o HARNESS, SUB SW929) [CN803/FP-99 board to CN101/SW-929 board] |
| HN115 | 1-958-499-12 | s HARNESS, SUB (MB-CPS) (CN3/CP board) |
| 1pc | 1-561-514-00 | o CONNECTOR HOUSING, ILG (2P) |
| 2pcs | 1-560-372-00 | o TERMINAL, PRESS |
| | | (CN22/MB board) |
| 1pc | 1-562-644-11 | s SOCKET, CONNECTOR 2P |
| 2pcs | 1-562-643-11 | o TERMINAL, SOLDERLESS |
| HN116 | 1-958-496-11 | s HARNESS, SUB (POWER LINE) |
| 1pc | 1-500-111-11 | s CORE |
| 1pc | 1-564-603-31 | s CONNECTOR (WITH DC SW) 4P |
| 1pc | 1-553-442-21 | s SWITCH, MICRO (TO CN6/CP board) |
| 1pc | 1-580-582-11 | o HOUSING, CONNECTOR 12P |
| 9pcs | 1-573-176-11 | o TERMINAL, SOLDERLESS |
| 1pc | 1-580-599-11 | o TERMINAL, SOLDERLESS |

(FRAME)

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|--------------|--|
| HN117 | 1-958-497-12 | s HARNESS, SUB (BATTERY) |
| 1pc | 1-766-377-13 | s CONNECTOR, BATTERY (TO CN7/CP board) |
| 1pc | 1-580-581-11 | o HOUSING, CONNECTOR 10P |
| 6pcs | 1-573-176-11 | o TERMINAL, SOLDERLESS |
| 3pcs | 1-580-599-11 | o TERMINAL, SOLDERLESS |
| HN118 | 1-958-498-11 | o HARNESS, SUB (CP-LIGHT) (CN9/CP board) |
| 1pc | 1-561-516-00 | o CONNECTOR HOUSING, ILG (4P) |
| 4pcs | 1-560-372-00 | o TERMINAL, PRESS |
| | | (CN901/PS board) |
| 1pc | 1-561-516-00 | o CONNECTOR HOUSING, ILG (4P) |
| 4pcs | 1-560-372-00 | o TERMINAL, PRESS |
| HN119 | | (CN2/CN-1823 board) |
| 1pc | 1-569-519-11 | o HOUSING, CONNECTOR 7P |
| 6pcs | 1-565-977-11 | s TERMINAL, SOLDERLESS |
| | | (CN102/DV board) |
| 1pc | 1-565-978-11 | o HOUSING, CONNNECTOR 6P |
| 6pcs | 1-565-977-11 | s TERMINAL, SOLDERLESS |
| HN120 | 1-777-866-12 | s CABLE, FLEXIBLE FLAT (45-CORE) [CN11/MB board to CN773/RP board] |
| HN121 | 1-777-864-11 | s CABLE, FLEXIBLE FLAT (20-CORE) [CN772/RP board to CN501/SV board] |
| HN122 | 1-777-867-12 | s CABLE, FLEXIBLE FLAT (50-CORE) [CN10/MB board to CN502/SV board] |
| HN123 | 1-958-486-11 | o HARNESS, SUB (DU27) [CN23/MB board to CN1/DU board] |
| HN124 | | (CN2/CN-1874 board) |
| 1pc | 1-561-514-00 | o CONNECTOR HOUSING, ILG (2P) |
| 2pcs | 1-560-372-00 | o TERMINAL, PRESS |
| | | (VIDEO LIGHT CONNECTOR) |
| 1pc | 1-561-514-00 | o CONNECTOR HOUSING, ILG (2P) |
| 2pcs | 1-560-372-00 | o TERMINAL, PRESS |
| HN201 | A-8322-163-A | s MOUNTED CIRCUIT BOARD, CN-1811 [CN20/MB board to CN501/AT board] |

1-4. Supplied Accessories List

DSR-390/390P

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|--|
| 1pc | 1-528-174-31 s | BATTERY,LITHIUM CR2032 |
| 1pc | 3-613-311-01 s | CAP,CN |
| 1pc | 3-764-889-01 o | CHART,ADJUSTMENT |
| 1pc | 3-776-645-01 s | OPERATING INSTRUCTIONS [for J] |
| 1pc | 3-776-645-11 s | OPERATING INSTRUCTIONS [for SY,CN,UC] |
| 1pc | 3-776-663-01 s | PACK,CD-ROM [for SY,CN,UC] |
| 1pc | A-6772-374-C s | BELT ASSY, SHOULDER |

DSR-370/370P

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|------------------------------------|
| 1pc | 1-528-174-31 s | BATTERY,LITHIUM CR2032 |
| 1pc | 3-206-359-02 o | MANUAL, INSTRUCTION [for J] |
| 1pc | 3-206-359-12 o | MANUAL, INSTRUCTION [for SY,CN,UC] |
| 1pc | 3-613-311-01 s | CAP,CN |
| 1pc | 3-764-889-01 o | CHART,ADJUSTMENT |
| 1pc | 3-691-094-02 s | PACK,CD-ROM [for SY,CN,UC] |
| 1pc | A-6772-374-C s | BELT ASSY, SHOULDER |

DSR-300A/300AP

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|--------------------------------|
| 1pc | A-6772-374-C s | BELT ASSY, SHOULDER |
| 1pc | 1-528-174-31 s | BATTERY,LITHIUM CR2032 |
| 1pc | 1-542-296-23 o | MICROPHONE |
| 1pc | 3-179-882-01 o | SPACER, MICROPHONE |
| 1pc | 3-203-818-02 s | MANUAL, INSTRUCTION [JAPANESE] |
| 1pc | 3-203-818-12 s | MANUAL, INSTRUCTION [ENGLISH] |
| 1pc | 3-203-818-22 s | MANUAL, INSTRUCTION [FRENCH] |
| 1pc | 3-203-818-32 s | MANUAL, INSTRUCTION [GERMAN] |
| 1pc | 3-203-818-42 s | MANUAL, INSTRUCTION [ITALIAN] |
| 1pc | 3-613-311-01 s | CAP,CN |
| 1pc | 3-764-889-01 o | CHART,ADJUSTMENT |

1-5. Optional Fixtures List

| Ref. No. or Q'ty | Part No. | SP Description |
|---------------------|----------------|---------------------------------------|
| | J-6080-029-A o | SMALL ADJUSTMENT MIRROR |
| | J-6082-231-A o | WASHER ATTACHING TOOL (for 1.5) |
| | J-6082-232-A o | WASHER ATTACHING TOOL (for 1.2) |
| | J-6082-233-A o | WASHER ATTACHING TOOL (for 0.8) |
| | J-6082-234-A o | WASHER REMOVING TOOL A |
| | J-6082-236-A o | WASHER ATTACHING/DETACHING KIT |
| | J-6082-362-A o | TAPE GUIDE ADJUSTING SCREWDRIVER |
| | J-6082-373-A o | TORQUE CASSETTE |
| | J-6276-320-A o | EXTENSION BOARD, EX-622 |
| | J-6325-110-A o | TORQUE SCREWDRIVER BIT (for 1.4) |
| | J-6325-380-A o | TORQUE SCREWDRIVER BIT (for M2) |
| | J-6325-400-A o | TORQUE SCREWDRIVER (3 kg) |
| | J-6441-740-A o | EXTENSION BOARD, DJ-174 |
| | J-6442-350-A o | RF EXTENSION BOARD |
| | J-6442-410-A o | CASSETTE REFERENCE BOARD |
| | J-6442-420-A o | GUIDE GAUGE |
| | J-6442-430-A o | REEL TABLE HEIGHT CHECK GAUGE |
| | J-6442-510-A o | TORQUE GAUGE 90ATG |
| | J-6442-520-A o | REWINDING TORQUE MEASURING ATTACHMENT |
| | 3-184-527-01 o | CLEANING CLOTH |
| | 7-432-114-11 o | THREE BOND 1401B |
| | 7-651-000-10 o | GREASE SGL-601 (50g) |
| | 8-967-999-02 o | ALIGNMENT TAPE, XH2-1AST |
| | 8-967-999-21 o | ALIGNMENT TAPE, XH5-1A (for NTSC) |
| | 8-967-999-25 o | ALIGNMENT TAPE, XH5-1AP (for PAL) |
| | 9-910-573-01 o | CLEANING LIQUID |

Section 2

Semiconductor Pin Assignments

The following describes the semiconductor types used in this unit.

For semiconductors marked with page numbers in the index, refer to the corresponding pages in this section. However, in some cases incompatible types are also listed, therefore, when a part is to be replaced, also refer to the Spare Parts section.

In addition, for semiconductors with ID Nos., refer to the separate CD-ROM titled "Semiconductor Pin Assignments" (Sony Part No. 9-968-546-xx) that allows searching for parts by semiconductor type or ID No.

The semiconductors in the manual or on the CD-ROM are listed by equivalent types. Thus the external view or the index mark indication may differ from the actual type. Pin assignments and block diagrams are based on the IC manufacturer's data book.

本機に使用されている半導体型名の一覧を下記に示します。索引中、ページが記載されている半導体は、本章の該当ページを参照してください。ただし、互換性のない型名を併記している場合がありますので、部品を交換するときは、Spare Partsの章を参照してください。

また、ID番号が記載されている半導体は、別途発行の "Semiconductor Pin Assignments" CD-ROM版 (ソニー部品番号: 9-968-546-xx) を参照してください。半導体型名またはID番号から検索ができます。

マニュアルまたはCD-ROMに掲載されている半導体は、それぞれの機能を等価的に表わしたものです。外観やインデックスマークの表示方法が実物と異なる場合があります。

ピン配置およびブロック図はICメーカーのデータブックに従いました。

| DIODE | Page or ID No. | DIODE | Page or ID No. |
|-----------------------|----------------|------------------------|----------------|
| 1SS123-T1 | DC001-01 | MA132WK-TX | DC001-03 |
| 1SS184 | DC001-03 | MA133 | DC001-01 |
| 1SS226 | DC001-01 | MA133-TX | DC001-01 |
| 1SS300-TE85L | DC001-02 | MA141WK | DC001-03 |
| 1SS301-TE85L | DC001-03 | MA3J142E0LSO | DC001-03 |
| 1SS302 | DC001-01 | MA3J14300LSO | DC001-01 |
| 1SS302-TE85L | DC001-01 | MA795-TX | DC001-06 |
| 1SS351-TB | DC001-01 | | |
| 1SS355TE-17 | DC008-02 | RB051L-40 | DC007-01 |
| 1SS376TE-17 | DC008-02 | RB051L-40TE25 | DC007-01 |
| | | RB411D | DC001-06 |
| DAN202U | DC001-03 | RB411D(RECTI) | DC001-06 |
| DAN202UT106 | DC001-03 | RB411D-T146 | DC001-06 |
| DAN222 | DC001-03 | RD11M-B1 | DC001-04 |
| DAN222-TL | DC001-03 | RD11M-T1B1 | DC001-04 |
| DAP202U | DC001-02 | RD2.0UH-T1 | DC008-04 |
| DAP202UT106 | DC001-02 | RD2.4M-B | DC001-04 |
| DAP222 | DC001-02 | RD2.4M-T1B | DC001-04 |
| DAP222-TL | DC001-02 | RD4.3UH-T1 | DC008-04 |
| | | RD4.7UH-T1 | DC008-04 |
| EA60QC06-F | DC002-03 | RD5.6M-B1 | DC001-04 |
| EA60QC06-TE16F2 | DC002-03 | RD5.6M-B2 | DC001-04 |
| ERC04-06SU2 | DA004-01 | RD5.6M-T1B | DC001-04 |
| | | RD5.6M-T1B1 | DC001-04 |
| HSM88WK | DC001-03 | RD6.8M-T1B | DC001-04 |
| HSM88WK-TL | DC001-03 | RD6.8M-T1B(5MA) | DC001-04 |
| | | RD8.2M-B1 | DC001-05 |
| KV1470 | DC001-13 | RD8.2M-T1B1 | DC001-05 |
| KV1470(5MA) | DC001-13 | RD9.1UM-T1B2 | DC008-04 |
| KV1470TL00 | DC001-13 | | |
| | | SB007-03CP | DC001-06 |
| MA121 | DC005-01 | SB007-03CP-TB | DC001-06 |
| MA121-TW | DC005-01 | SB01-05CP | DC001-06 |
| MA132WA | DC001-02 | SB01-05CP(RECTI) | DC001-06 |
| MA132WA-TX | DC001-02 | SB01-05CP-TB | DC001-06 |
| MA132WK | DC001-03 | SB05-05CP(RECTI) | DC001-06 |

Index

DIODE

Page or ID No.

| | |
|----------------------|----------|
| SB05-05CP-TB | DC001-06 |
| SB05W05C | DC001-03 |
| SB05W05C-TB | DC001-03 |
| SB10-05PCP | DC002-04 |
| SB10-05PCP-TD | DC002-04 |
| U05G | DA004-01 |
| UDZS-TE17-5.6B | DC008-04 |
| UDZSTE-175.6B | DC008-04 |

LED

Page or ID No.

| | |
|---------------------|----------|
| CL-150G-CD | LC001-01 |
| CL-150G-CD-T | LC001-01 |
| CL-150SD-CD | LC001-01 |
| CL-150SD-CD-T | LC001-01 |
| CL-150Y-CD | LC001-01 |
| CL-150Y-CD-T | LC001-01 |
| EBR3368S | LR010-02 |
| GL3UR8 | LR002-01 |
| GL4600S | LA002-02 |

TRANSISTOR

Page or ID No.

| | |
|-------------------------|----------|
| 2SA1036K-R | TC001-01 |
| 2SA1036K-T-146-R | TC001-01 |
| 2SA1037AK-T146-QR | TC001-01 |
| 2SA1037AK-T146-R | TC001-01 |
| 2SA1213Y-TE12L | TC002-01 |
| 2SA1226-E4 | TC001-01 |
| 2SA1226-T1E3E4 | TC001-01 |
| 2SA1576A-T106-QR | TC001-01 |
| 2SA1576A-T106-R | TC001-01 |
| 2SA1610-T1Y34 | TC001-01 |
| 2SA1610-Y33 | TC001-01 |
| 2SA1611-M5M6 | TC001-01 |
| 2SA1611T1-M5M6 | TC001-01 |
| 2SB1115A | TC002-01 |
| 2SB1115A-YQ | TC002-01 |
| 2SB1132-T101-QR | TC002-01 |
| 2SB1203S-FA | TR031-02 |
| 2SB1203S-TL | TR031-02 |
| 2SB624-BV345 | TC001-01 |
| 2SB624-BV5 | TC001-01 |
| 2SB624-T1BV4 | TC001-01 |
| 2SB624-T1BV5 | TC001-01 |
| 2SB798 | TC002-01 |
| 2SB798-DL | TC002-01 |
| 2SC1009A-FA4 | TC001-02 |
| 2SC1009A-T1FA4 | TC001-02 |
| 2SC1623 | TC001-02 |

TRANSISTOR

Page or ID No.

| | |
|-------------------------|----------|
| 2SC2412K-T-146-QR | TC001-02 |
| 2SC2713-G | TC001-02 |
| 2SC2713G-TE85L | TC001-02 |
| 2SC2873Y-TE12L | TC002-02 |
| 2SC2873Y-TE12R | TC002-02 |
| 2SC4081T106R | TC001-02 |
| 2SC4176-B34 | TC001-02 |
| 2SC4176-T1B34 | TC001-02 |
| 2SC4177 | TC001-02 |
| 2SC4177-L6 | TC001-02 |
| 2SC4177-T1L5L6 | TC001-02 |
| 2SC4178 | TC001-02 |
| 2SC4178-F13 | TC001-02 |
| 2SC4178-T1F13 | TC001-02 |
| 2SC4207-YGRTE85L | TC008-11 |
| 2SC4213-AB-TE85L | TC001-02 |
| 2SC4213-B | TC001-02 |
| 2SC4213B-TE85L | TC001-02 |
| 2SD1623-S | TC002-02 |
| 2SD2216J-R(TX).SO | TC001-02 |
| 2SD596-DV5 | TC001-02 |
| 2SD596-T1DV4 | TC001-02 |
| 2SD596-T1DV5 | TC001-02 |
| 2SD596DV345 | TC001-02 |
| 2SJ187 | TC002-06 |
| 2SJ187-TD | TC002-06 |
| 2SK711-BL | TC001-05 |
| 2SK711-BL(TE85L) | TC001-05 |
| 2SK853-K5 | TC001-05 |
| 2SK853-T1K5 | TC001-05 |
| 2SK94-T1X2X3X4 | TC001-05 |
| 2SK94-X2X3X4 | TC001-05 |
| DTA114EUA | TC001-04 |
| DTA114EUA-T106 | TC001-04 |
| DTA144EUA-T106 | TC001-04 |
| DTC114EUA-T106 | TC001-03 |
| DTC144EKA | TC001-03 |
| DTC144EKA-T146 | TC001-03 |
| DTC144EUA-T106 | TC001-03 |
| FMY1A-T148 | TC008-01 |
| FP102T-TL | TC014-01 |
| IMB2 | TC005-07 |
| IMB2-T110 | TC005-07 |
| IMT1AT108 | TC006-10 |
| IMT1US | TC006-09 |
| IMT1US-T110 | TC006-09 |
| IMX1 | TC005-01 |
| IMX1T110 | TC005-01 |
| PT483F1 | TR037-01 |
| PT483F1S | TR037-01 |
| SI4410DY-T1-REVA | TC012-06 |
| SI4435DY-T1-REVA | TC012-04 |
| SI9435DY-T1 | TC012-04 |

DSR-390/390P/370/370P/300A/300AP V2

Index

| IC | Page or ID No. |
|--------------------------|--------------------|
| ICX038DLA-1 | ICX038DLA-1 |
| ICX039DLA-1 | ICX038DLA-1 |
| IDT71V256SA15PZ-TL | IDT71256L-35TP |
| LC75821W-DS | LC75821W |
| LM2901M | NJM2901N |
| LM35DM | LM35DM |
| LM35DMX | LM35DM |
| LM4040AIM3-2.5 | LM4040BIM3 |
| LT1253CS8(E2) | LT1253CS8 |
| LT1253CS8-E2 | LT1253CS8 |
| LT1254CS-E2 | LT1254CS |
| MAX202CSE | MAX202CSE |
| MAX202CSE-T | MAX202CSE |
| MB3793-30PNF-ER | MB3793-42PNF |
| MB88346BPFV | MB88346APF |
| MB88346BPFV-EF | MB88346APF |
| MB88347LPFV-ER | MB88347PFV-G-BND |
| MBM29F800BA-90PF | MBM29F800BA-90PFTN |
| MC14051BF | MC74HC4051N |
| MCD005AM-TLM | MCD005AM |
| MM74HC00MTCX | TC74HC00P |
| MM74HCT244SJX | TC74HC244P |
| NJM062M | RC4558 |
| NJM062M-TE2 | RC4558 |
| NJM062V(TE2) | RC4558 |
| NJM062V-TE2 | RC4558 |
| NJM1496V(TE2) | MC1496P |
| NJM1496V-TE2 | MC1496P |
| NJM2041M-D | RC4558 |
| NJM2041M-D(TE2) | RC4558 |
| NJM2060V(TE2) | XRA10324AF |
| NJM2249V(TE2) | NJM2249V |
| NJM2534V(TE2) | NJM2234M |
| NJM2901M-TE2 | NJM2901N |
| NJM2901V(TE2) | NJM2901N |
| NJM2903M | UA393DC |
| NJM2903M-TE2 | UA393DC |
| NJM2903V(TE2) | UA393DC |
| NJM2904M | RC4558 |
| NJM2904M(TE2) | RC4558 |
| NJM324V(TE2) | XRA10324AF |
| NJM3403AM | XRA10324AF |
| NJM3403AM(TE2) | XRA10324AF |
| NJM386M(TE2) | NJM386D-E |
| NJM4558V(TE2) | RC4558 |
| NJM4558V-TE2 | RC4558 |
| NJM4560M | RC4558 |
| NJM4560M-D(TE2) | RC4558 |
| NJM4560M-TE2 | RC4558 |
| NJM4560MD-TE2 | RC4558 |
| NJM4580E(TE2) | RC4558 |
| NJM4580V(TE2) | RC4558 |
| NJM4580V-TE2 | RC4558 |
| NJM4580VTE2 | RC4558 |

| IC | Page or ID No. |
|--------------------------|----------------|
| REF-03GSR | REF-03GS |
| RH5RL33AA-T1 | NJU7201U50 |
| RH5RL50AA-T1 | NJU7201U50 |
| S-80741AL-A5-S | S-8051ANB |
| S-80741AL-A5-T1 | S-8051ANB |
| S-80745AN-D9-S | S-8054HN-CB |
| S-80750AN-JE-T1 | S-8054HN-CB |
| S-80840ANUP-ED4-T2 | S-8054HN-CB |
| S-81230SGUP-DQB-T1 | S-81225AG-RH |
| SC7S32F | TC7S32F |
| SM5872AS-ET | SM5872AS-ET |
| SN74HC00APW-E20 | TC74HC00P |
| SN74HC00APWR | TC74HC00P |
| SN74HC04APW-E20 | TC74HC04P |
| SN74HC04APWR | TC74HC04P |
| SN74HC08APW-E05 | TC74HC08P |
| SN74HC08APW-E20 | TC74HC08P |
| SN74HC08APWR | TC74HC08P |
| SN74HC158APW-E05 | TC74HC158P |
| SN74HC164APWR | TC74HC164P |
| SN74HC165ANSR | TC74HC165P |
| SN74HC165APW-E20 | TC74HC165P |
| SN74HC165APWR | TC74HC165P |
| SN74HC175APW-E20 | TC74HC175P |
| SN74HC193ANS | TC74HC193P |
| SN74HC193ANSR | TC74HC193P |
| SN74HC244APW-E05 | TC74HC244P |
| SN74HC244APWR | TC74HC244P |
| SN74HC32APW-E05 | TC74HC32P |
| SN74HC32APW-E20 | TC74HC32P |
| SN74HC32APWR | TC74HC32P |
| SN74HC595ADBR | TC74HC595P |
| SN74HC74APW-E05 | TC74HC74P |
| SN74HC74APW-E20 | TC74HC74P |
| SN74HC74APWR | TC74HC74P |
| SN74HCT08APW-E20 | TC74HC08P |
| SN74HCT08APWR | TC74HC08P |
| SN74HCT244ANS | TC74HC244P |
| SN74HCT244ANSR | TC74HC244P |
| SN74HCT244APW-E05 | TC74HC244P |
| SN74HCT244APWR | TC74HC244P |
| SN74HCT541APW(R) | MC74HC541N |
| SN74HCT541APWR | MC74HC541N |
| SN74LS123NS | SN74123N |
| SN74LS123NSR | SN74123N |
| SN74LV245APWR | TC74HC245P |
| STK12C68-S45 | STK12C68-S45 |
| TC4051BFT(EL,N) | MC74HC4051N |
| TC4052BFT(EL,N) | MC74HC4052N |
| TC4053BFT(EL,N) | MC74HC4053F |
| TC4066AE | CD4066AE |
| TC4S69F | TC7S04F |
| TC4S69F(TE85R) | TC7S04F |
| TC4W53F | TC4W53FU |
| TC4W53F(TE12R) | TC4W53FU |
| TC4W53FU | TC4W53FU |

| IC | Page or ID No. | IC | Page or ID No. |
|-------------------------|----------------|-----------------------------------|-----------------|
| TC4W53FU(TE12R) | TC4W53FU | TL062CPW | RC4558 |
| TC4W66FU(TE12R) | TC4W66F | TL062CPW-E05 | RC4558 |
| TC74AC04FT(EL) | TC74HC04P | TL062CPWR-12 | RC4558 |
| TC74HC165AF(EL) | TC74HC165P | TL064CPW | XRA10324AF |
| TC74HC4052AFT(EL) | MC74HC4052N | TL064CPW-E05 | XRA10324AF |
| TC74HC4053AFT(EL) | MC74HC4053F | TL064CPWR | XRA10324AF |
| TC74HC4538AFT(EL) | MC74HC4538N | TL074CPW | XRA10324AF |
| TC74VHC00FT(EL) | TC74HC00P | TL074CPW-E05 | XRA10324AF |
| TC74VHC04FT(EL) | TC74HC04P | TL074CPWR-12 | XRA10324AF |
| TC74VHC08FS(EL) | TC74HC08P | TL1451ACPWR-12 | TL1451CNS |
| TC74VHC08FT(EL) | TC74HC08P | TL32088CNS-E20 | TL32088CNS |
| TC74VHC125FT(EL) | MC74HC125N | TL32088CNSR | TL32088CNS |
| TC74VHC157FT(EL) | TC74HC157P | TL5001CD | TL5001 |
| TC74VHC244FT(EL) | TC74HC244P | TL5001CDR | TL5001 |
| TC74VHC32FT(EL) | TC74HC32P | TLC272CPWR | RC4558 |
| TC74VHC374FT(EL) | TC74HC374P | TLC272CPWR-12 | RC4558 |
| TC74VHC541FT(EL) | MC74HC541N | TLC320AD58CDWR | TLC320AD58CDWR |
| TC74VHC574FT(EL) | TC74HC574P | TSB11LV01PT-TEB | TSB11LV01PT-TEB |
| TC74VHC74FT(EL) | TC74HC74P | | |
| TC7S00FU(TE85R) | TC7S00F | UPC1093T | UPC1093T |
| TC7S00FU-TE85R | TC7S00F | UPC1093T-E1 | UPC1093T |
| TC7S02FU(TE85R) | TC4S01F | UPC311G2 | UPC311C |
| TC7S04FU(TE85R) | TC7S04F | UPC311G2-E2 | UPC311C |
| TC7S04FU-TE85R | TC7S04F | UPC324G2 | XRA10324AF |
| TC7S08FU(TE85R) | TC7S08F | UPC324G2-E2 | XRA10324AF |
| TC7S08FU-TE85R | TC7S08F | UPC358G2-E2 | RC4558 |
| TC7S14FU(TE85R) | TC7S14FU | UPC4572G2 | RC4558 |
| TC7S32F(TE85R) | TC7S32F | UPC4572G2-E2 | RC4558 |
| TC7S32FU(TE85R) | TC7S32F | UPC812G2 | RC4558 |
| TC7S32FU-TE85R | TC7S32F | UPC812G2-E2 | RC4558 |
| TC7S66FU | SC14S66F | UPD482445LG4-B10-9MH-E2-HDC | UPD482445G5-60 |
| TC7S66FU(TE85R) | SC14S66F | UPD6453GT-658-E2 | UPD6453GT |
| TC7S86FU | TC7S86FU | UPD78064GF-146-3BA | UPD78064GF-3BA |
| TC7S86FU(TE85R) | TC7S86FU | | |
| TC7SET08FU(TE85R) | TC7S08F | X20C05J-55 | X20C05J-55 |
| TC7SH00FU-TE85R | TC7S00F | X24645S8I-2.7T2 | X24645S8C7000 |
| TC7SH04FU | TC7S04F | X24645S8T2 | X24645S8C7000 |
| TC7SH04FU-TE85R | TC7S04F | X24C08SC7000 | 2-6 |
| TC7SH08FU(TE85R) | TC7S08F | | |
| TC7SH08FU-TE85R | TC7S08F | ZA4024 | ZA4024 |
| TC7SH32FU(TE85R) | TC7S32F | | |
| TC7SH32FU-TE85R | TC7S32F | | |
| TC7SH86FU(TE85R) | TC7S86FU | | |
| TC7SH86FU-TE85R | TC7S86FU | | |
| TC7W00FU | TC7W00F | | |
| TC7W00FU(TE12R) | TC7W00F | | |
| TC7W04FU | TC7W04F | | |
| TC7W04FU(TE12R) | TC7W04F | | |
| TC7W08FU | TC7W08F | | |
| TC7W08FU(TE12R) | TC7W08F | | |
| TC7W14FU(TE12R) | TC7W14FU | | |
| TC7W32FU | TC7W32FU | | |
| TC7W32FU(TE12R) | TC7W32FU | | |
| TC7W53FU(TE12R) | TC4W53FU | | |
| TC7WH04FU(TE12R) | TC7W04F | | |
| TC7WH157FU(TE12R) | 2-6 | | |
| TC7WH74FU(TE12R) | TC7W74FU | | |
| TC7WH74FU(TR12R) | TC7W74FU | | |
| TK16074MTL | TK16074MTL | | |

OTHER

Page or ID No.

| | |
|-------------------------|----------|
| GP2S07B | MA013-01 |
| M-30 | MA007-02 |
| NJL5183KA-F20-TE1 | MA014-03 |


TRANSISTOR, IC

TRANSISTOR

—TOP VIEW—




UMC3NTR (R1=10K,R2=10K R3=10K,R4=10K)
UMC3TL (R1=47K,R2=47K,R3=4.7K,R4=10K)



IC

CAT24WC02JI-TE13 (CATALYST)
CAT24WC02J-TE13 (CATALYST)
CAT24WC08J-TE13 (CATALYST)
X24C08SC7000 (XICOR)

SERIAL EEPROM
—TOP VIEW—

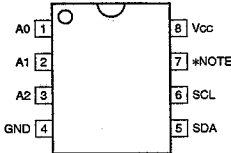

INPUTS
A0 - A2 : ADDRESS
SCL : SERIAL CLOCK
WC : WRITE CONTROL
WP : WRITE PROTECT

INPUT/OUTPUT
SDA : SERIAL DATA


OTHERS
NC : NO CONNECTION
TEST : TEST PIN

*NOTE:

| TYPE | MEMORY | PIN 7 |
|-----------|--------|-------|
| BR24C02F | 2 K | TEST |
| X24C02 | 2 K | WC |
| S-24C02 | 2 K | WP |
| CAT24WC02 | 2 K | WP |
| X24C04 | 4 K | TEST |
| X24C08 | 8 K | TEST |
| CAT24WC08 | 8 K | WP |
| CAT24WC16 | 16 K | WP |
| BR24E16FV | 16 K | NC |
| NM24C16 | 16 K | WP |
| CAT24WC64 | 64 K | WP |
| 24LC128T | 128 K | WP |

TC7WH157FU(TE12R) (TOSHIBA)

2-CHANNEL MULTIPLEXER
—TOP VIEW—

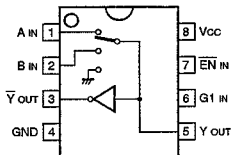

| INPUTS | | | | OUTPUTS | |
|--------|----|---|---|---------|---|
| EN | G1 | A | B | Y | Y |
| 1 | x | x | x | 0 | 1 |
| 0 | 0 | 0 | x | 0 | 1 |
| 0 | 0 | 1 | x | 1 | 0 |
| 0 | 1 | x | 0 | 0 | 1 |
| 0 | 1 | x | 1 | 1 | 0 |


0 : LOW LEVEL
1 : HIGH LEVEL
x : DONT CARE

Section 3 Block Diagrams


Index

| System/Board | Page | Remarks |
|----------------|------|-----------------------|
| Audio | 3-16 | |
| Camera Overall | 3-2 | |
| Servo | 3-21 | |
| System Control | 3-18 | |
| VTR Overall | 3-4 | |
| AA-104 | 3-17 | |
| AT-142 | 3-15 | DSR-300A/300AP |
| AT-150 | 3-14 | DSR-390/390P/370/370P |
| CC-68 | 3-21 | |
| CN-1867 | 3-17 | |
| CN-2277/1519 | 3-13 | |
| CP-373/315 | 3-8 | |
| DPR-141C/141A | 3-8 | |
| DU-36 | 3-23 | |
| DV-21C/21A | 3-24 | |
| ES-31 | 3-8 | |
| FP-118A/122 | 3-16 | |
| FP-99 | 3-19 | |
| HN-227 | 3-21 | |
| KY-405 | 3-18 | |
| LE-221 | 3-17 | |
| MB-833 | 3-23 | |
| MT-114 | 3-21 | |
| RP-91 | 3-20 | |
| SE-295 | 3-21 | |
| SE-297 | 3-21 | |
| SE-566 | 3-14 | |
| SV-213 | 3-21 | |
| SW-19 | 3-16 | |
| SW-929 | 3-19 | |
| VA-199 | 3-6 | |

Camera Overall Camera Overall

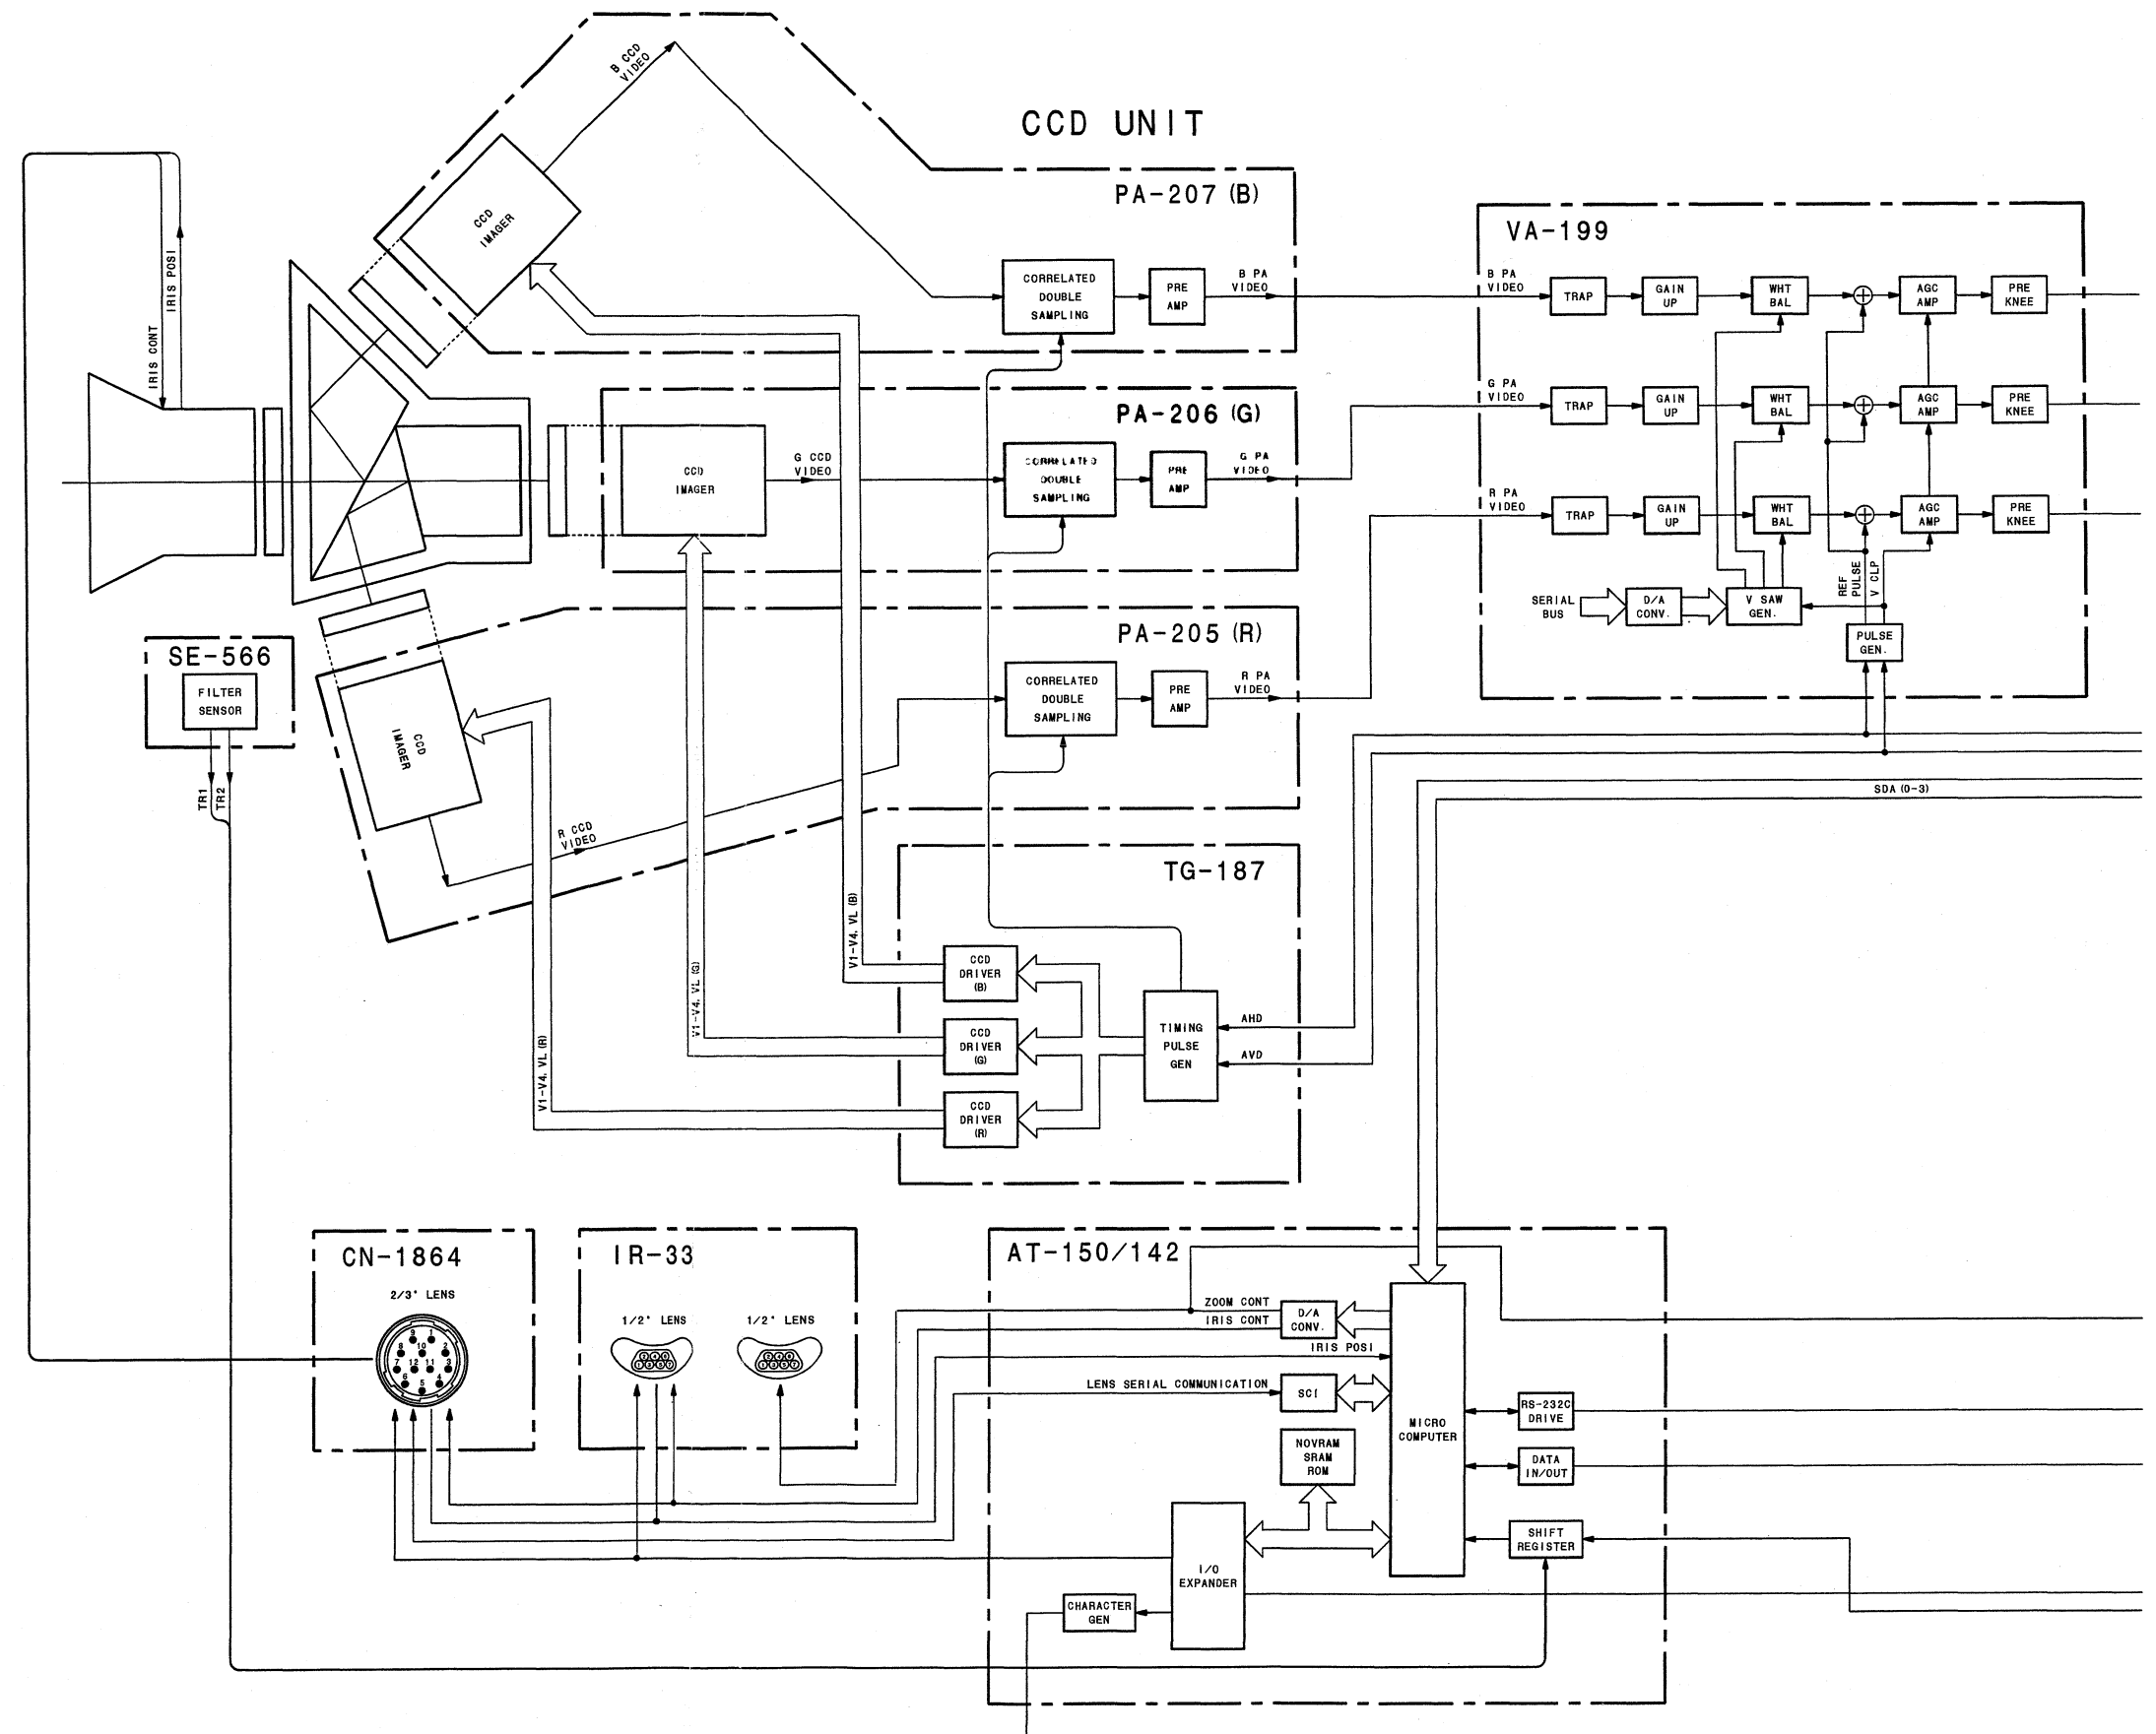


VTR Overall (1/2) VTR Overall (1/2)

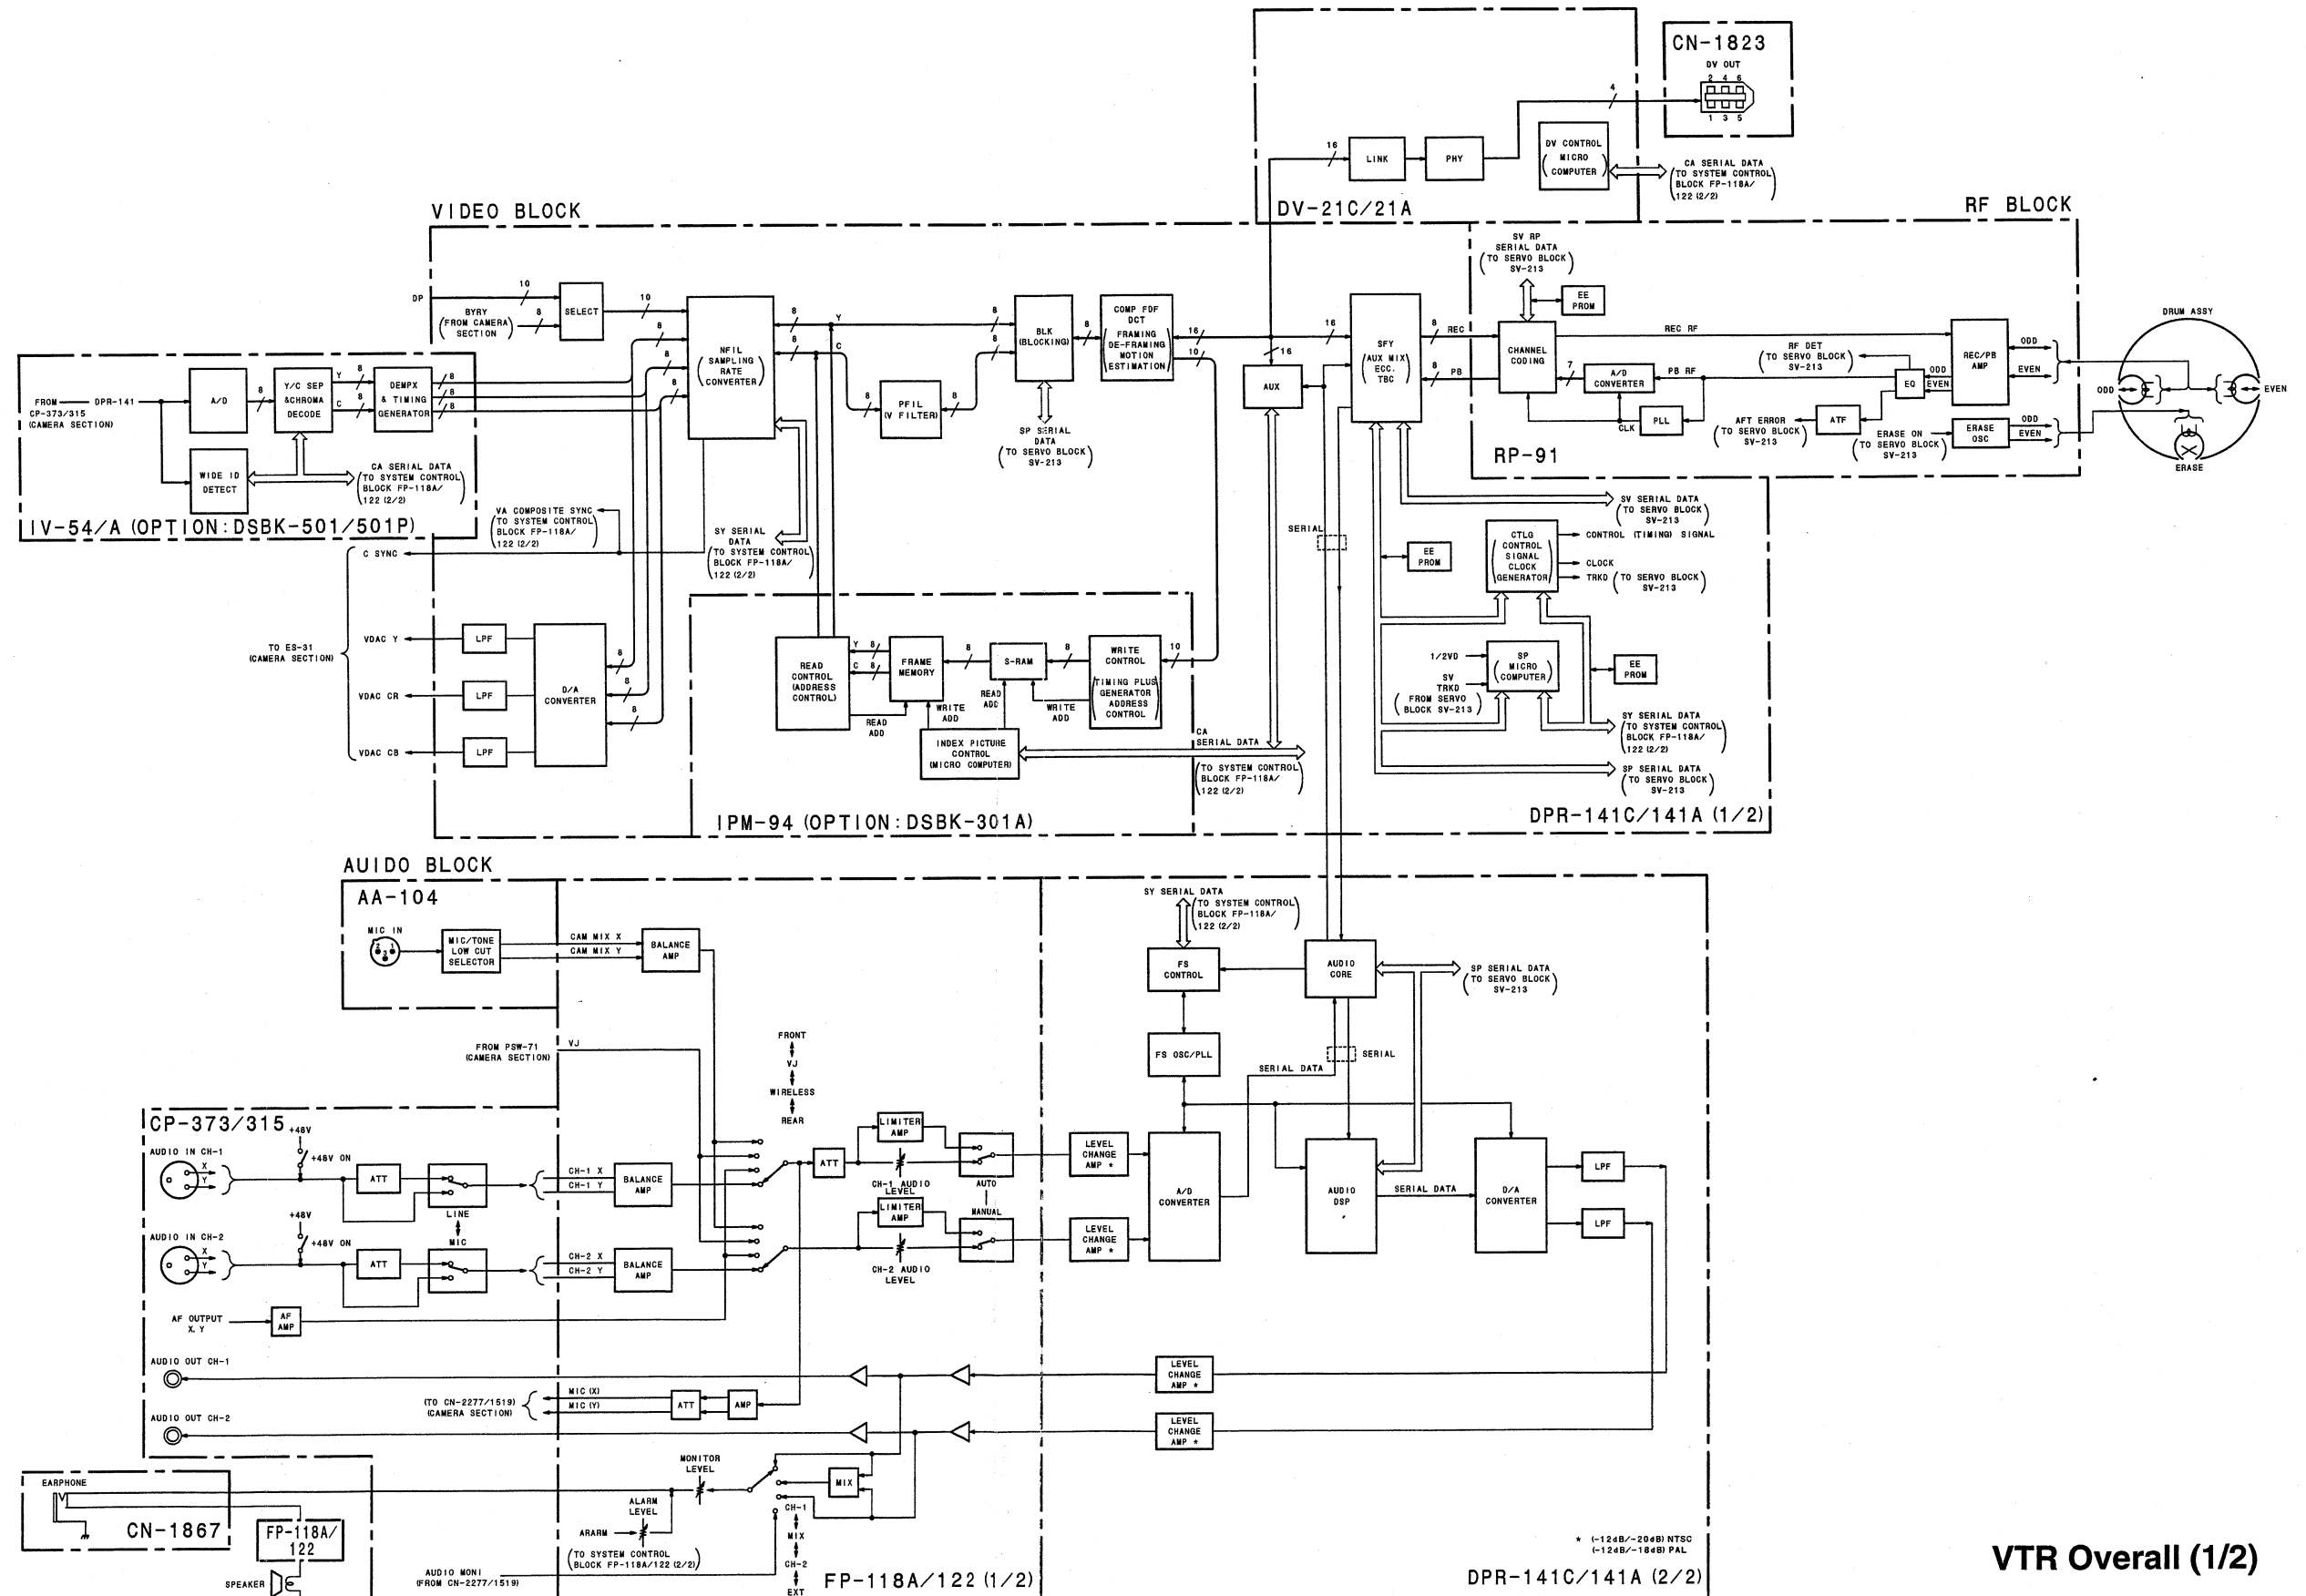



VTR Overall (1/2)


SERVO BLOCK

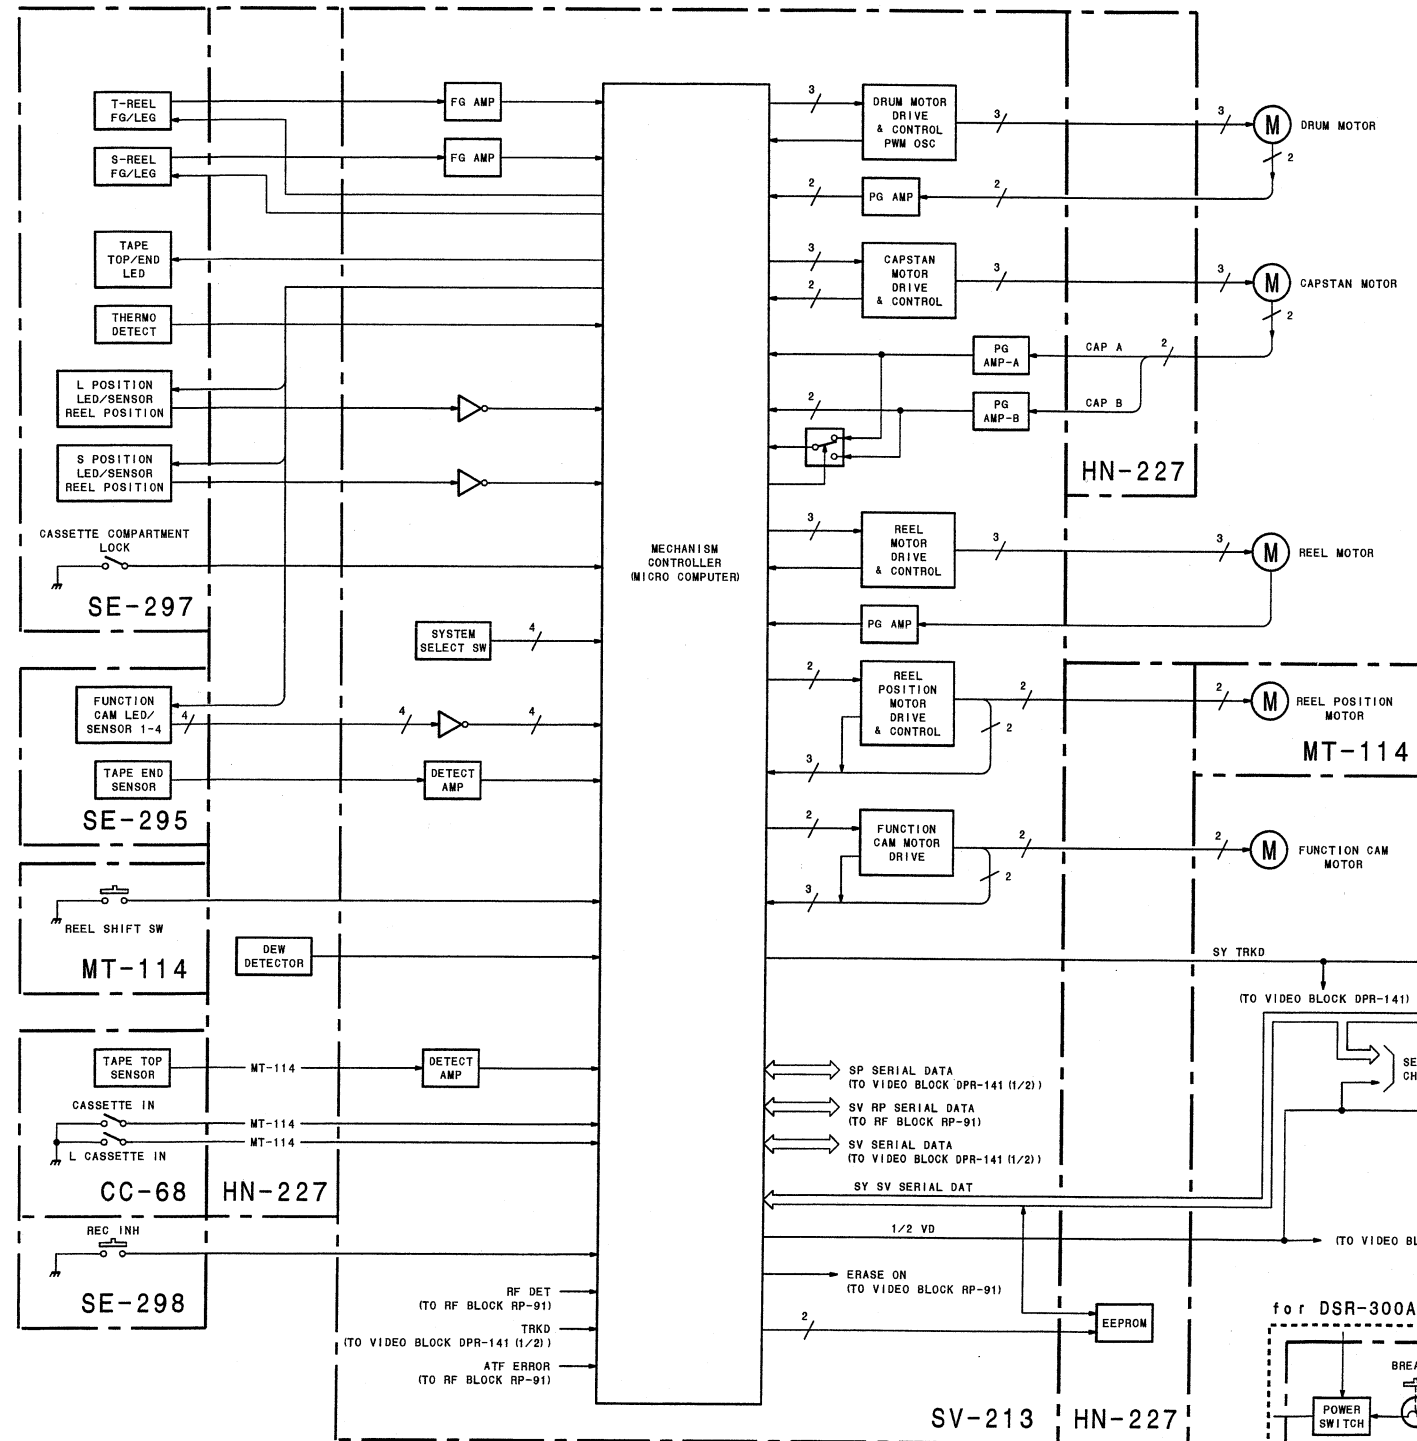


SYSTEM CONTROL & POWER BLOCK

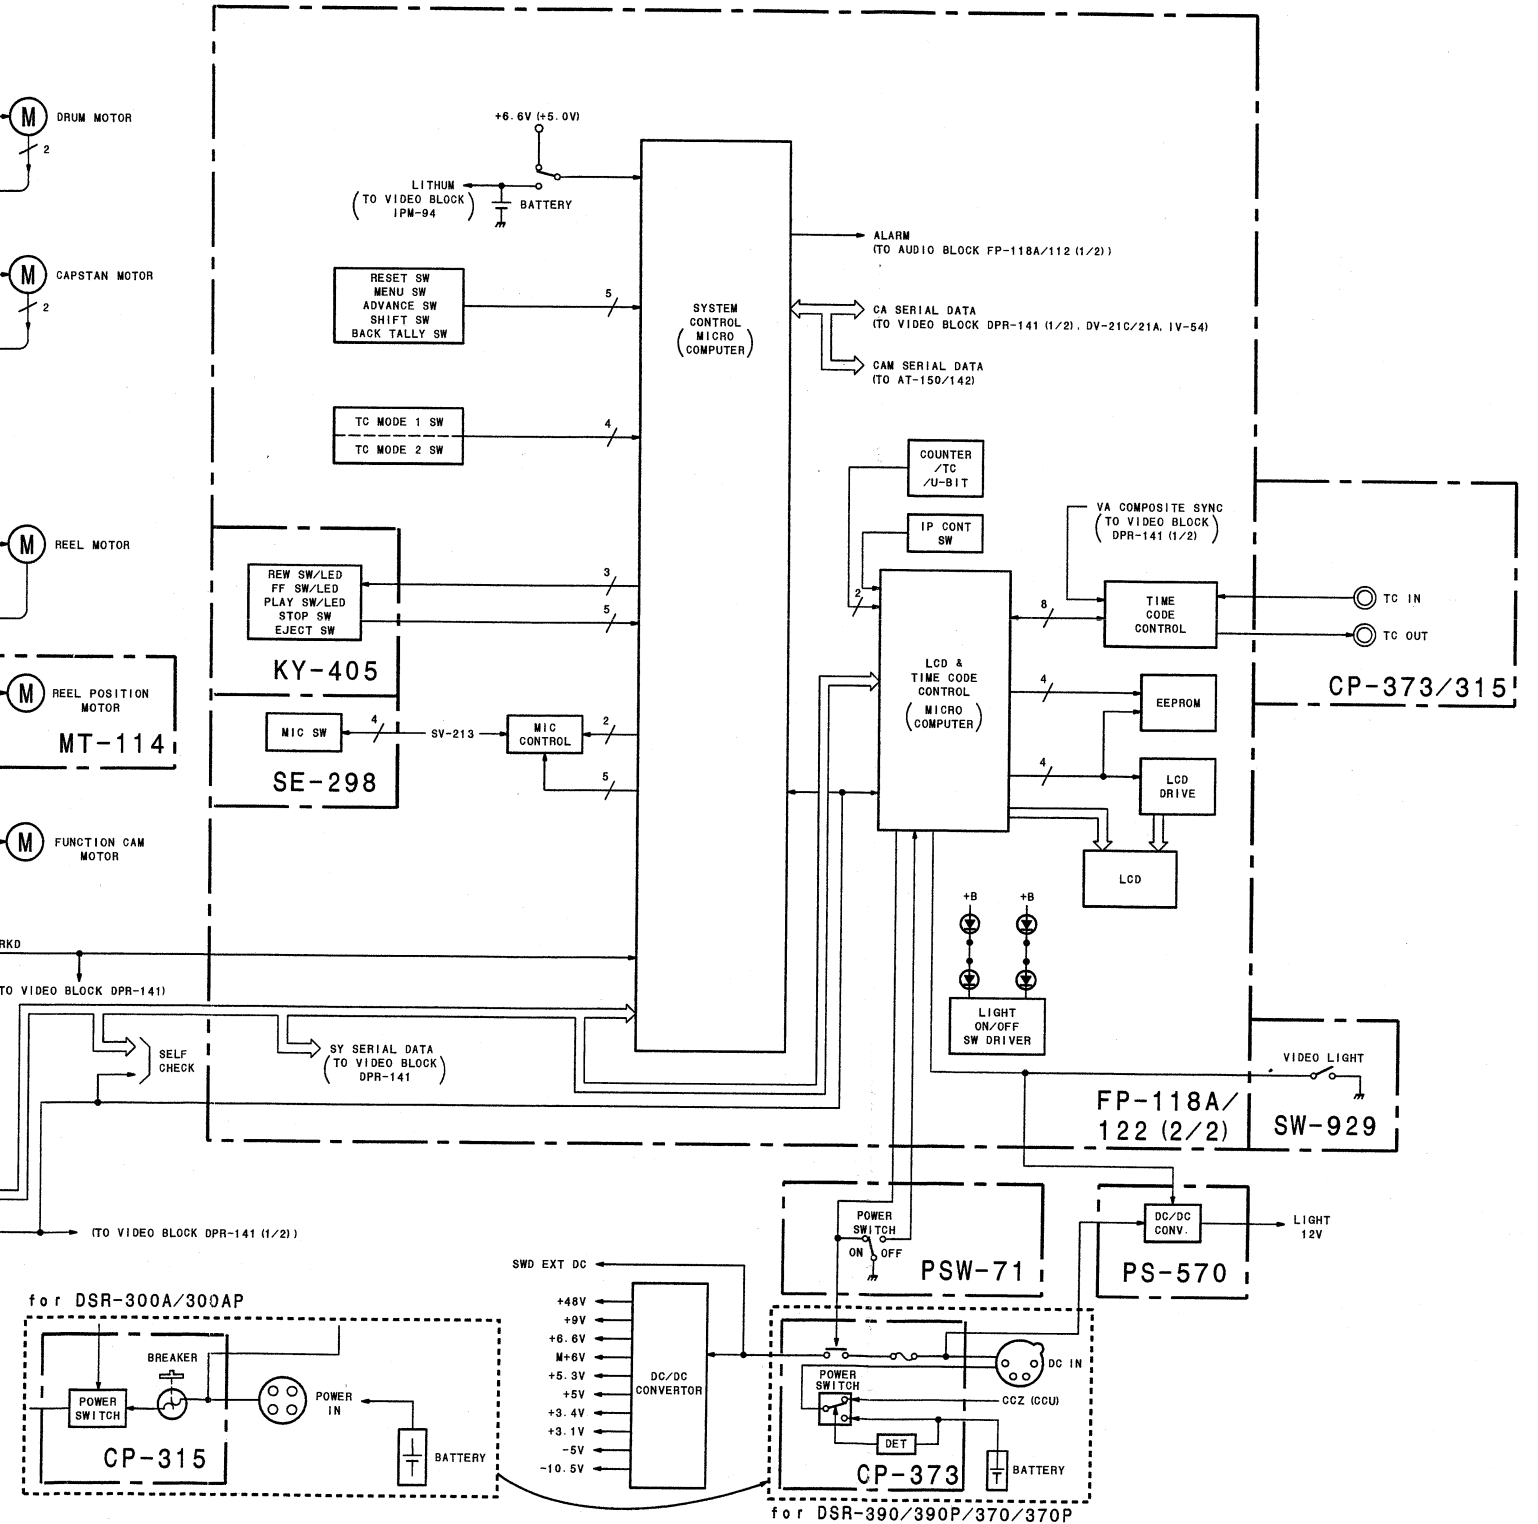

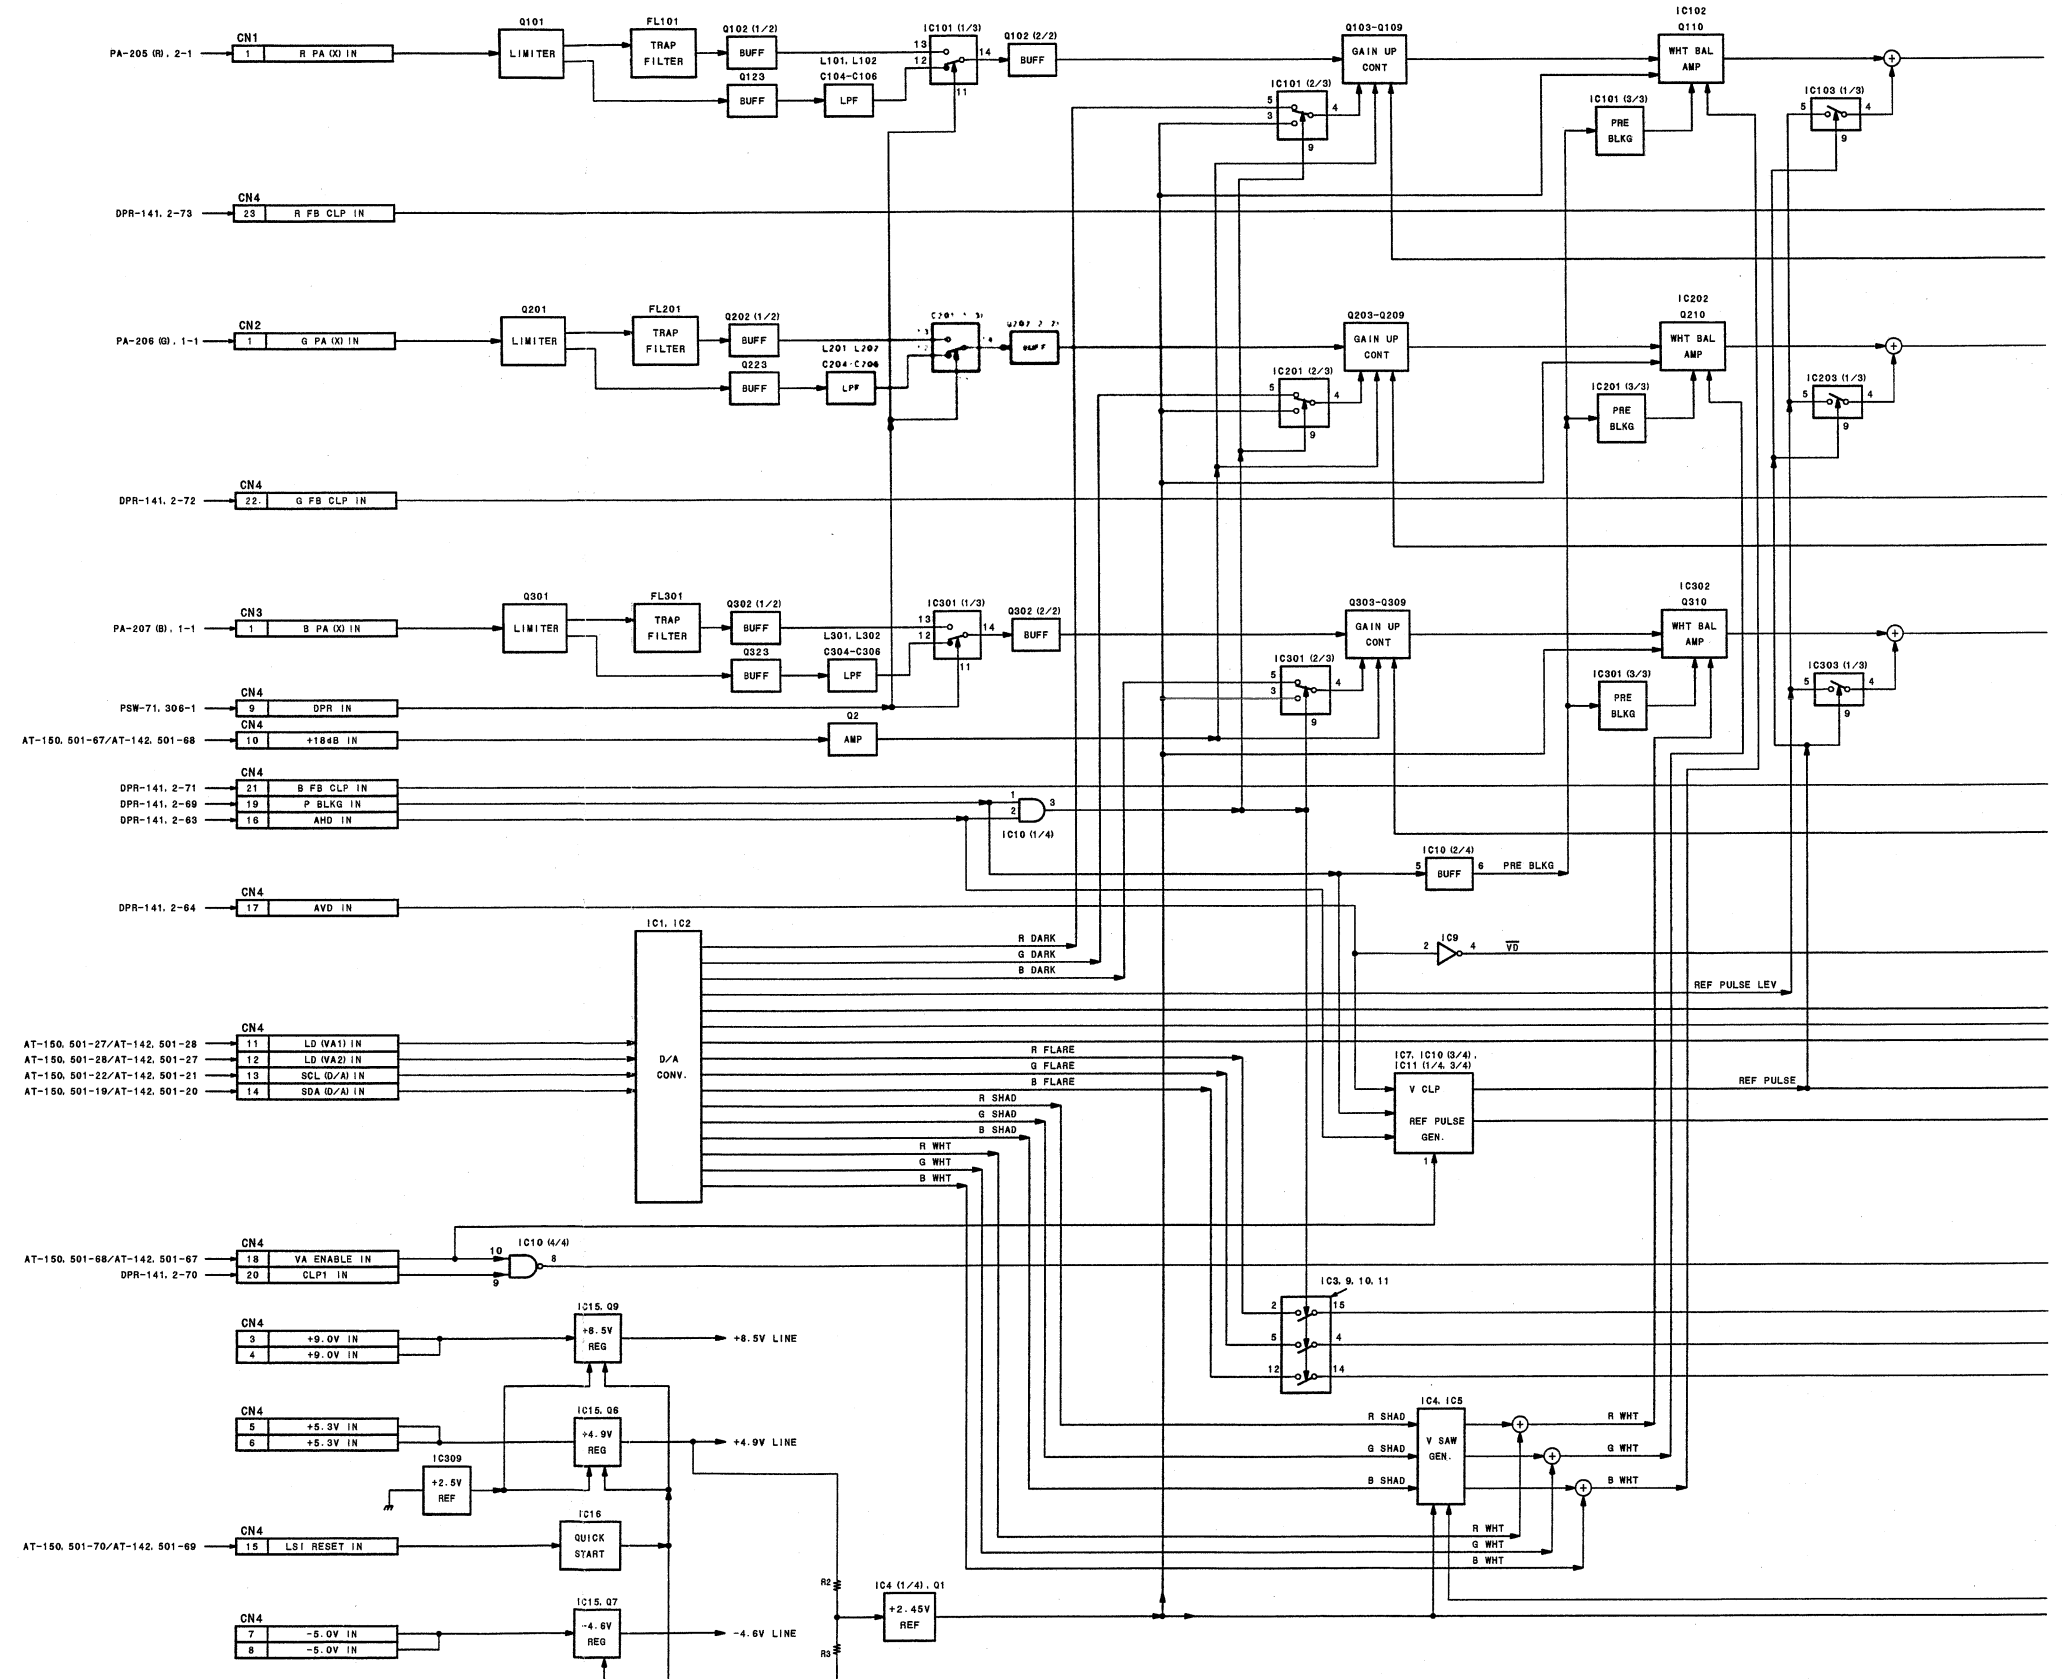

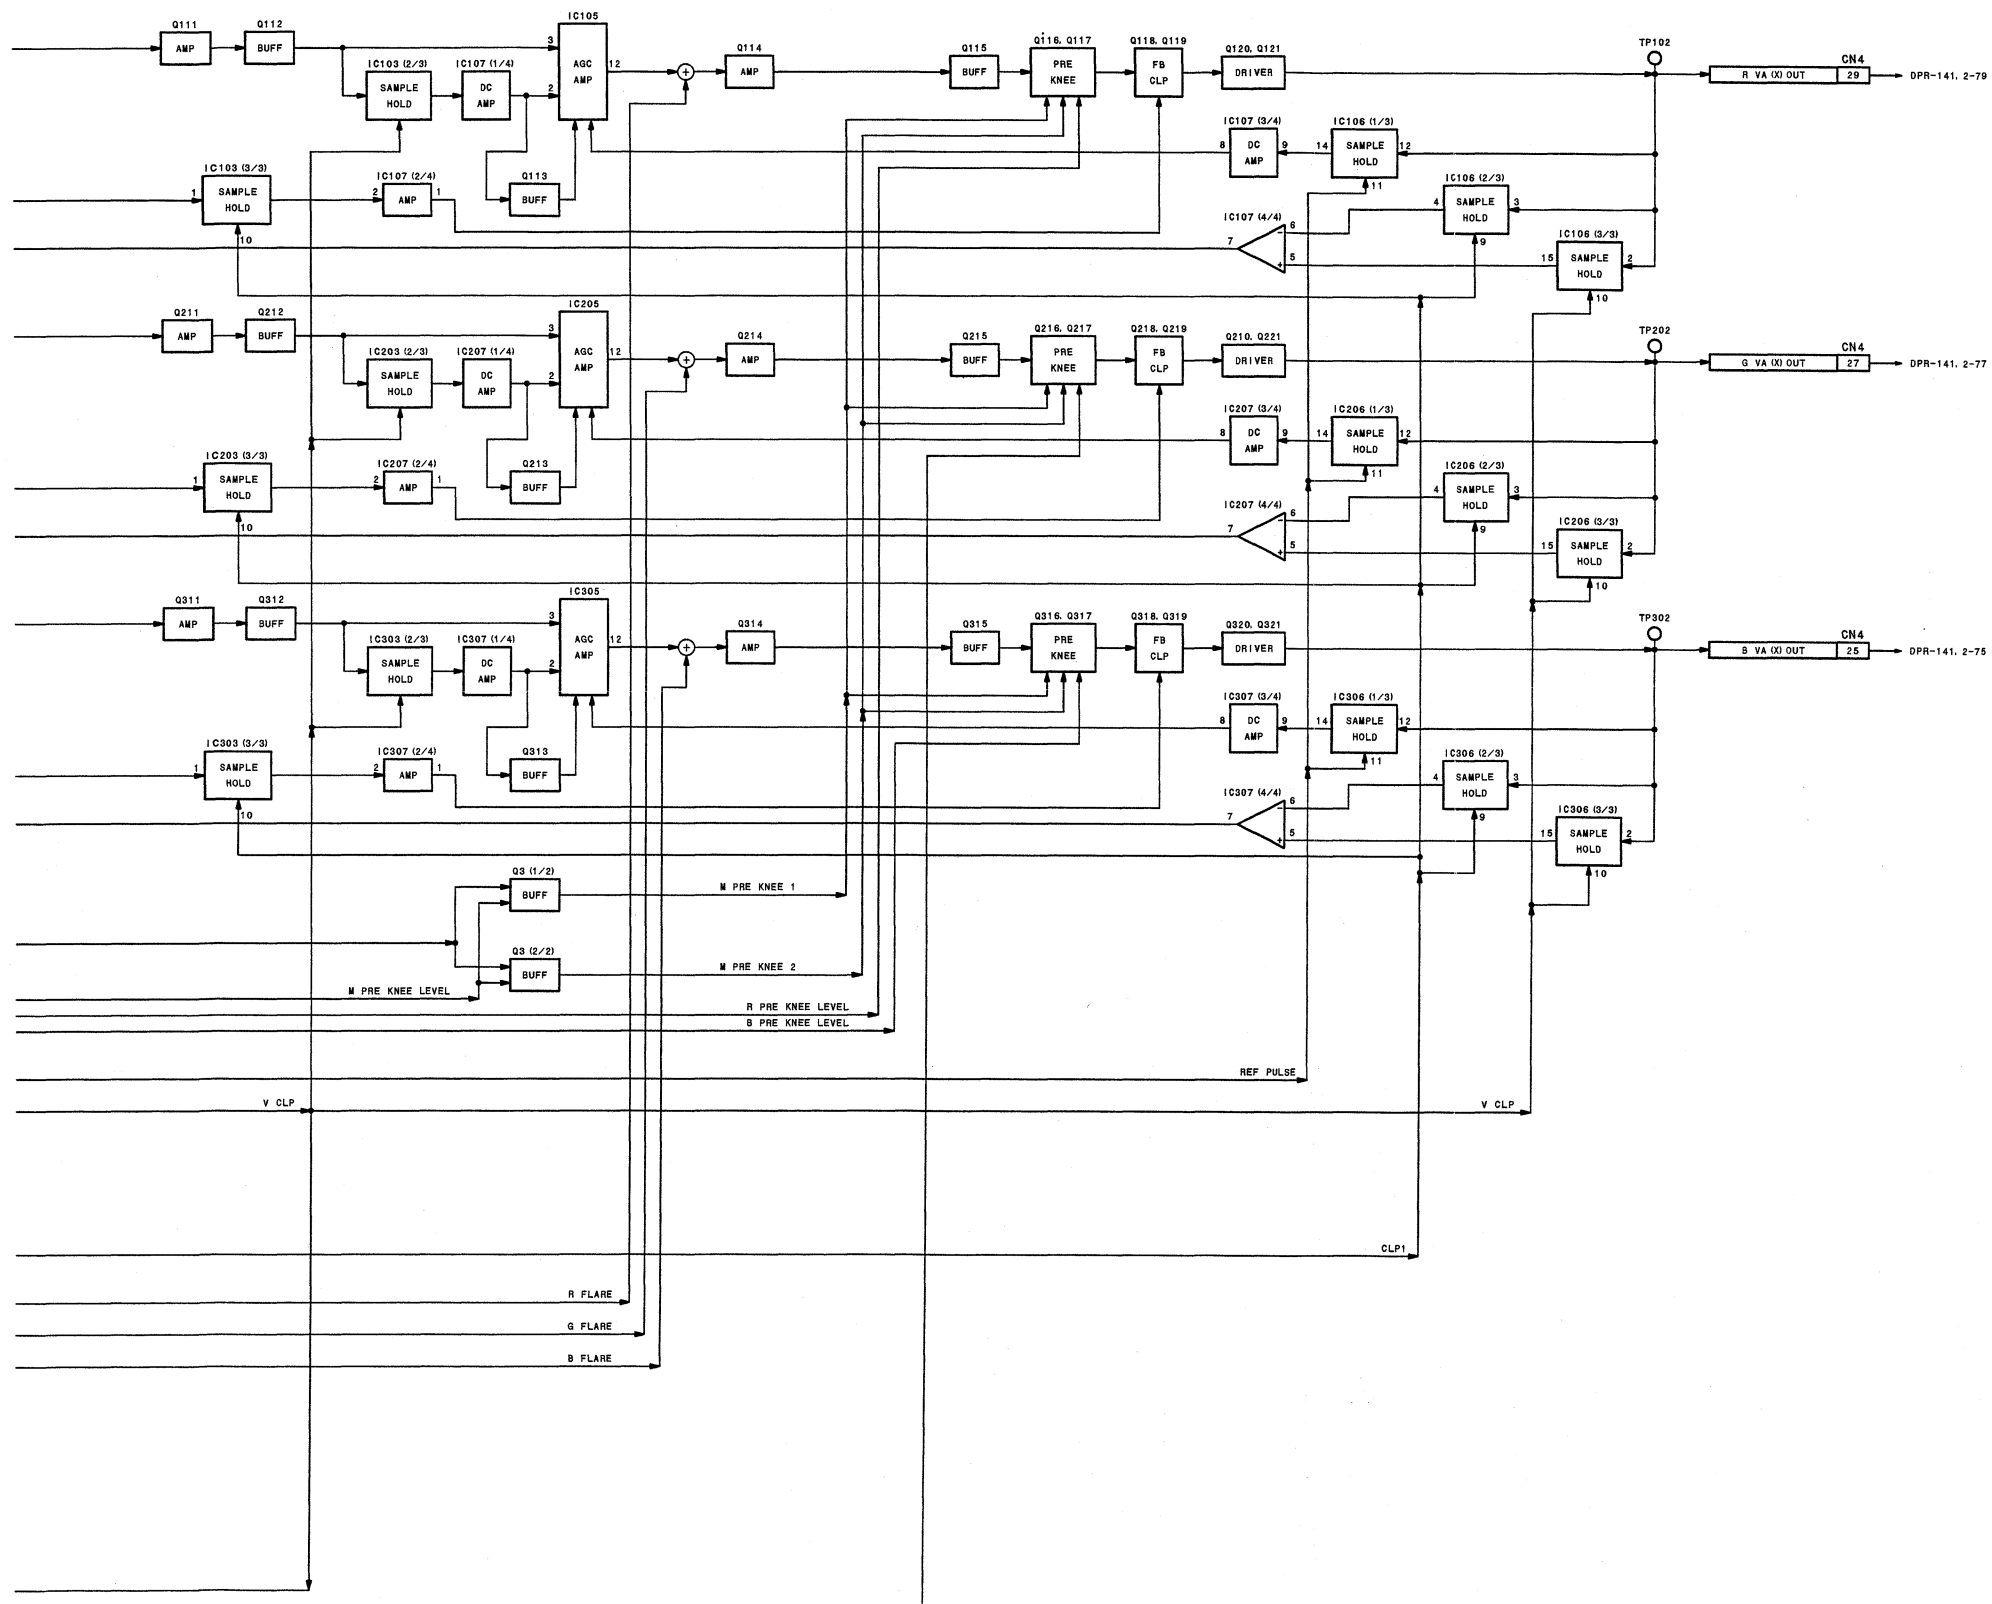




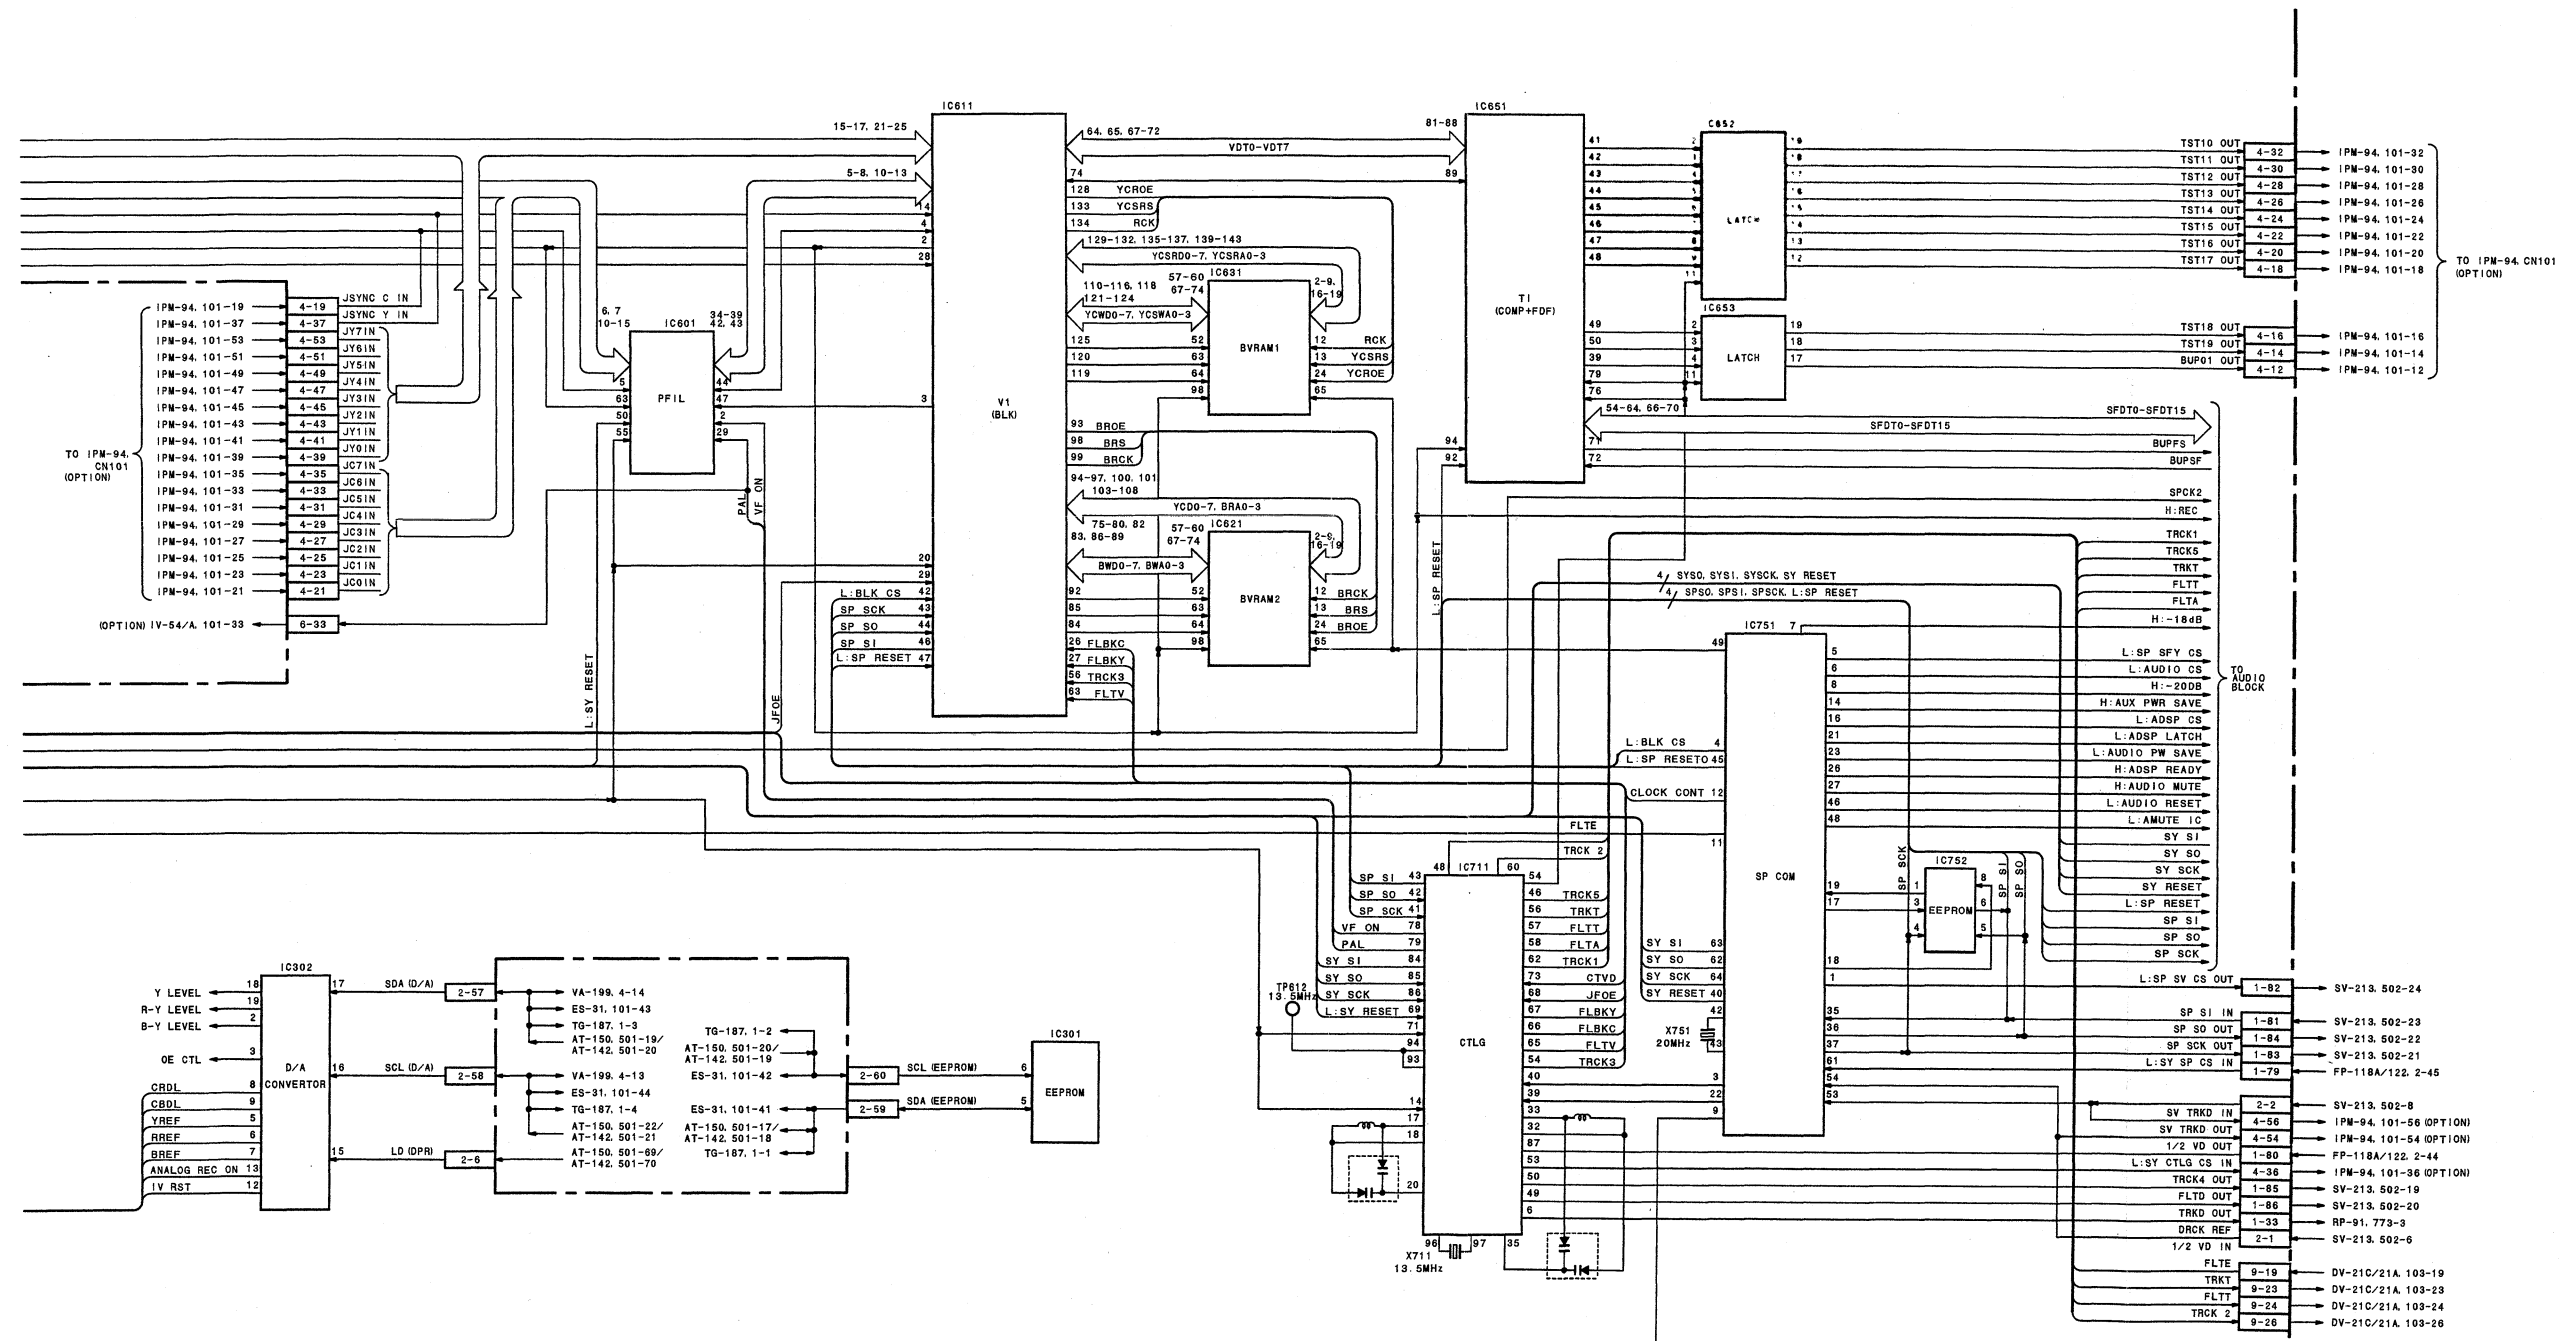


DPR-141C/141A (1/3)
CP-373/315 (1/7)
ES-31 (1/3)

DPR-141C/141A (2/3)




DPR-141C/141A (3/3)




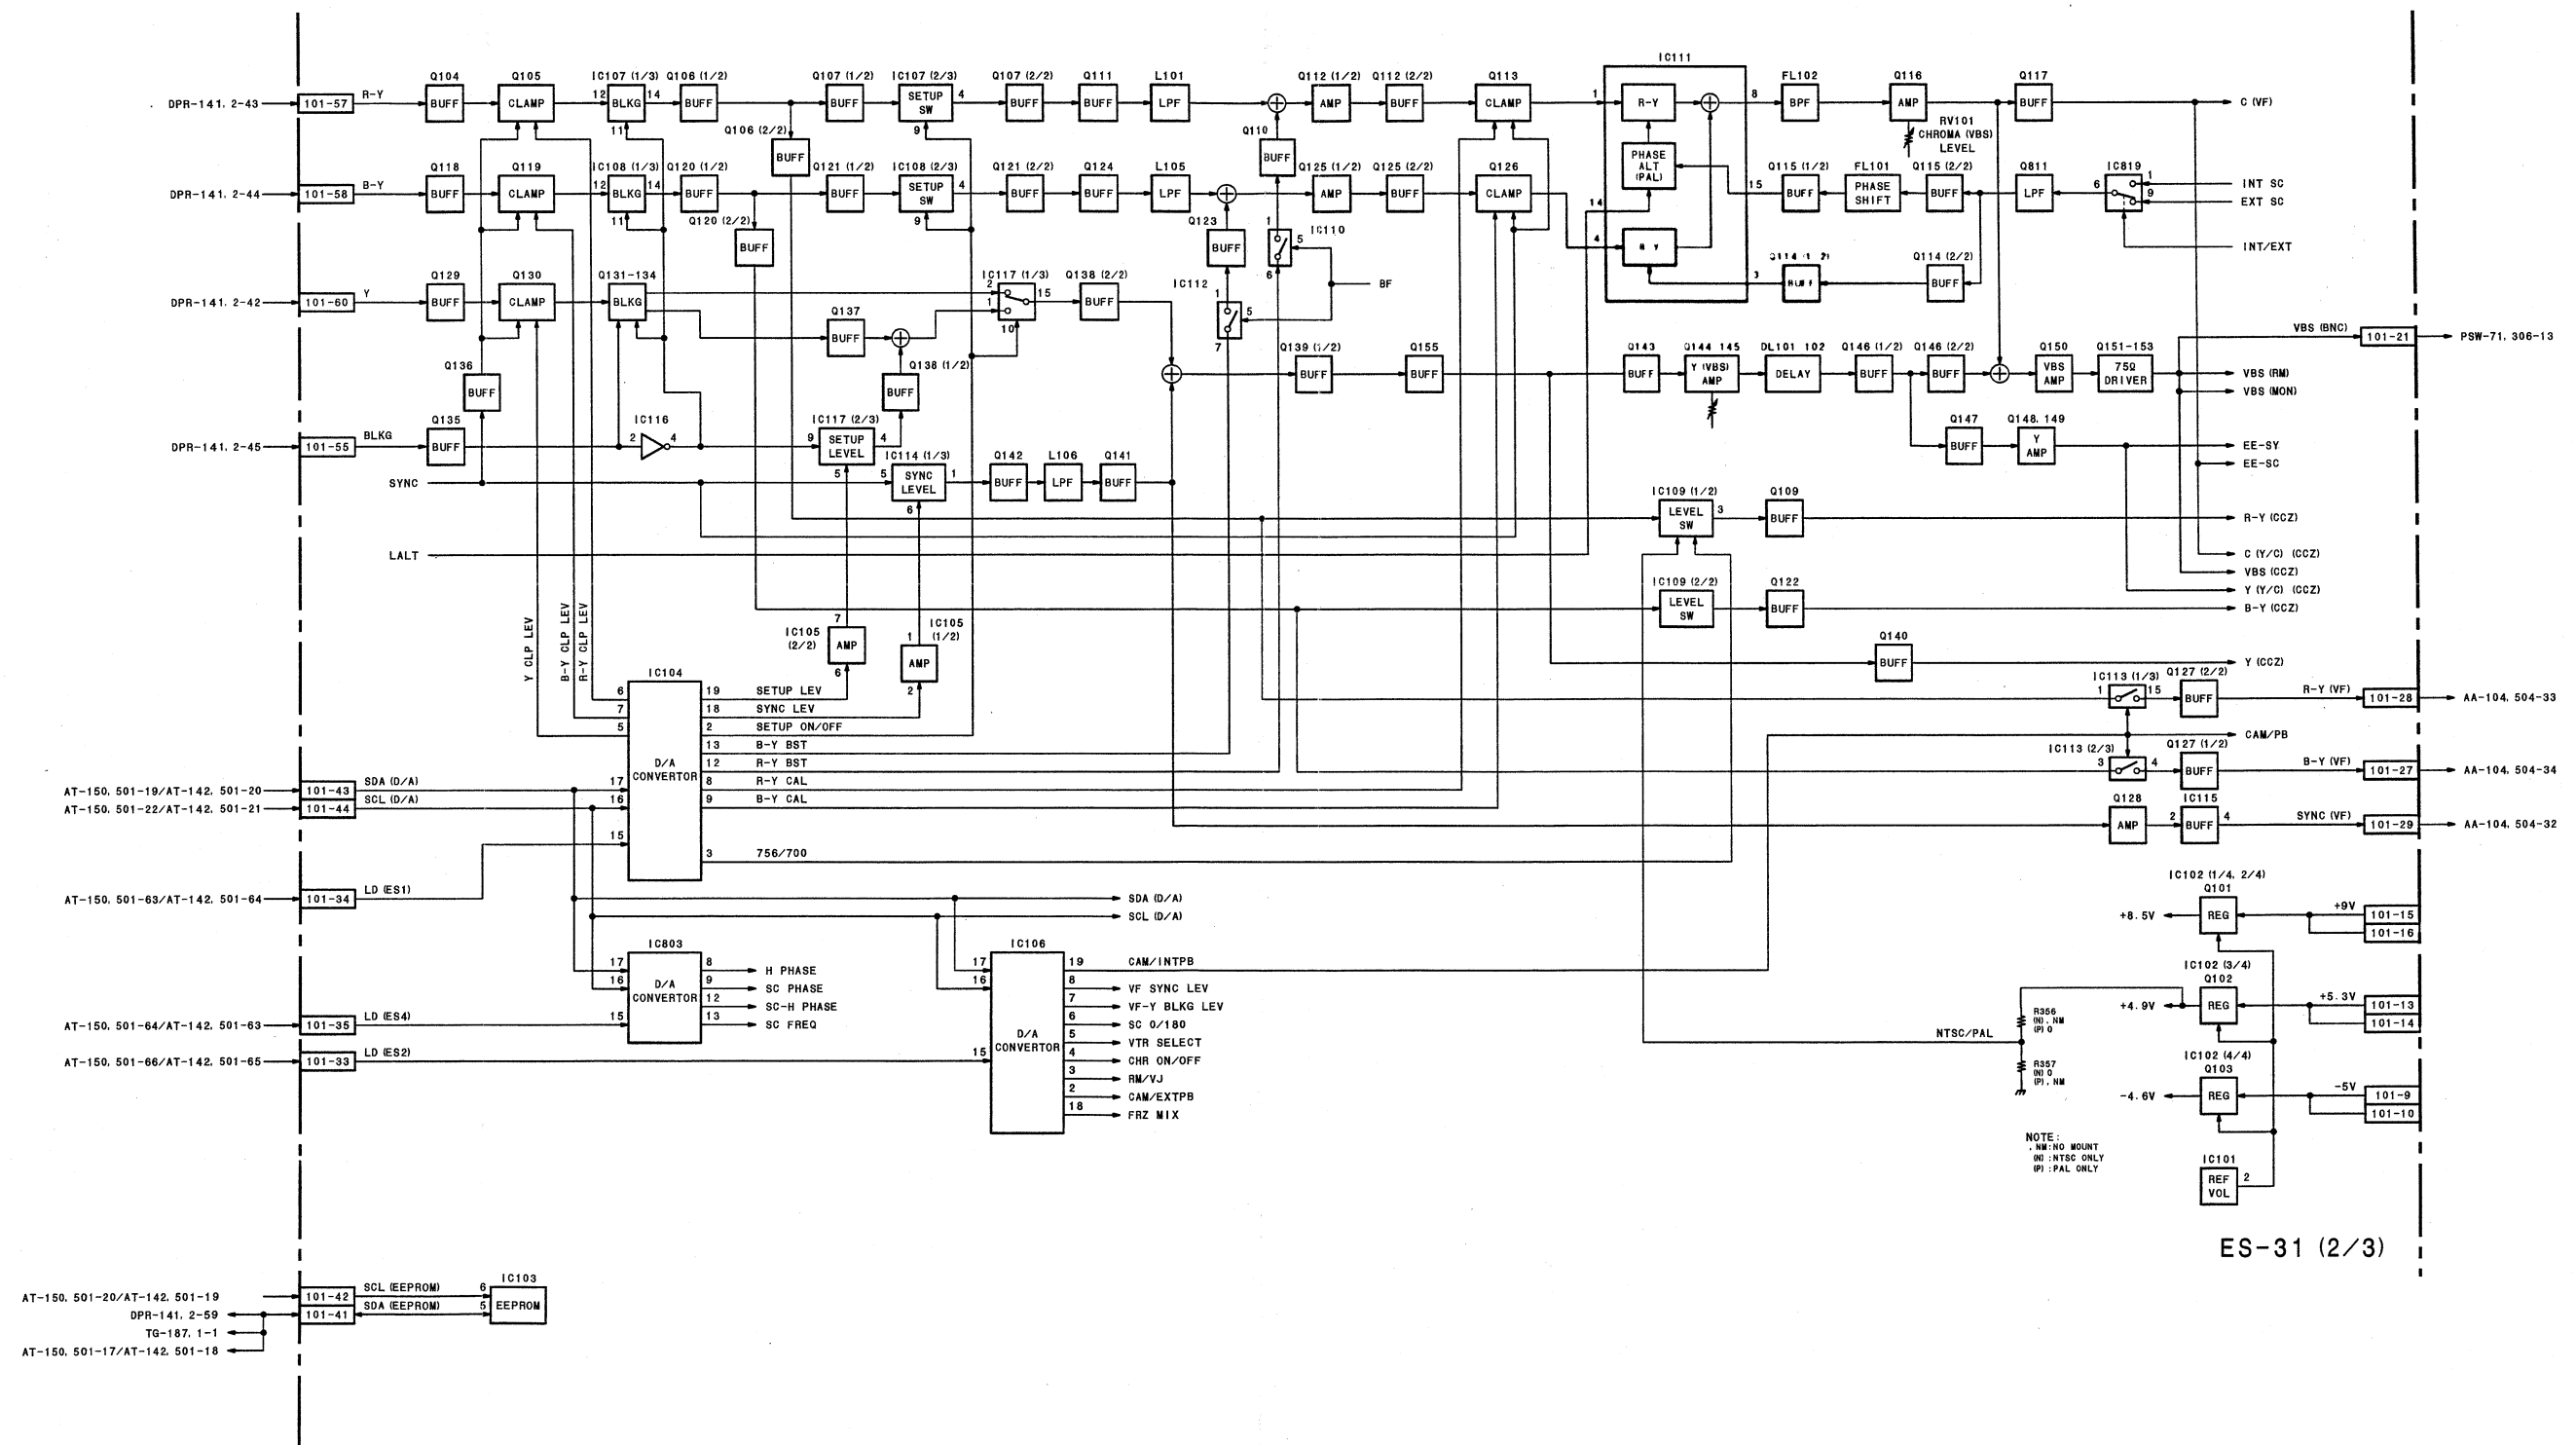



ES-31 (2/3)

ES-31 (2/3)




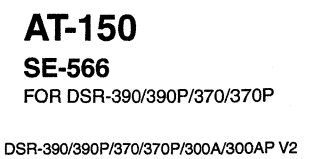

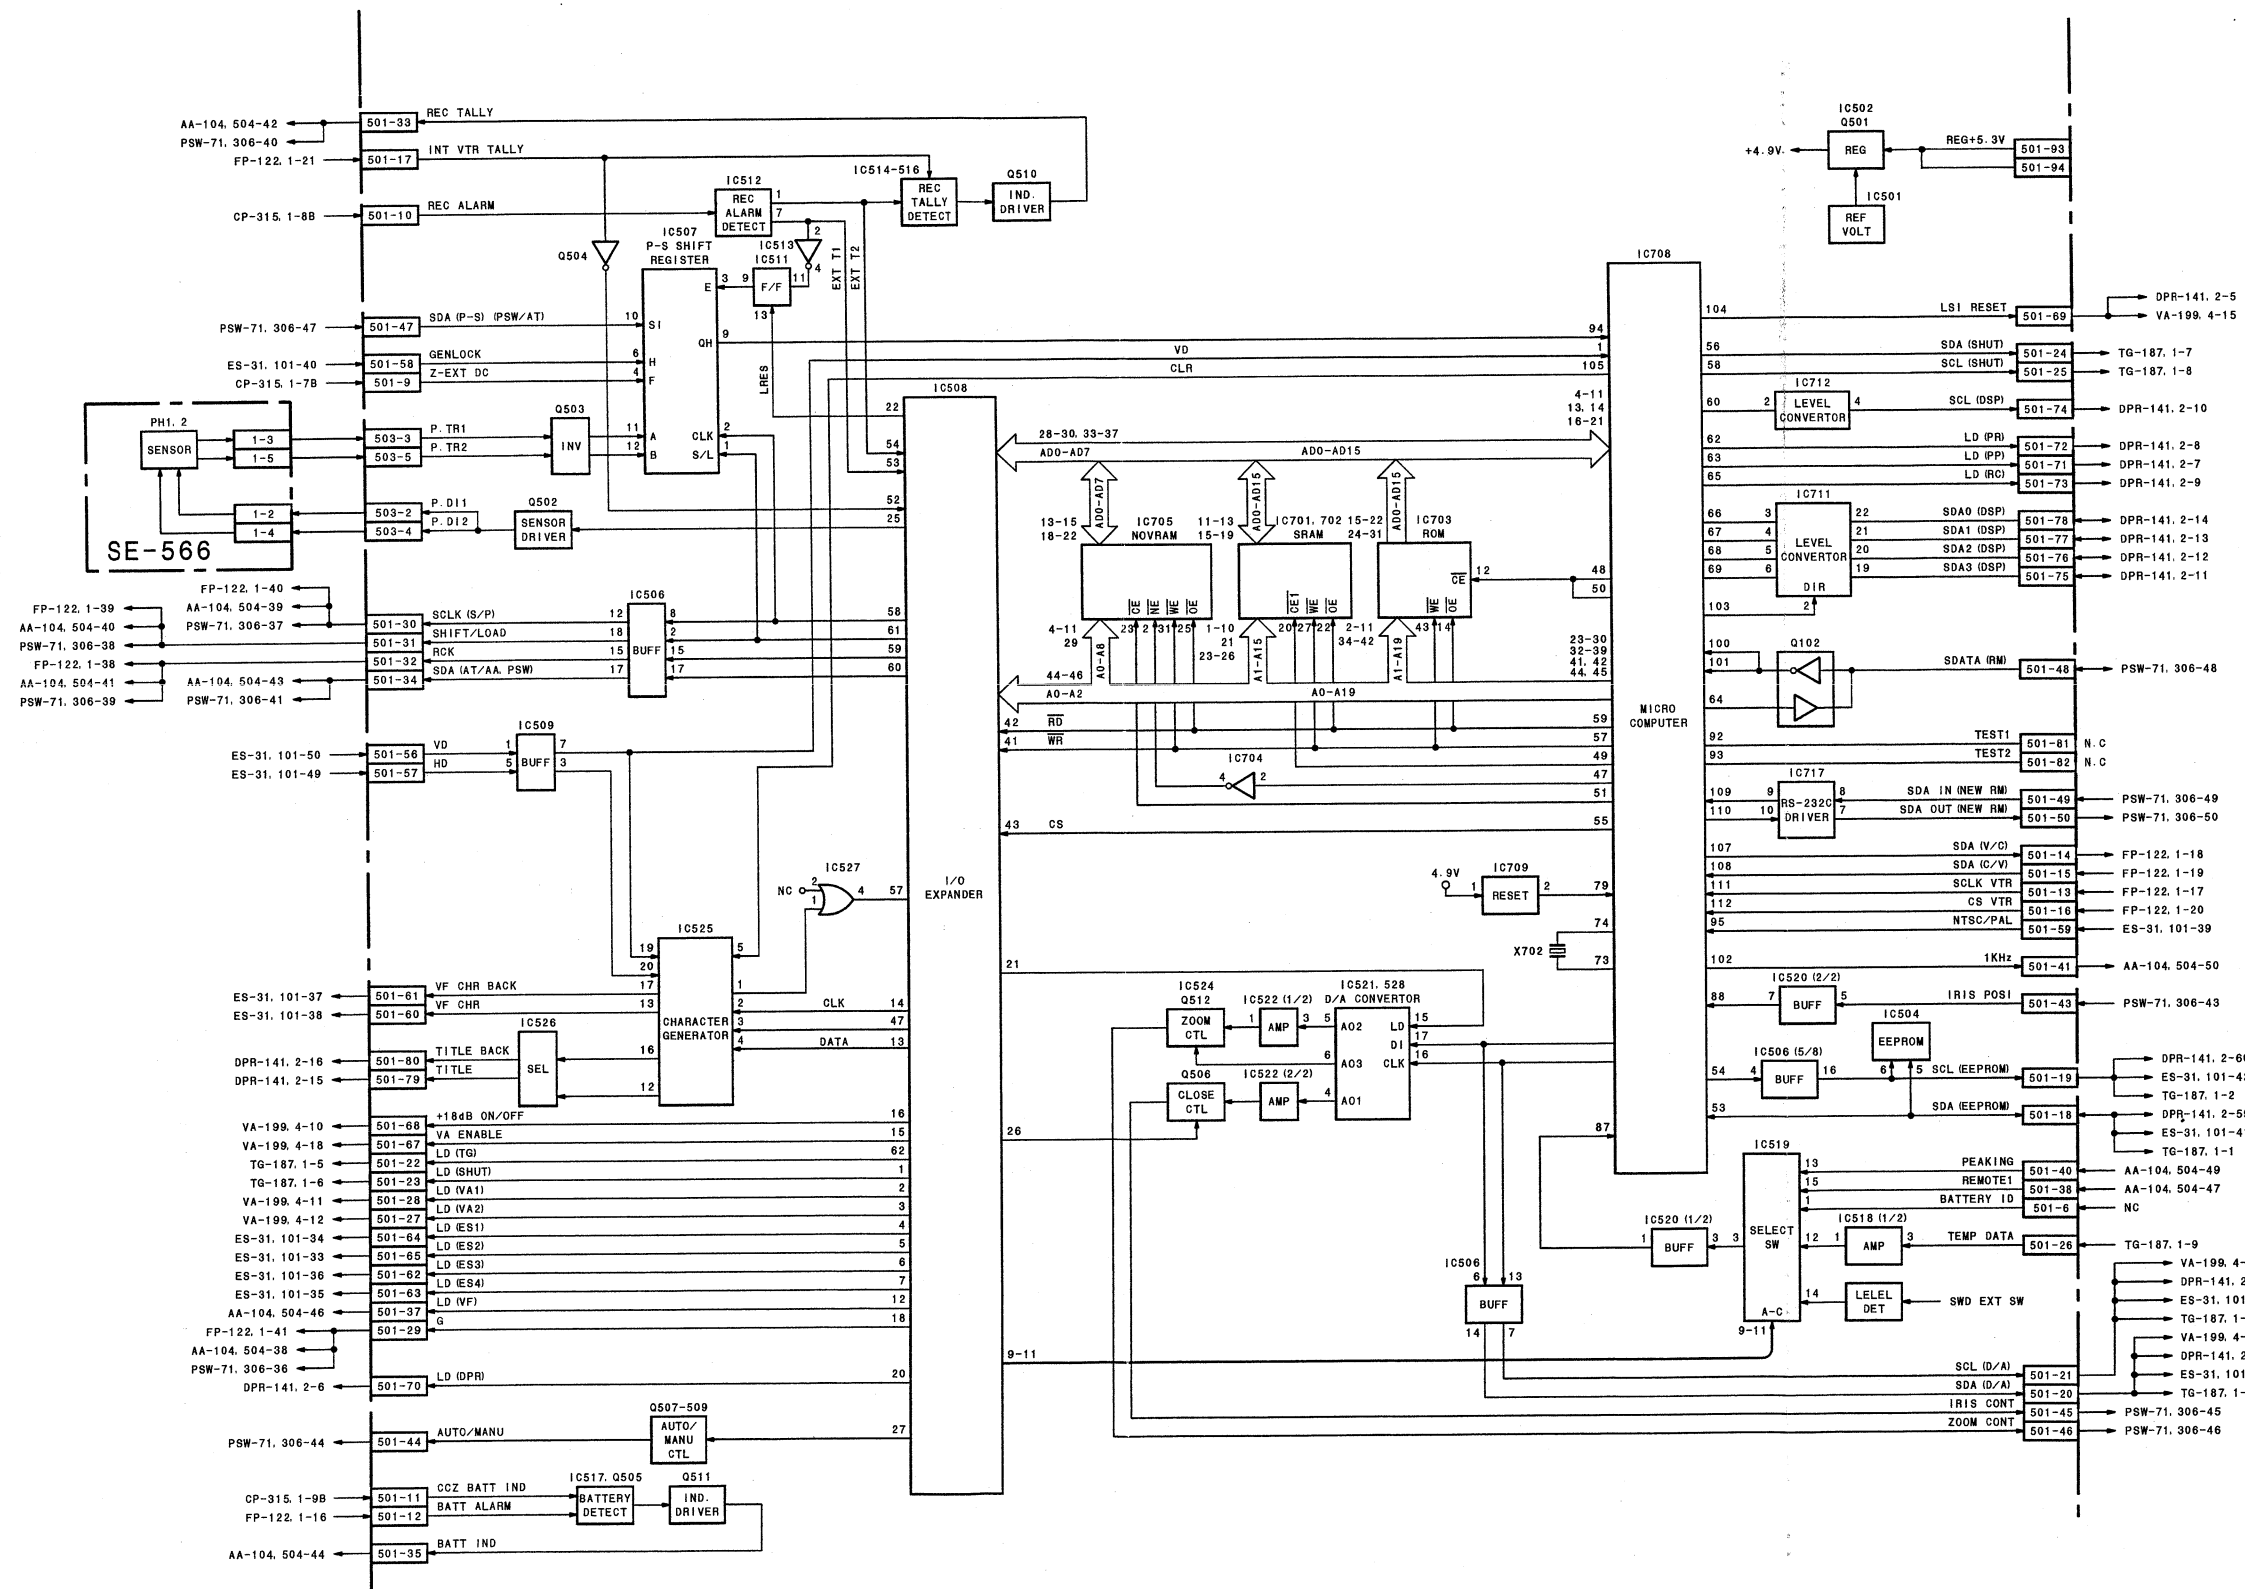


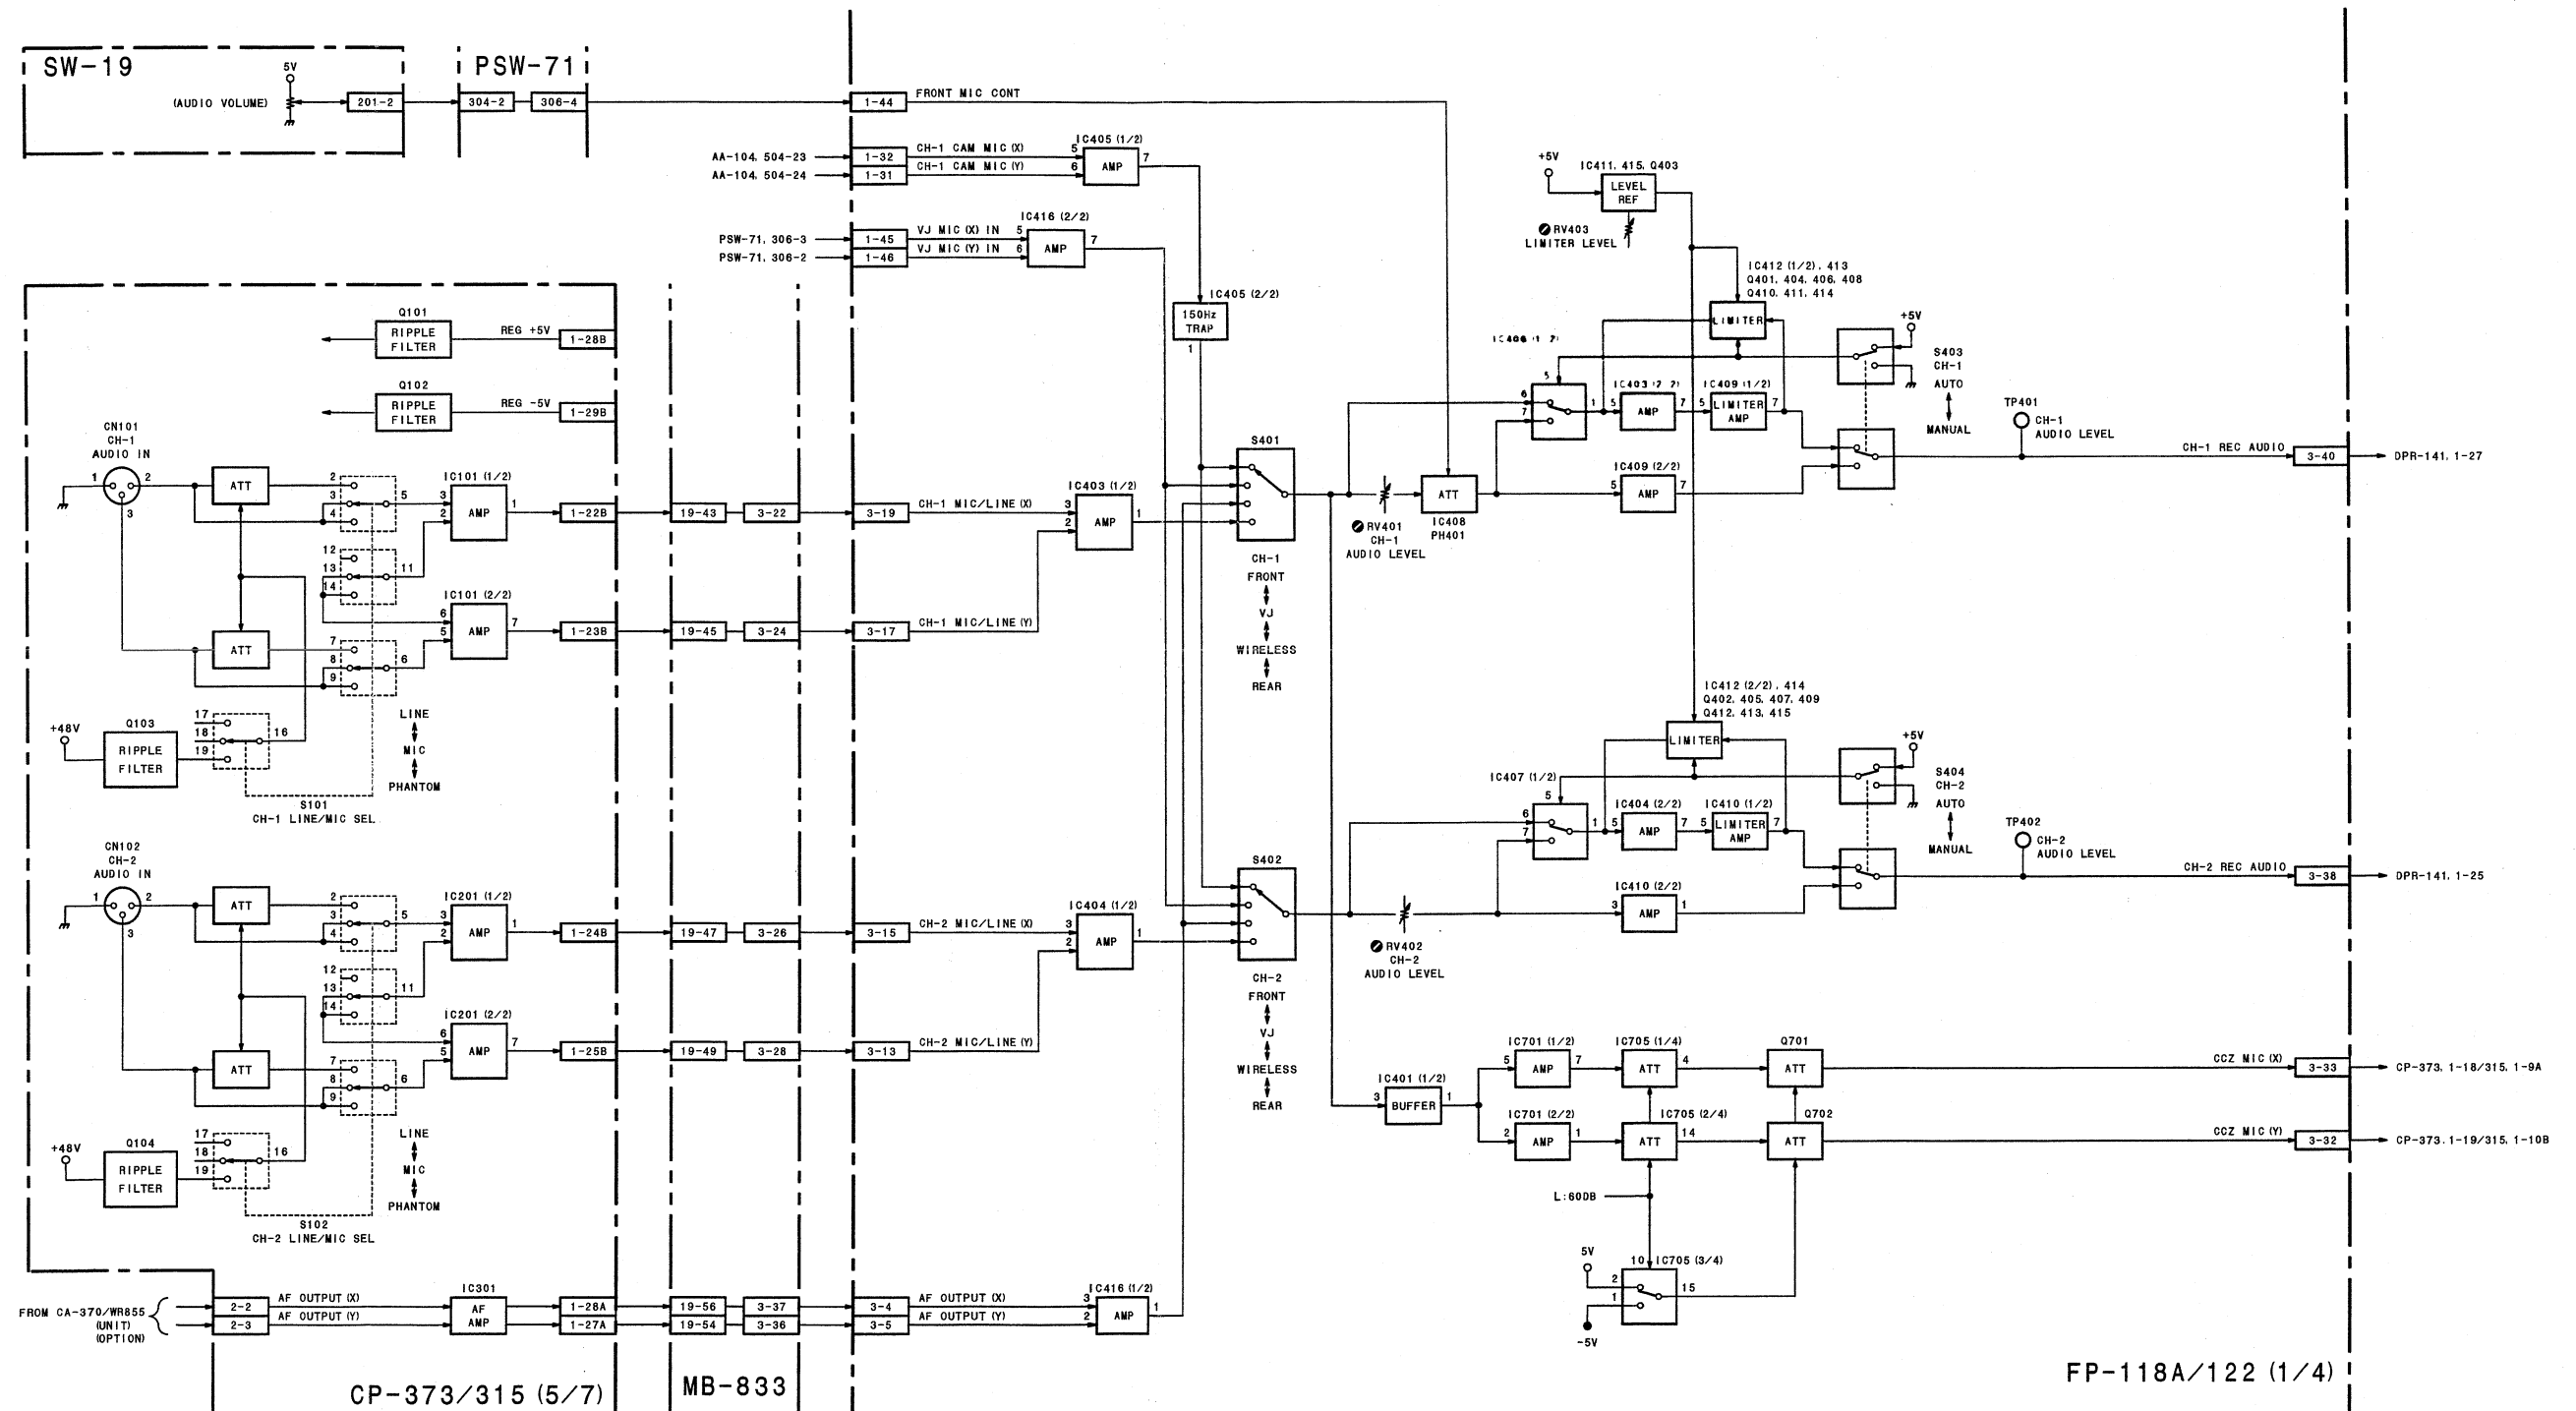


Audio (1/2)
CP-373/315 (5/7)
FP-118A/122 (1/4)
SW-19

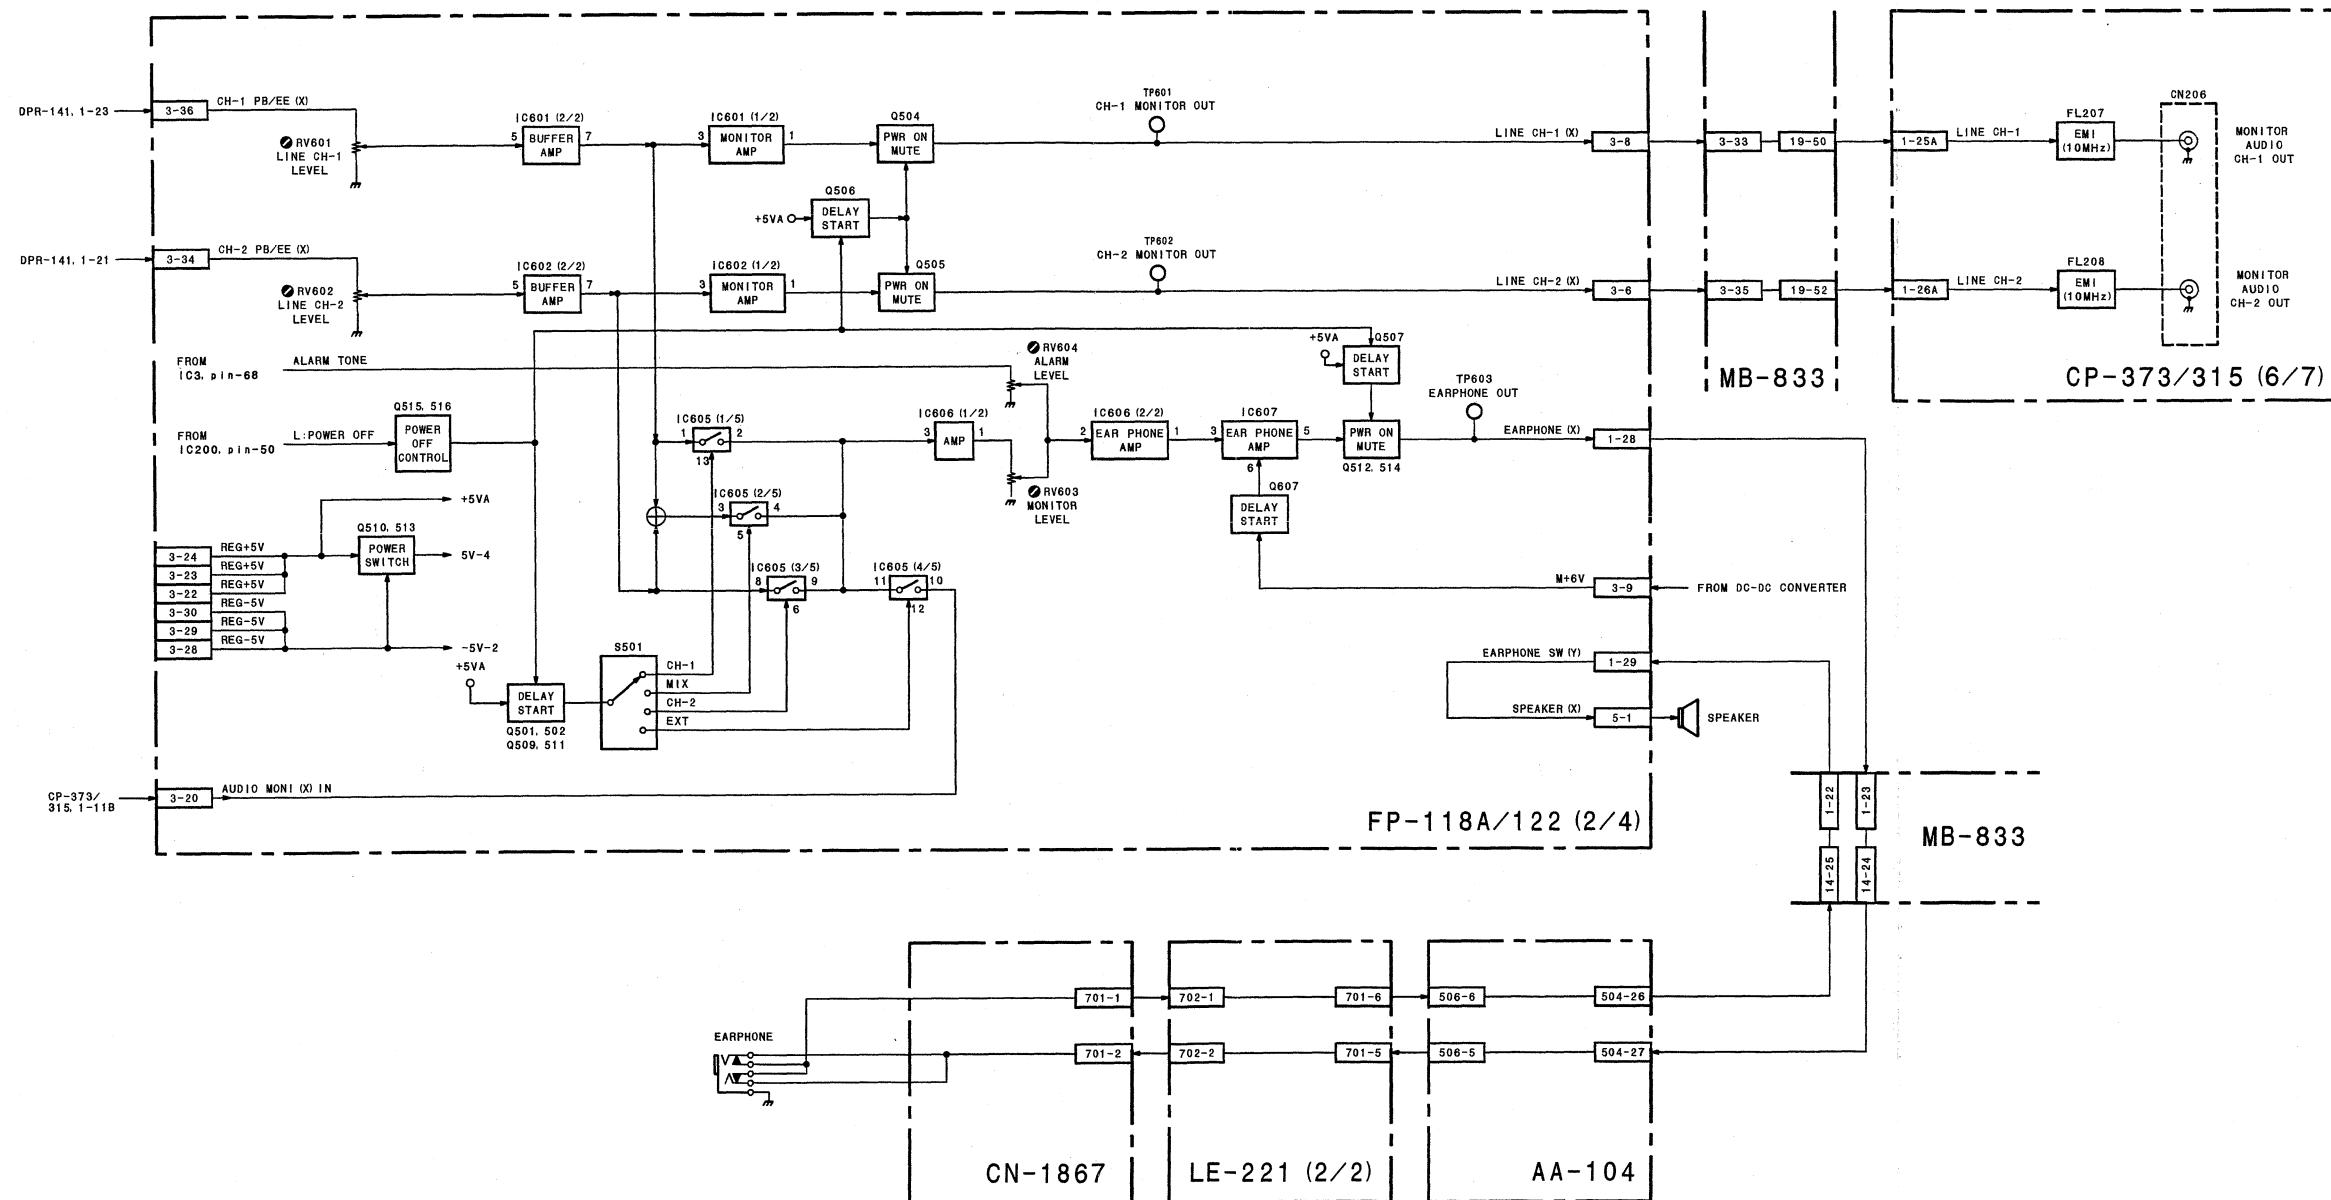

Audio (2/2)
 AA-104
 CP-373/315 (6/7)
 CN-1867
 FP-118A/122 (2/4)
 LE-221 (2/2)

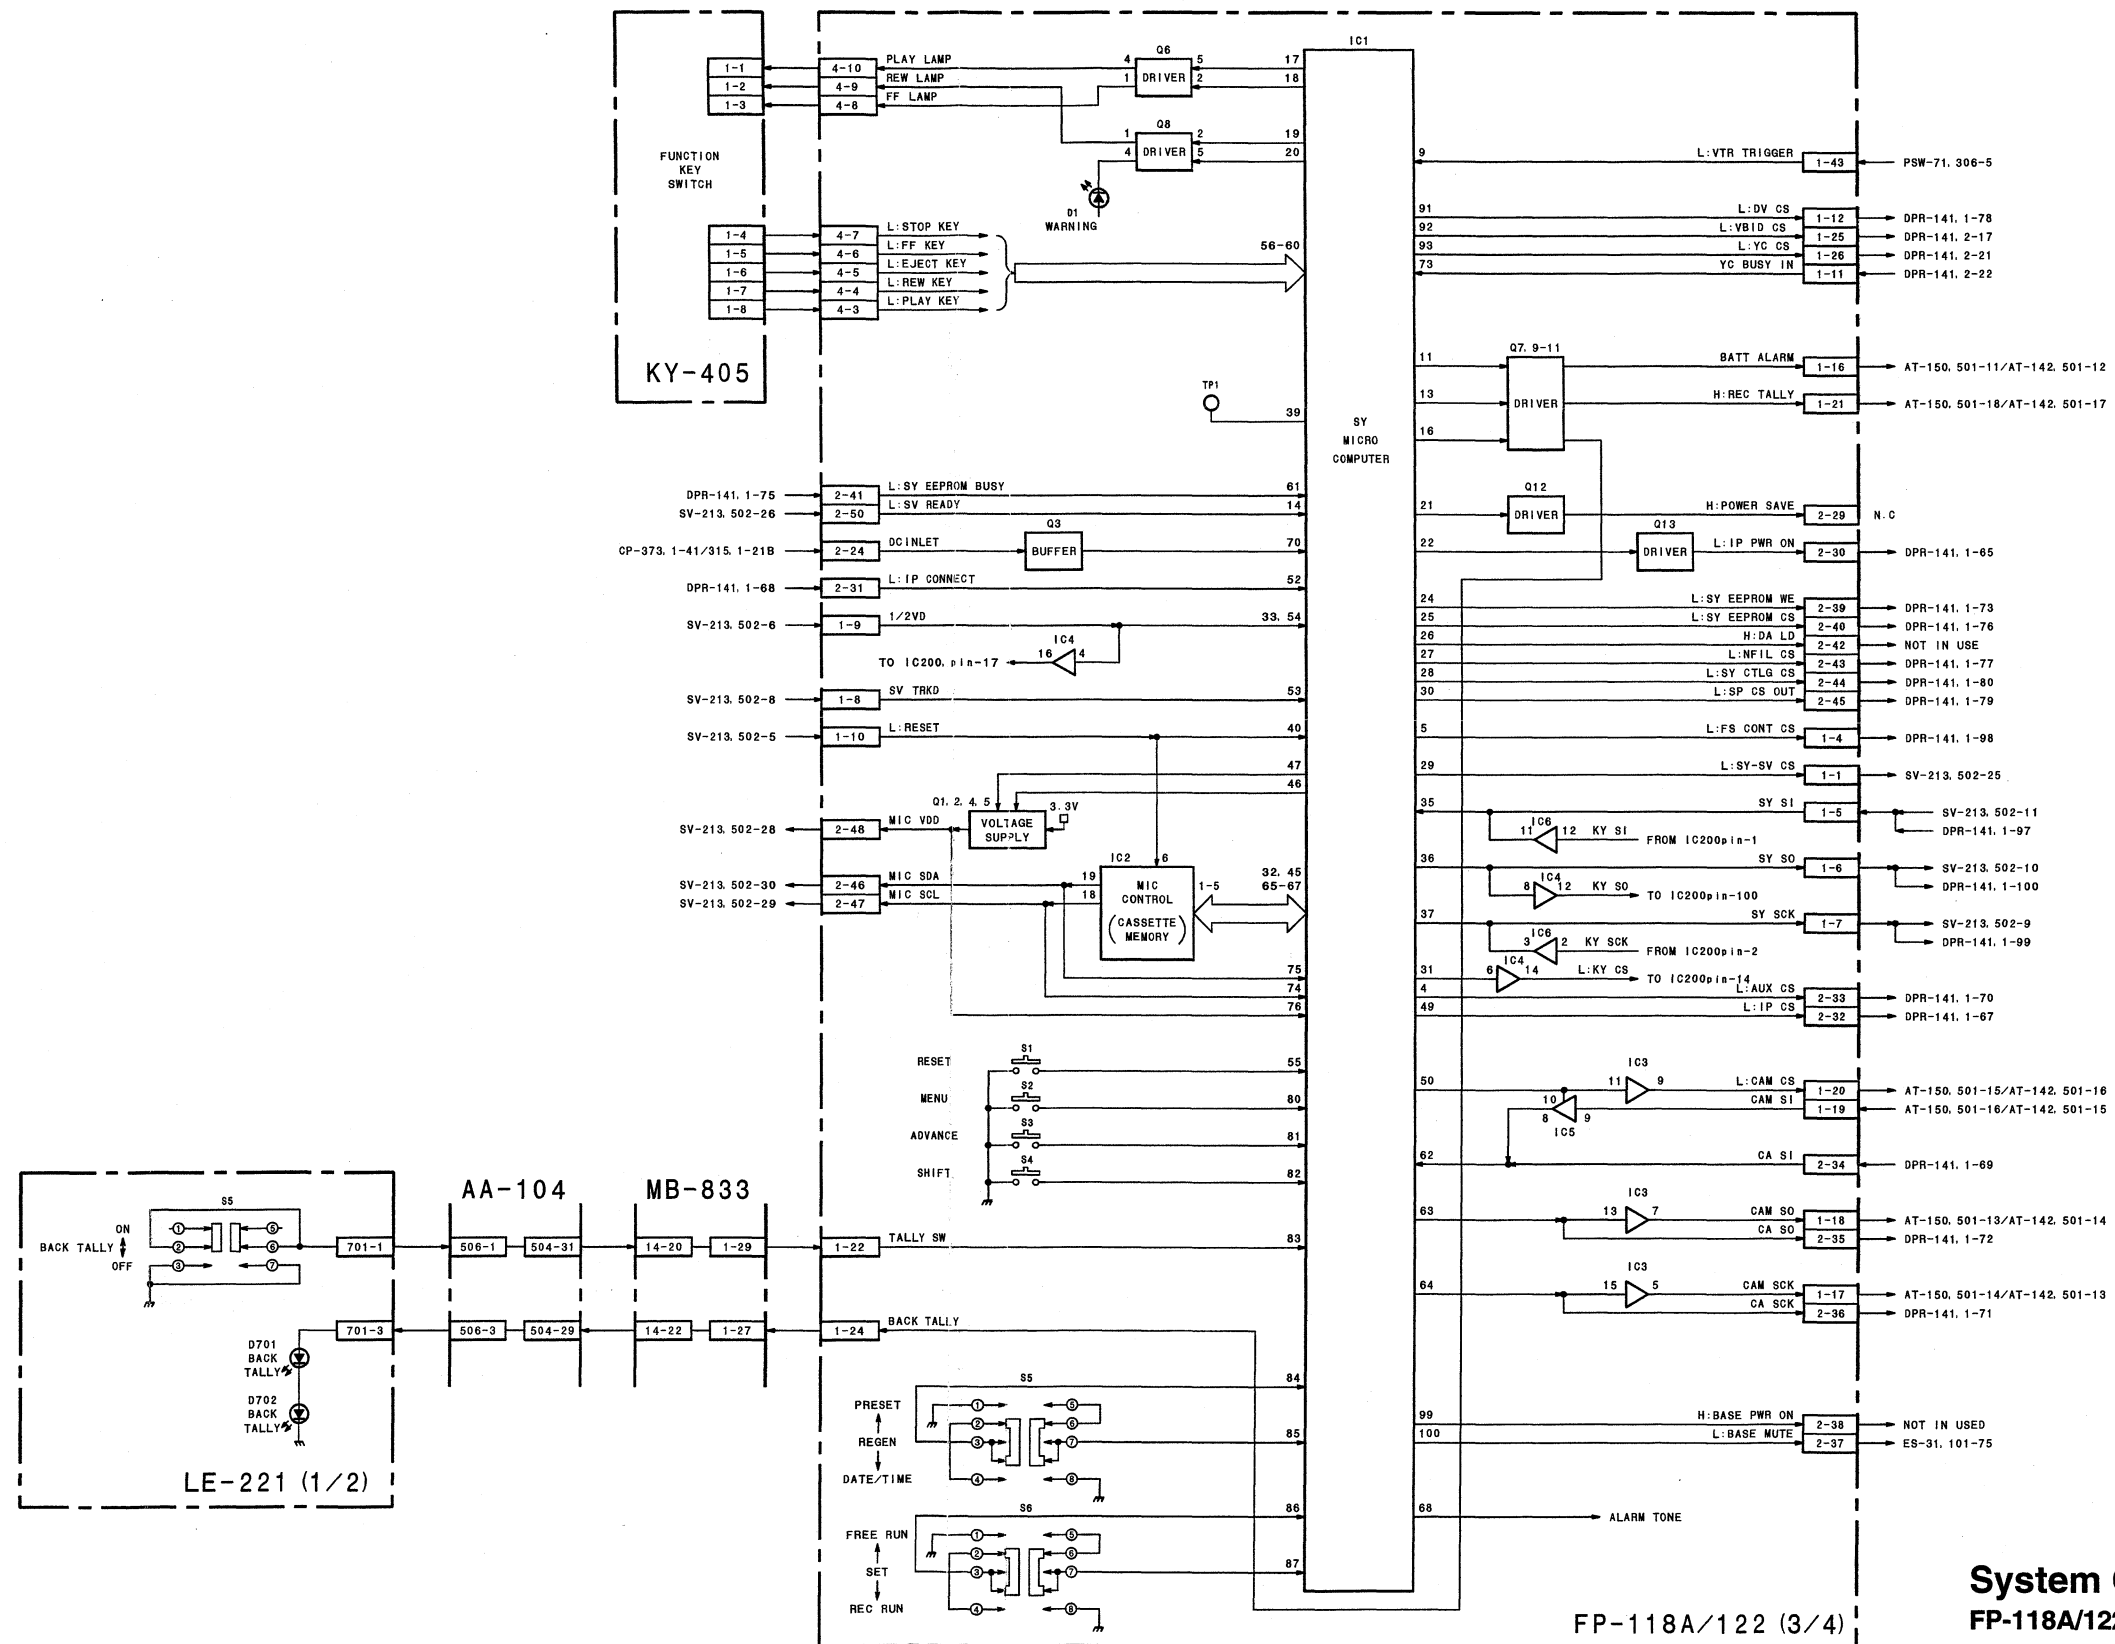

System Control (1/2)
 FP-118A/122 (3/4)
 KY-405
 LE-221 (1/2)

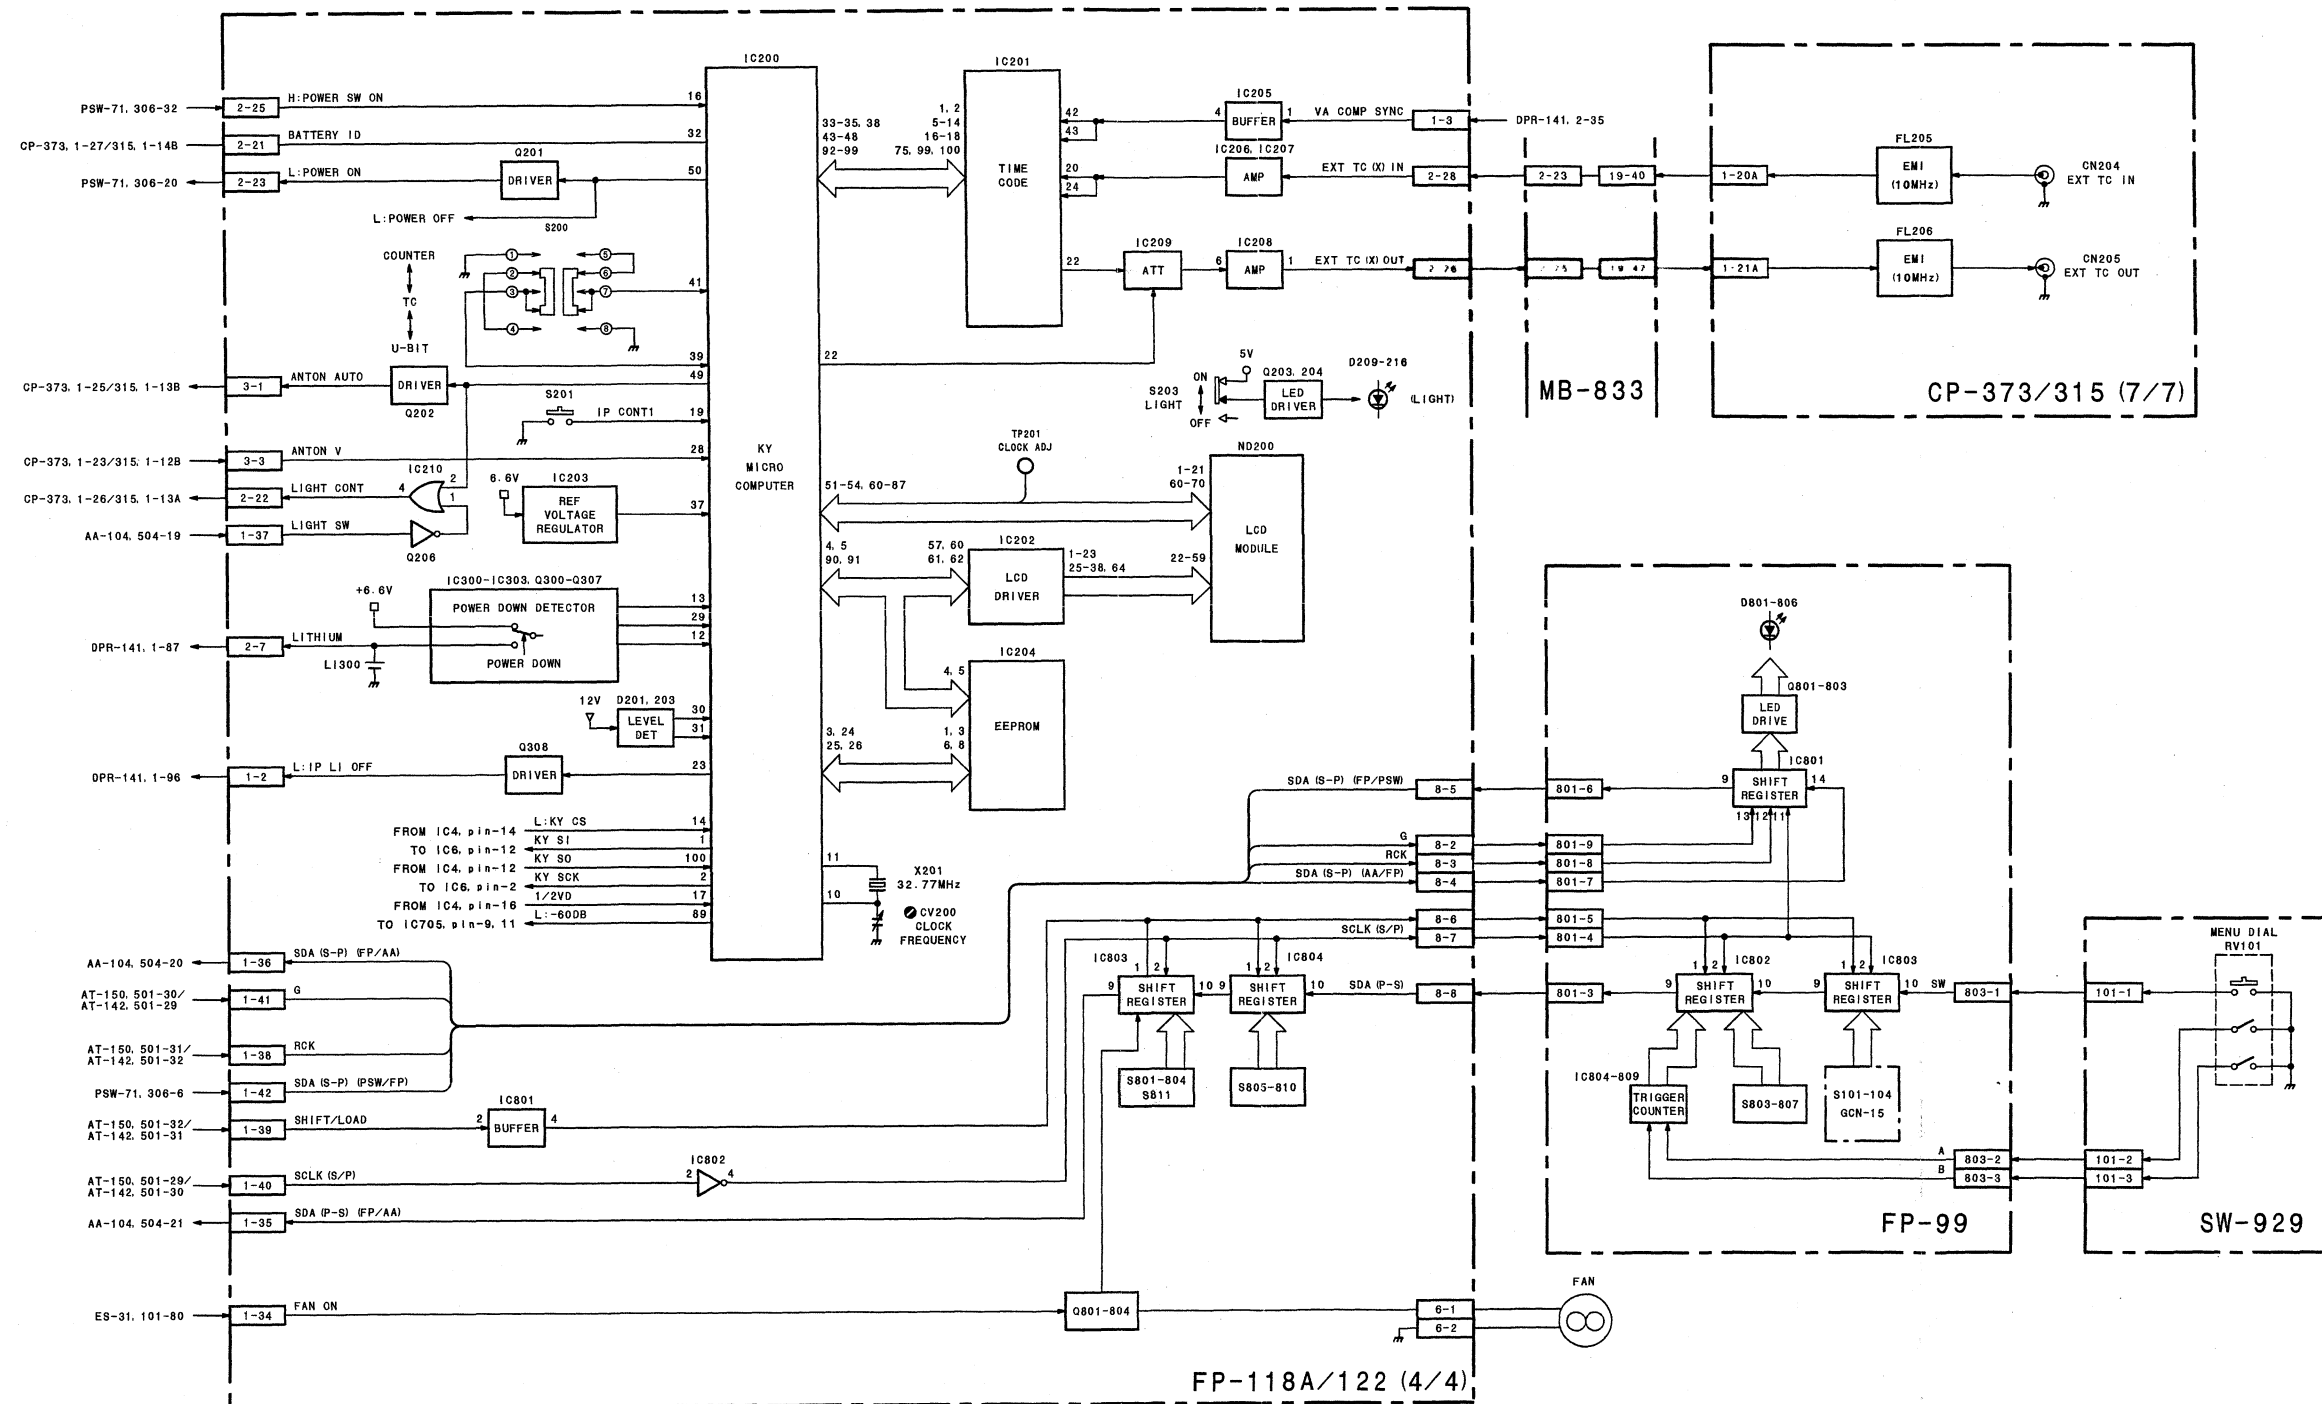


System Control (2/2)





CP-373/315 (7/7)

FP-118A/122 (4/4)

FP-99

SW-929

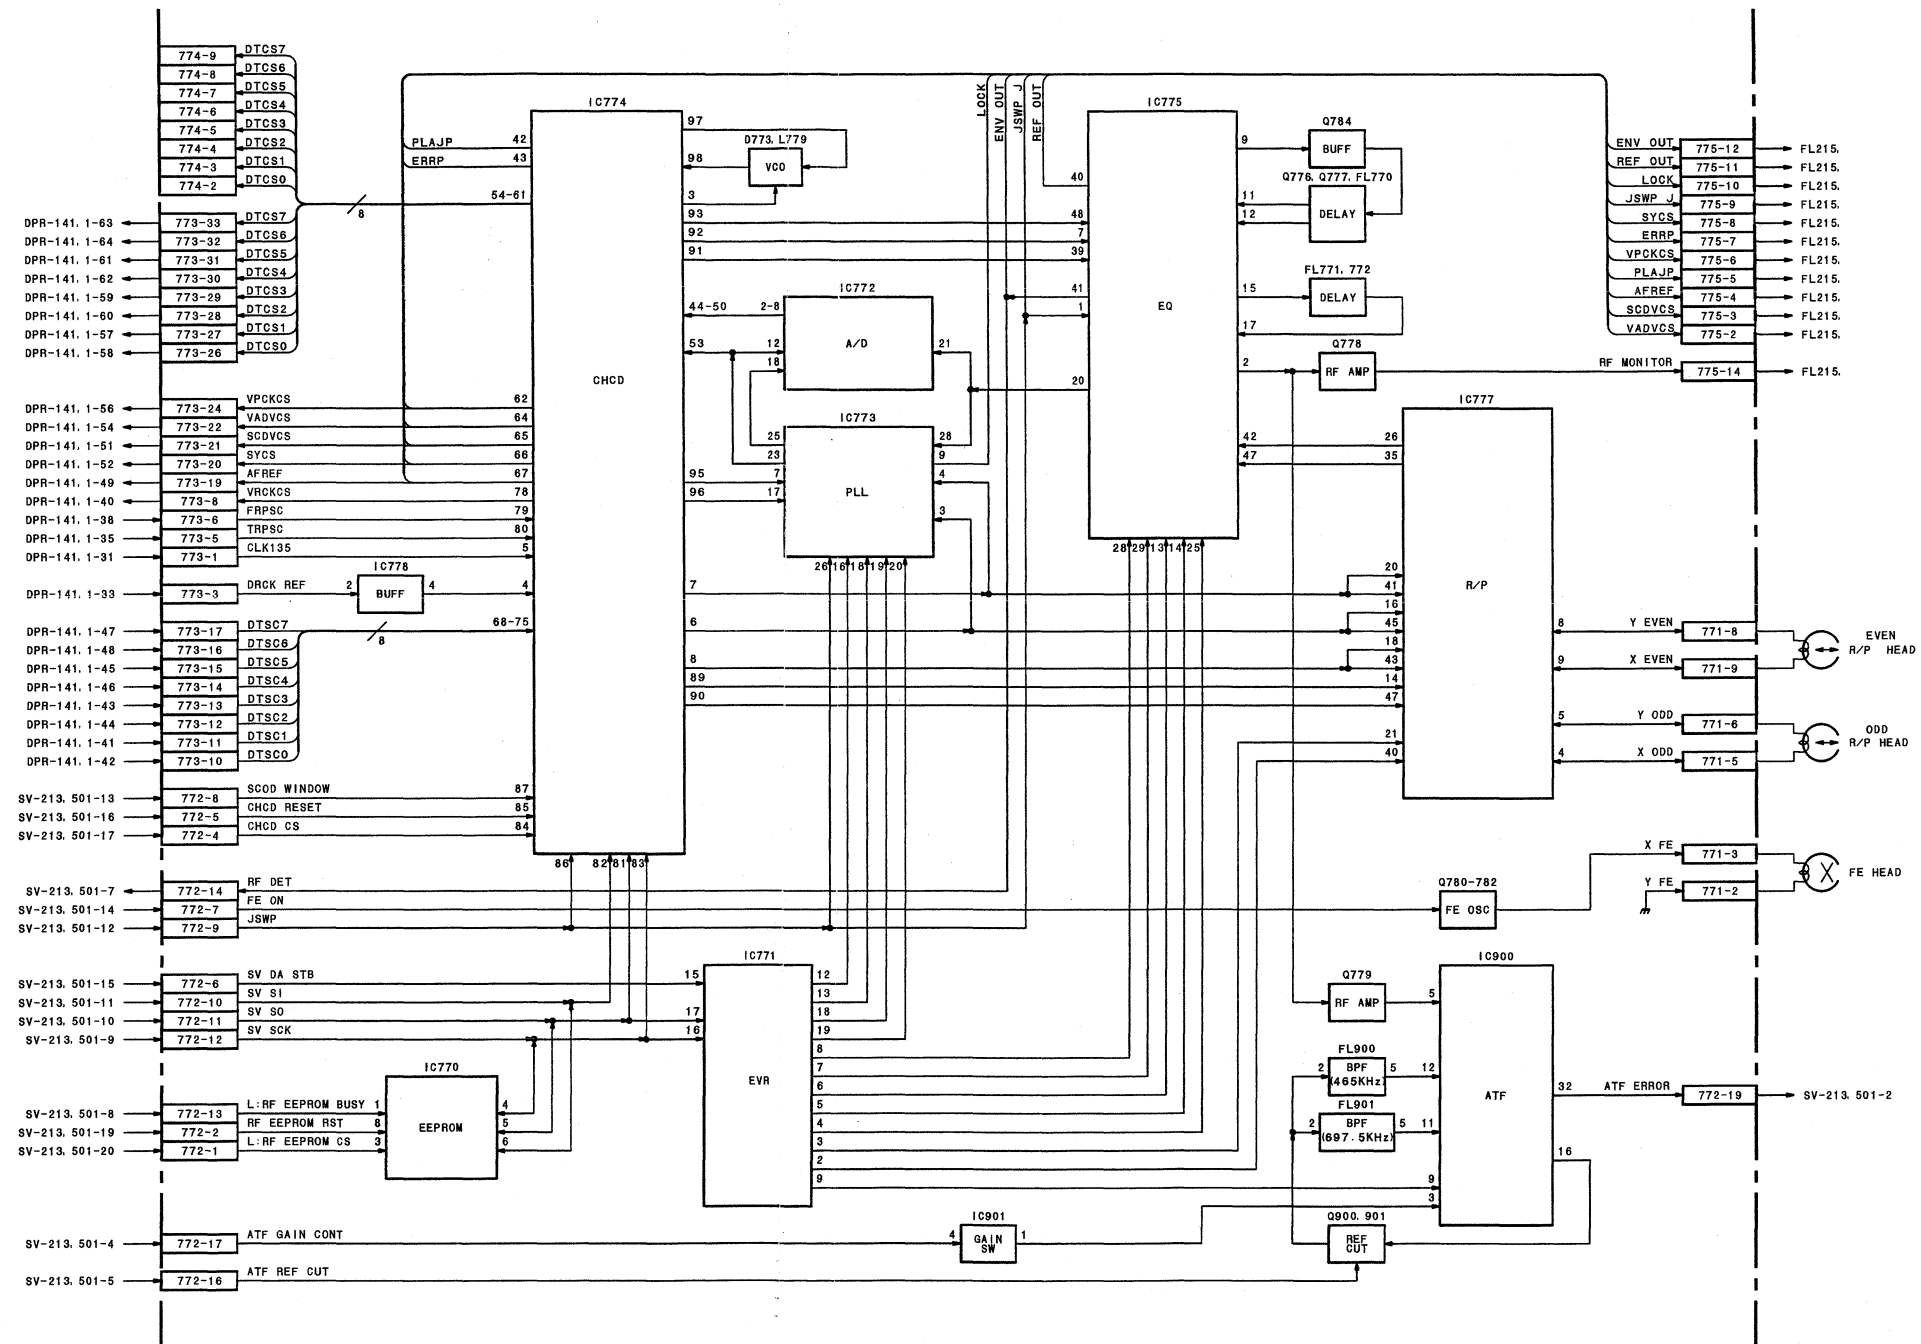


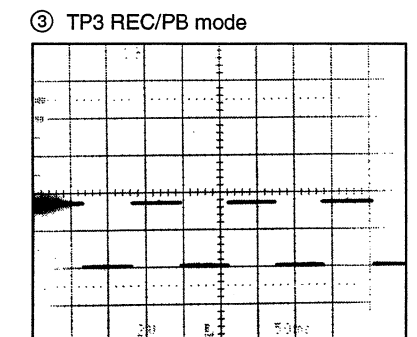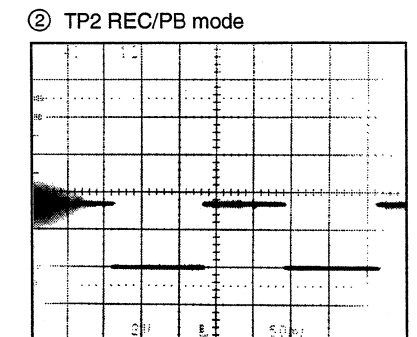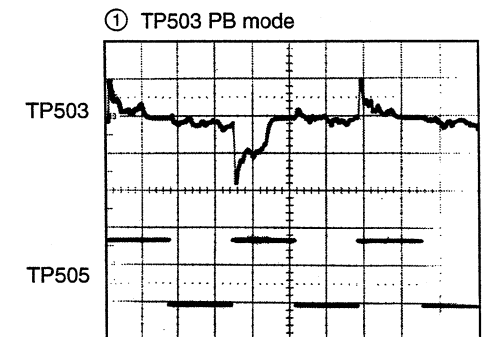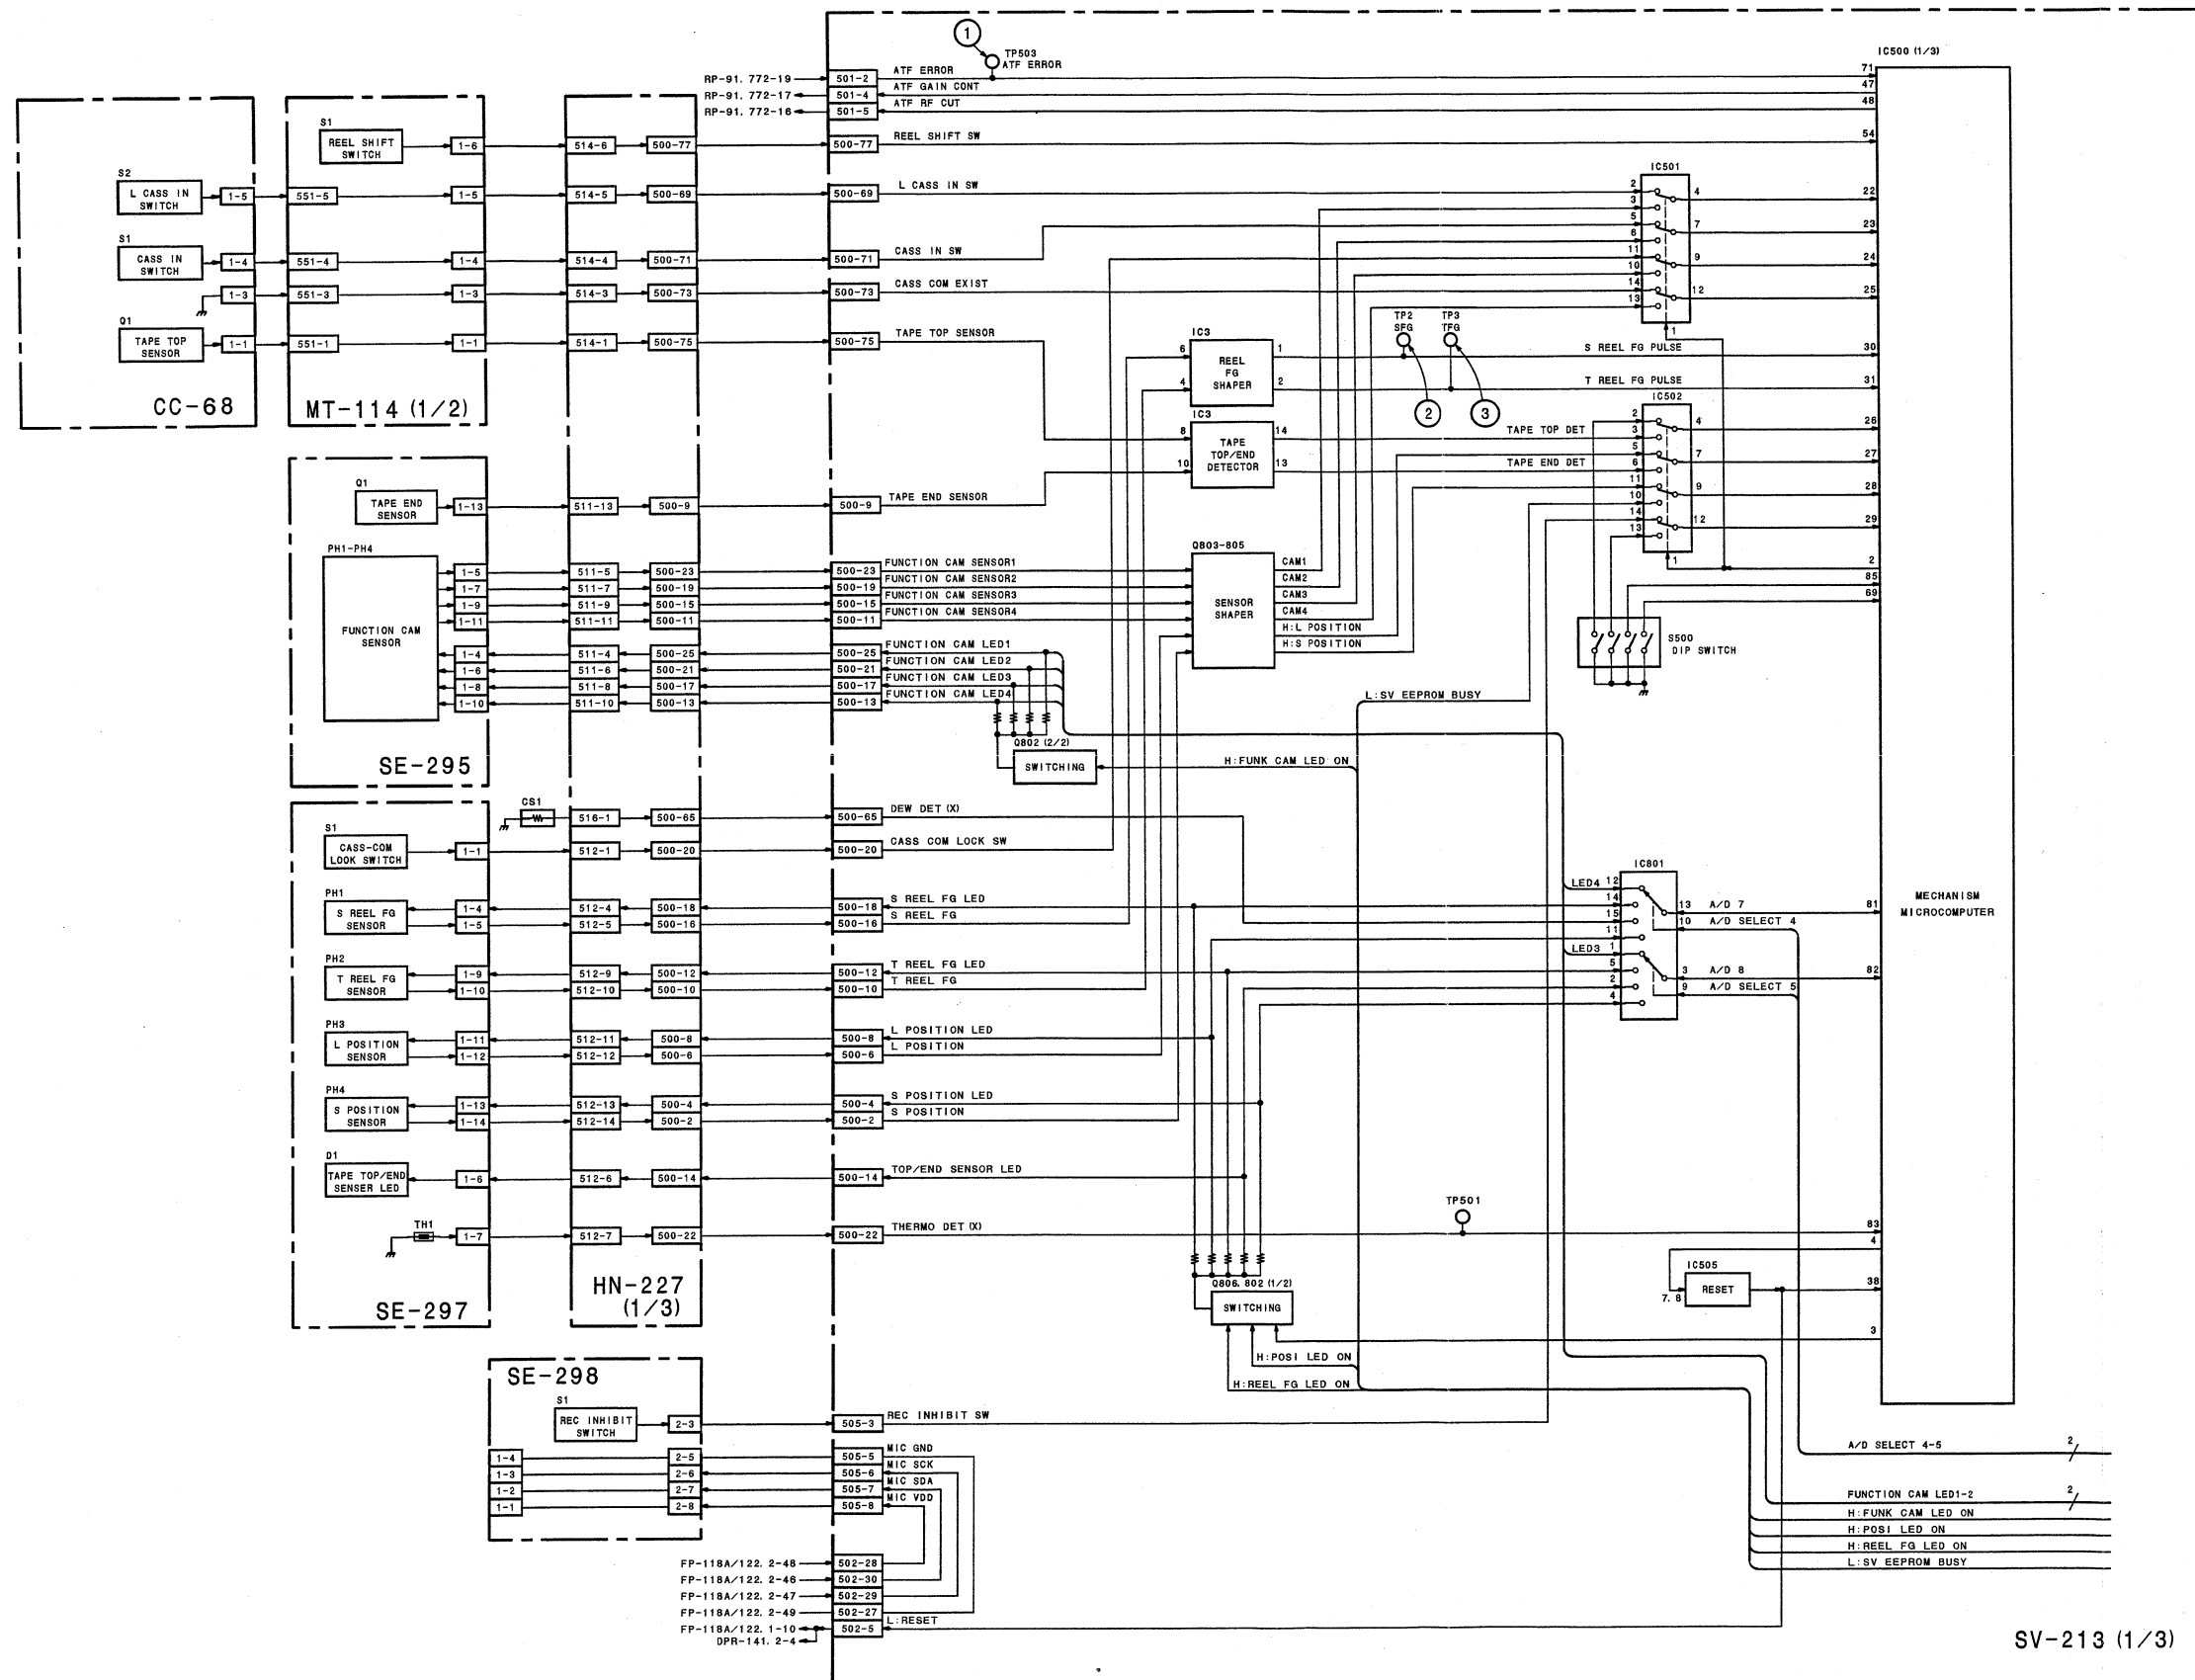


Measurement Condition
Y, R-Y, B-Y : 75% COLOR BARS
SETUP 7.5% (for NTSC)
100% COLOR BARS (for PAL)

REC mode
PB mode : XH5-1A (for NTSC)
75% COLOR BARS
XH5-1AP (for PAL)
100% COLOR BARS


Servo (1/3)
CC-68
HN-227 (1/3)
MT-114 (1/2)
SE-295
SE-297
SV-213 (1/3)

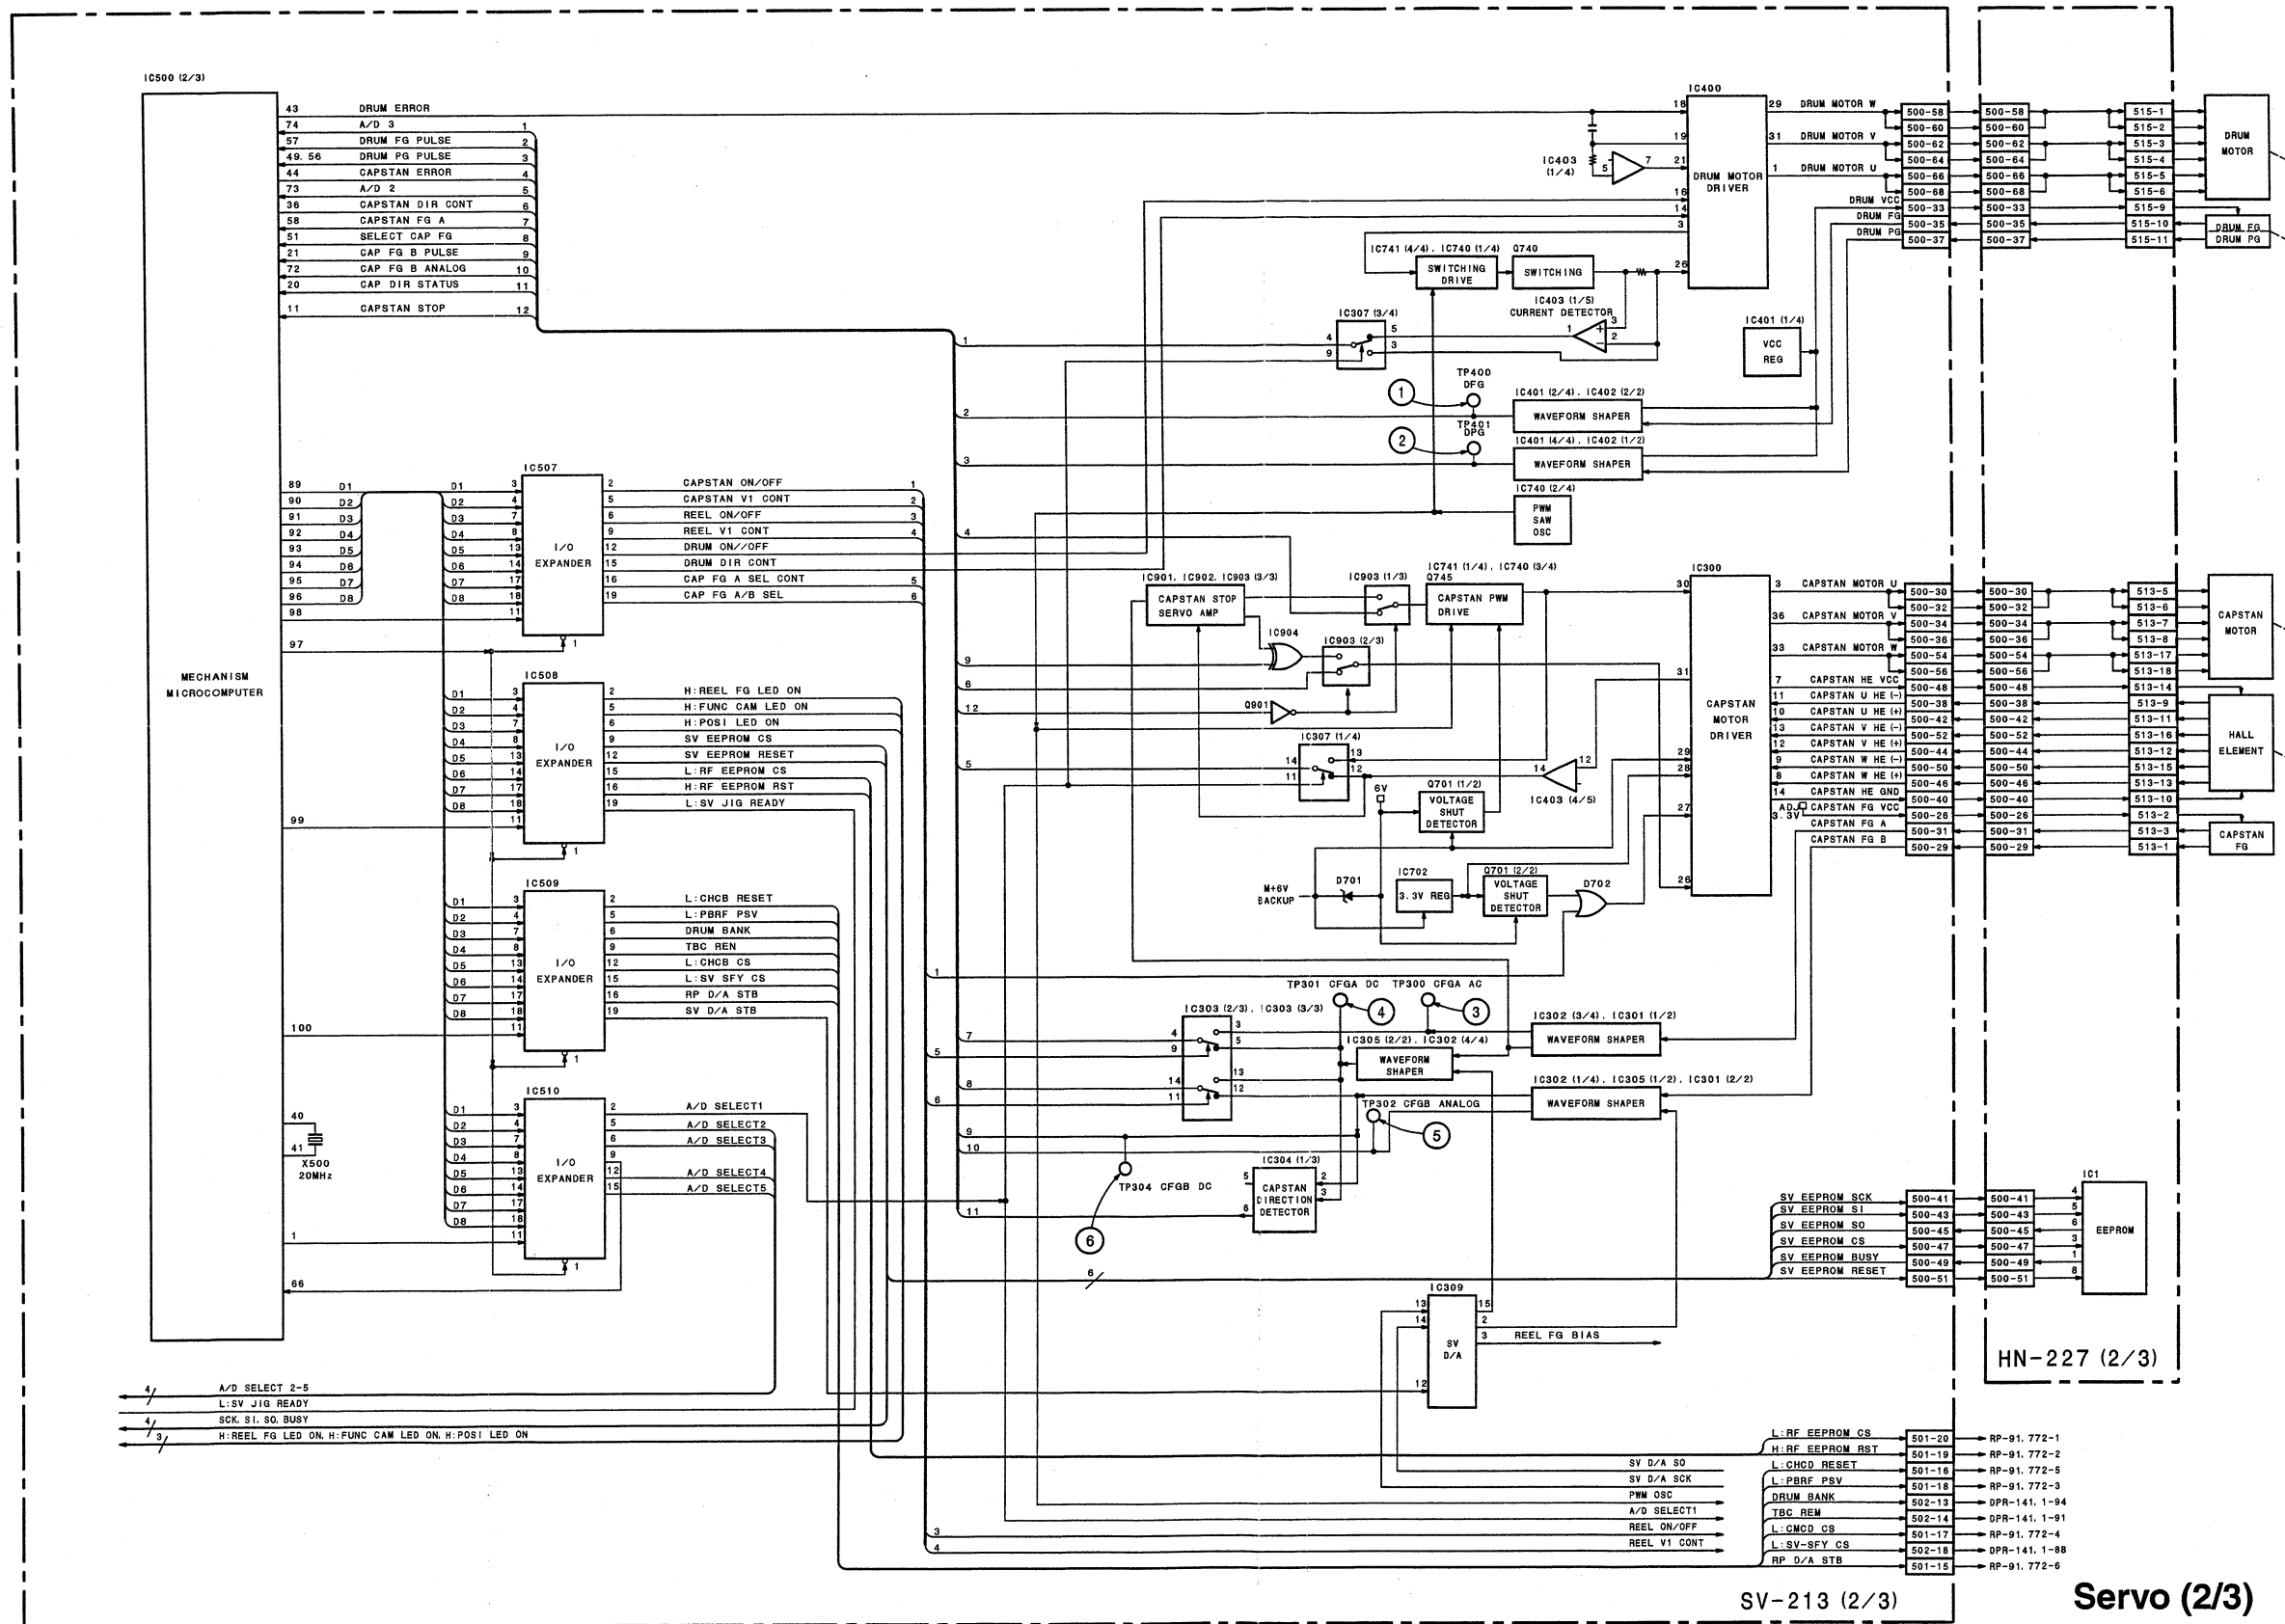


- ① TP400 EE (STBY-ON) /REC/PB mode
② TP401 EE (STBY-ON) /REC/PB mode

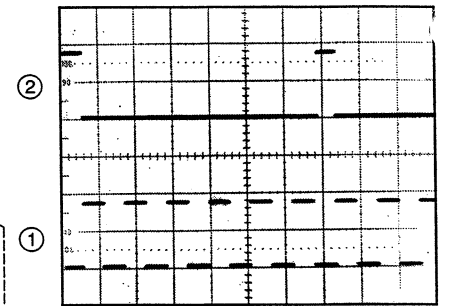


- ③ TP300 REC/PB mode
④ TP301 REC/PB mode

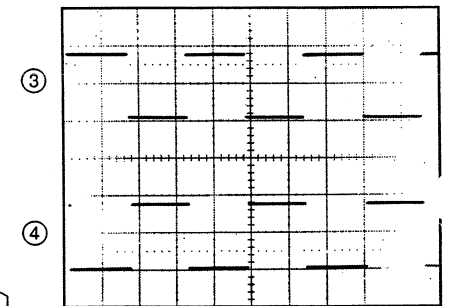

- ④ TP301 REC/PB mode
⑥ TP304 REC/PB mode

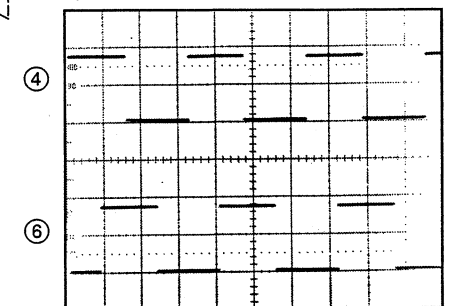


- ⑤ TP302 REC/PB mode
⑥ TP304 REC/PB mode

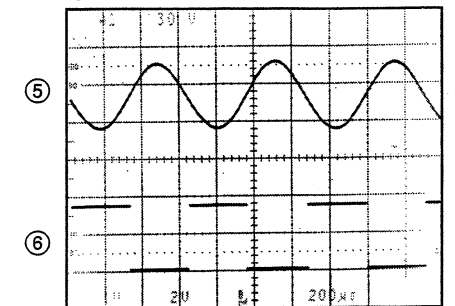

Measurement Condition
Y, R-Y, B-Y : 75% COLOR BARS
SETUP 7.5% (for NTSC)
100% COLOR BARS (for PAL)


EE mode
REC mode
PB mode : XH5-1A (for NTSC)
75% COLOR BARS
XH5-1AP (for PAL)
100% COLOR BARS

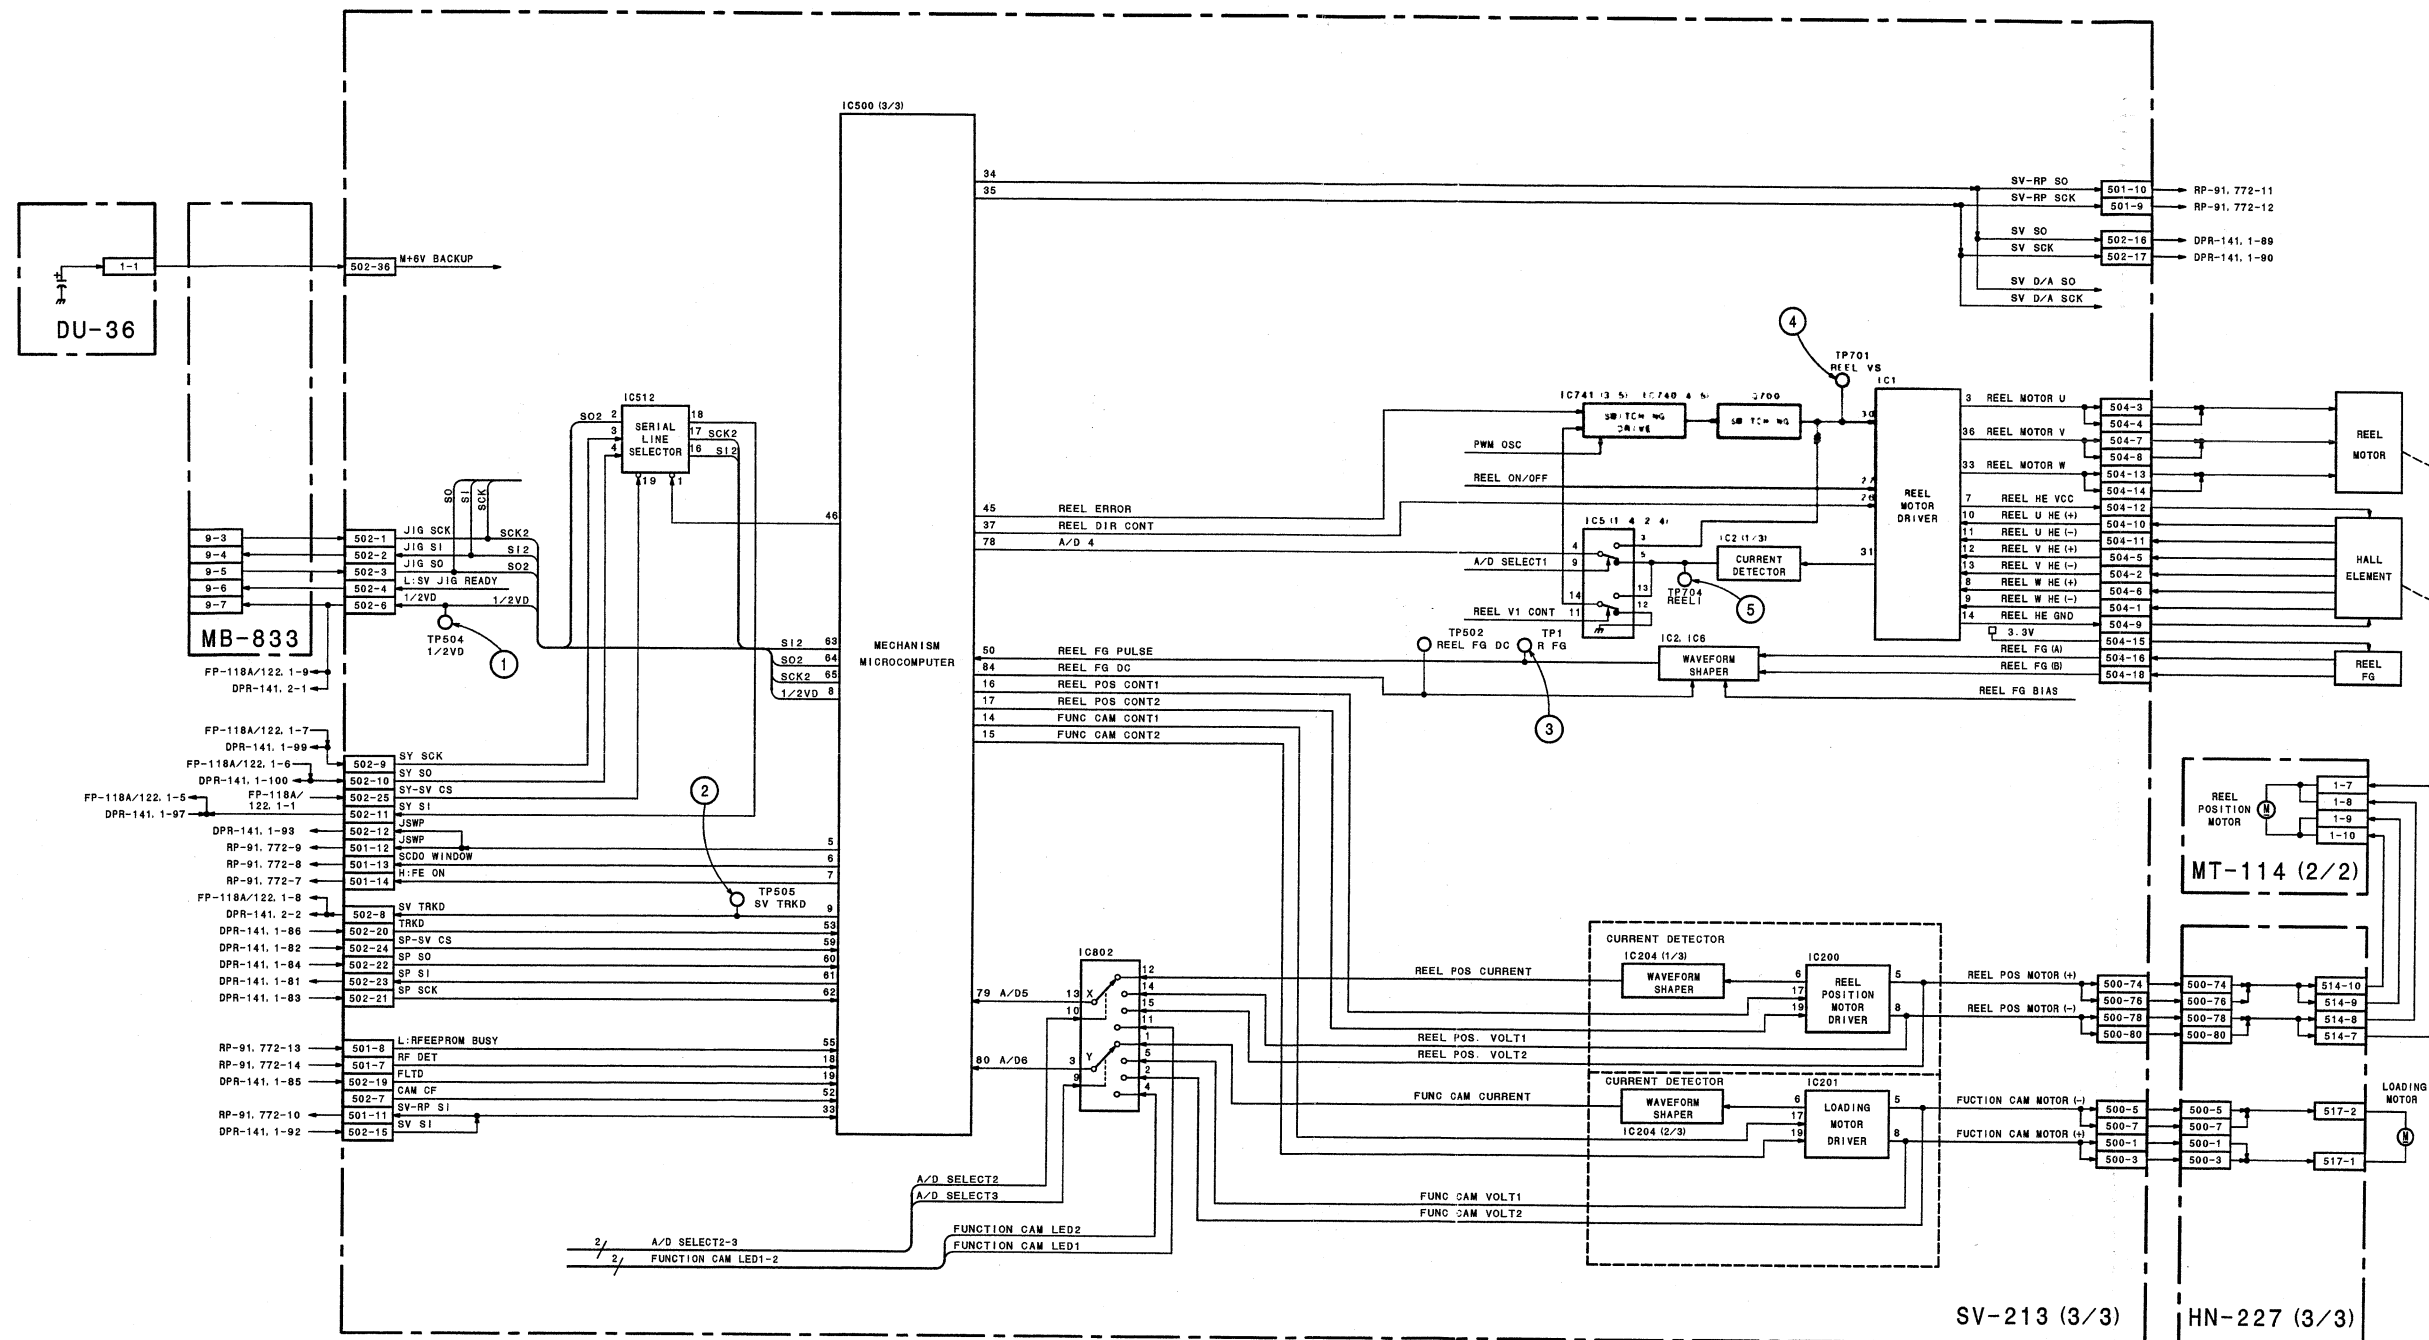

Servo (3/3)
DU-36
HN-227 (3/3)
MB-833
MT-114 (2/2)
SV-213 (3/3)


<NTSC>

- ① TP504 EE/REC/PB mode
 ② TP505 EE/REC/PB mode

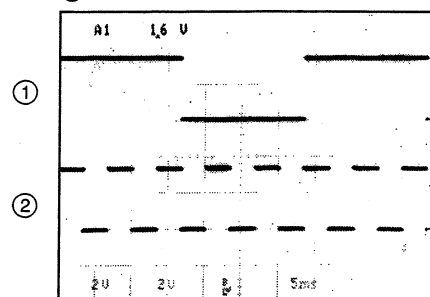


<PAL>

- ① TP504 EE/REC/PB mode
 ② TP505 EE/REC/PB mode

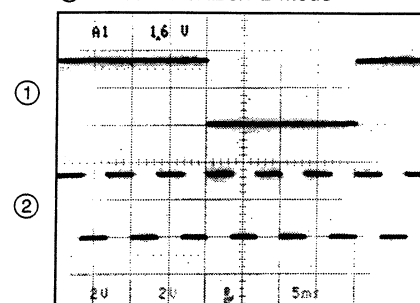


- ③ TP1 REC/PB mode

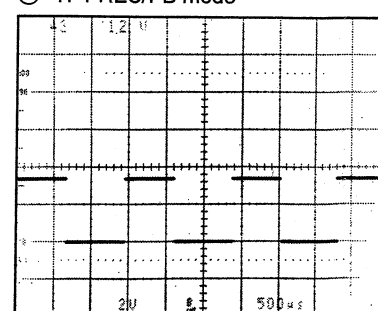


Mini Tape : Tape Top Side

- ④ TP701

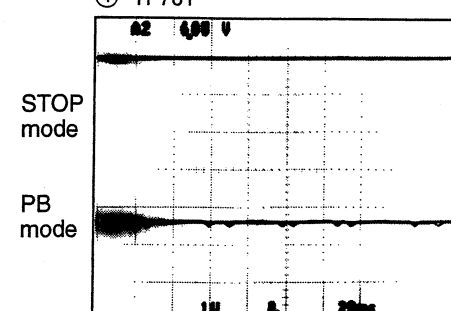


- ⑤ TP704

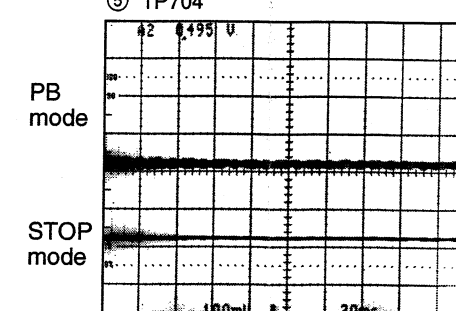

Measurement Condition
 Y, R-Y, B-Y : 75% COLOR BARS
 SETUP 7.5% (for NTSC)
 100% COLOR BARS (for PAL)

EE mode
 REC mode
 PB mode : XH5-1A (for NTSC)
 75% COLOR BARS
 XH5-1AP (for PAL)
 100% COLOR BARS

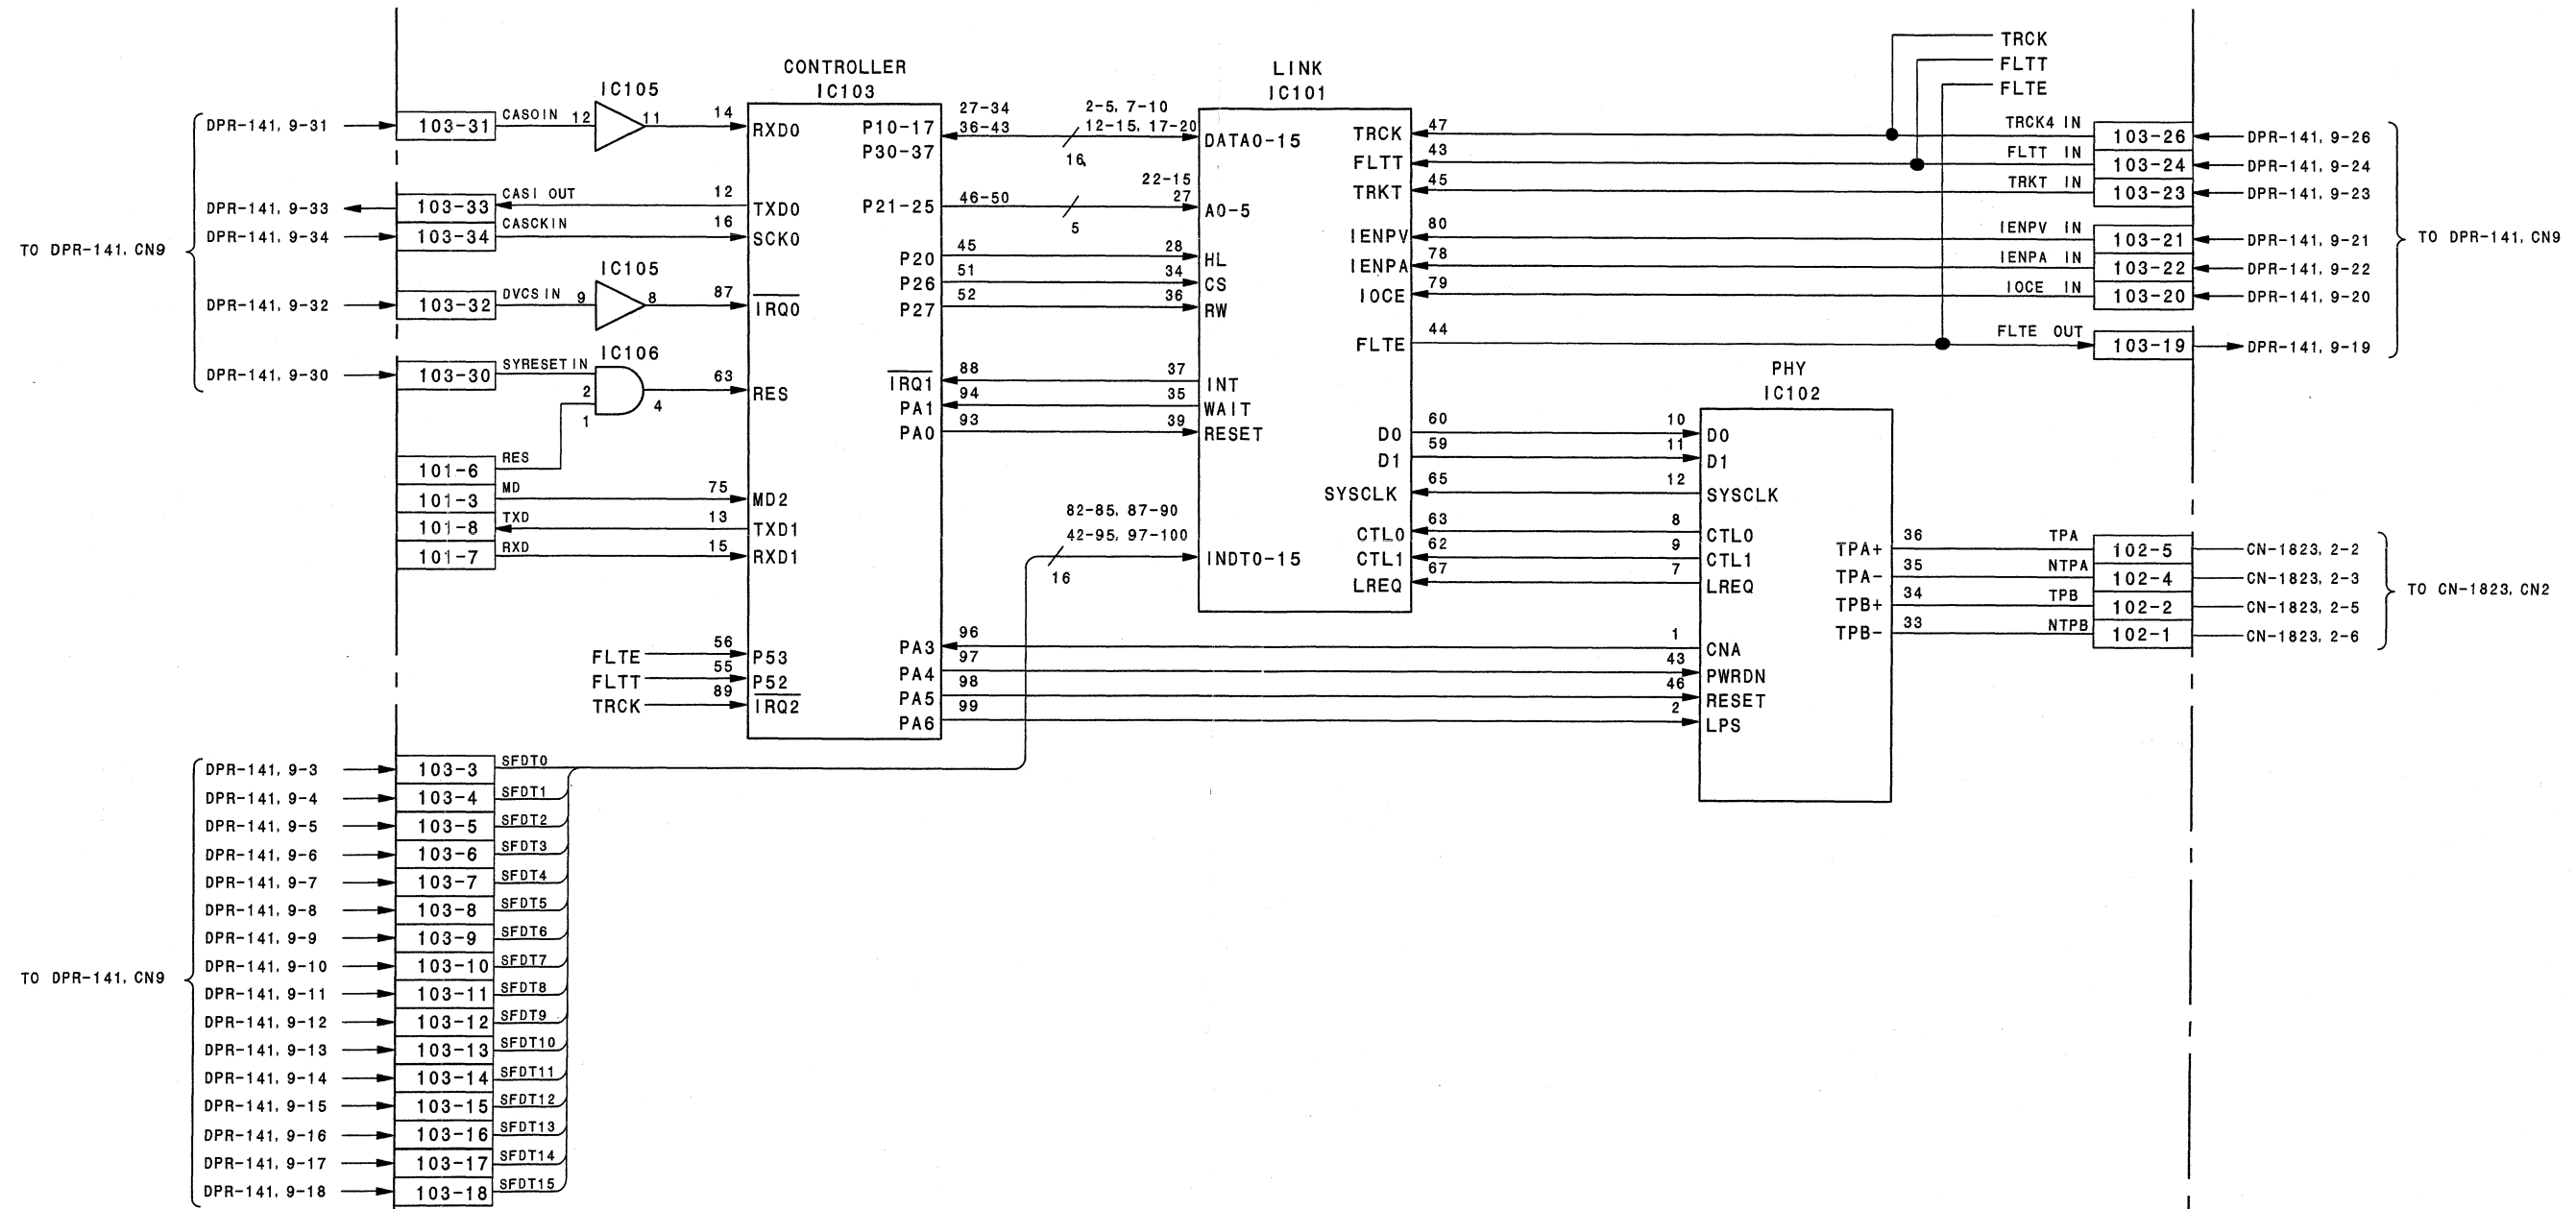


Section 4
Schematic Diagrams and Frame Wiring

Index

| Board | Page | Remarks |
|---------------|------|-----------------------|
| AA-104 | 4-79 | |
| AT-142 | 4-42 | DSR-300A/300AP |
| AT-150 | 4-38 | DSR-390/390P/370/370P |
| CC-68 | 4-78 | |
| CN-1519 | 4-89 | DSR-300A/300AP |
| CN-1811 | 4-45 | |
| CN-1823 | 4-90 | |
| CN-1864 | 4-80 | |
| CN-1865 | 4-80 | |
| CN-1866 | 4-79 | |
| CN-1867 | 4-79 | |
| CN-1873 | 4-89 | |
| CN-1874 | 4-89 | |
| CN-2277 | 4-86 | DSR-390/390P/370/370P |
| CP-315 | 4-87 | DSR-300A/300AP |
| CP-373 | 4-81 | DSR-390/390P/370/370P |
| DPR-141C/141A | 4-12 | |
| DU-36 | 4-94 | |
| DV-21C/21A | 4-90 | |
| ES-31/31P | 4-30 | |
| FP-118A | 4-46 | DSR-390/390P/370/370P |
| FP-122 | 4-56 | DSR-300A/300AP |
| FP-99 | 4-65 | |
| GCN-16 | 4-65 | |
| HN-227 | 4-78 | |
| IR-33 | 4-80 | |
| KY-405 | 4-46 | |
| LE-221 | 4-79 | |
| MB-833 | 4-92 | |
| MT-114 | 4-78 | |
| PA-205 (R) | 4-3 | |
| PA-206 (G) | 4-3 | |
| PA-207 (B) | 4-3 | |
| PS-570 | 4-89 | |
| PSW-71 | 4-80 | |
| RP-91 | 4-66 | |
| SE-295 | 4-78 | |
| SE-297 | 4-78 | |
| SE-298 | 4-70 | |
| SE-566 | 4-38 | |
| SV-213 | 4-70 | |
| SW-18 | 4-79 | |
| SW-19 | 4-80 | |
| SW-929 | 4-65 | |
| TG-187/187P | 4-4 | |
| VA-199 | 4-6 | |
| Frame Wiring | 4-2 | |

Frame Wiring Frame Wiring

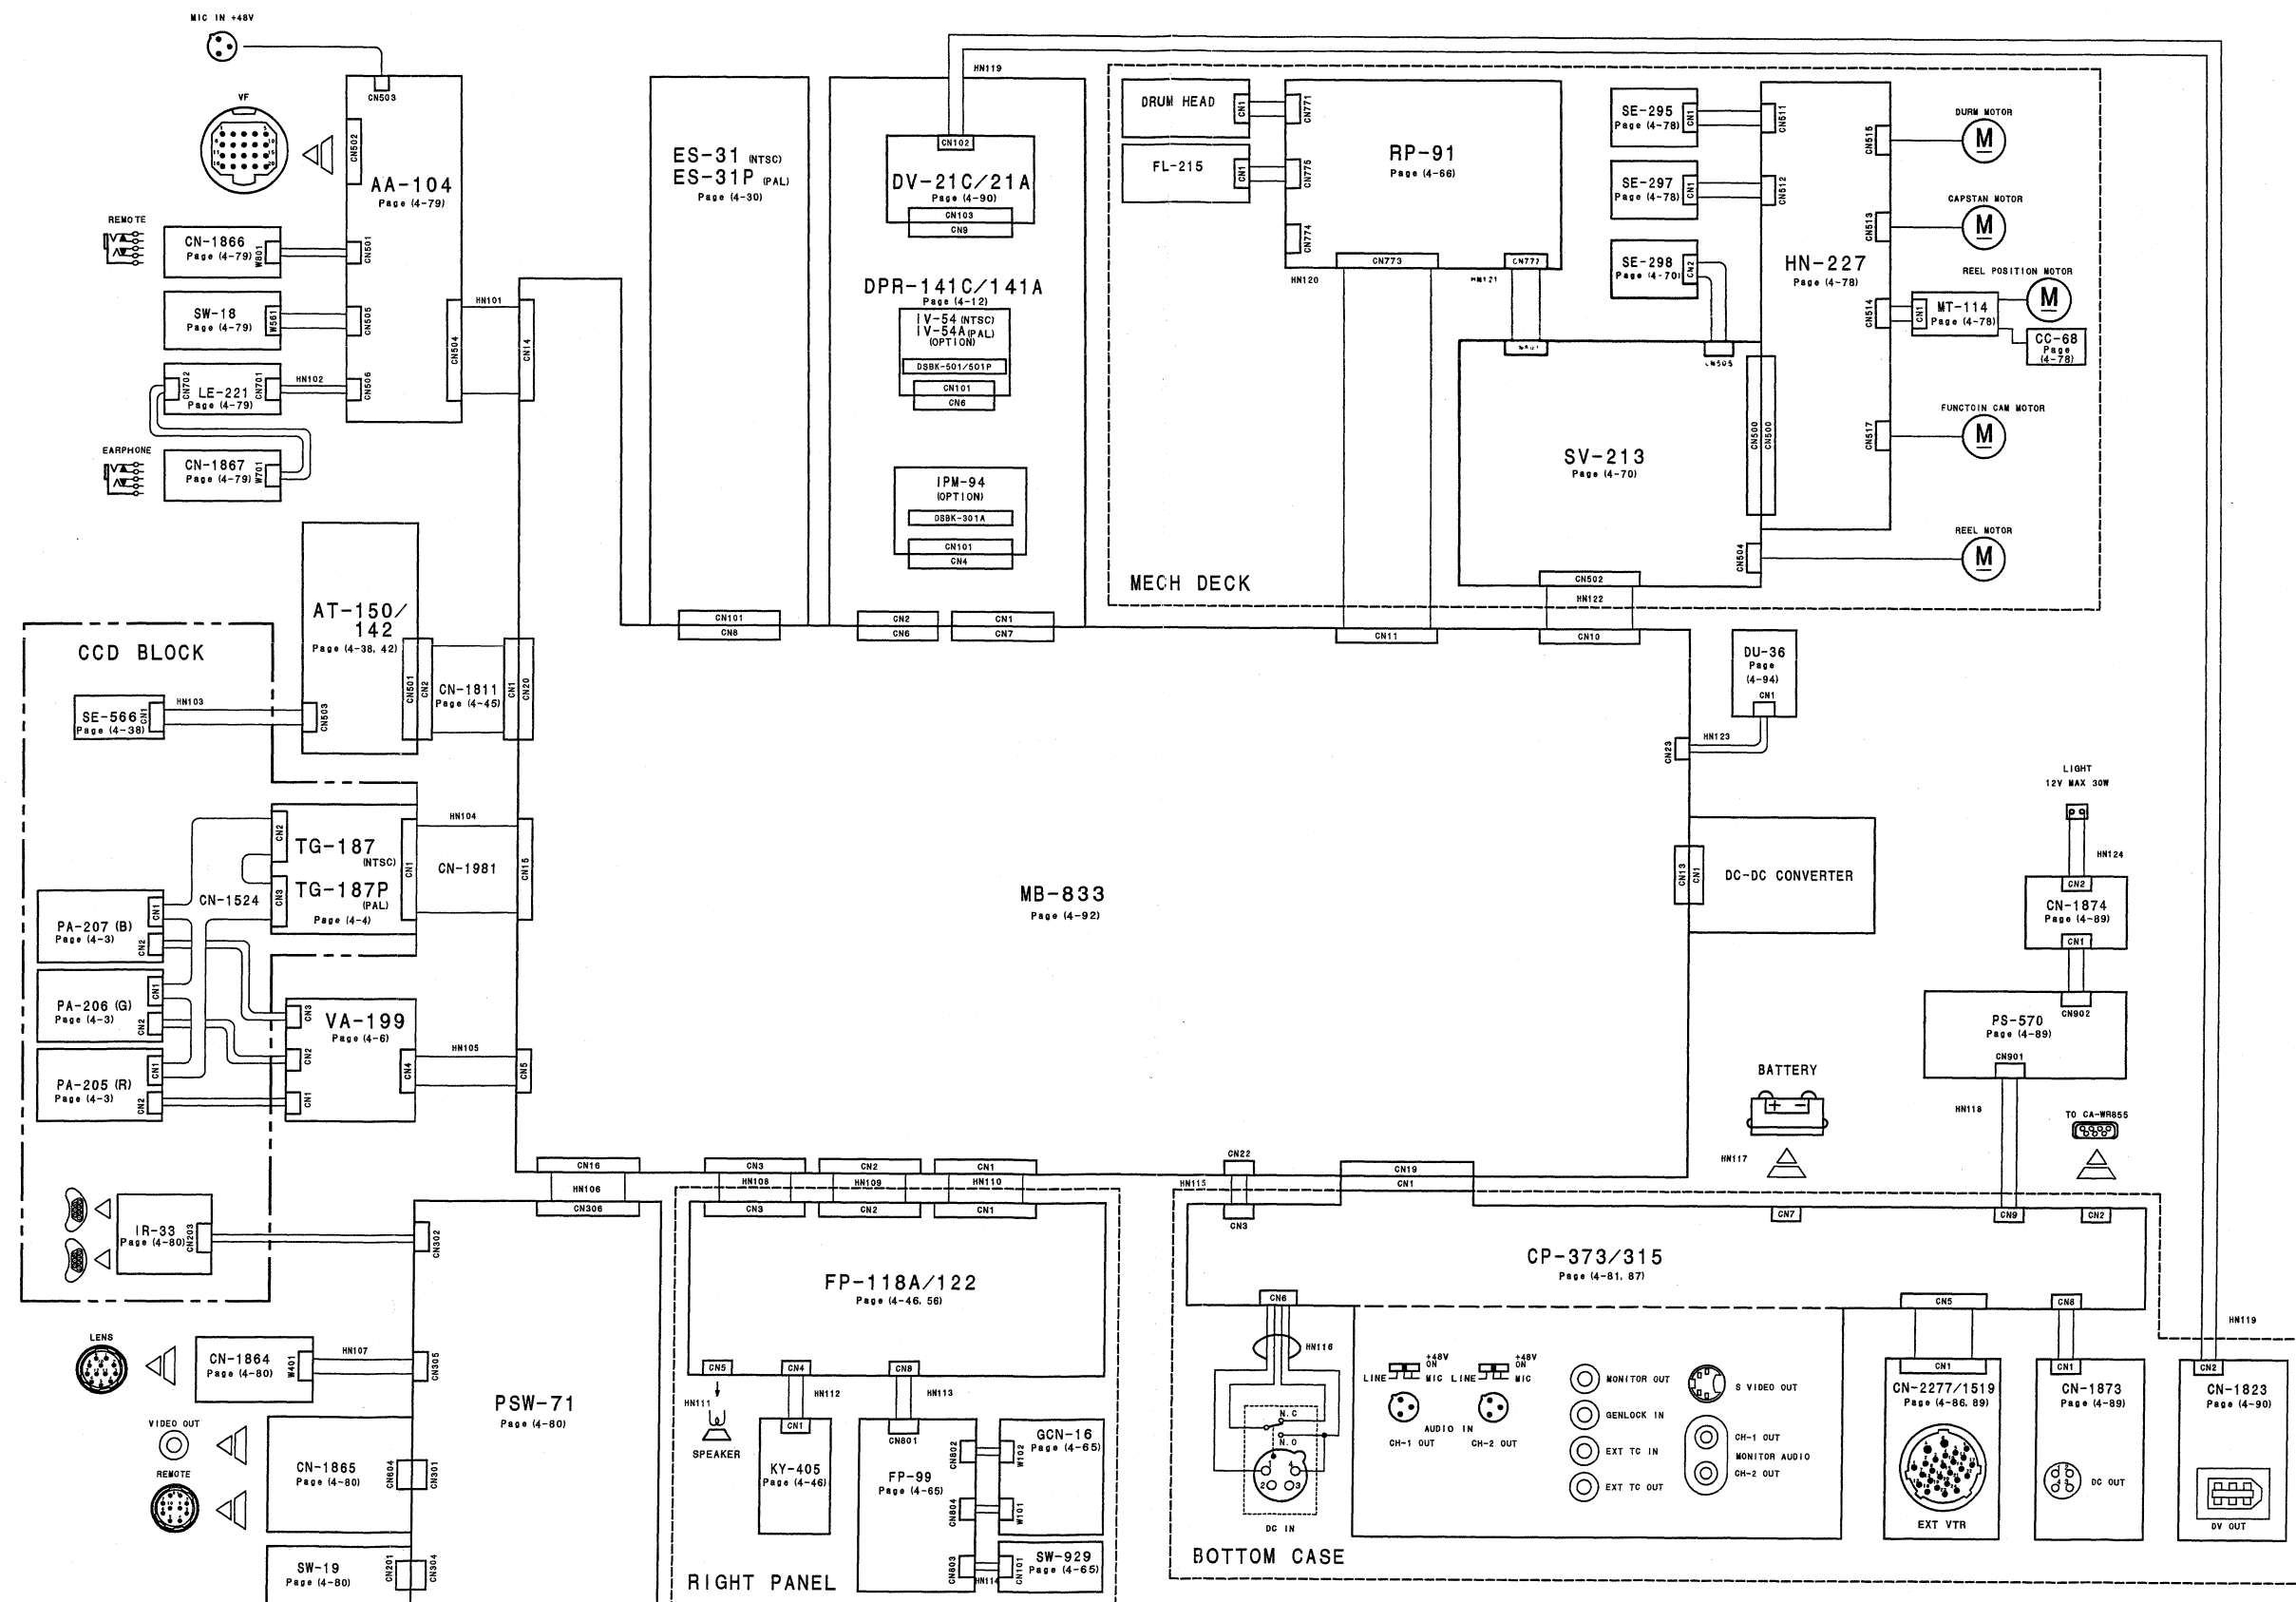

Frame Wiring


PA-205 (R), PA-206 (G), PA-207 (B) PA-205 (R), PA-206 (G), PA-207 (B)


NOTE
NM: NO MOUNT

| REF NO | CHANGE INFORMATION | LOT NO |
|--------|--------------------|--------|
| C21 | 10V → 16V | 221 |
| R7 | 1k → 0 | 341 |

PA-205 (R)
BOARD NO. 1-669-096-12
PA-206 (G)
BOARD NO. 1-669-097-12
PA-207 (B)
BOARD NO. 1-669-098-12
B-DSR300-PA-SM

TG-187/187P



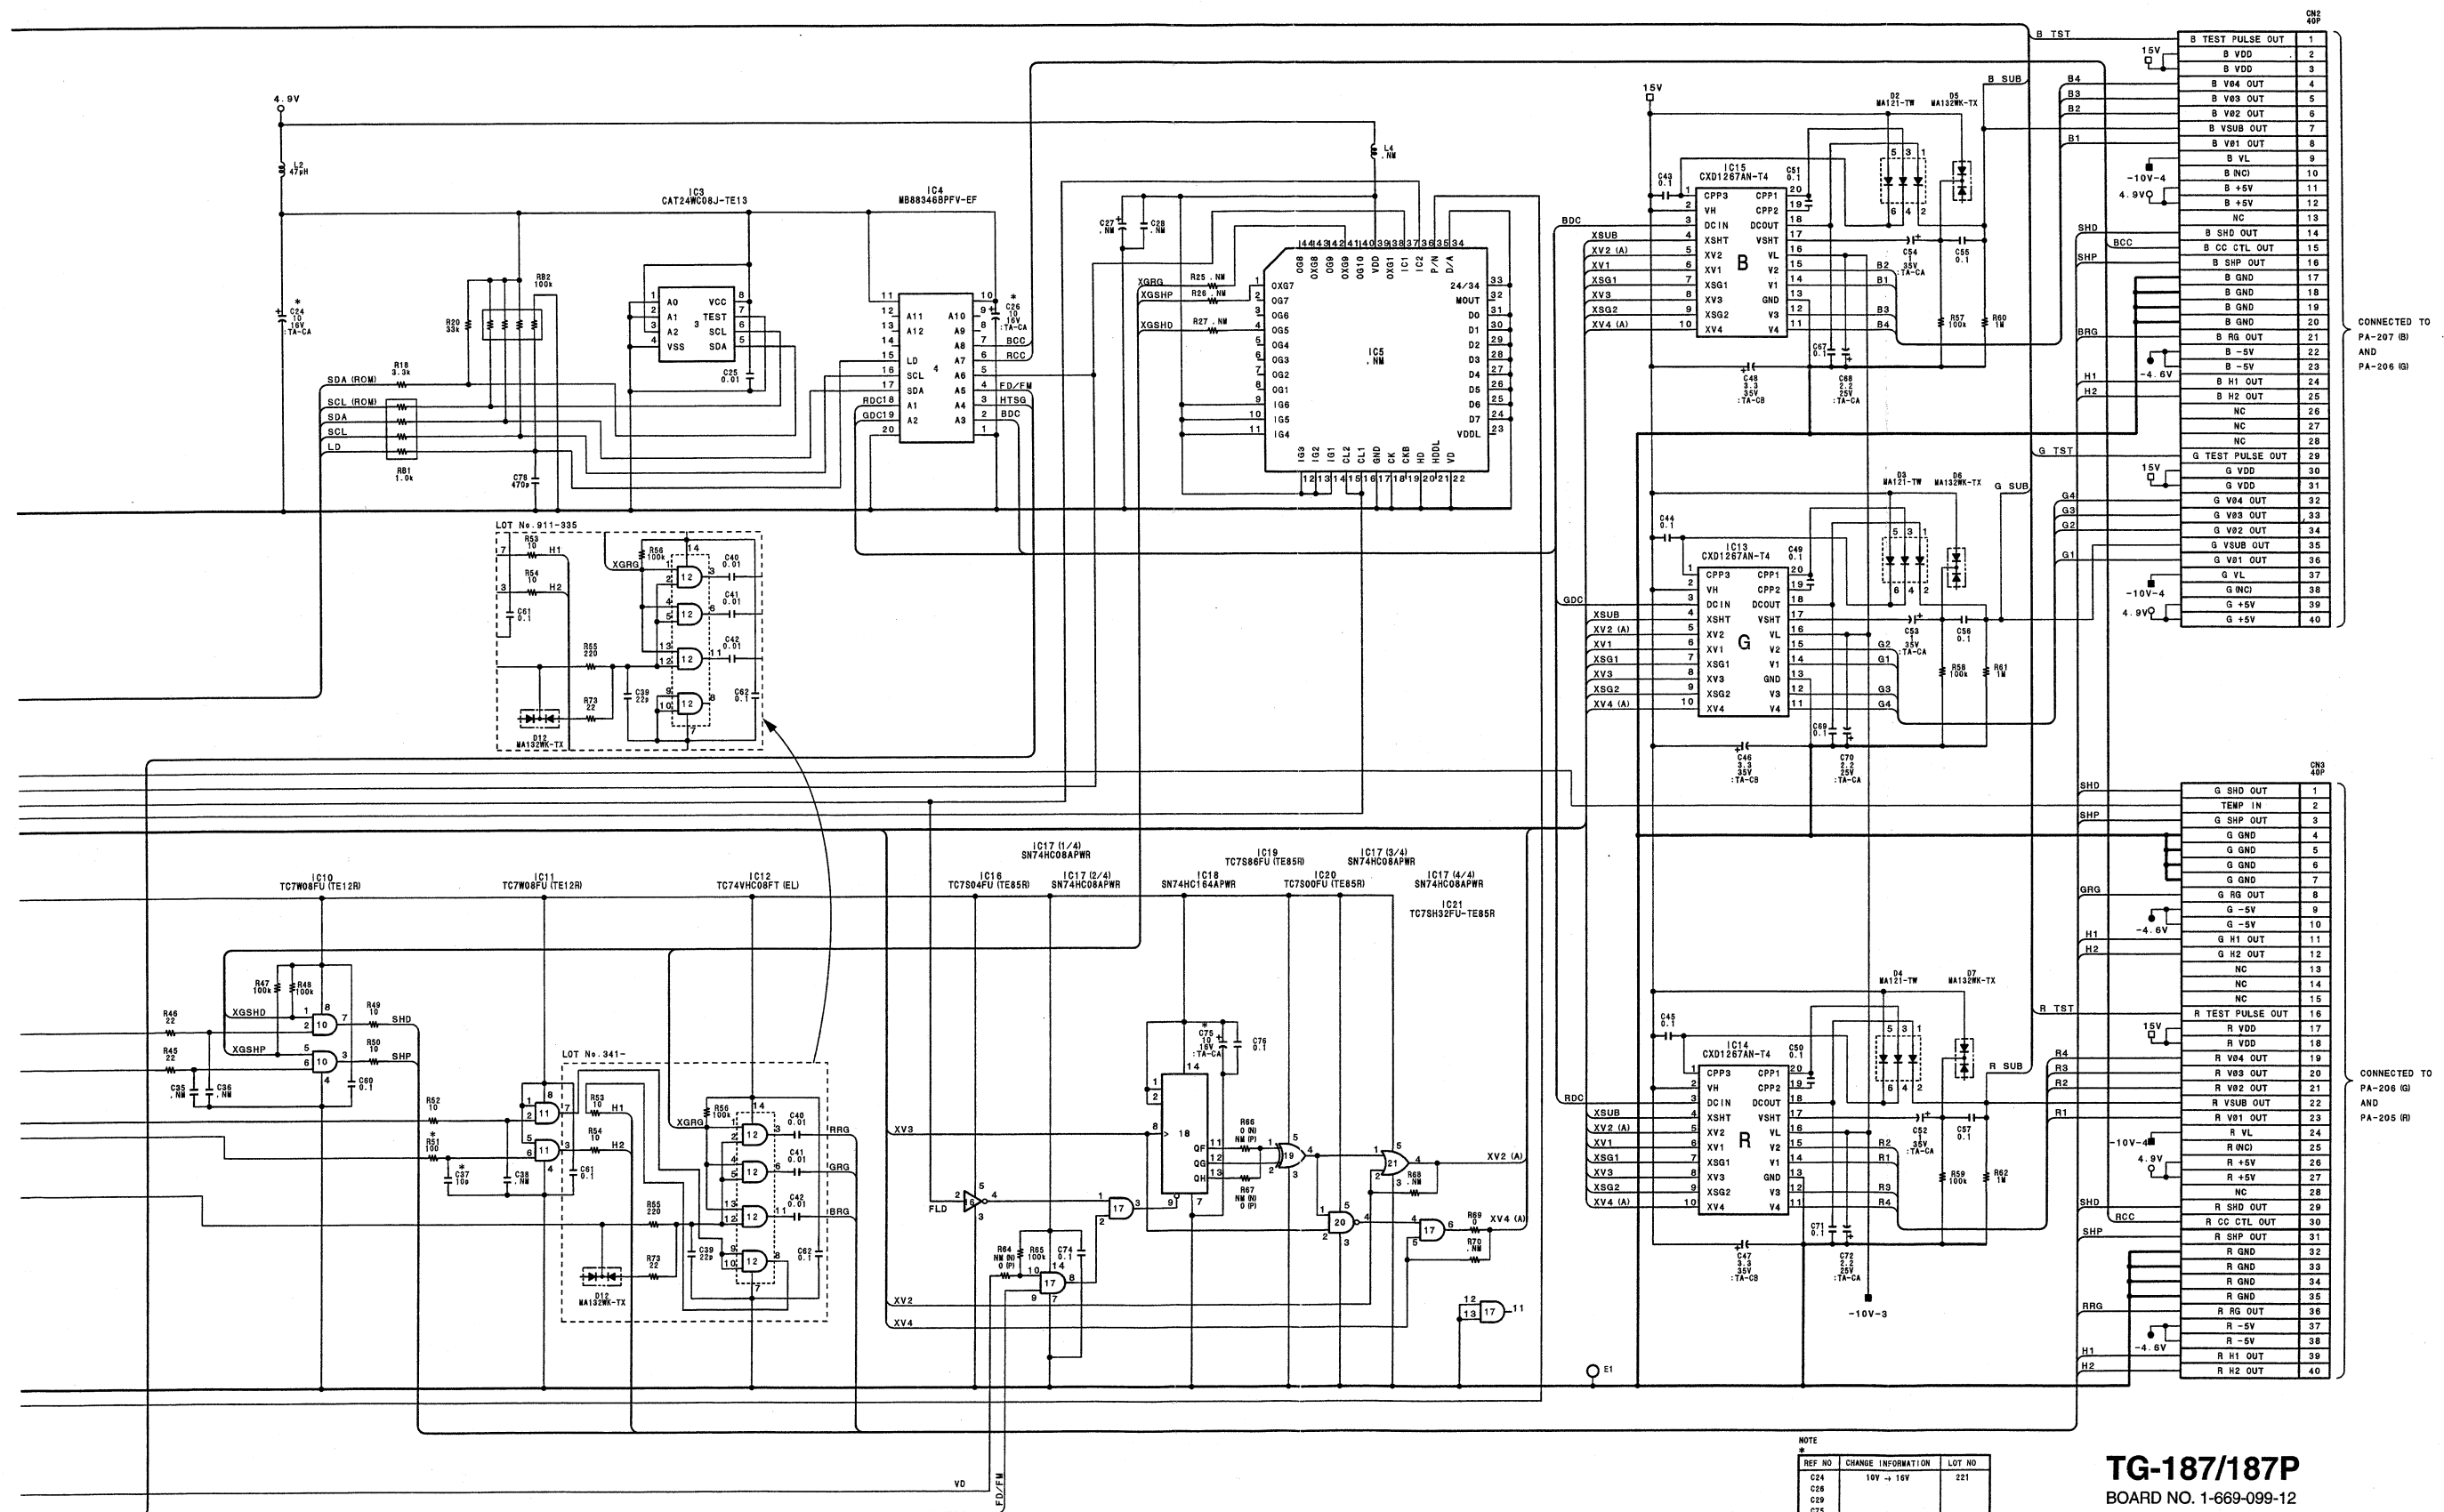

VA-199 (1/3) VA-199 (1/3)


1

2

3

4

5

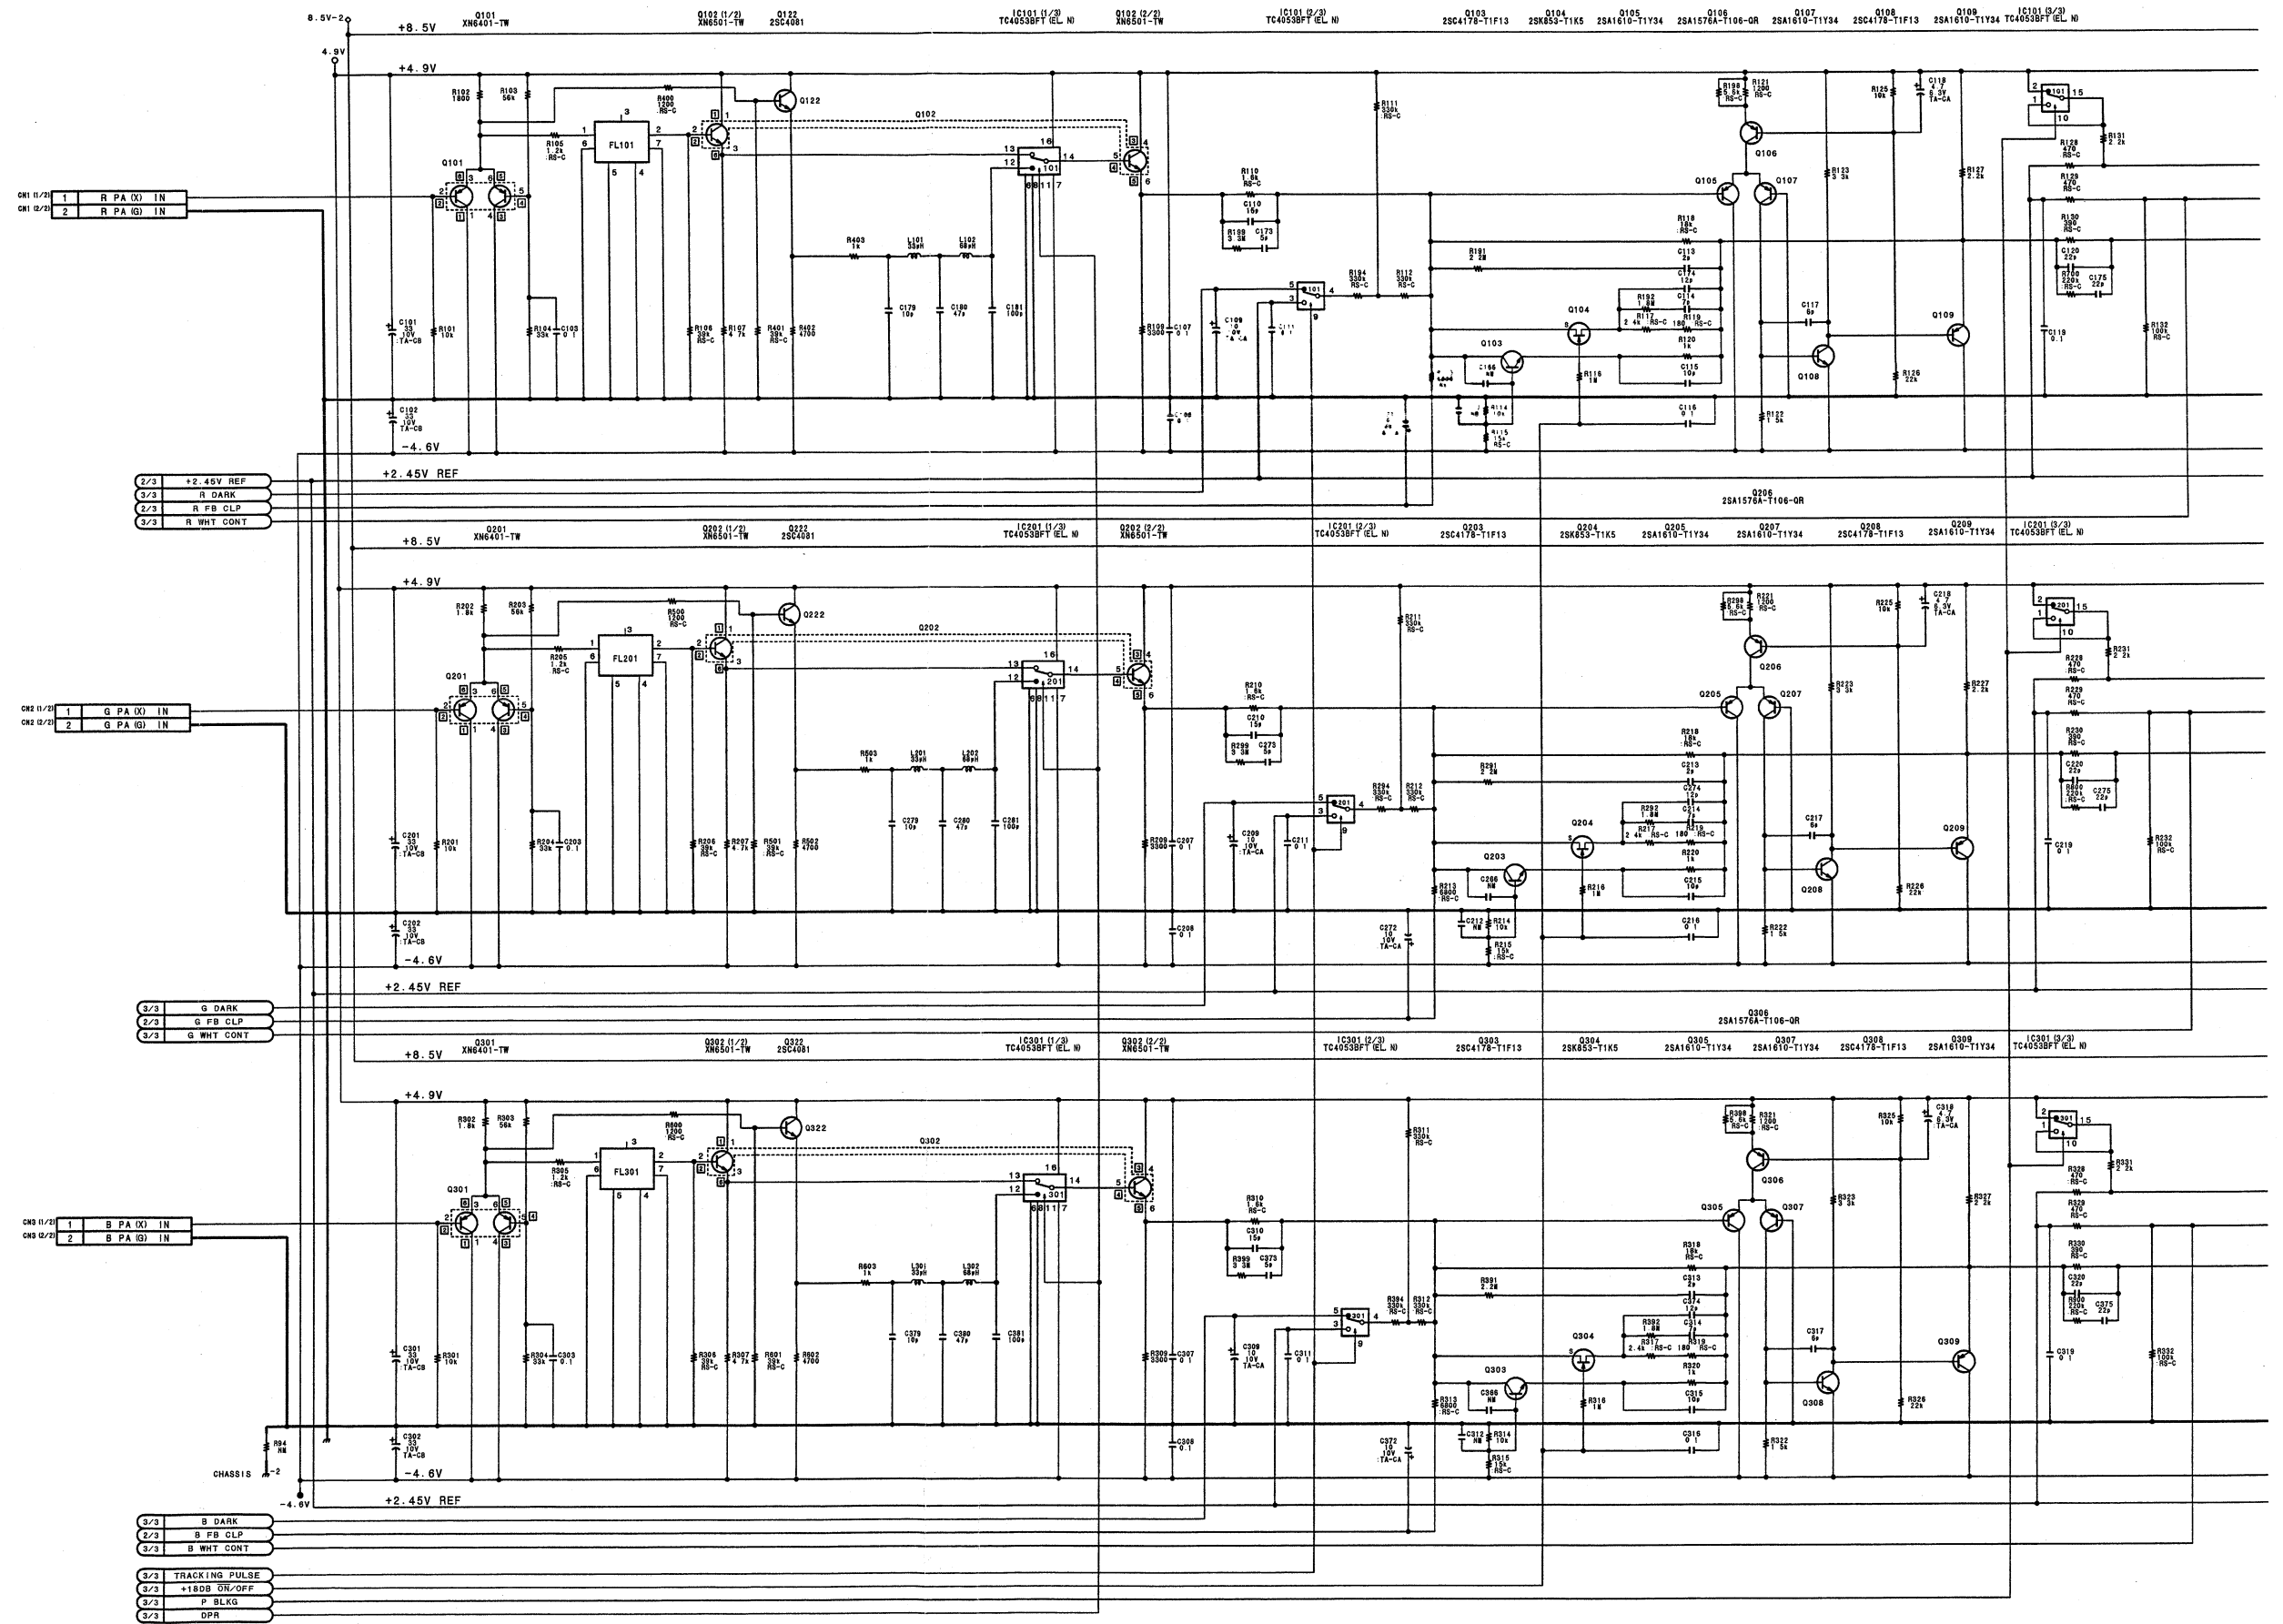

4-6

4-6

DSR-390/390P/370/370P/300A/300AP V2

A

B

C


D

E

F

G

H

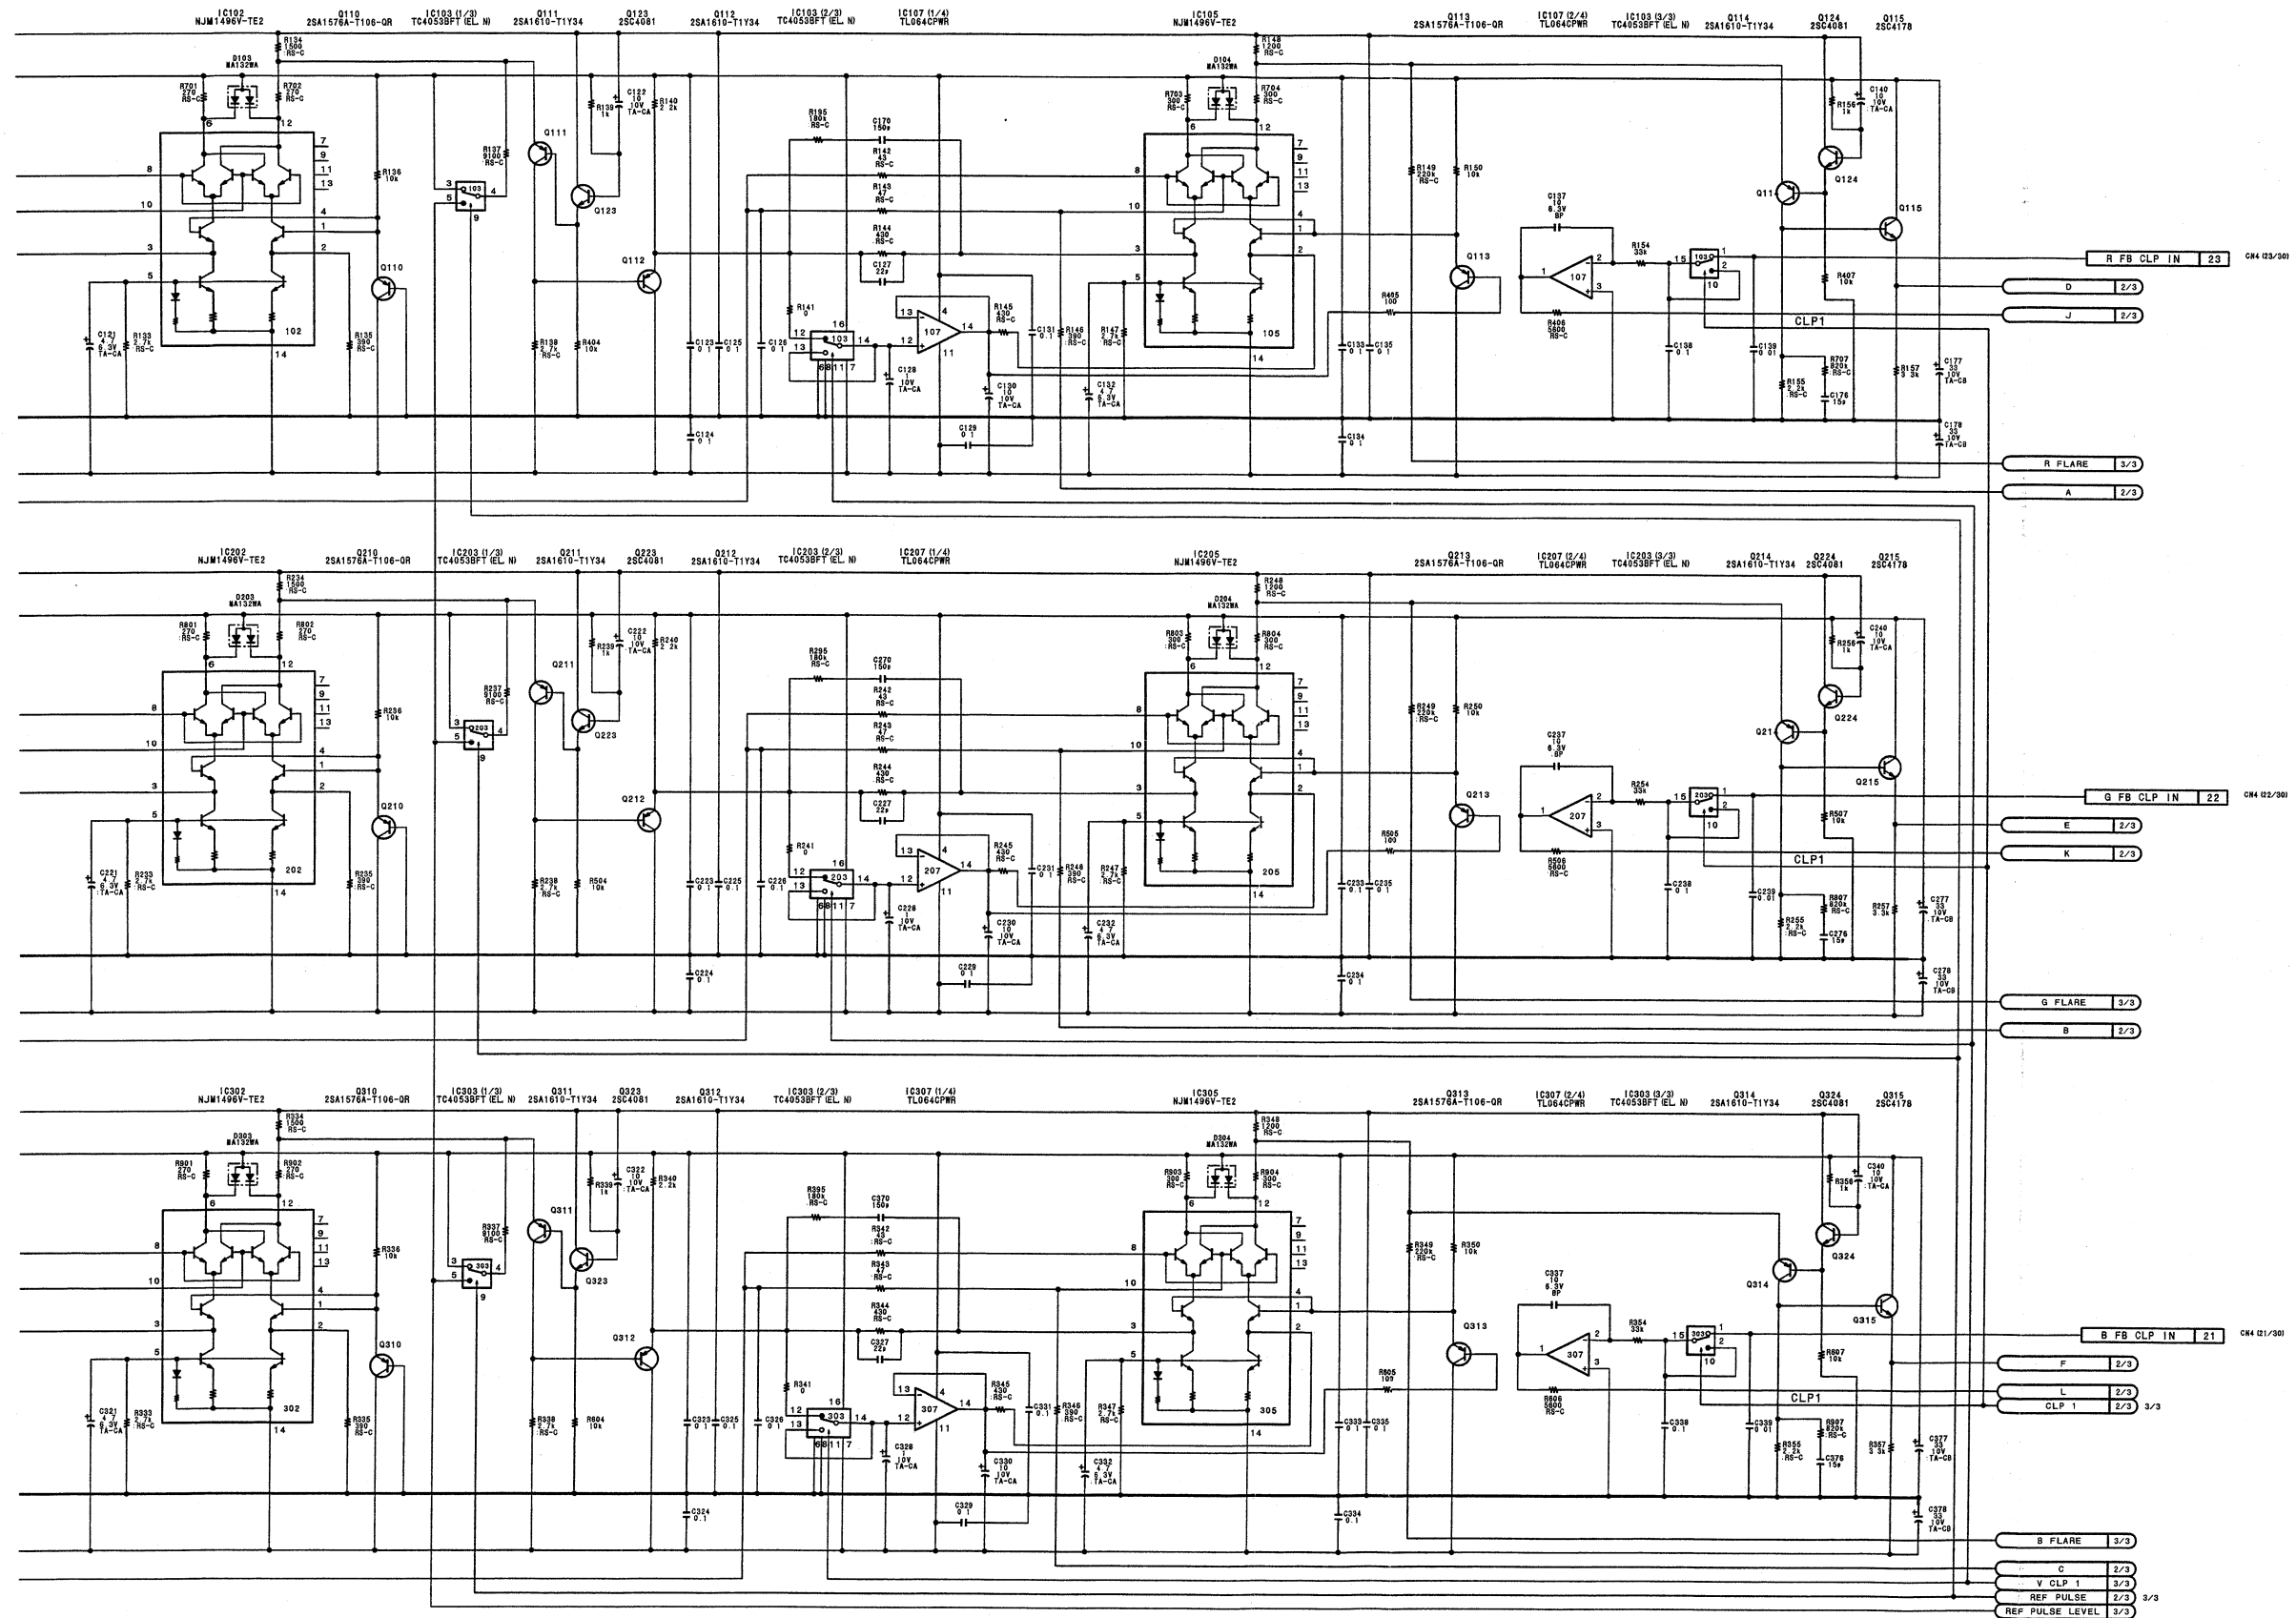

1

1/3 D

2

1/3 A
1/3 R FB CLP
1/3 E
1/3 B
1/3 G FB CLP
1/3 F
1/3 C
1/3 B FB CLP
3/3 REF PULSE
3/3 I
3/3 CLP 1

3

3/3 V0
3/3 G
3/3 H
1/3 B WHT CONT
3/3 V CLP 1
1/3 G WHT CONT
1/3 R WHT CONT
1/3 B FLARE
1/3 G FLARE
1/3 R FLARE
1/3 B DARK
1/3 G DARK
1/3 R DARK


4

CR4 (1/3/3) 11 LD (VA1) IN
CR4 (1/3/3) 12 LD (VA2) IN
CR4 (1/3/3) 13 SCL (D/A) IN
CR4 (1/4/3) 14 SDA (D/A) IN

5

1/3 +2.45V REF

1/3 REF PULSE LEVEL

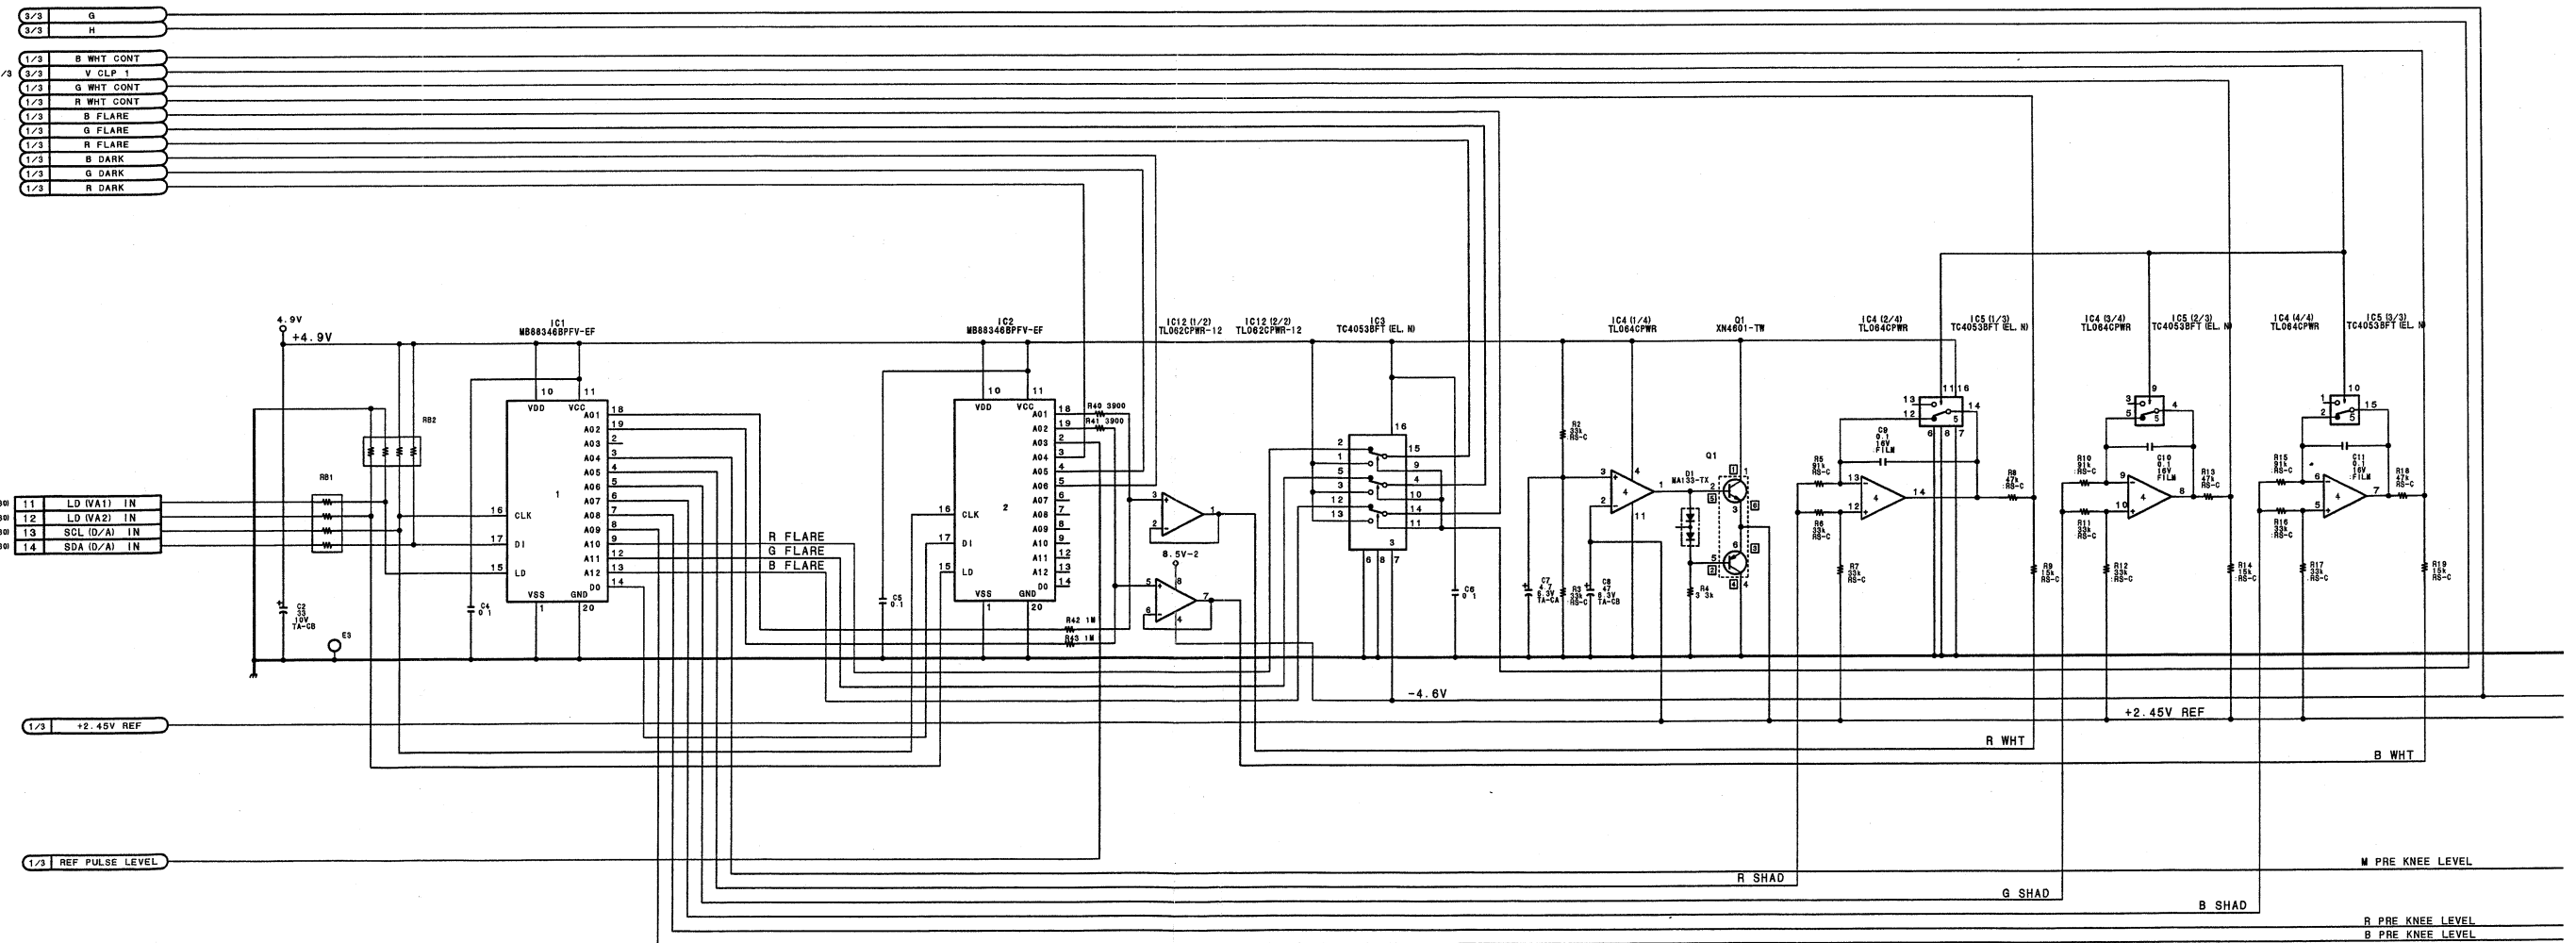

4-8

4-8

A

B

C


D

E

F

G

H

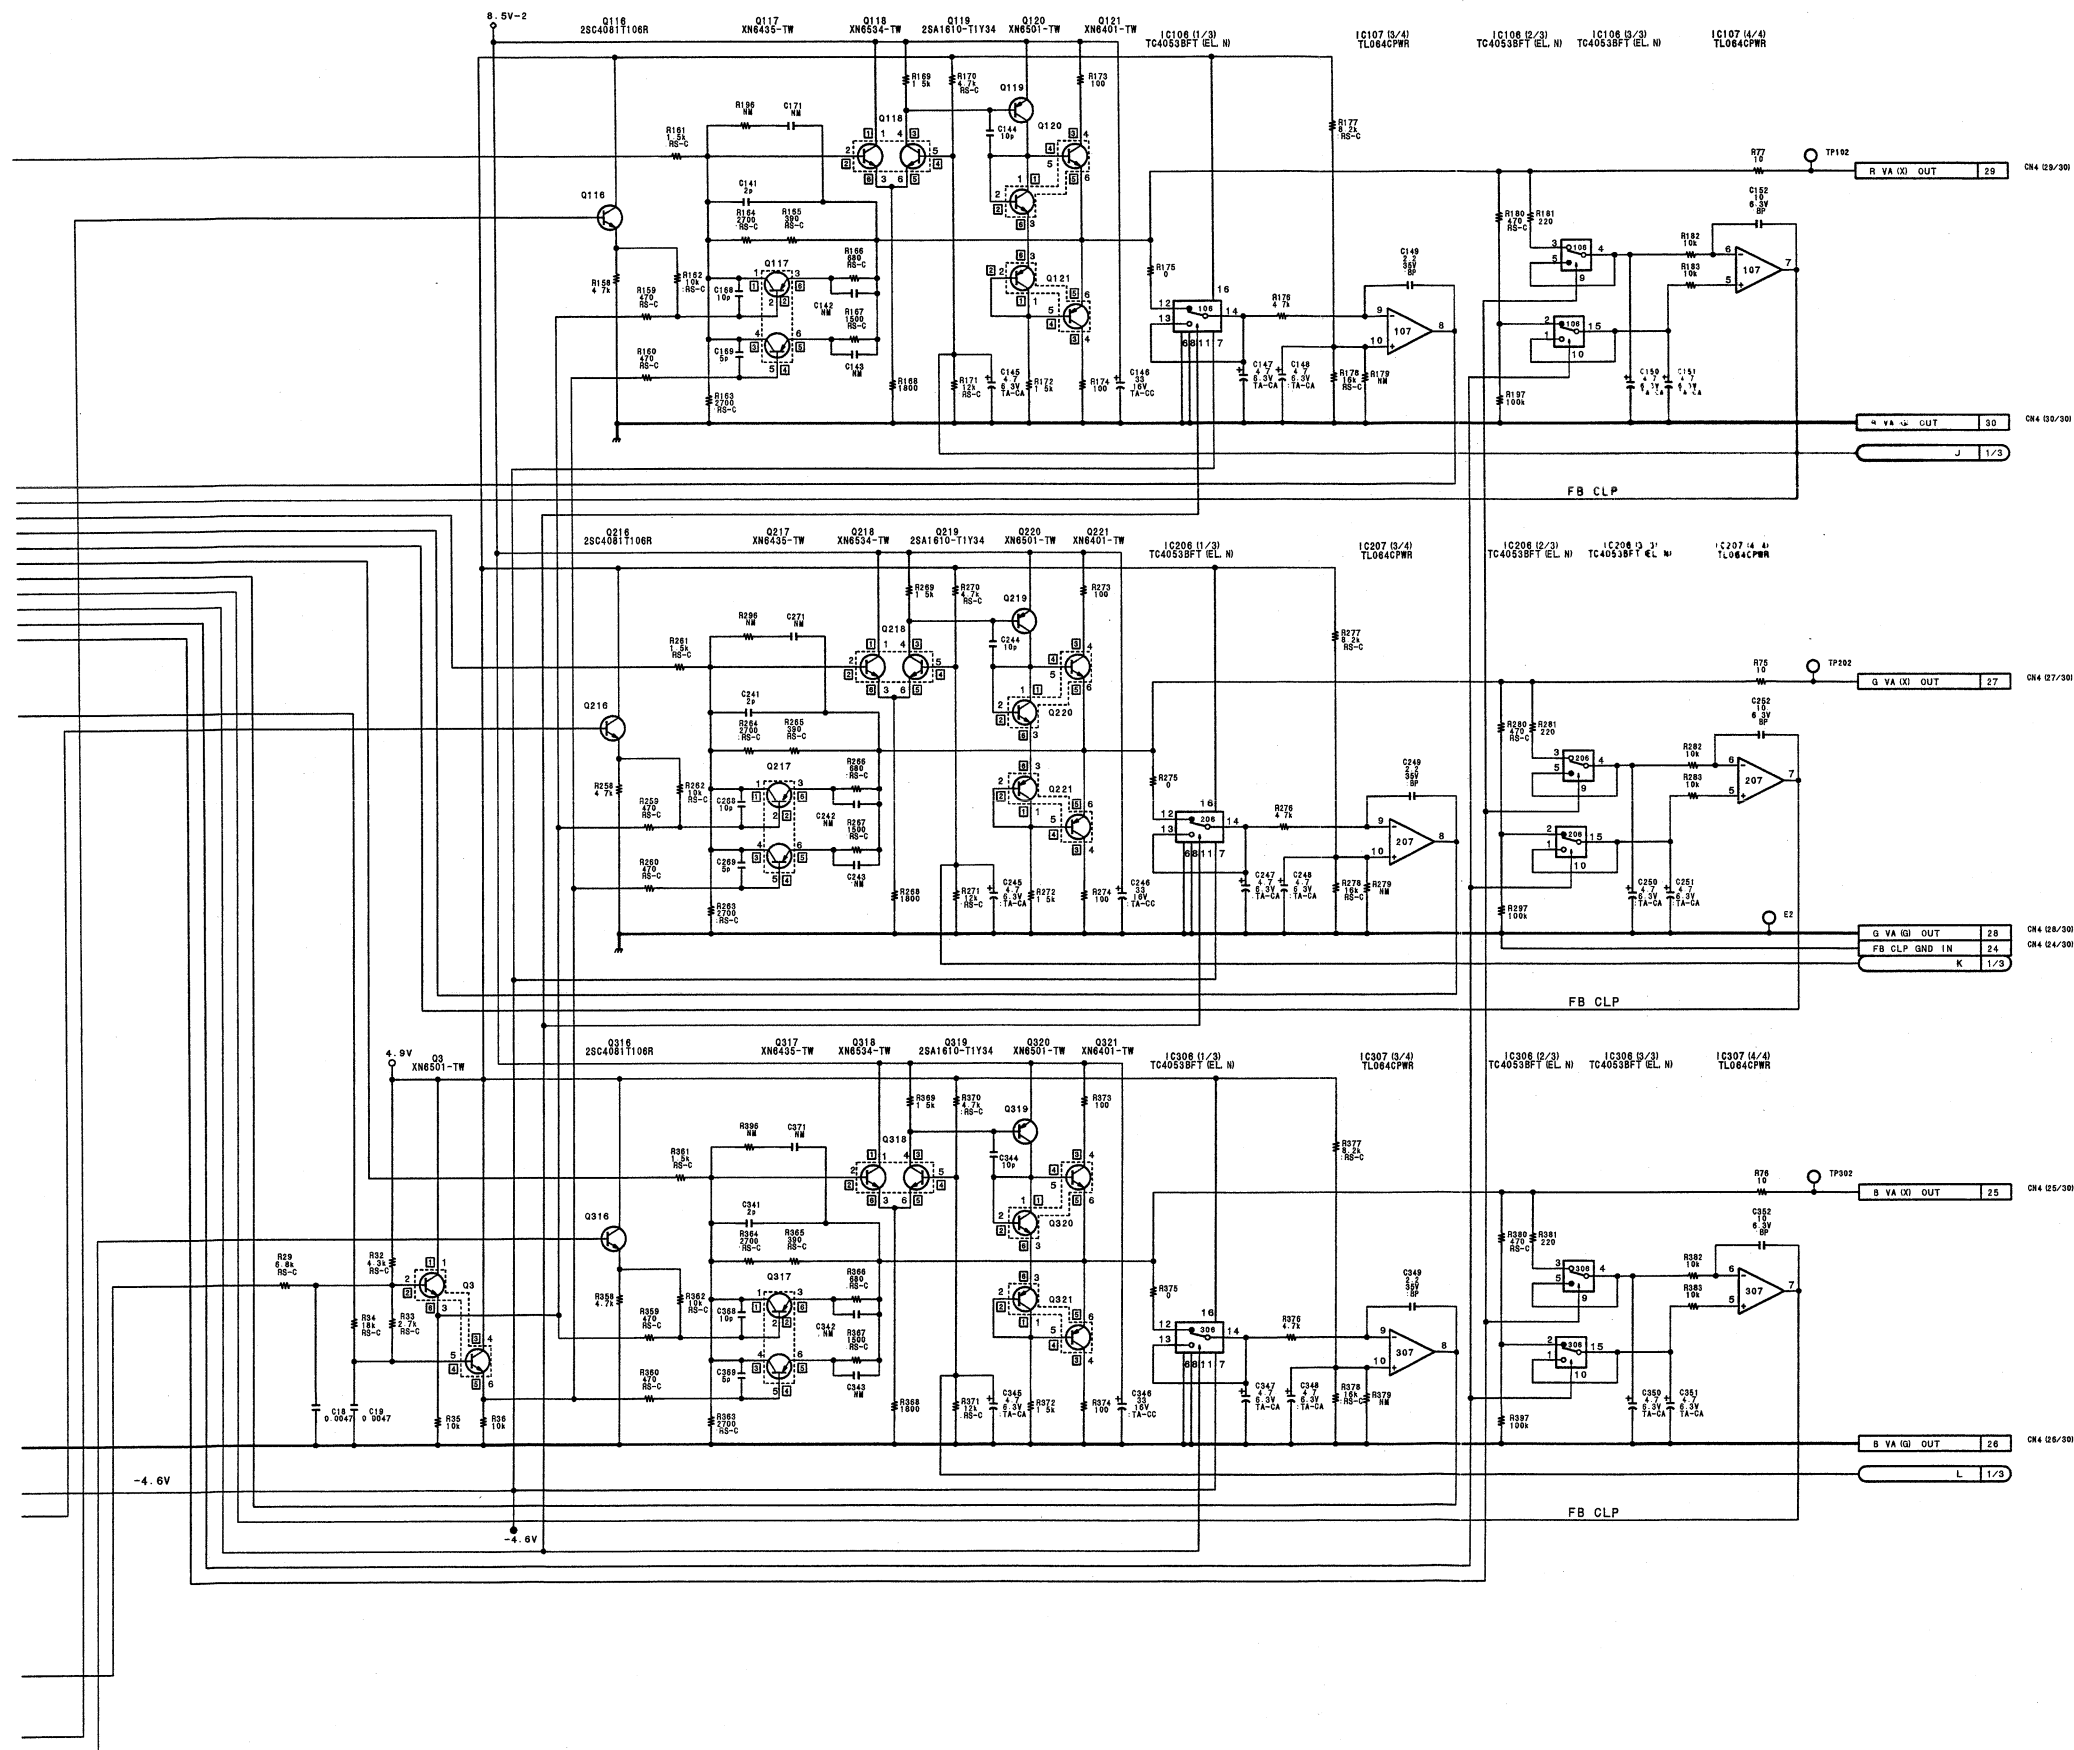

VA-199 (2/3)
BOARD NO. 1-677-373-11, 12
B-DSR300A-VA199-11


1


2

3

4

5

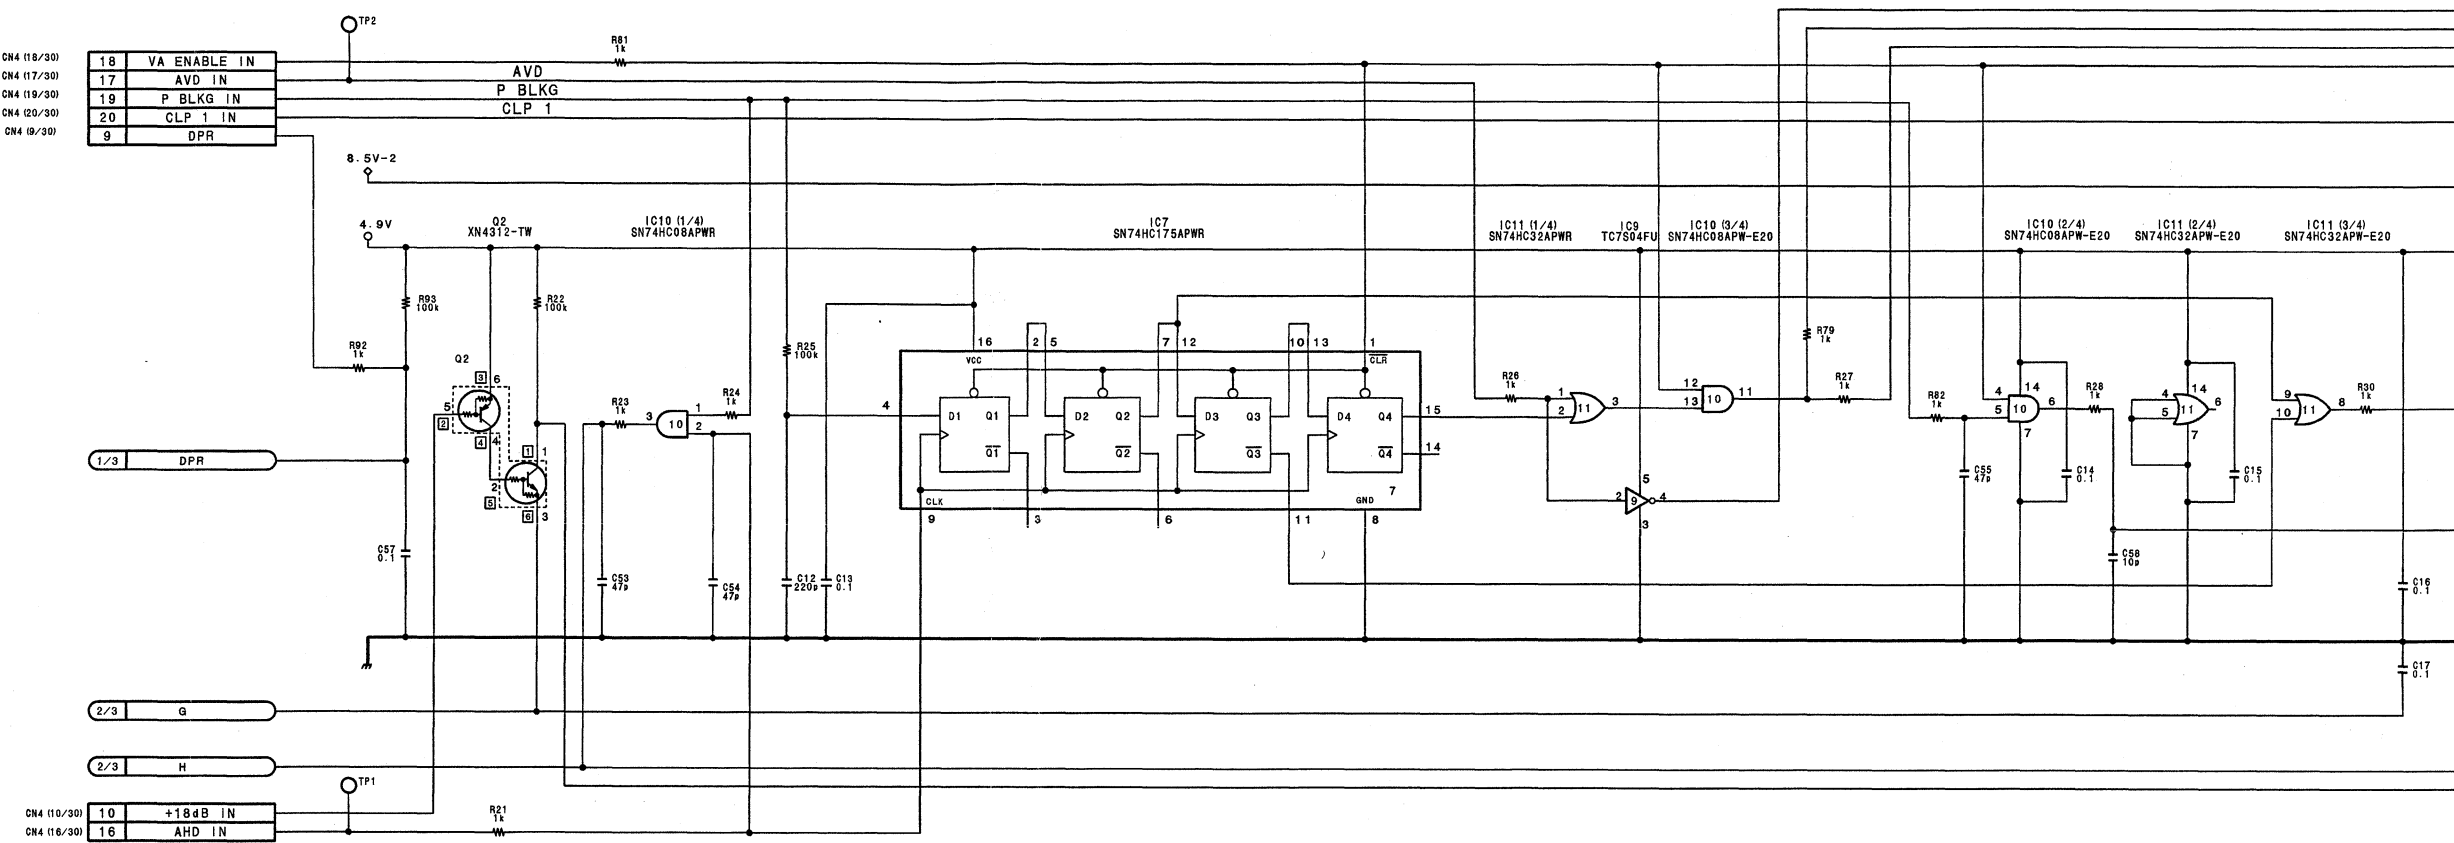

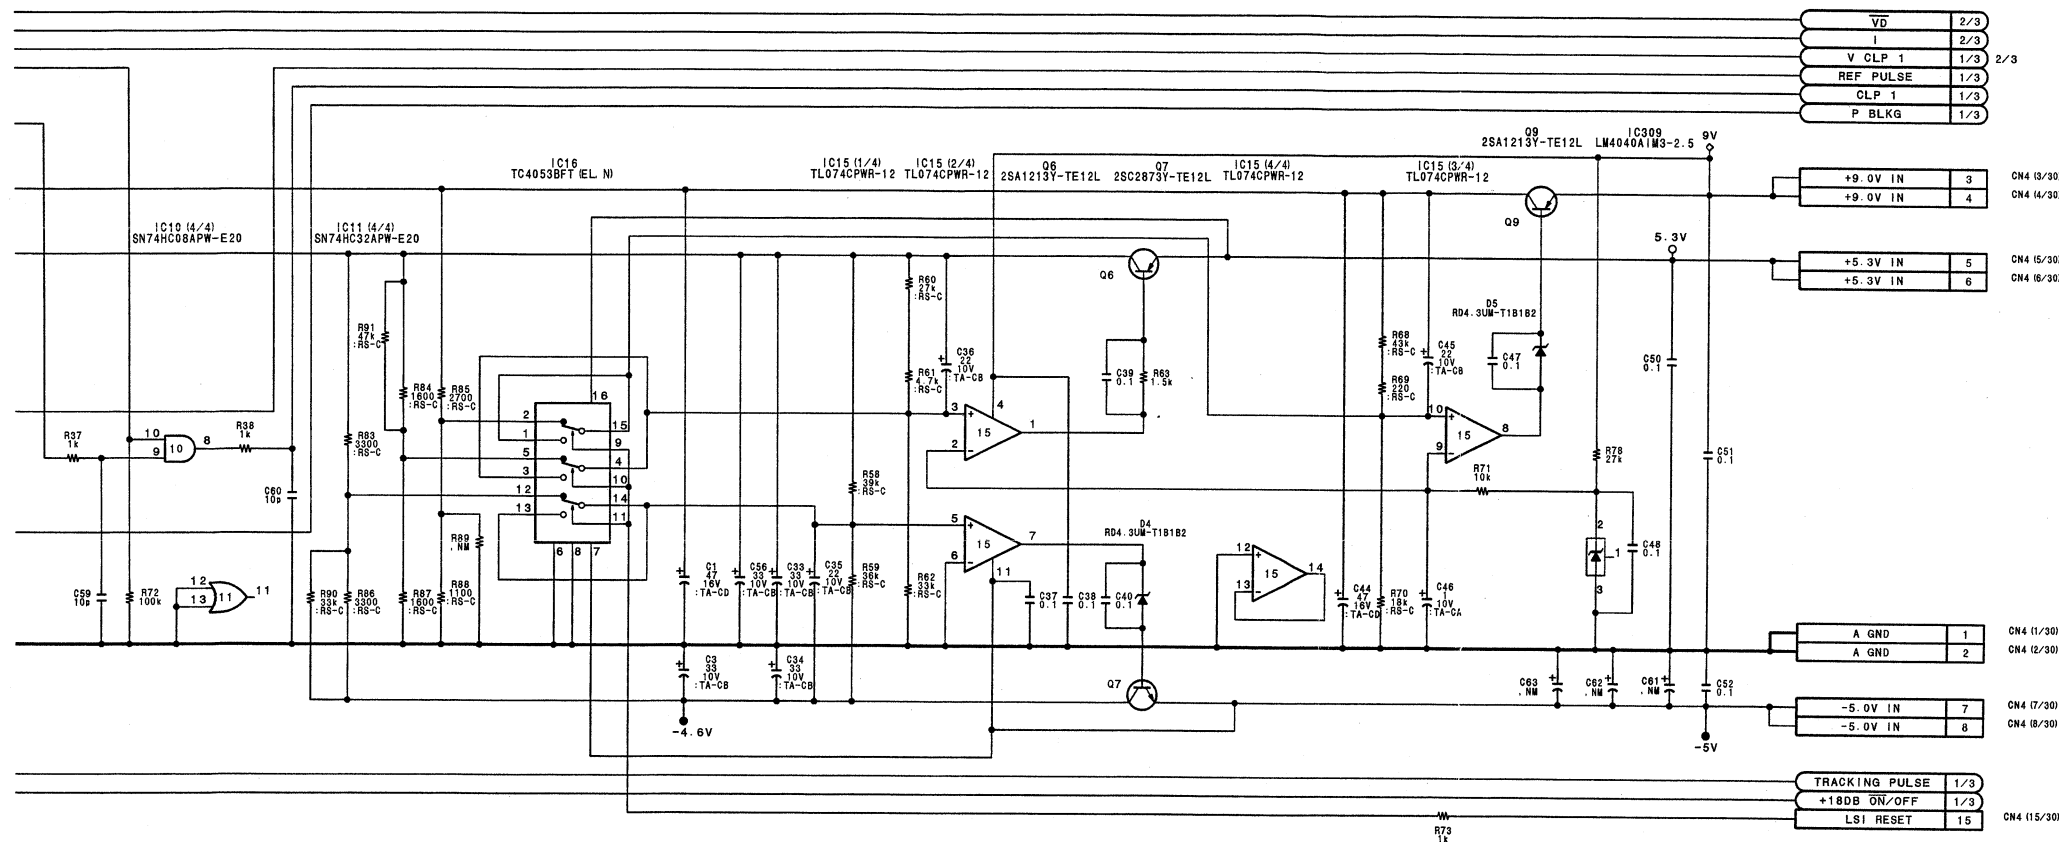

DPR-141C/141A (1/9)
SUFFIX: -13, -14

1



3

4

5

BOARD NO. 1-673-975-13, 14
DSR-370_DPR-141_016_1

A

B

C

D

E


F

G

H

DPR-141C/141A (2/9)
SUFFIX: -13, -14

DPR-141C/141A (2/9)
SUFFIX: -13, -14

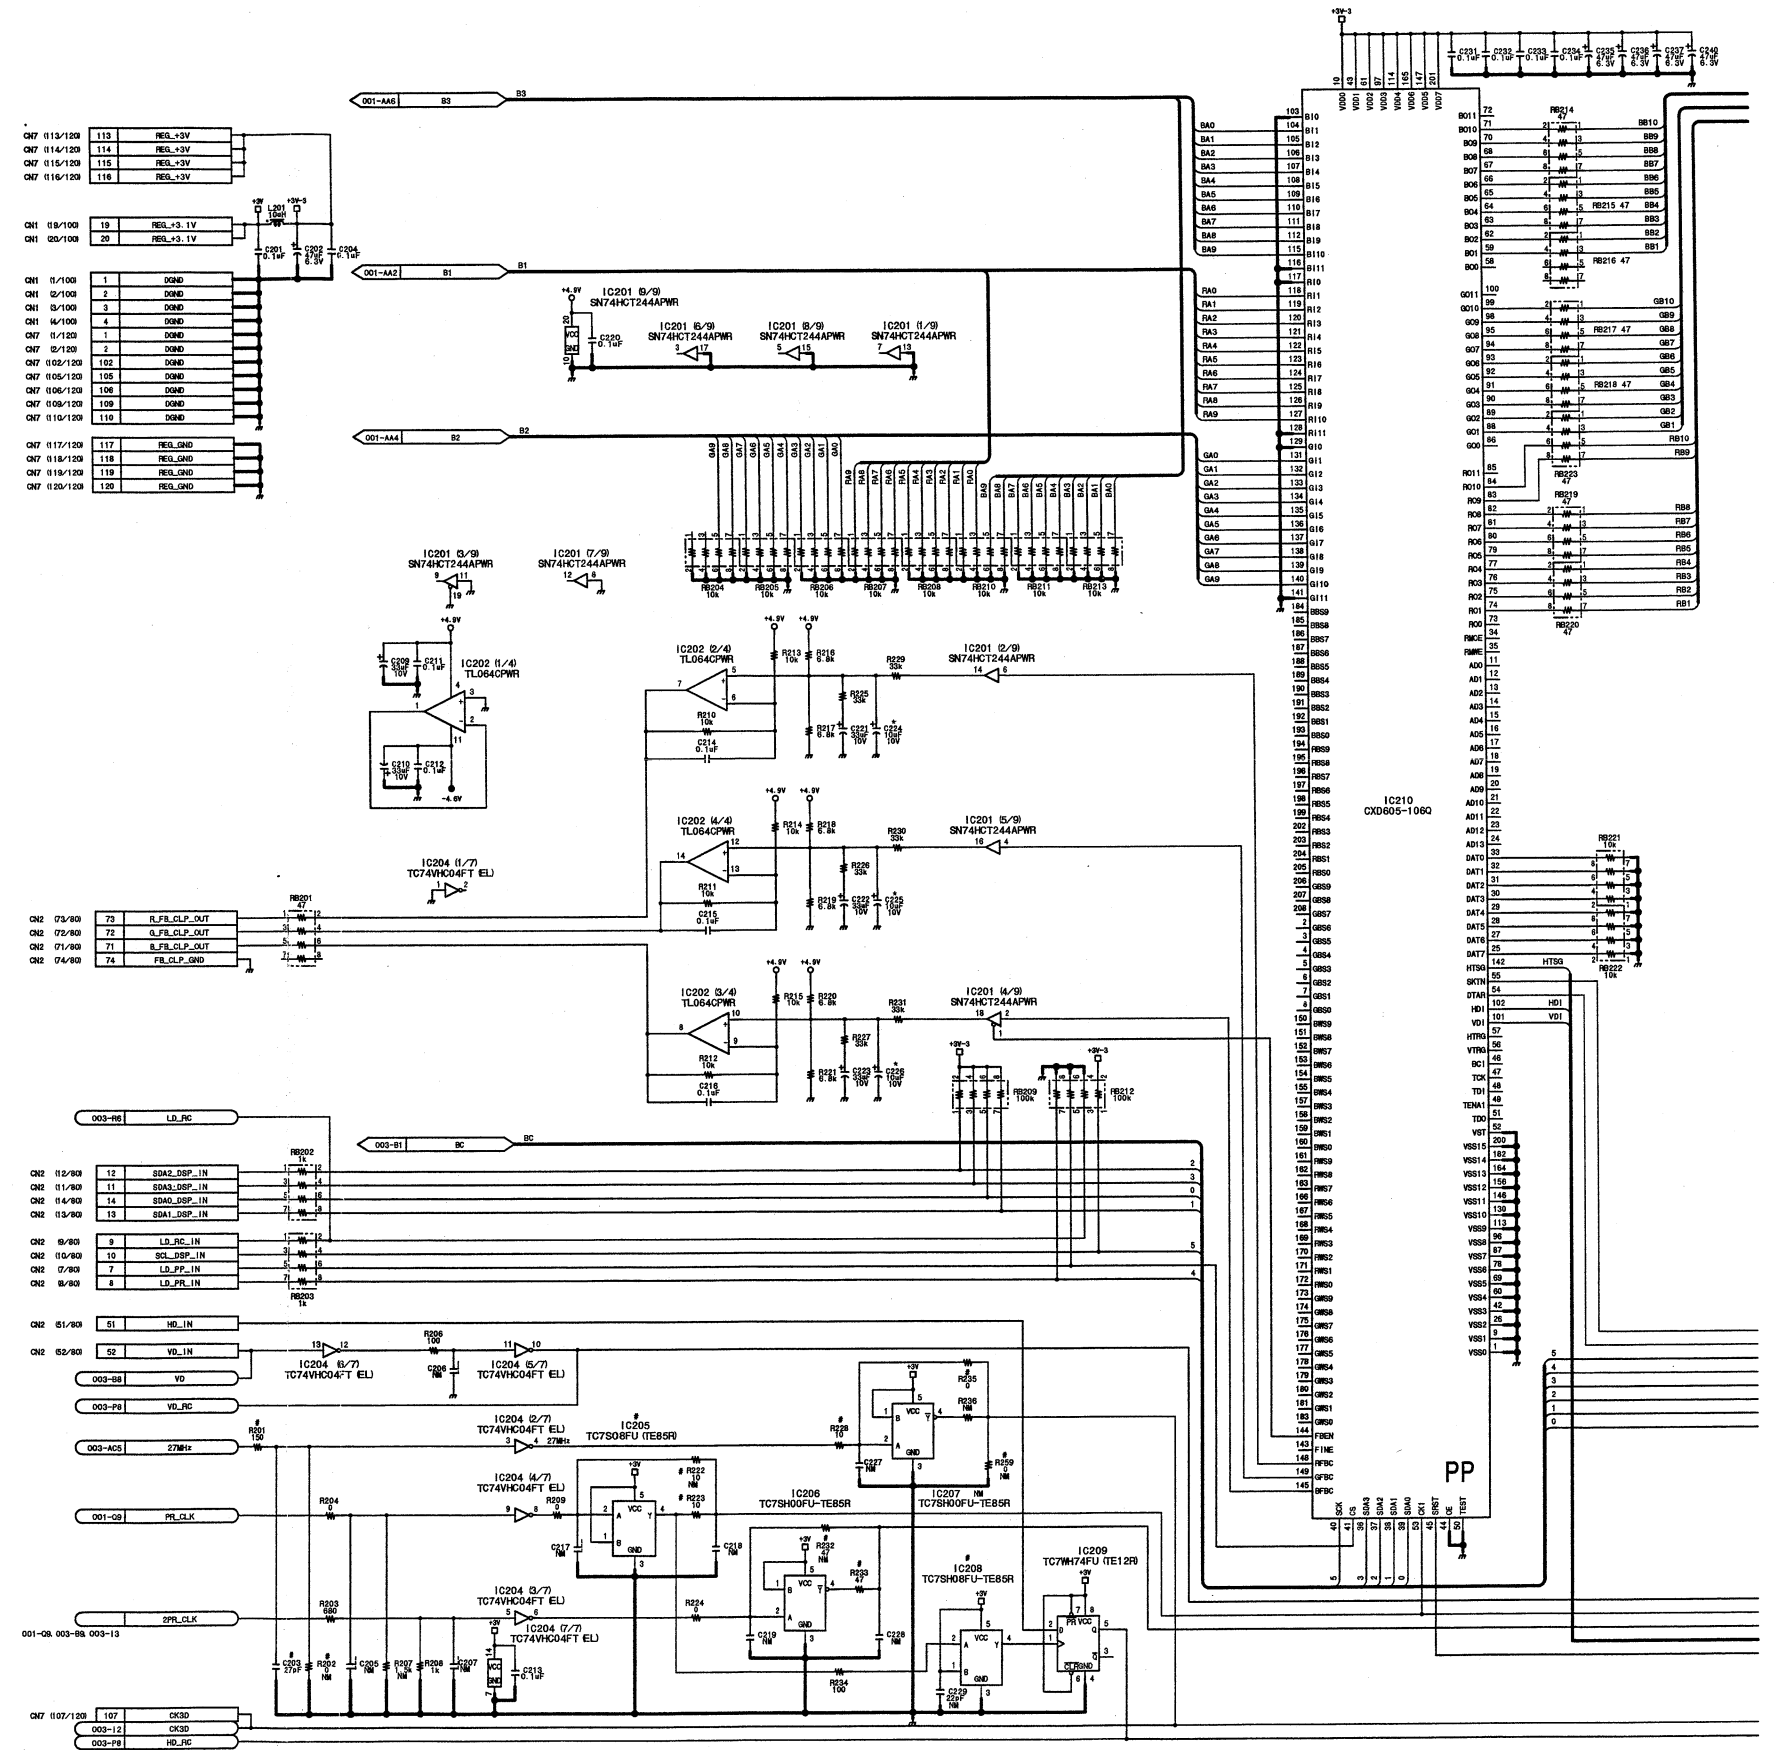

4-14 (b)

4-14 (b)

DSR-390/390P/370/370P/300A/300AP V2

DPR-141C/141A (2/9)
SUFFIX: -13, -14


1



3

4

5

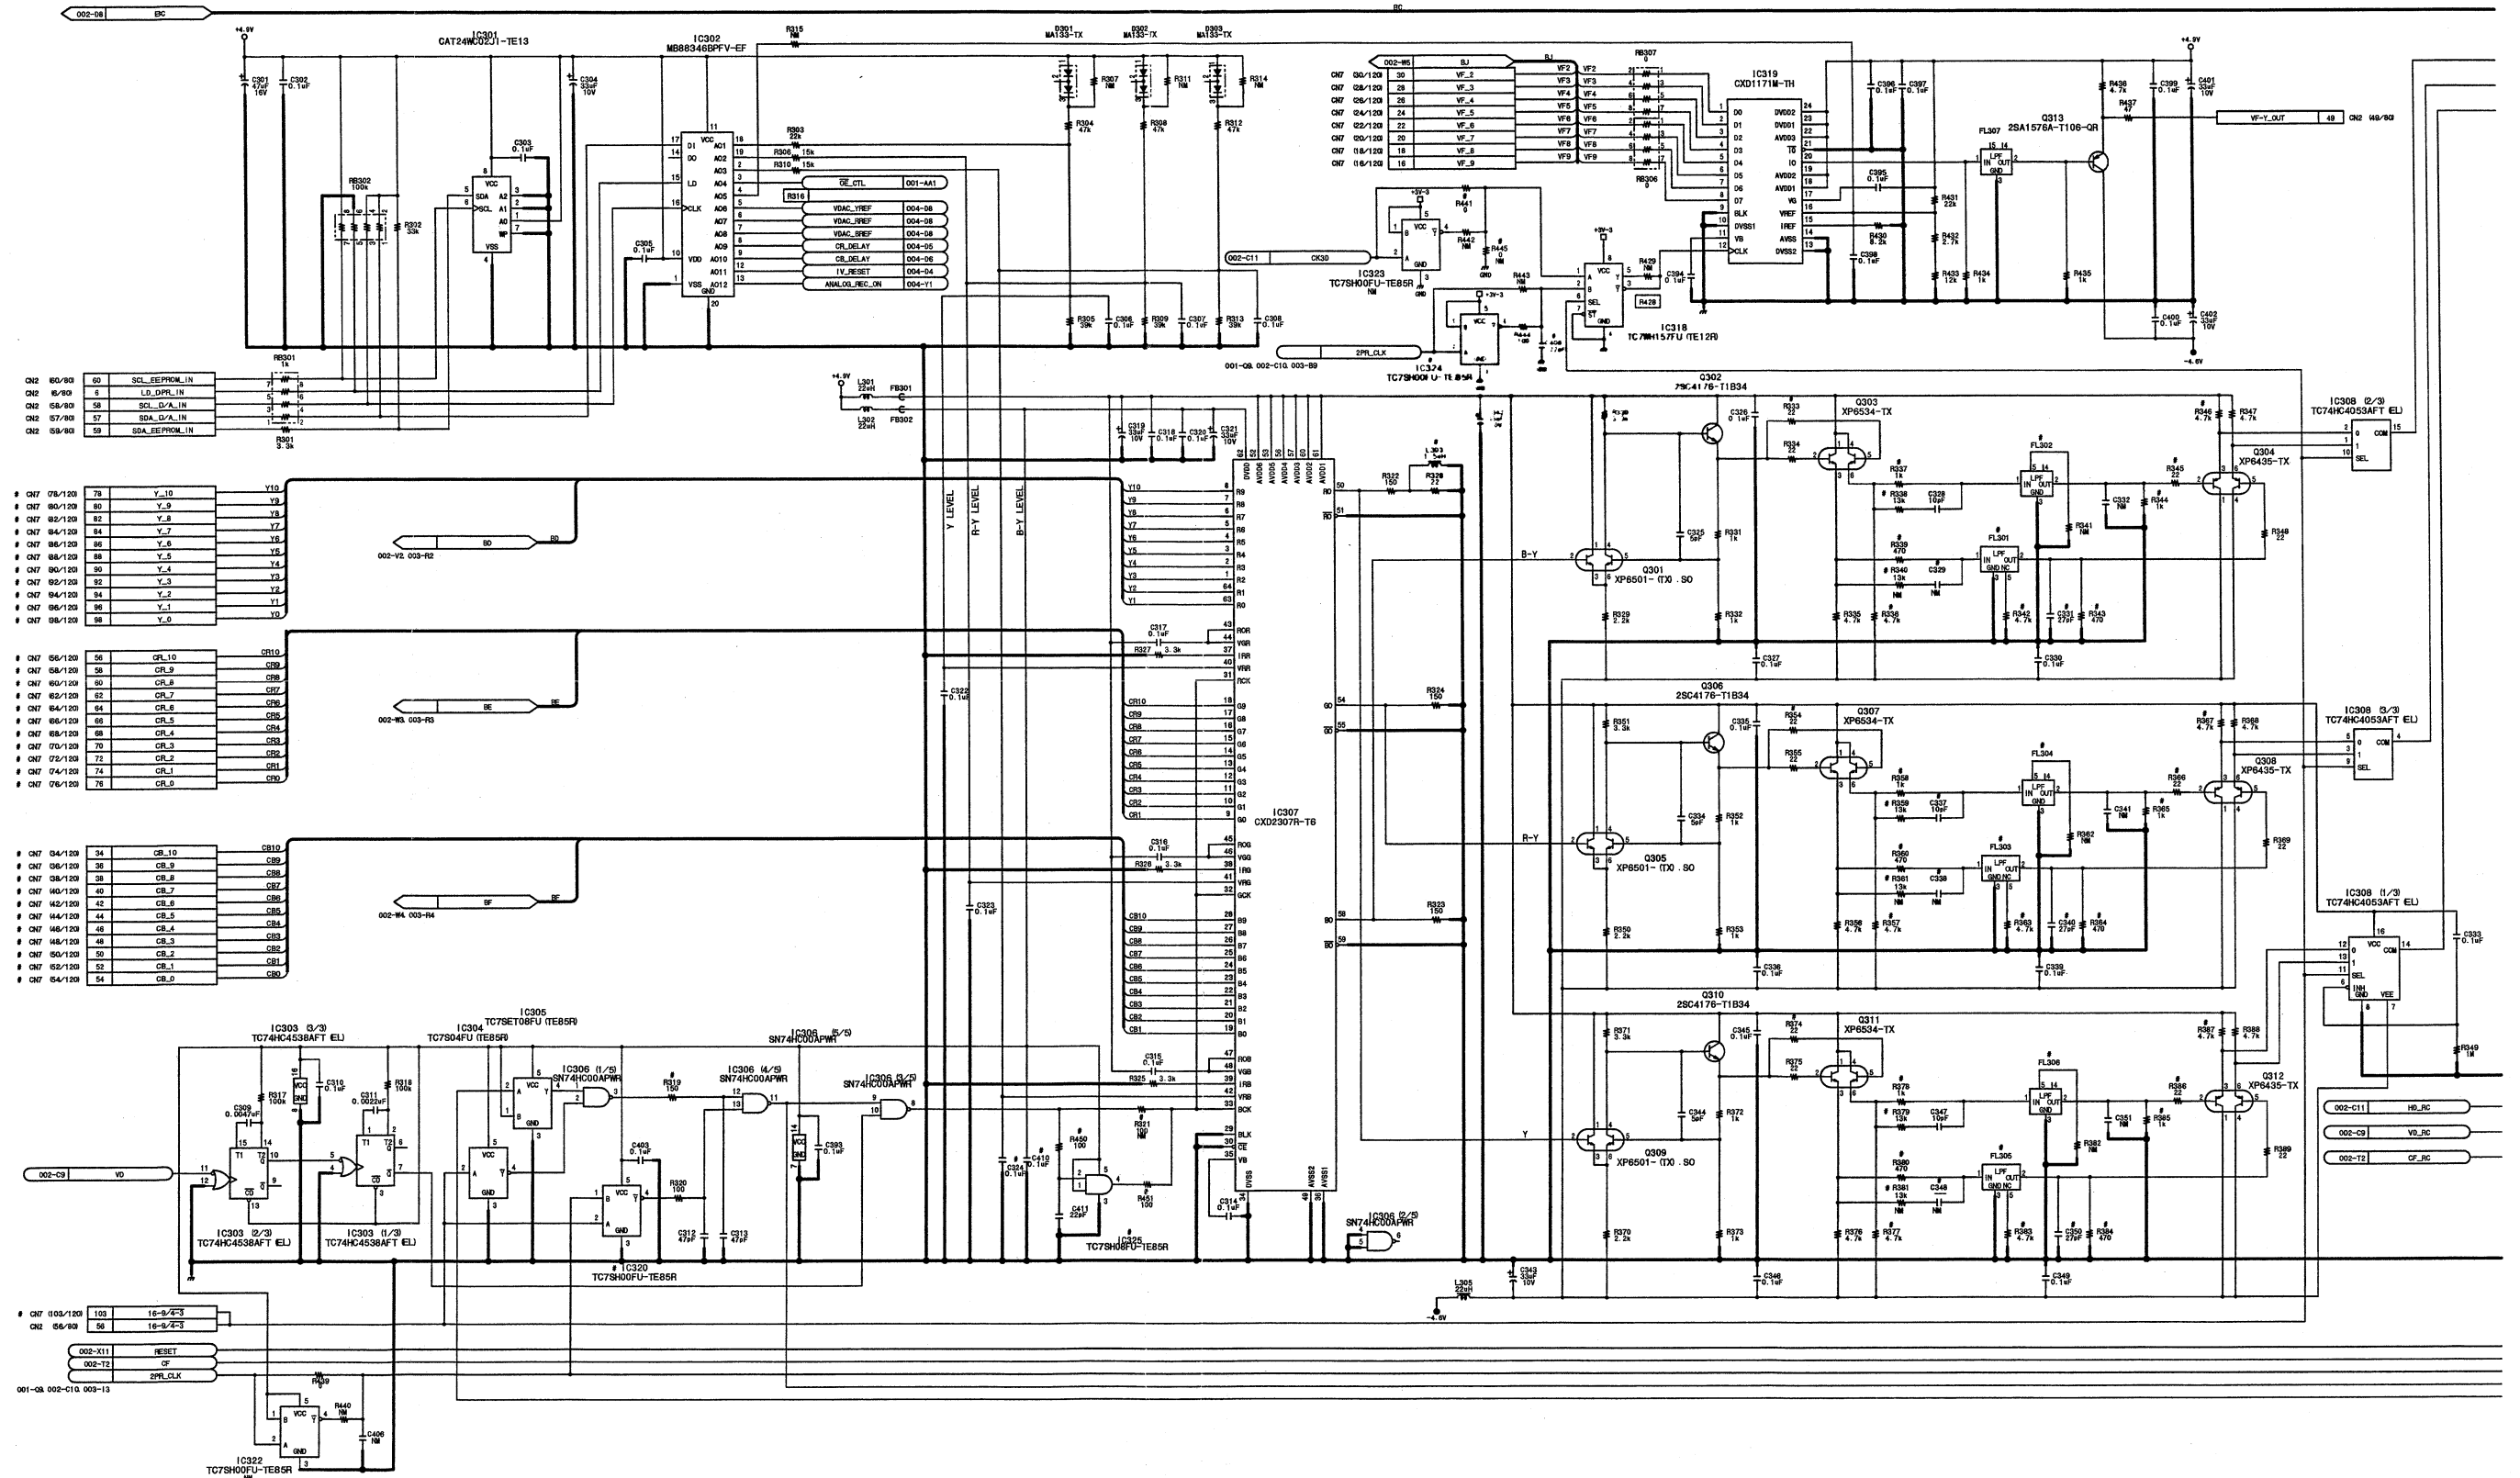


DPR-141C/141A (3/9)
SUFFIX: -13, -14



| | | | | | |
|-------|-----------------------|-----------------------|--|------|----------------------|
| | | DSP-390/390P | | | DSP-390/390P |
| | | DSP-370/370P | | | DSP-370/370P |
| | | DSP-300A/300AP | | | DSP-300A/300AP |
| C312 | 47nF 0.5V 0.5% | NM | | R417 | 220 1/10W 0.5% |
| C313 | 47nF 0.5V 0.5% | NM | | R419 | 47 1/10W 0.5% |
| C328 | 100nF 0.5V 0.5% | NM | | R427 | 300 1/10W 0.5% |
| C329 | NM | 10pF 0.5V 0.5% | | R441 | 0 0W — |
| C331 | 22nF 0.5V 0.5% | NM | | R445 | NM |
| C337 | 100nF 0.5V 0.5% | NM | | R450 | 100 1/10W 0.5% |
| C338 | NM | 10pF 0.5V 0.5% | | R451 | 100 1/10W 0.5% |
| C340 | 22nF 0.5V 0.5% | NM | | | |
| C347 | 100nF 0.5V 0.5% | NM | | | |
| C348 | NM | 10pF 0.5V 0.5% | | | |
| C350 | 22nF 0.5V 0.5% | NM | | | |
| C408 | 22nF 0.5V 0.5% | NM | | | |
| C410 | 0.1uF 0.5V 0.5% | NM | | | |
| C411 | 22nF 0.5V 0.5% | NM | | | |
| CW7 | 100P 00505121 | NM | | | |
| FL301 | 123374021 | 123374021 | | | |
| FL302 | 123374021 | 123374021 | | | |
| FL303 | 123374021 | 123374021 | | | |
| FL304 | 123374021 | NM | | | |
| FL305 | 123374021 | 123374021 | | | |
| FL306 | 123374021 | NM | | | |
| IC330 | TC7800FU | TC7800FU | | | |
| IC324 | TC7800FU | TC7800FU | | | |
| IC325 | TC7800FU | NM | | | |
| L303 | 1.5uH 0.5% | 0.7uH 0.5% | | | |
| R319 | 100 1/10W 0.5% | 100 1/10W 0.5% | | | |
| R321 | NM | 100 1/10W 0.5% | | | |
| R333 | 22 1/10W 0.5% | NM | | | |
| R336 | 4.7k 1/10W 0.5% | NM | | | |
| R337 | 1k 1/10W 0.5% | NM | | | |
| R338 | 10k 0.5% | NM | | | |
| R339 | 470 1/10W 0.5% | 1/10W 0.5% | | | |
| R340 | NM | 1/10W 0.5% | | | |
| R342 | 4.7k 1/10W 0.5% | NM | | | |
| R343 | 470 1/10W 0.5% | 1/10W 0.5% | | | |
| R344 | 1k 1/10W 0.5% | NM | | | |
| R345 | 22 1/10W 0.5% | NM | | | |
| R346 | 4.7k 1/10W 0.5% | 100k 1/10W 0.5% | | | |
| R354 | 22 1/10W 0.5% | NM | | | |
| R357 | 4.7k 1/10W 0.5% | NM | | | |
| R358 | 1k 1/10W 0.5% | NM | | | |
| R359 | 10k 0.5% | NM | | | |
| R360 | 470 1/10W 0.5% | 1/10W 0.5% | | | |
| R361 | NM | 1/10W 0.5% | | | |
| R363 | 4.7k 1/10W 0.5% | NM | | | |
| R364 | 470 1/10W 0.5% | 1/10W 0.5% | | | |
| R365 | 1k 1/10W 0.5% | NM | | | |
| R366 | 22 1/10W 0.5% | NM | | | |
| R367 | 4.7k 1/10W 0.5% | 100k 1/10W 0.5% | | | |
| R374 | 22 1/10W 0.5% | NM | | | |
| R377 | 4.7k 1/10W 0.5% | NM | | | |
| R378 | 1k 1/10W 0.5% | NM | | | |
| R379 | 10k 0.5% | NM | | | |
| R380 | 470 1/10W 0.5% | 1/10W 0.5% | | | |
| R381 | NM | 1/10W 0.5% | | | |
| R383 | 4.7k 1/10W 0.5% | NM | | | |
| R384 | 470 1/10W 0.5% | 1/10W 0.5% | | | |
| R385 | 1k 1/10W 0.5% | NM | | | |
| R386 | 22 1/10W 0.5% | NM | | | |
| R367 | 4.7k 1/10W 0.5% | 100k 1/10W 0.5% | | | |


BOARD NO. 1-673-975-13, 14
DSR-370_DPR-141_016_3

DPR-141C/141A (4/9)
SUFFIX: -13, -14




H

DPR-141C/141A (4/9)
SUFFIX: -13, -14




DPR-141C/141A (5/9)
SUFFIX: -13, -14




DPR-141C/141A (6/9)
SUFFIX: -13, -14


DPR-141C/141A (6/9)
SUFFIX: -13, -14

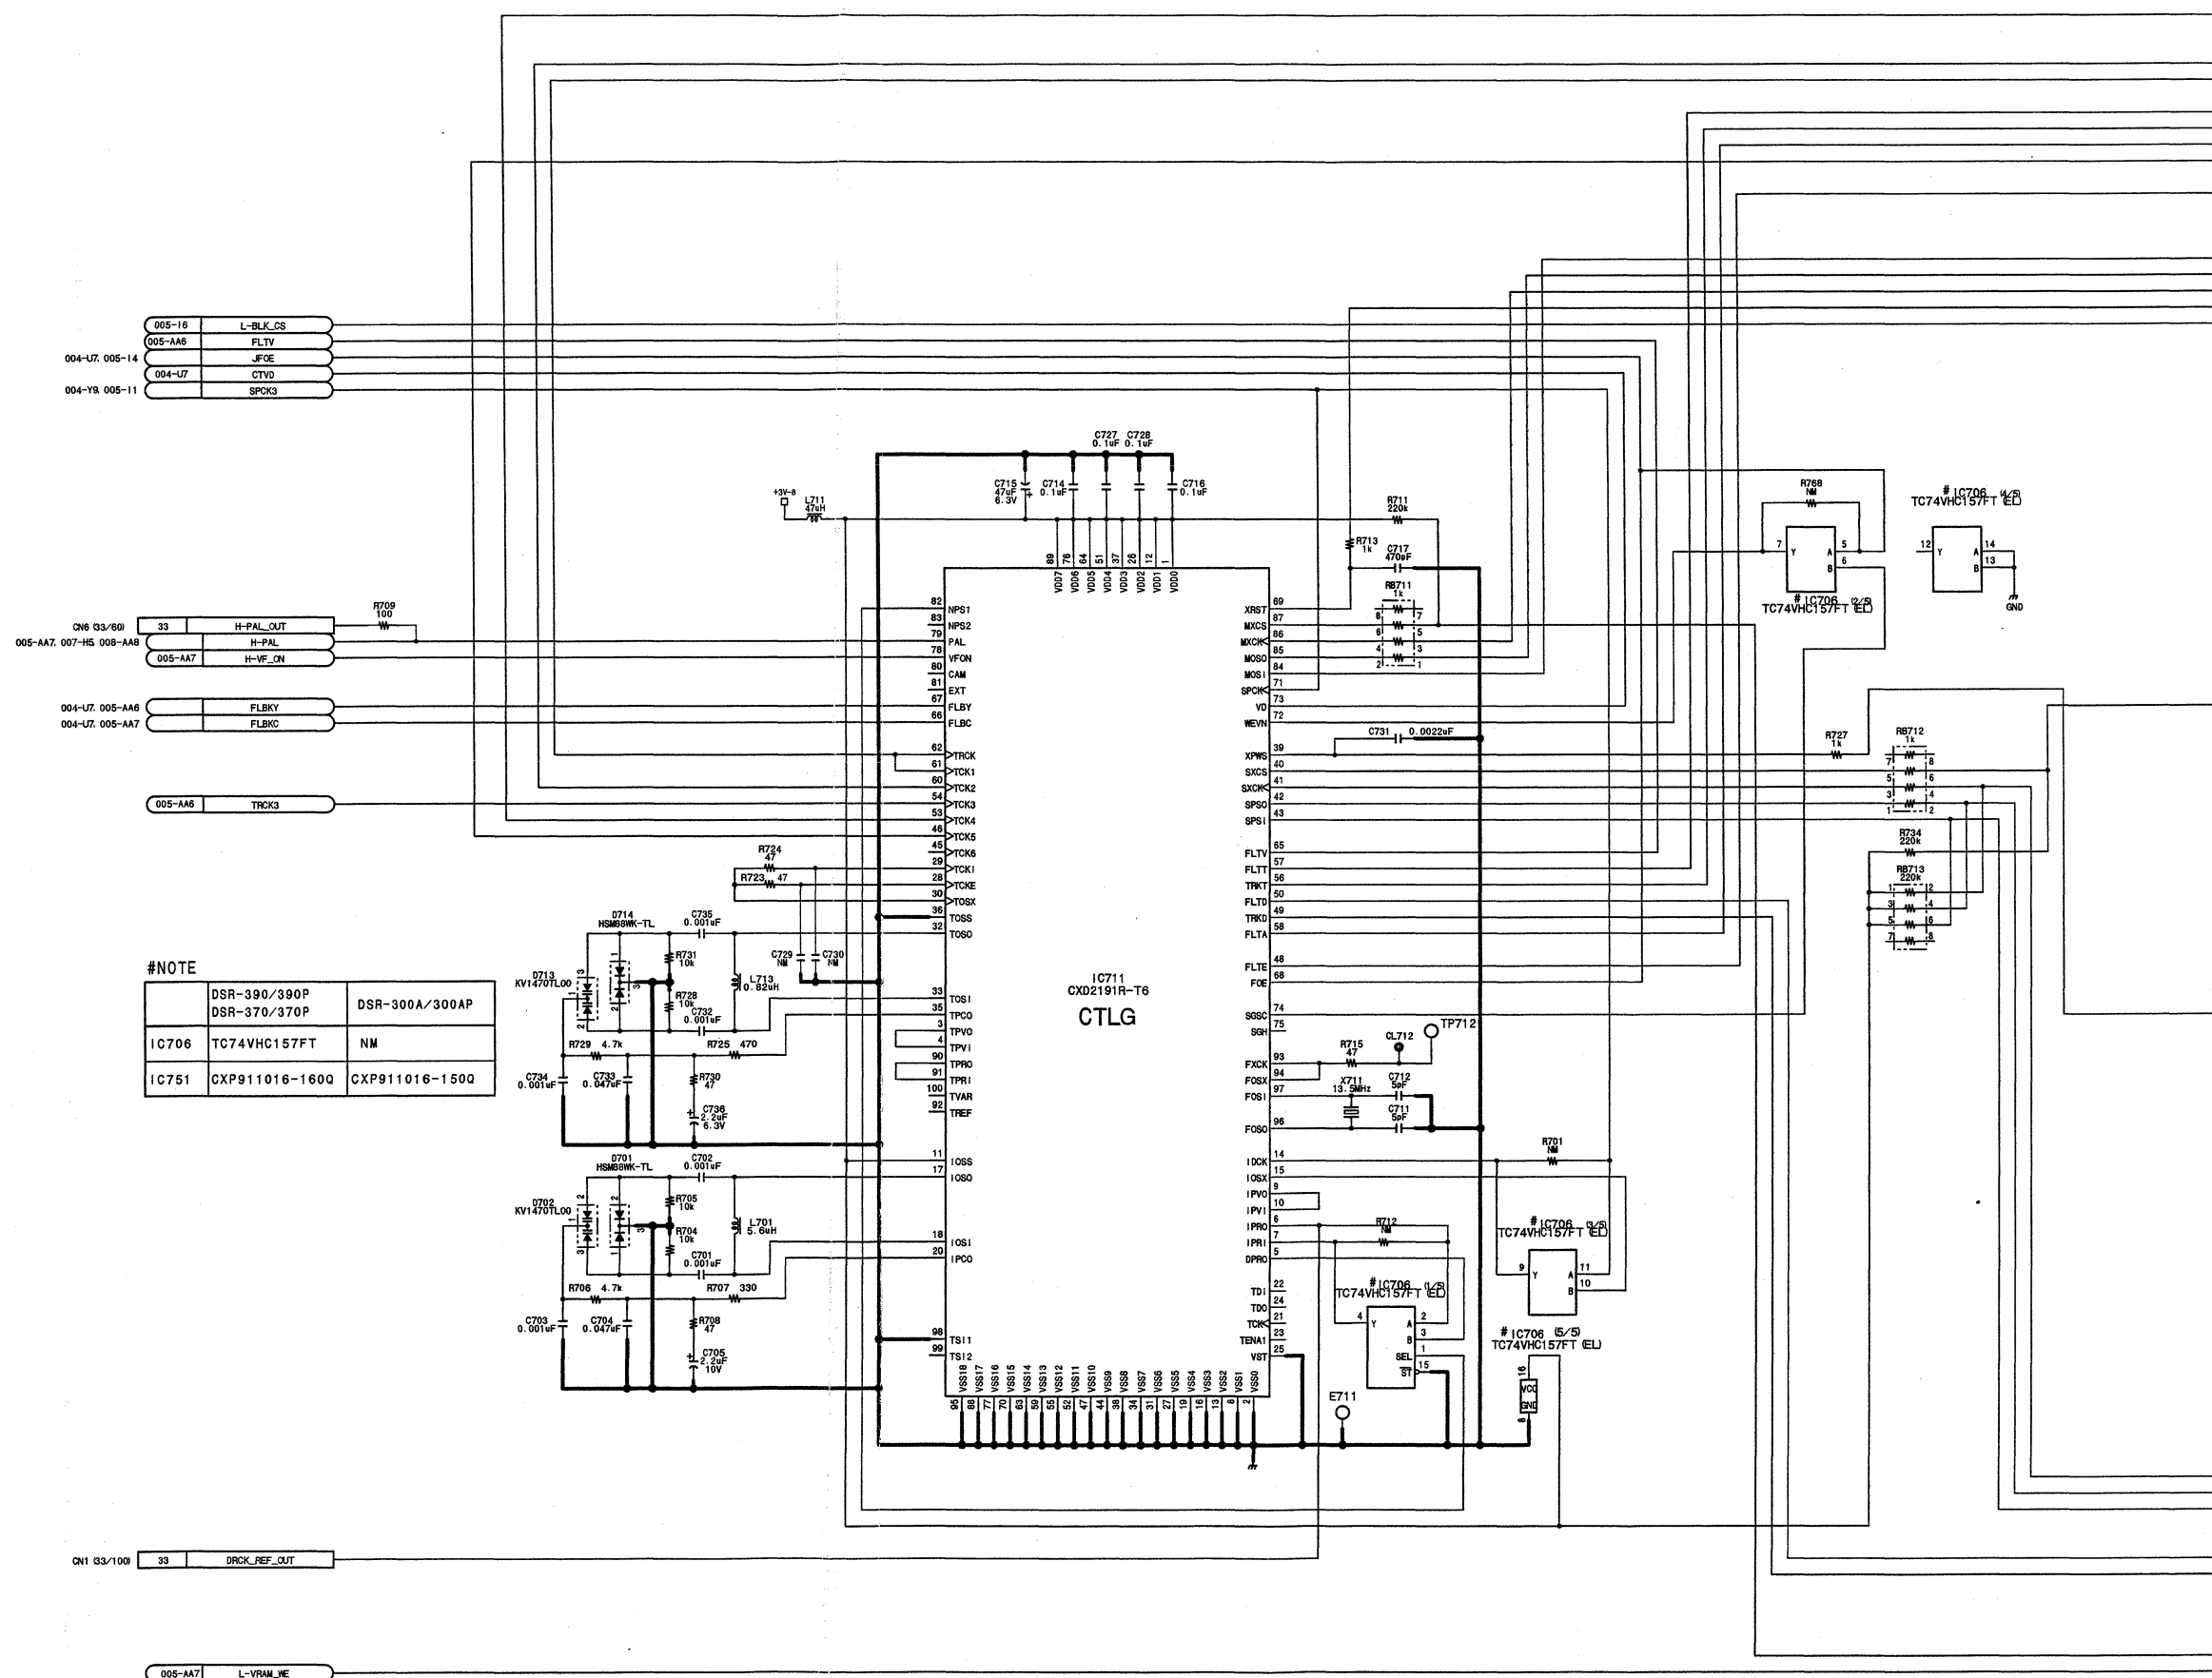

DPR-141C/141A (6/9)
SUFFIX: -13, -14




DPR-141C/141A (7/9)
SUFFIX: -13, -14



DPR-141C/141A (7/9)
SUFFIX: -13, -14

DPR-141C/141A (7/9)
SUFFIX: -13, -14

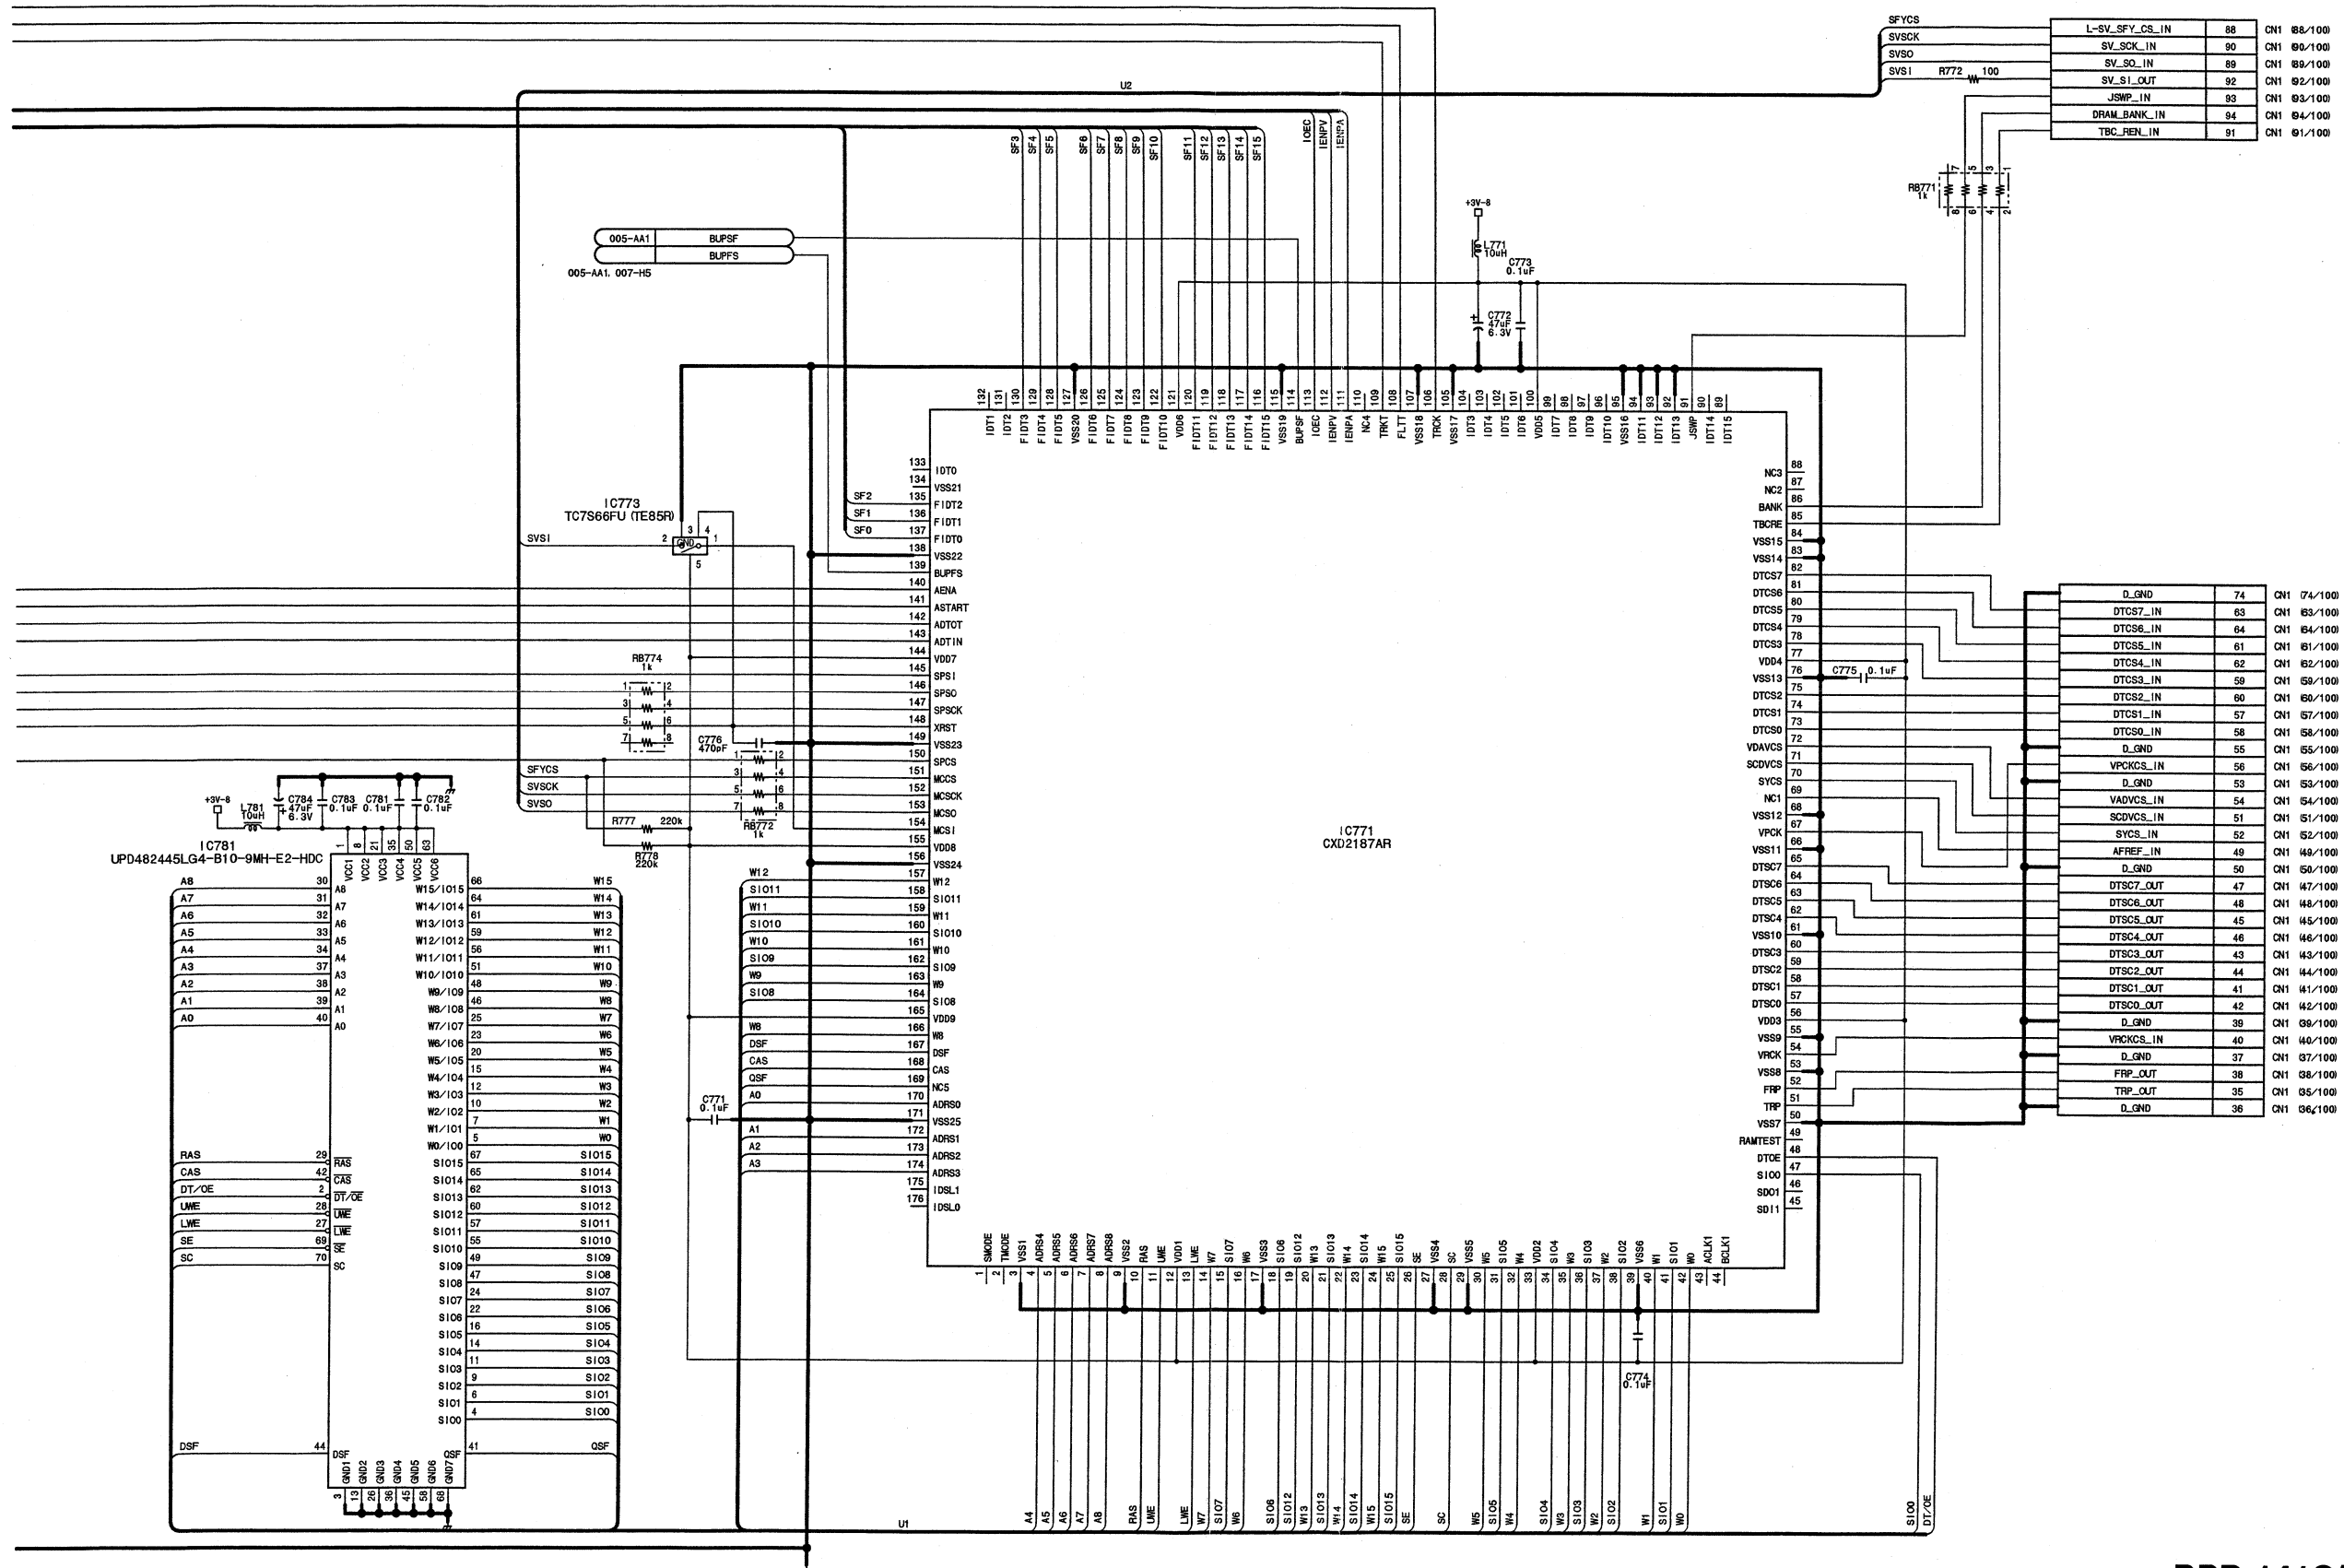


DPR-141C/141A (7/9)

BOARD NO. 1-673-975-13, 14
DSR-370_DPR-141_016_7

DPR-141C/141A (8/9)
SUFFIX: -13, -14

DPR-141C/141A (8/9)
SUFFIX: -13, -14

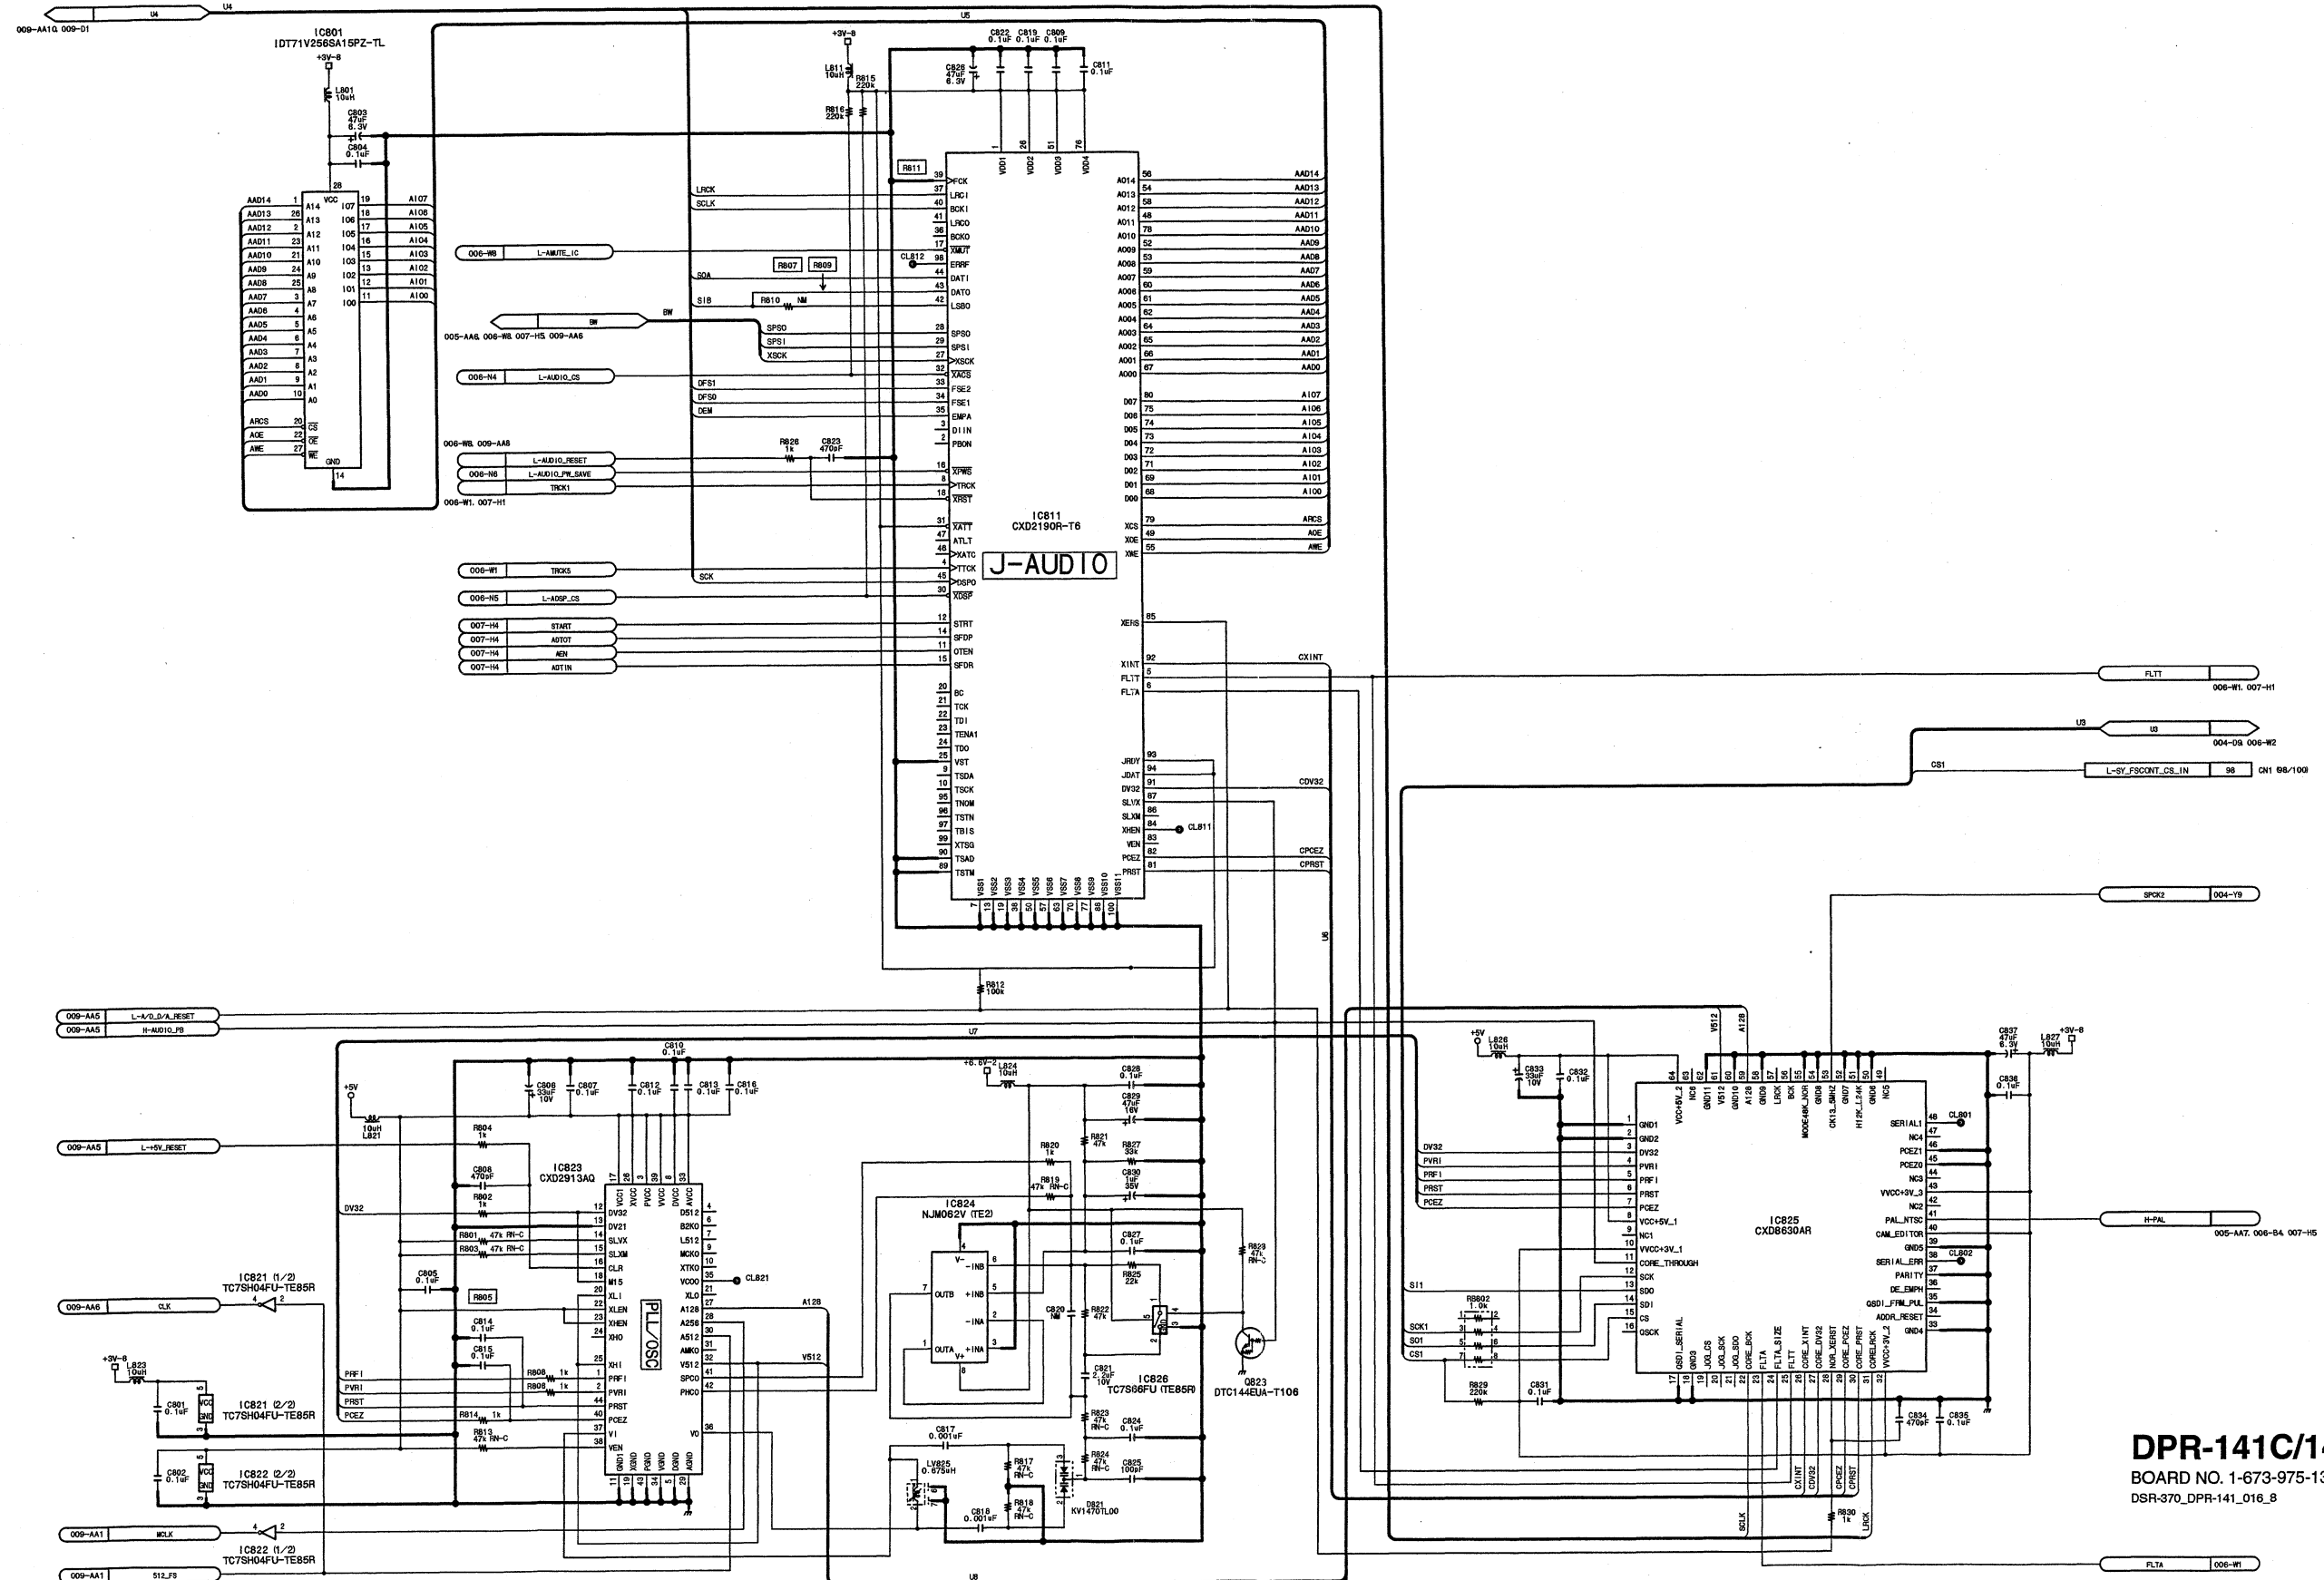


DPR-141C/141A (8/9)
BOARD NO. 1-673-975-13, 14
DSR-370_DPR-141_016_8


1

2


3

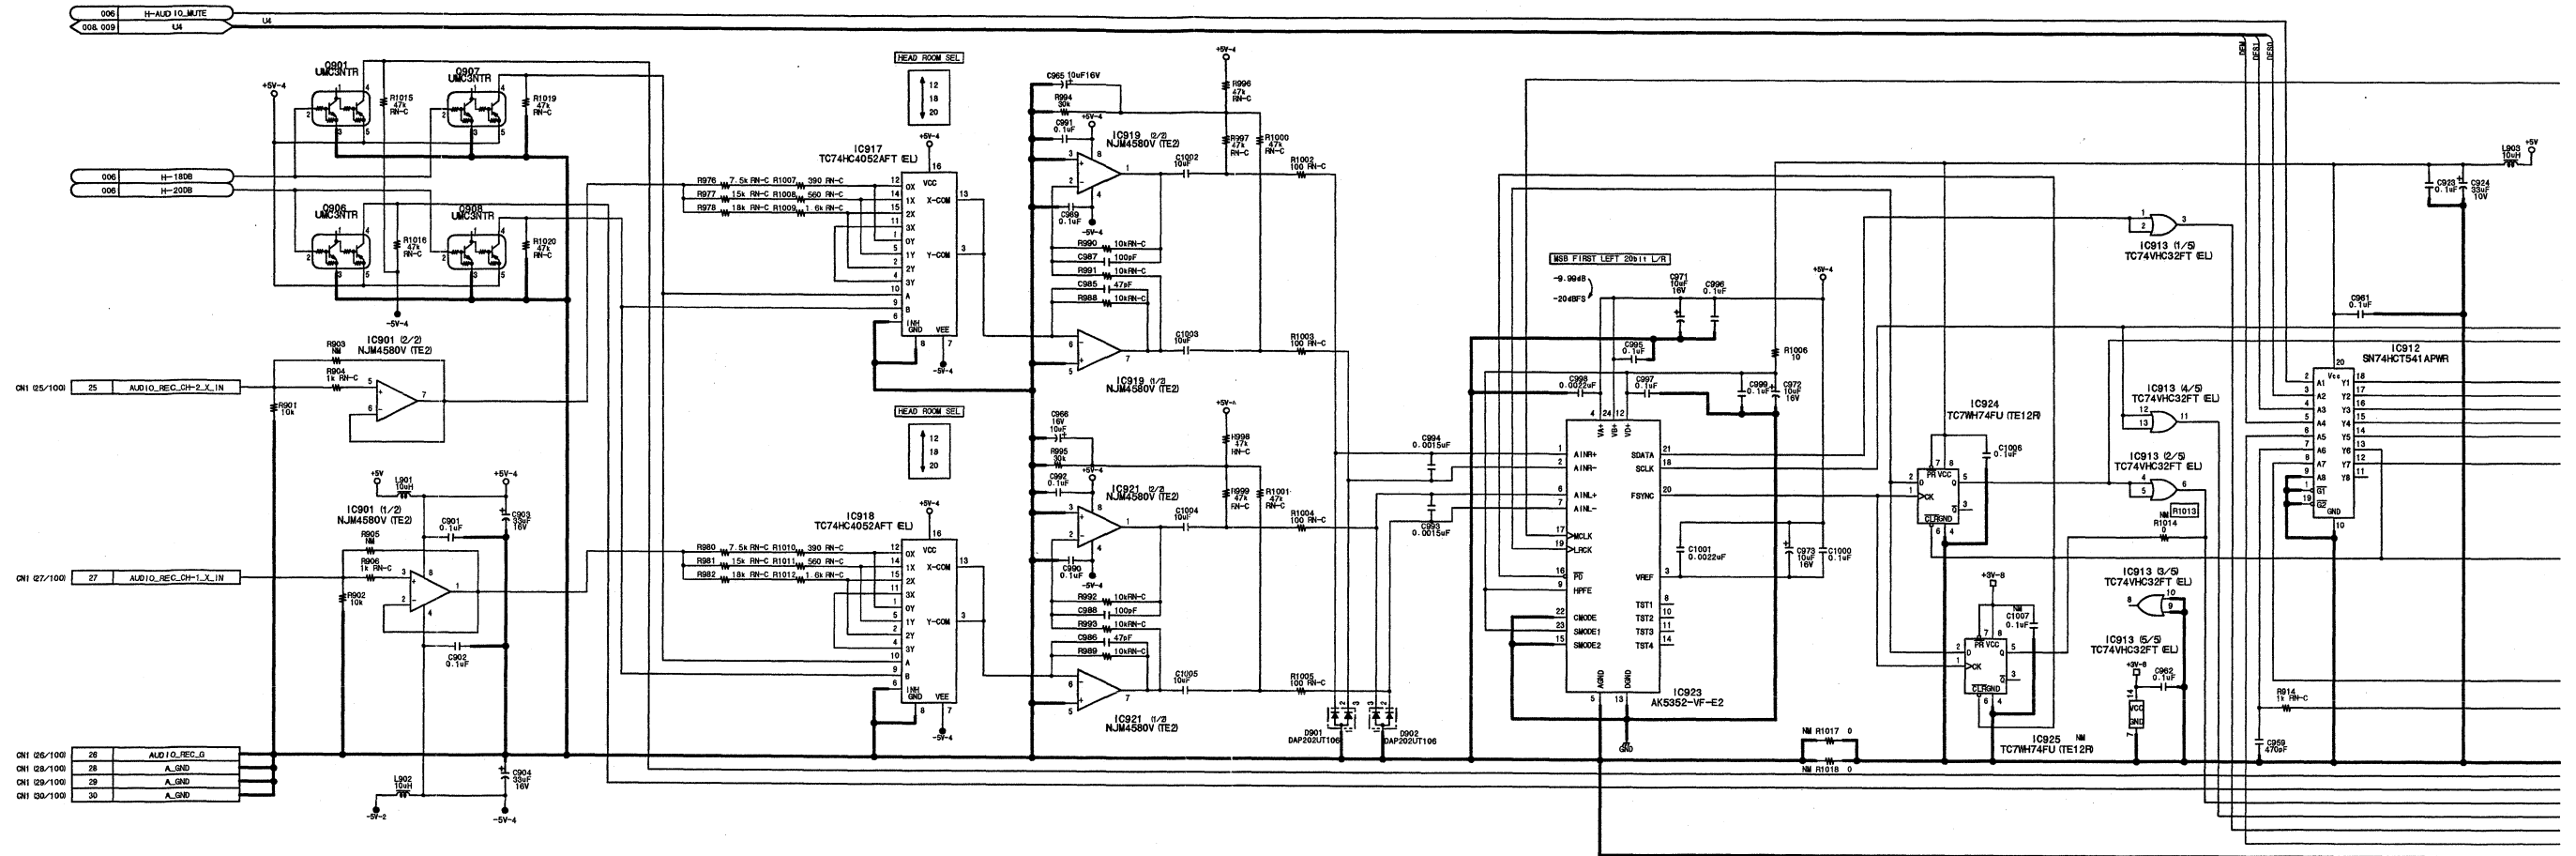

4

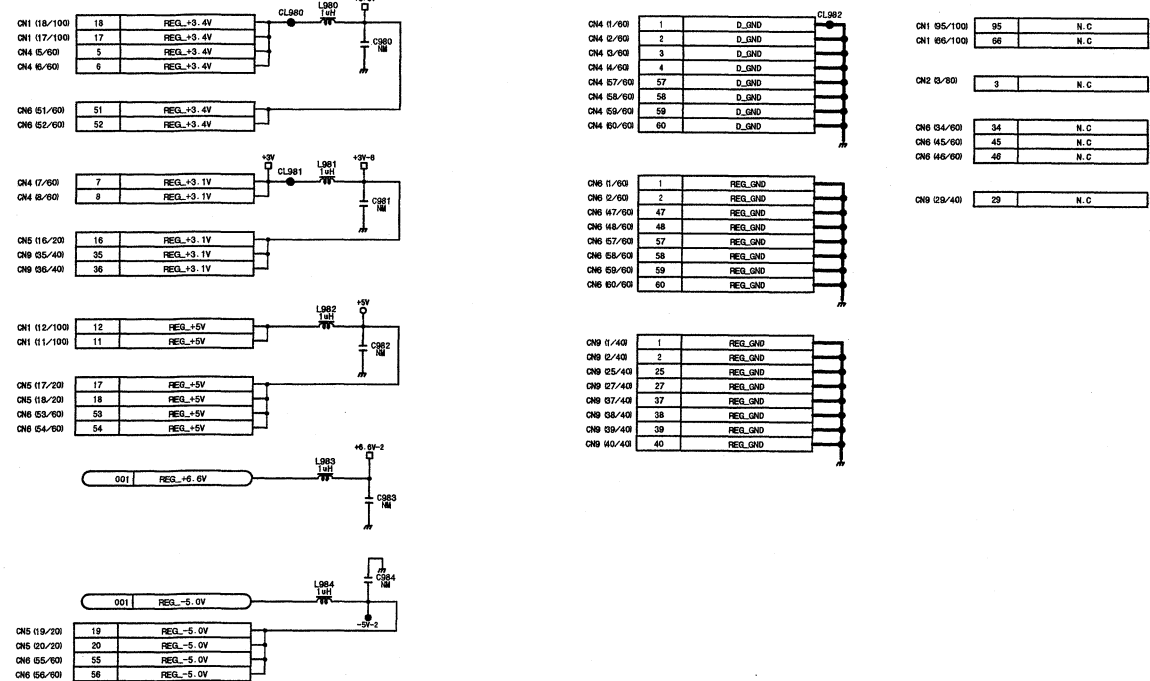


5

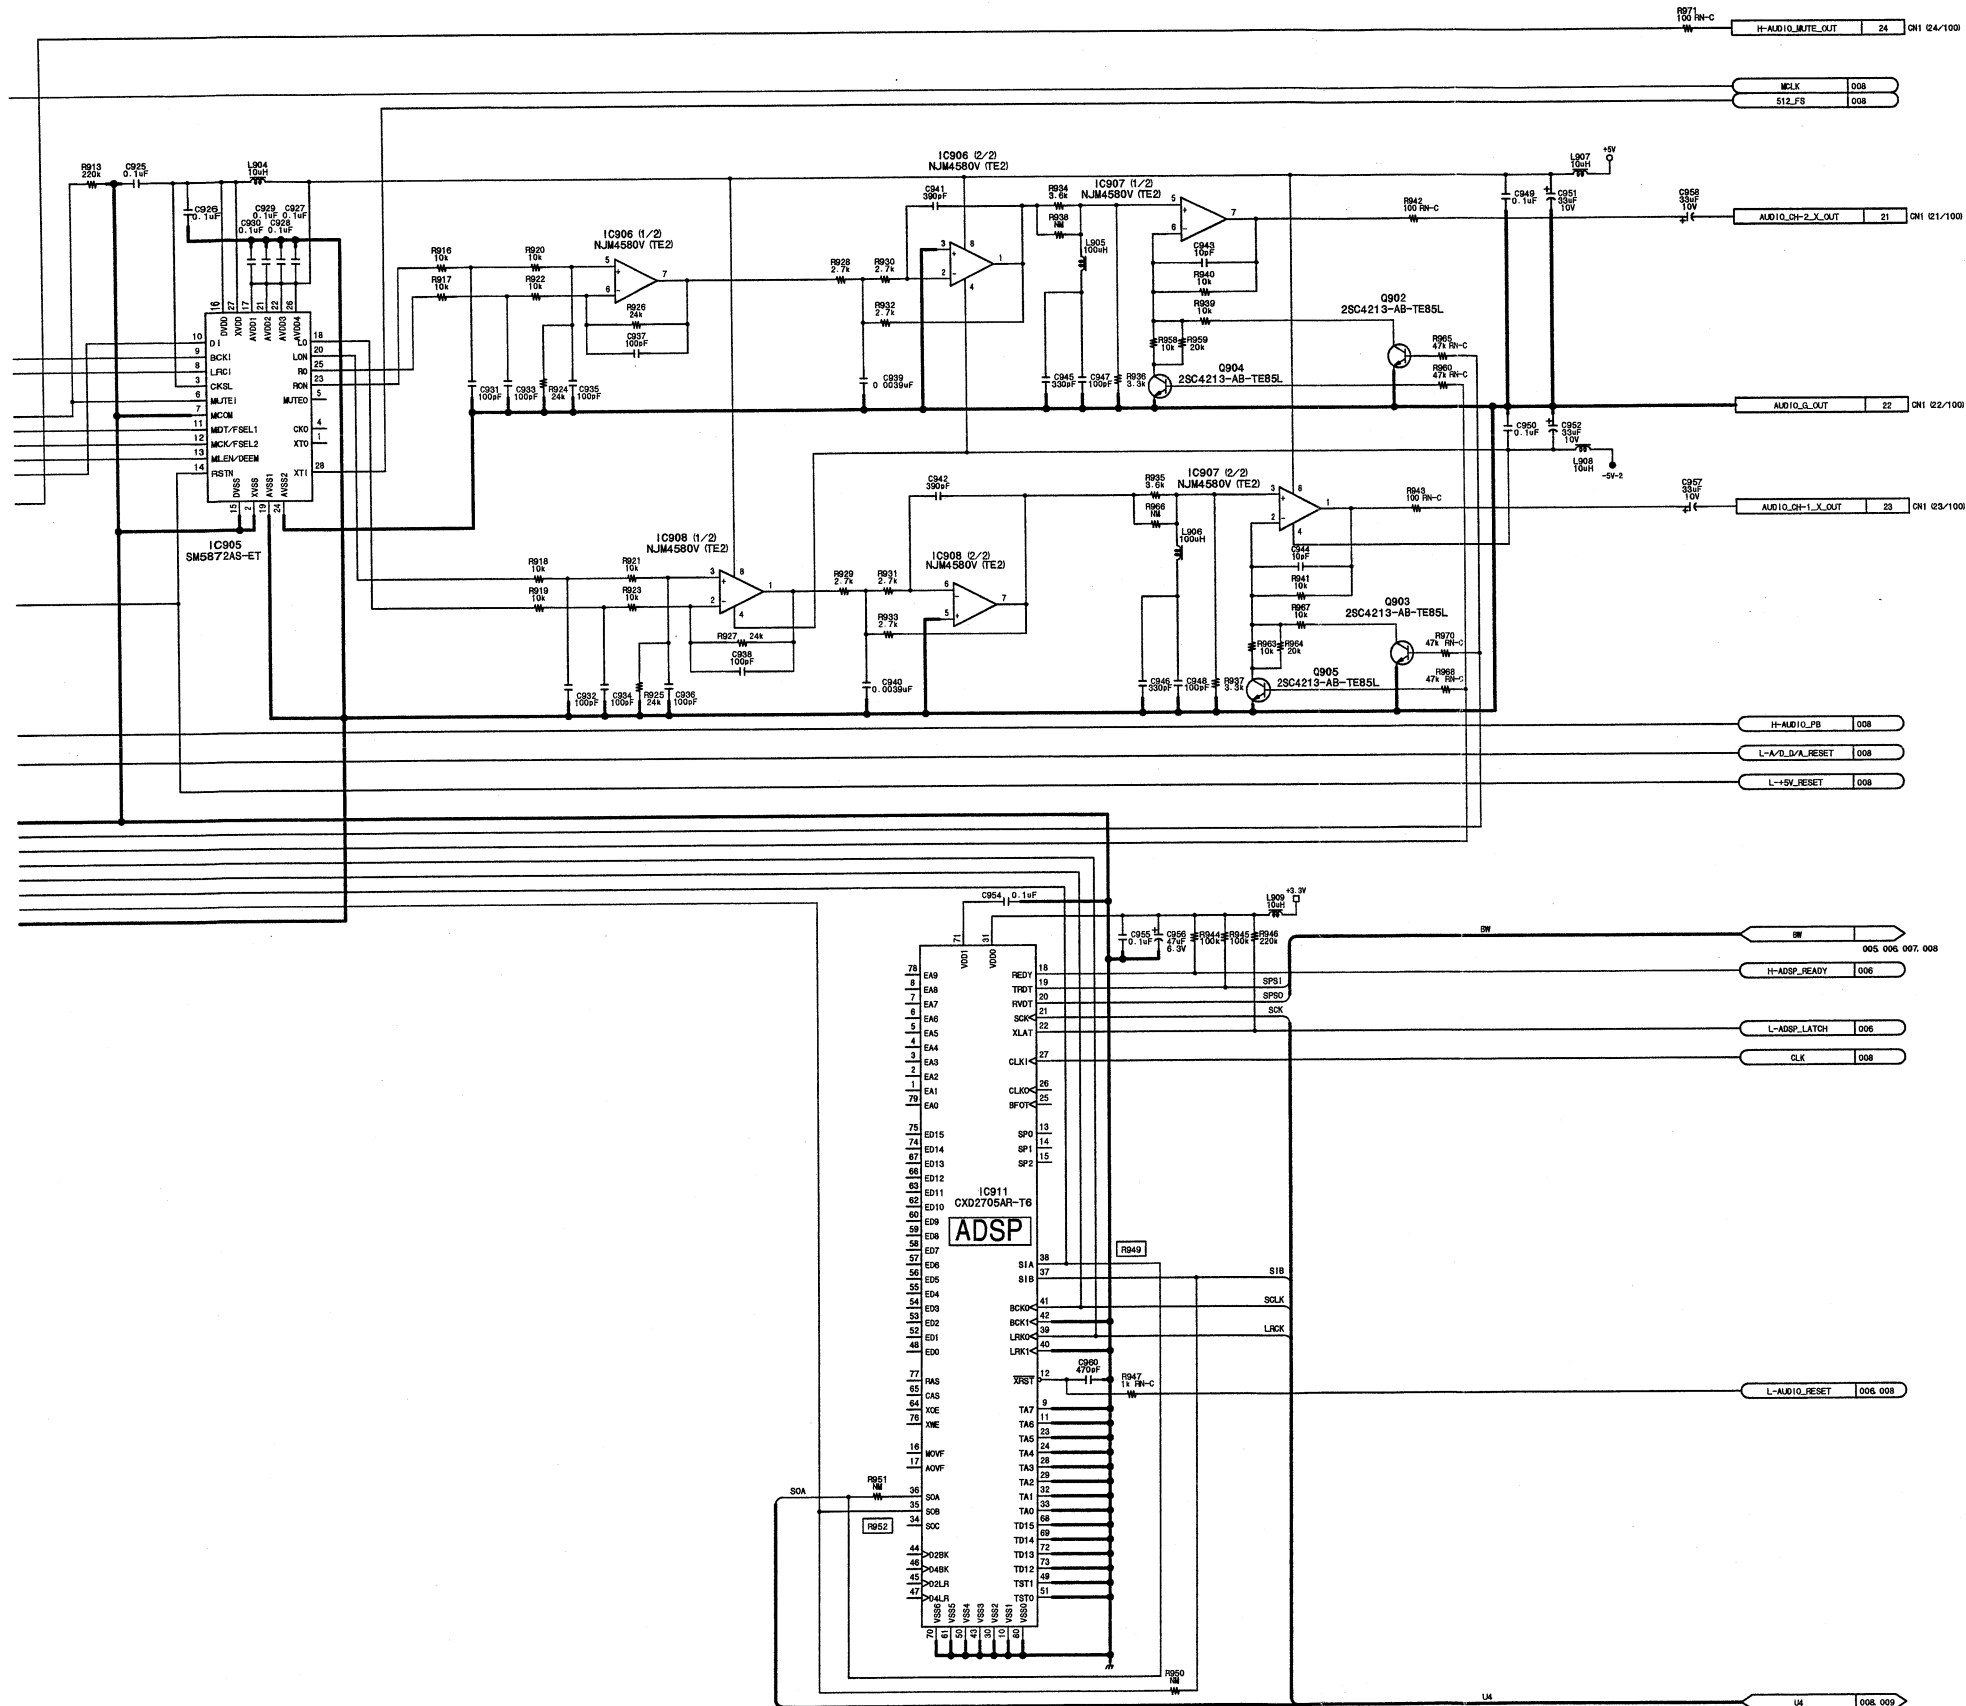

DPR-141A (1/9)
SUFFIX: -11

DPR-141A (1/9)
SUFFIX: -11

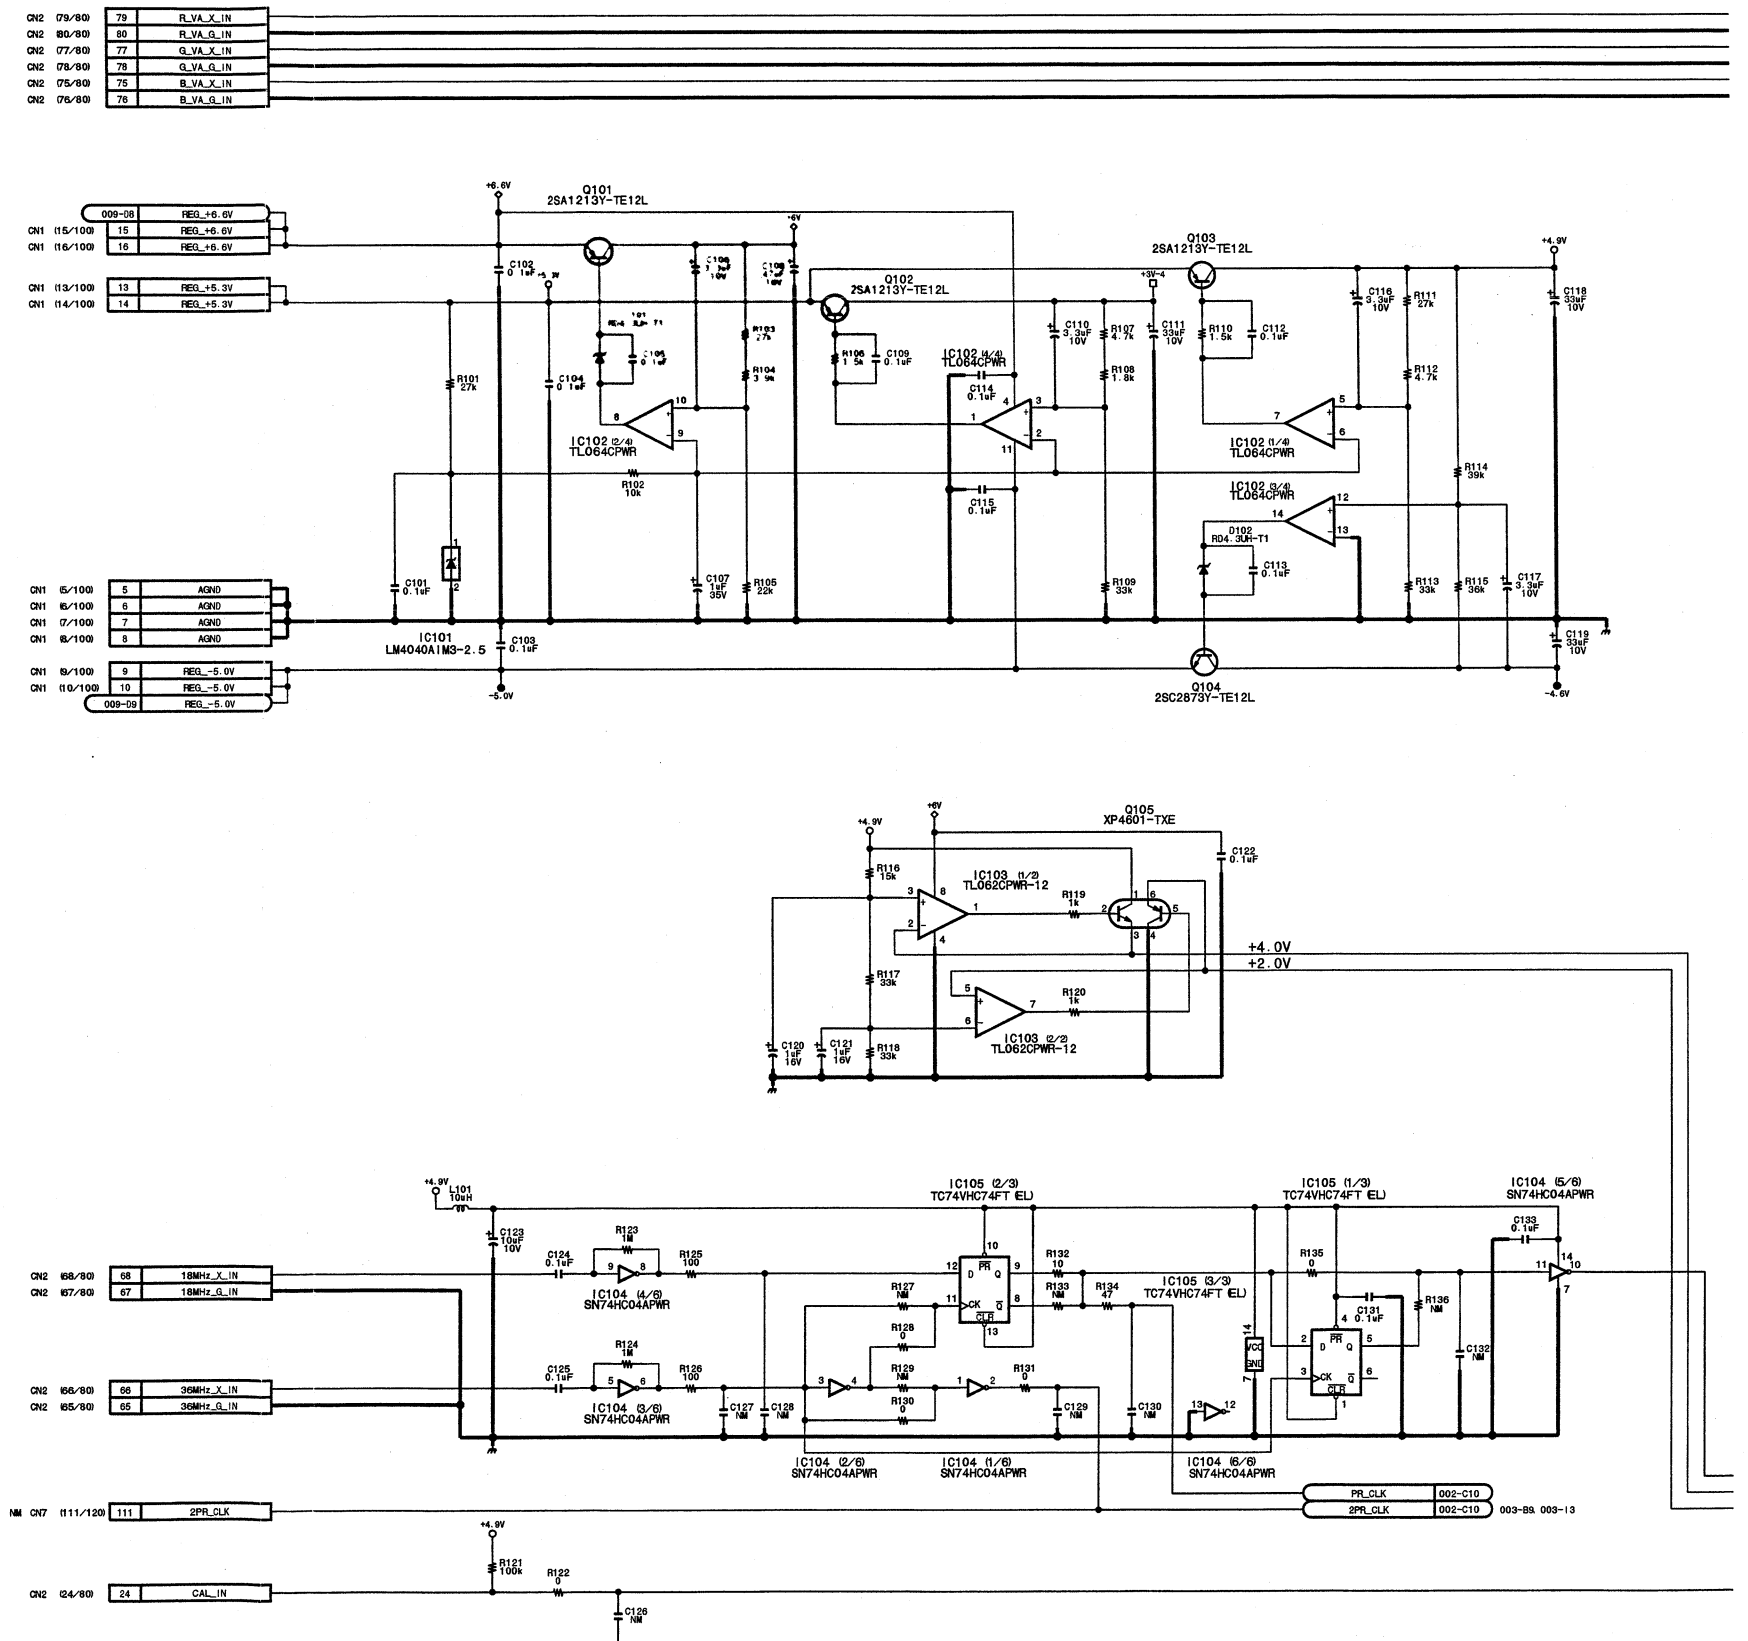

4-12 (a)

4-12 (b)

DSR-390/390P/370/370P/300A/300AP V2

A

B

C


D

E


F

G


H

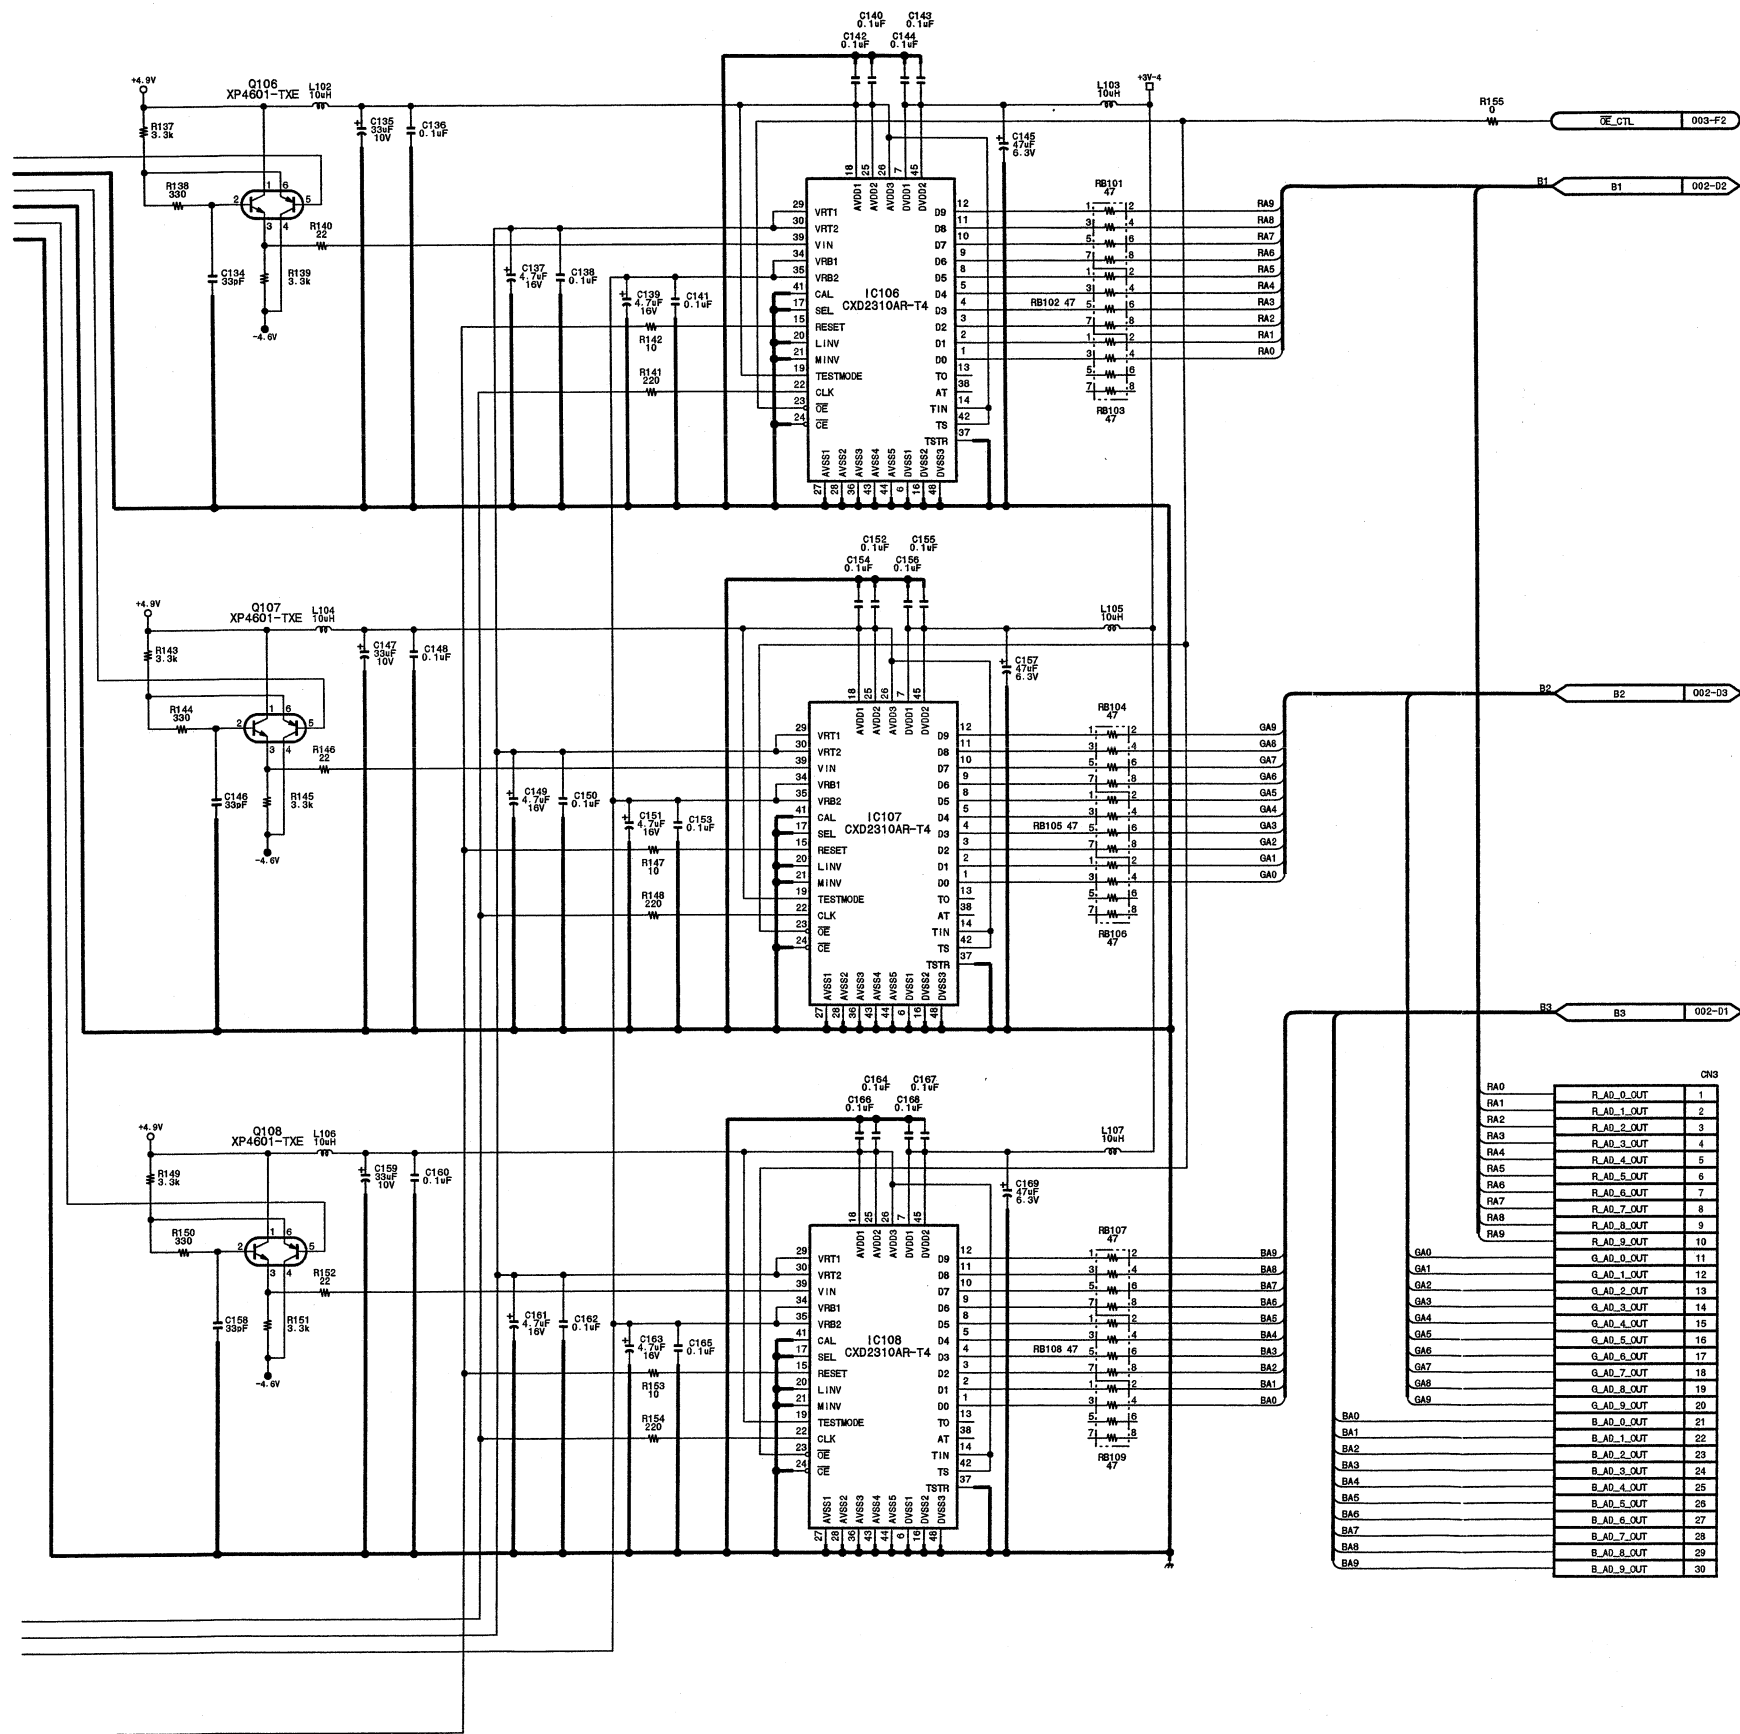


DPR-141A (2/9)
SUFFIX: -11





DPR-141A (2/9)
SUFFIX: -11



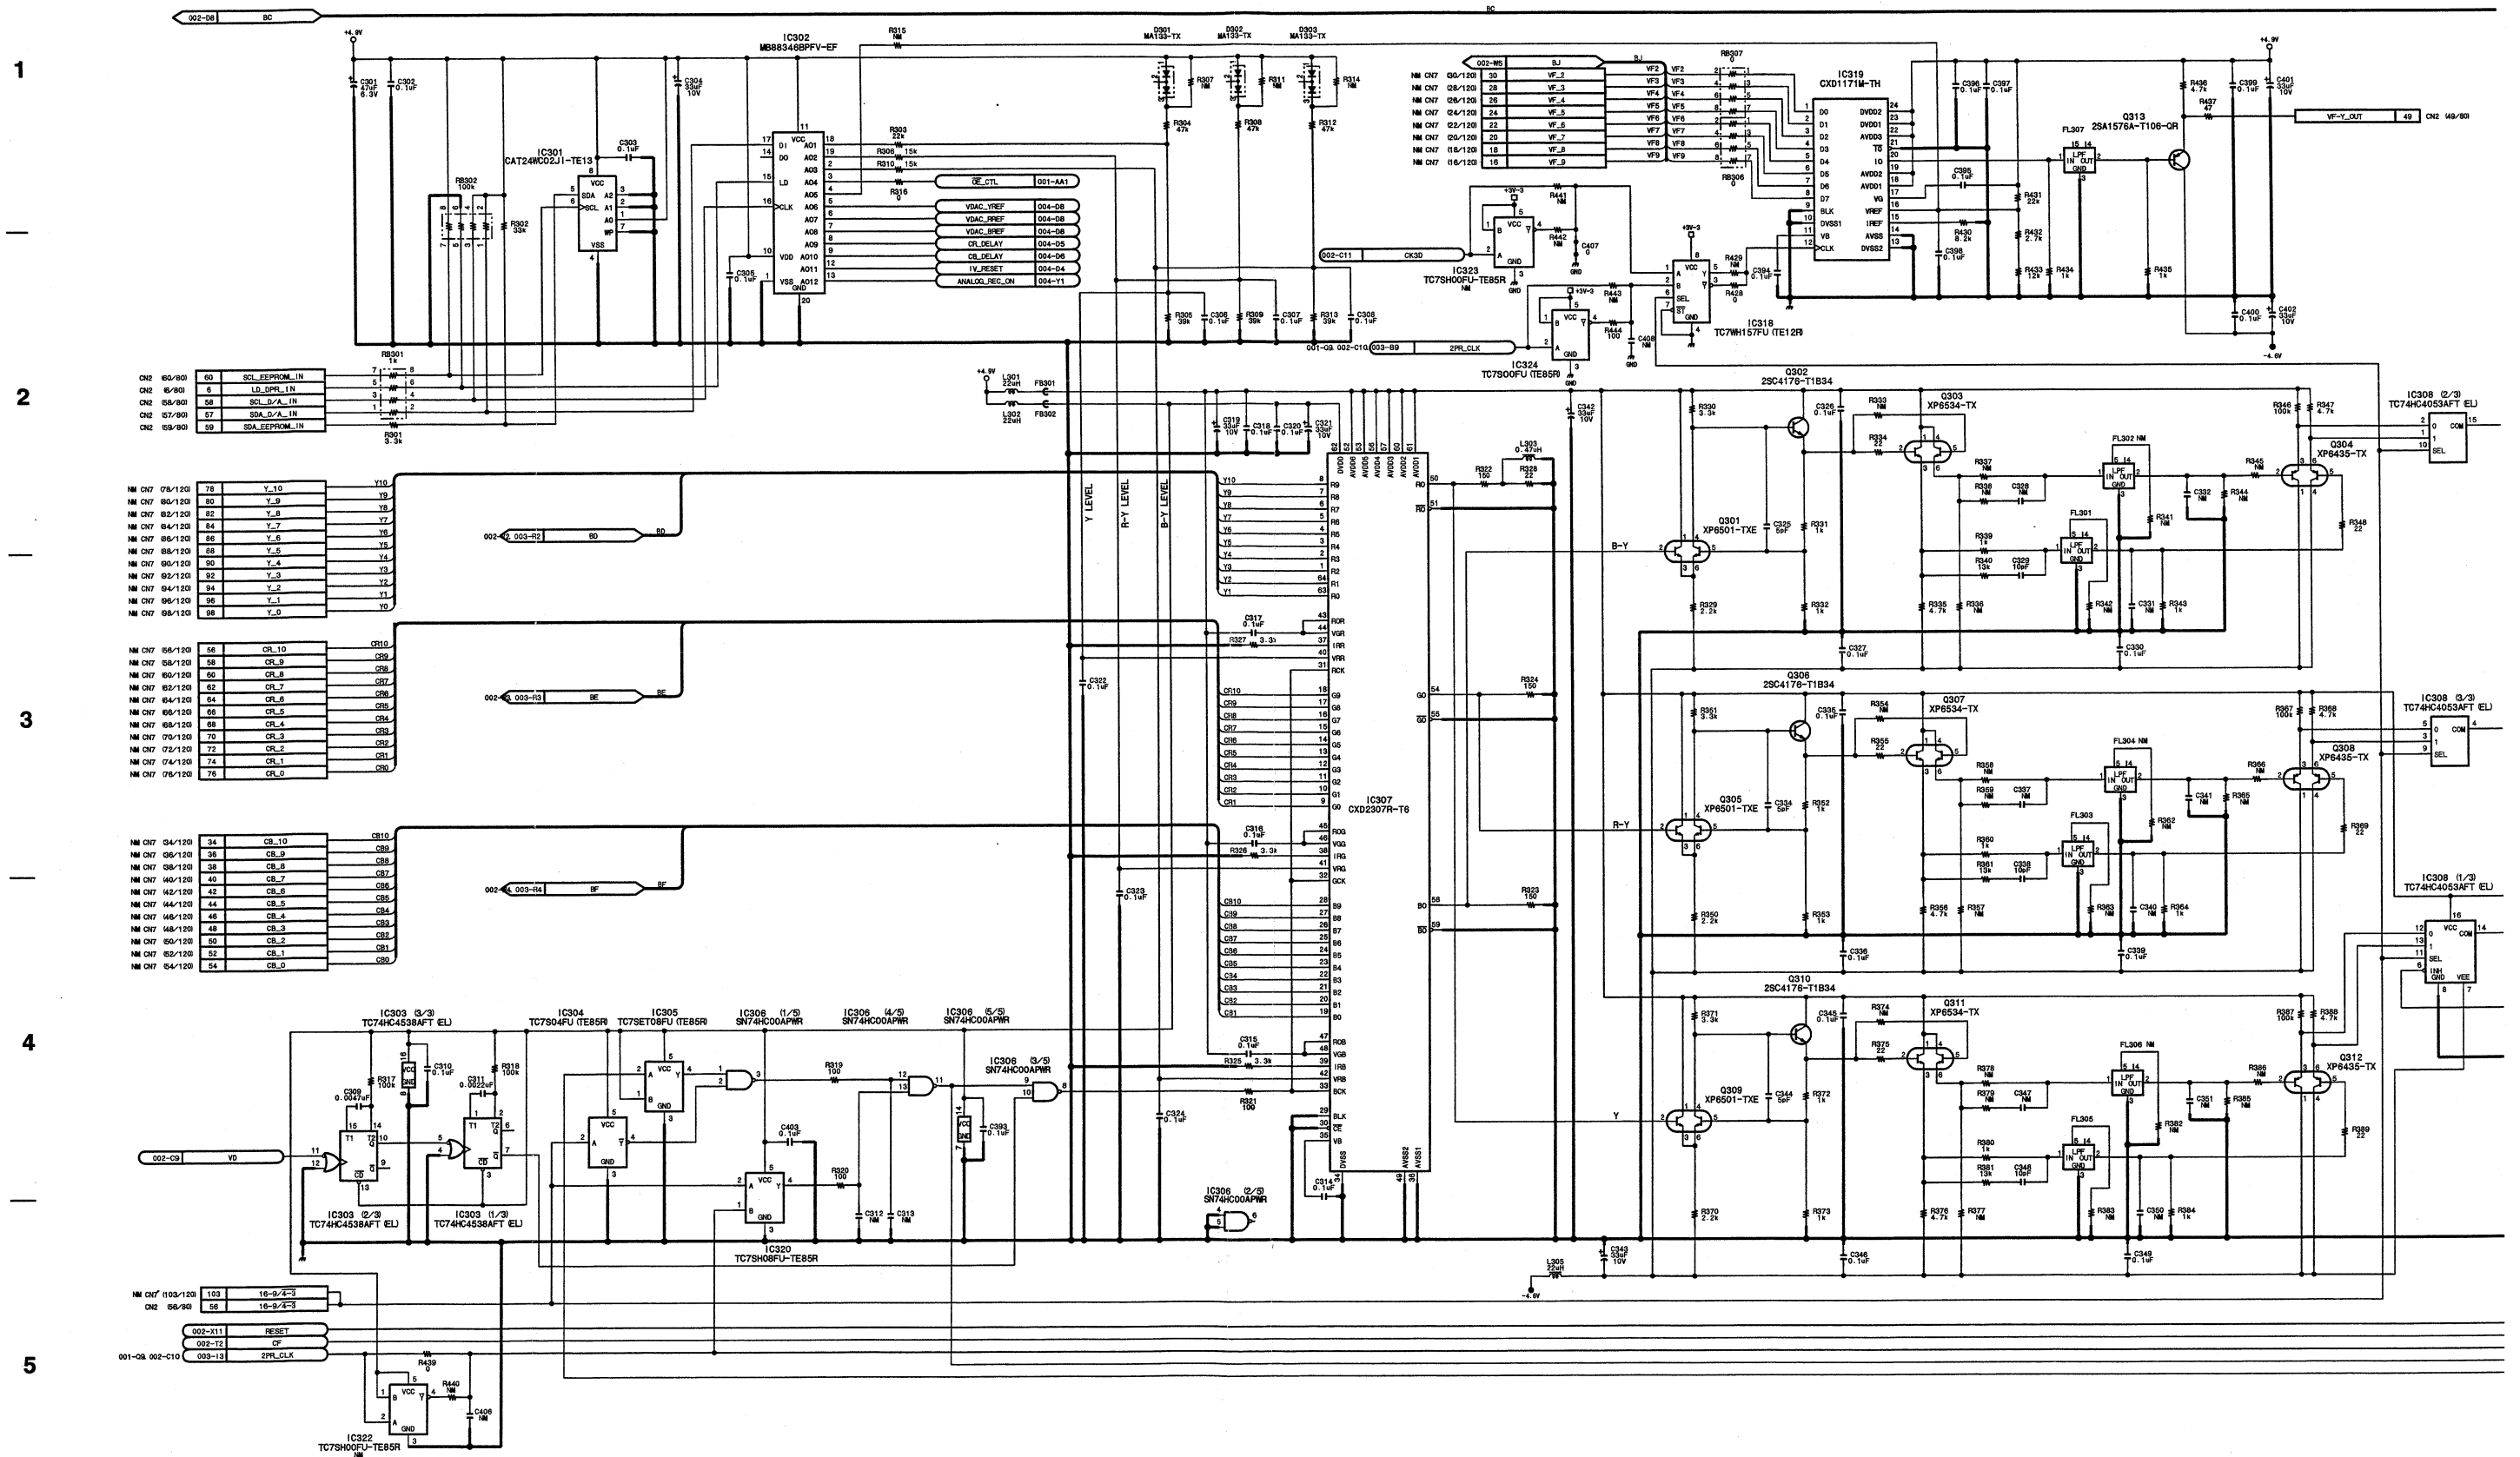


DPR-141A (3/9)
SUFFIX: -11




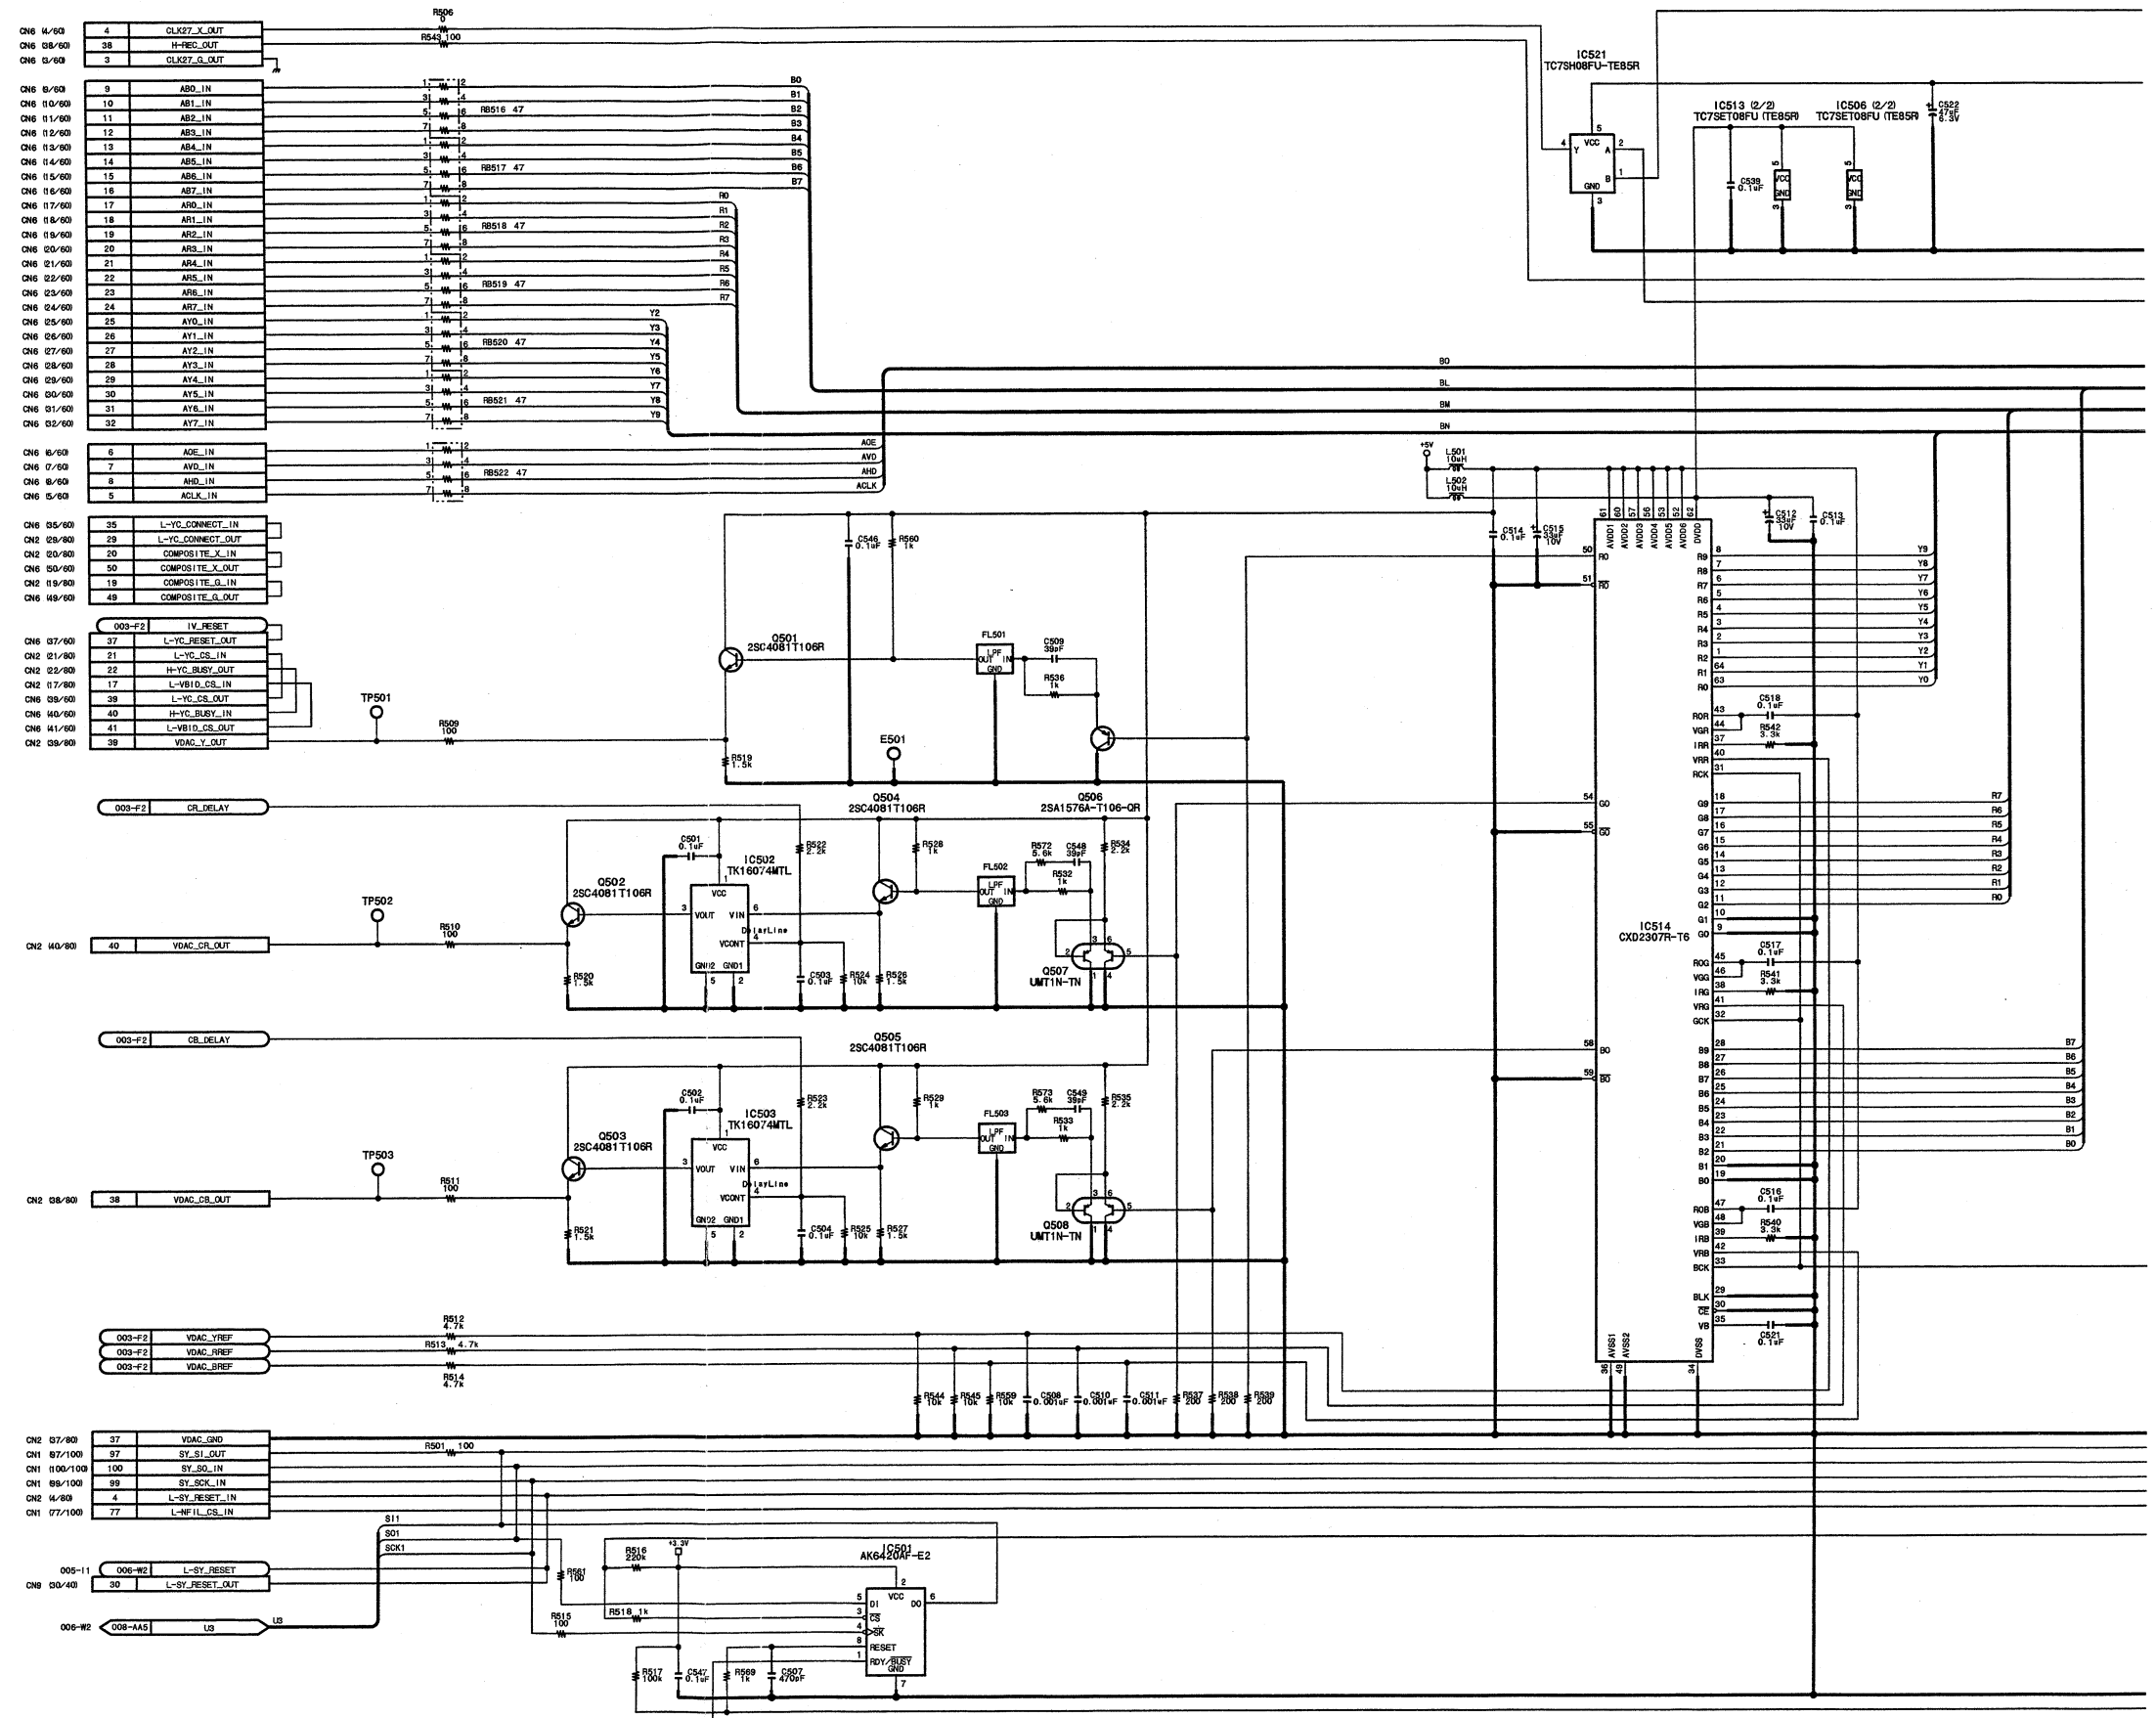

DPR-141A (4/9)
SUFFIX: -11



DPR-141A (5/9)
SUFFIX: -11

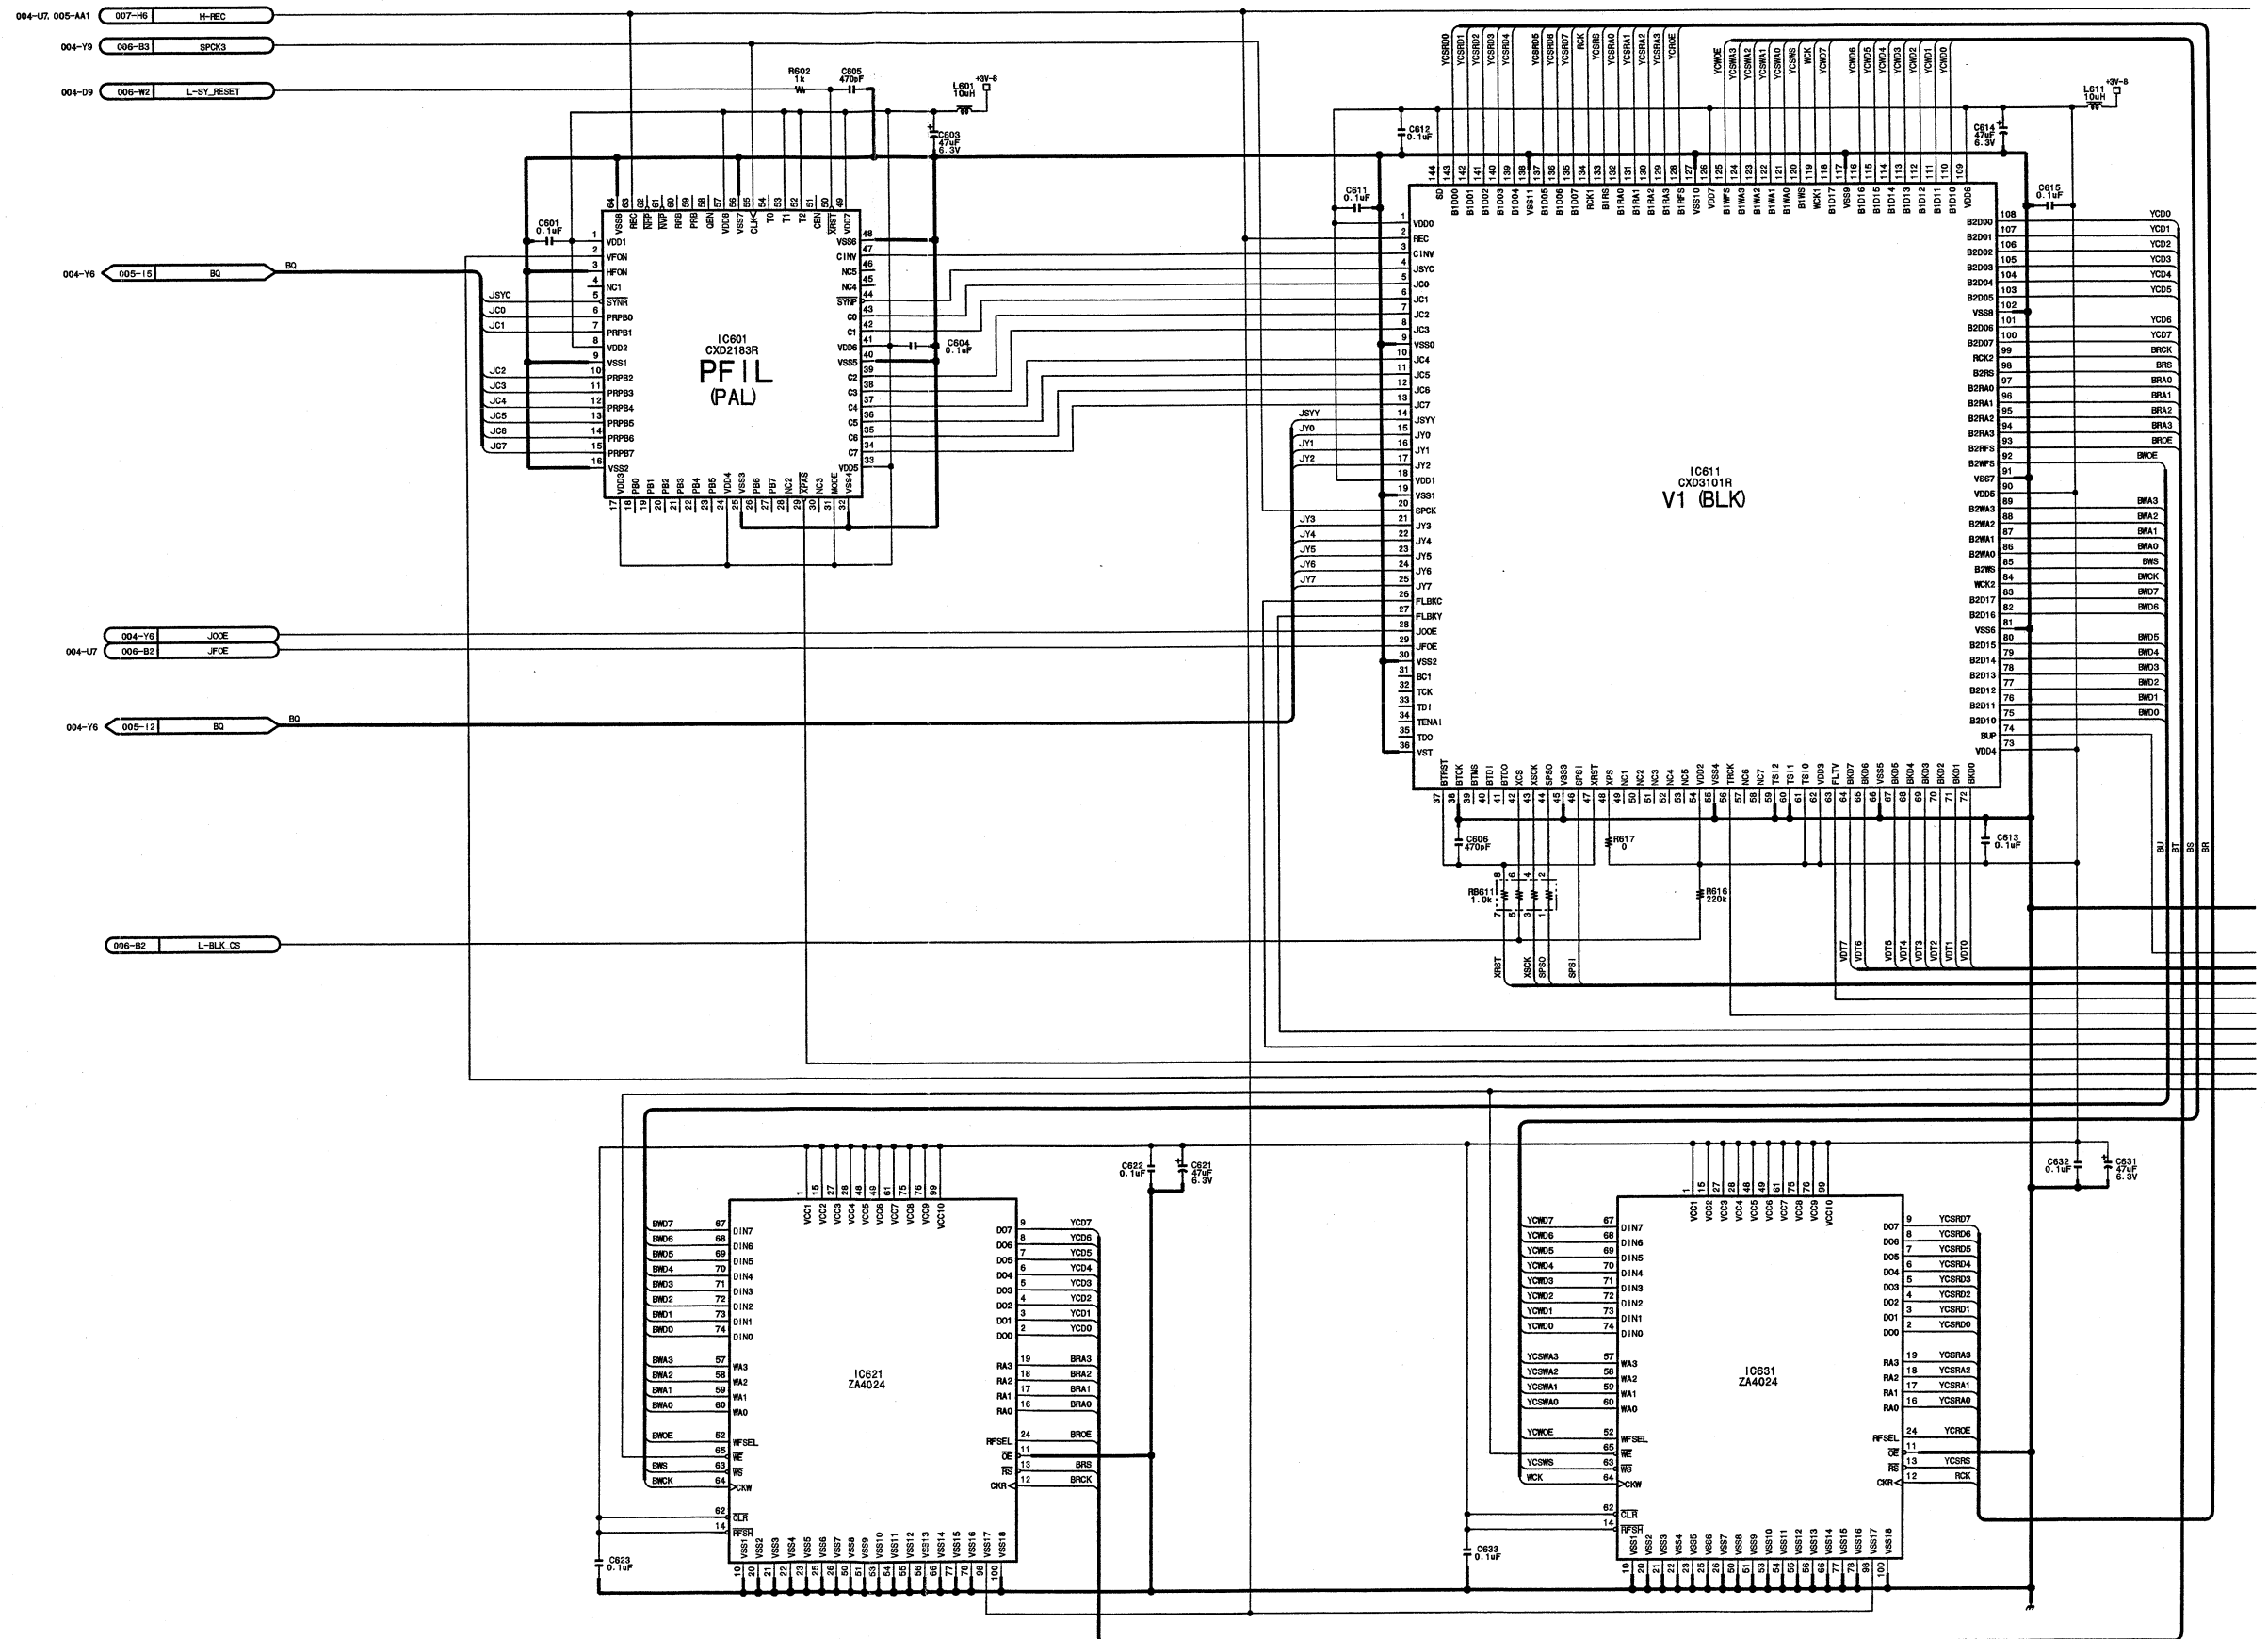

4-20 (a)

4-20 (a)

DSR-390/390P/370/370P/300A/300AP V2

A

B

C

D

E

F

G


H

DPR-141A (5/9)
SUFFIX: -11




D


DPR-141A (6/9)
SUFFIX: -11



DPR-141A (6/9)
SUFFIX: -11




DPR-141A (7/9)
SUFFIX: -11




DPR-141A (7/9)
SUFFIX: -11

DPR-141A (7/9)
SUFFIX: -11

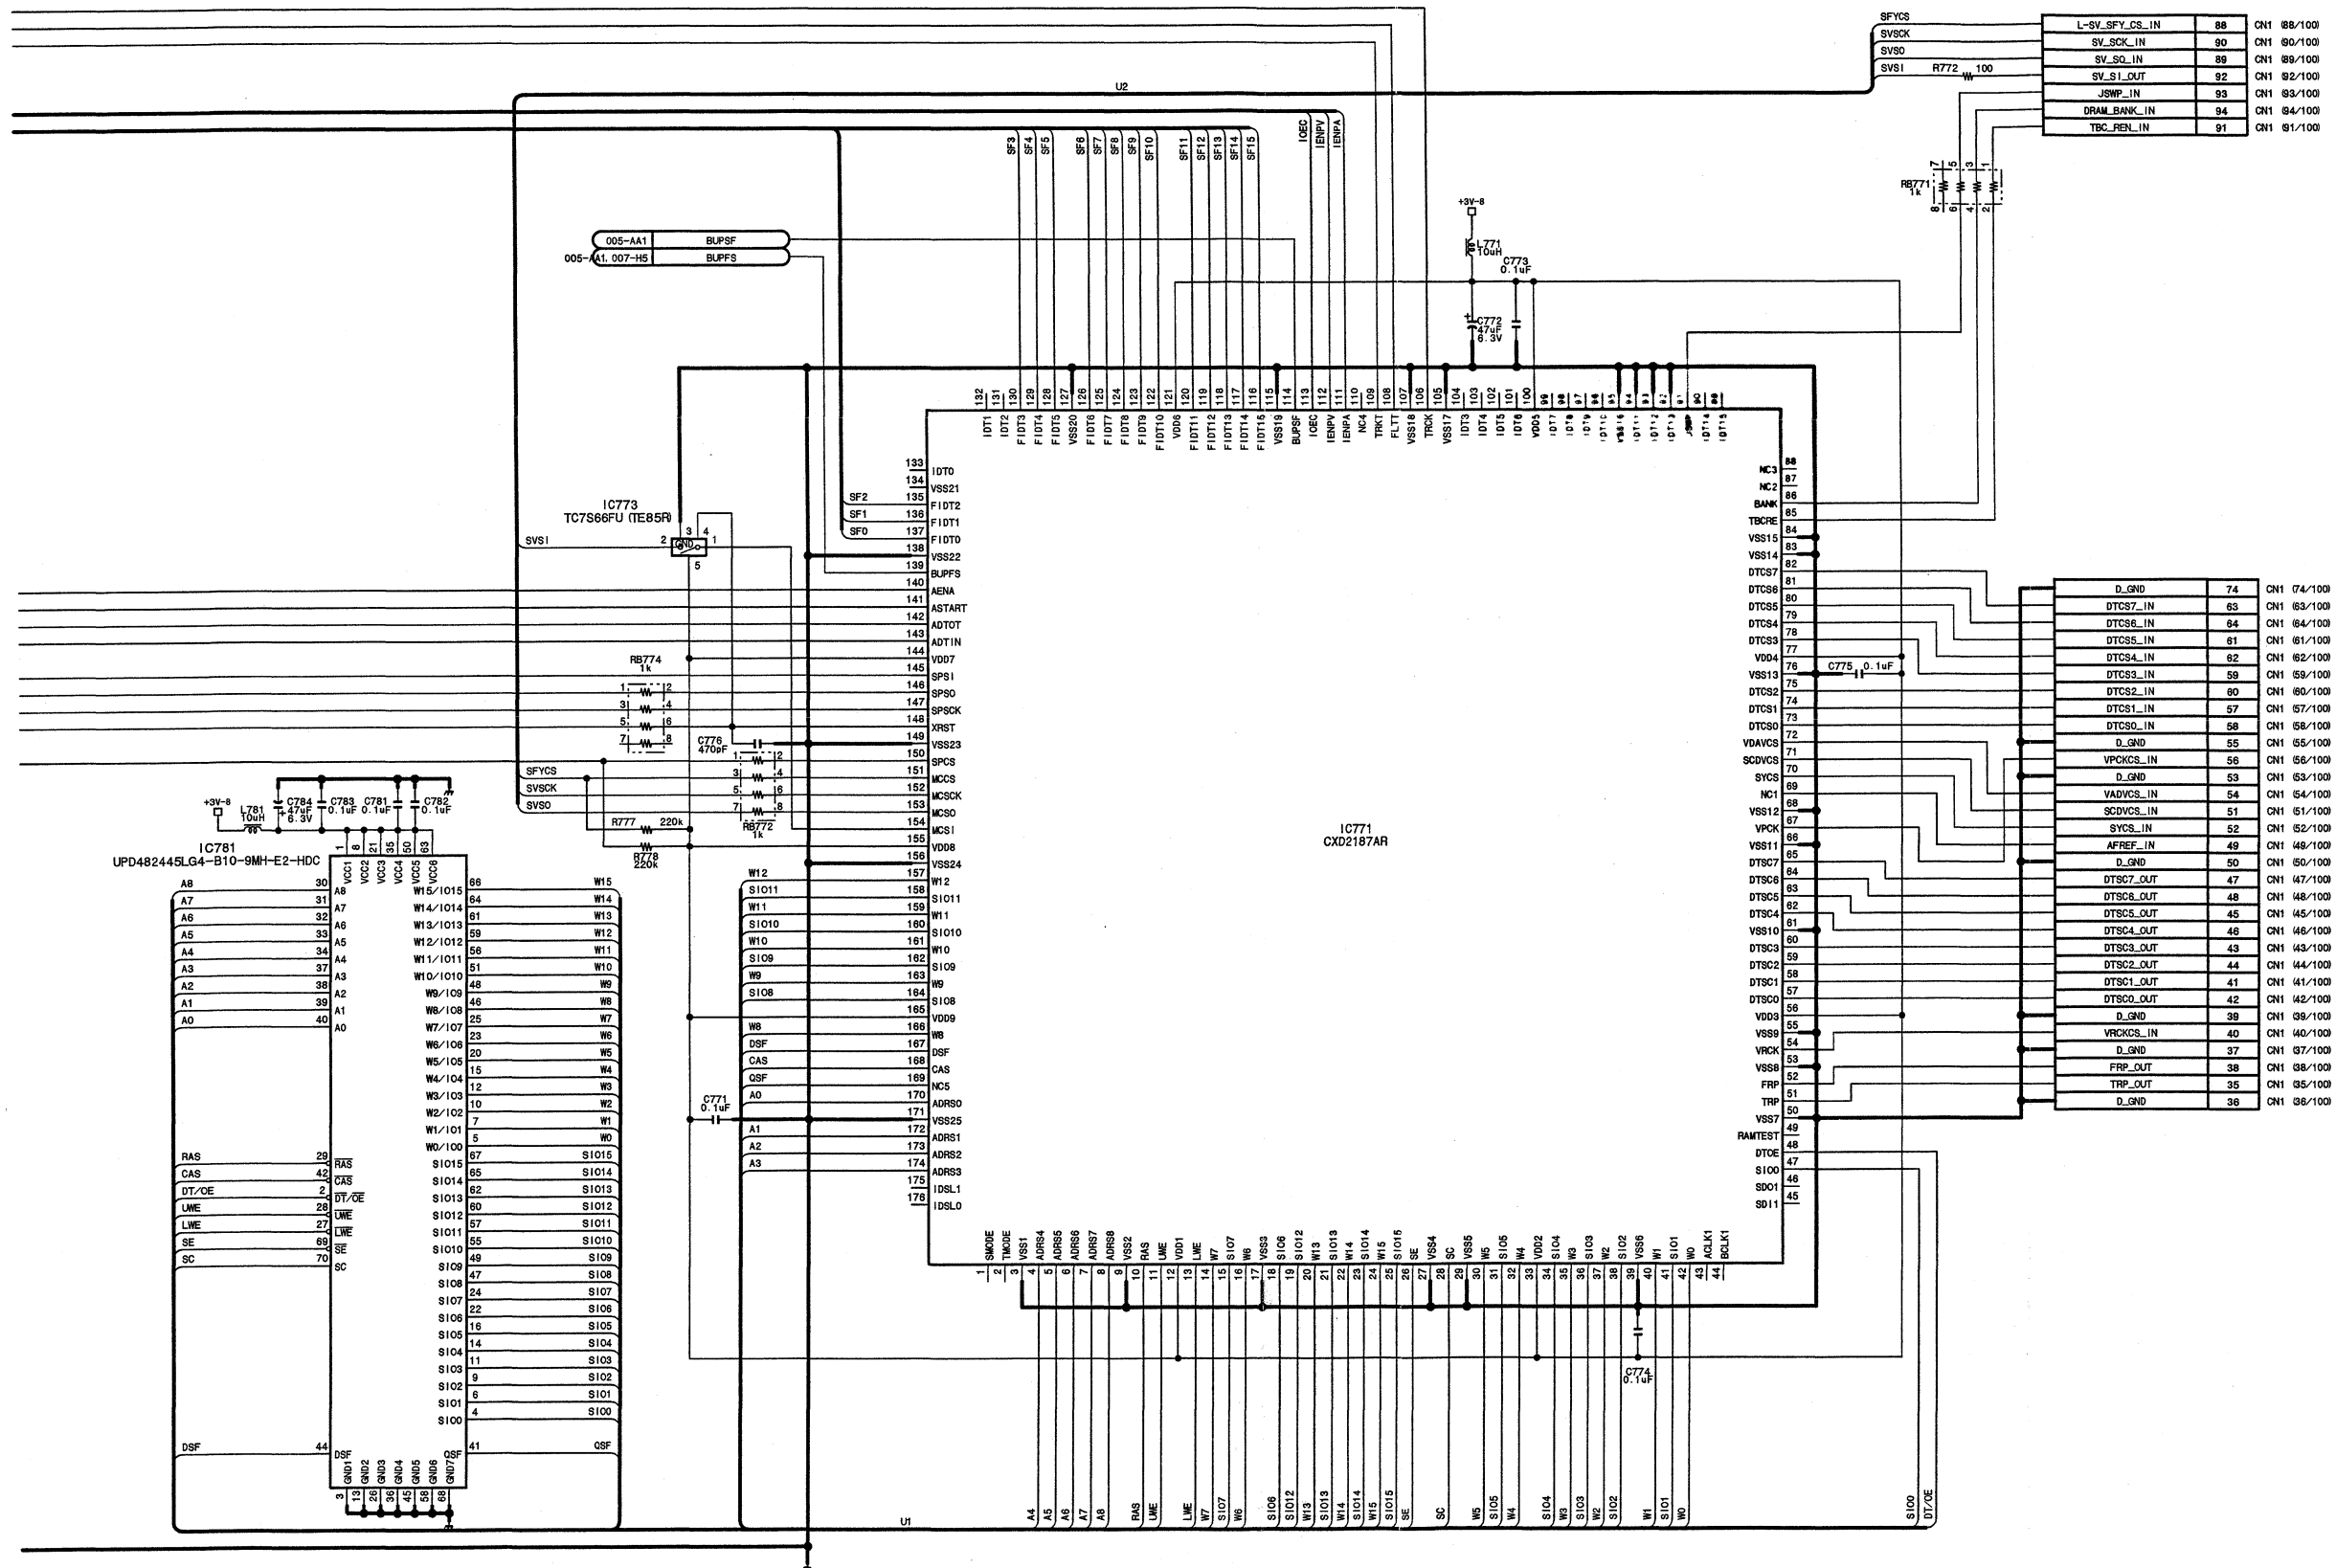





DPR-141A (7/9)
BOARD NO. 1-673-975-11
DSR-300A_DPR-141_002_7

DPR-141A (8/9)
SUFFIX: -11



DPR-141A (9/9)
SUFFIX: -11

DPR-141A (9/9)
SUFFIX: -11

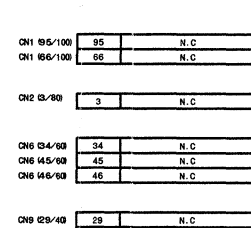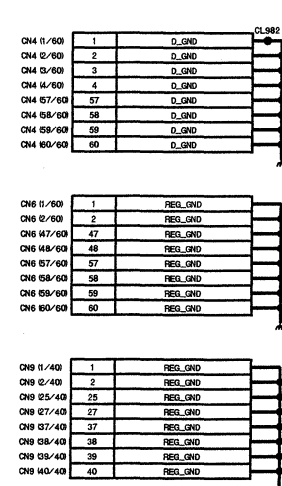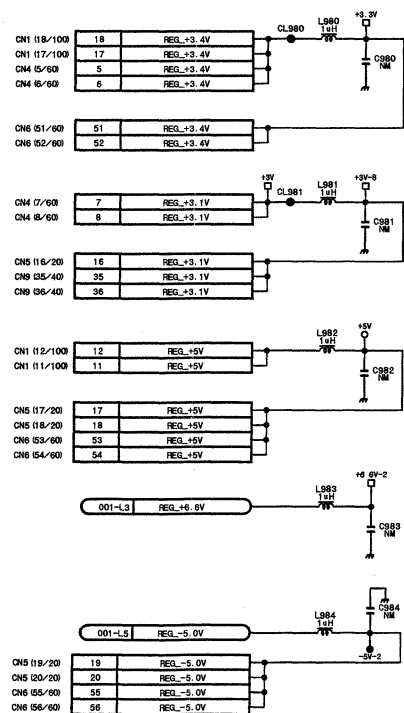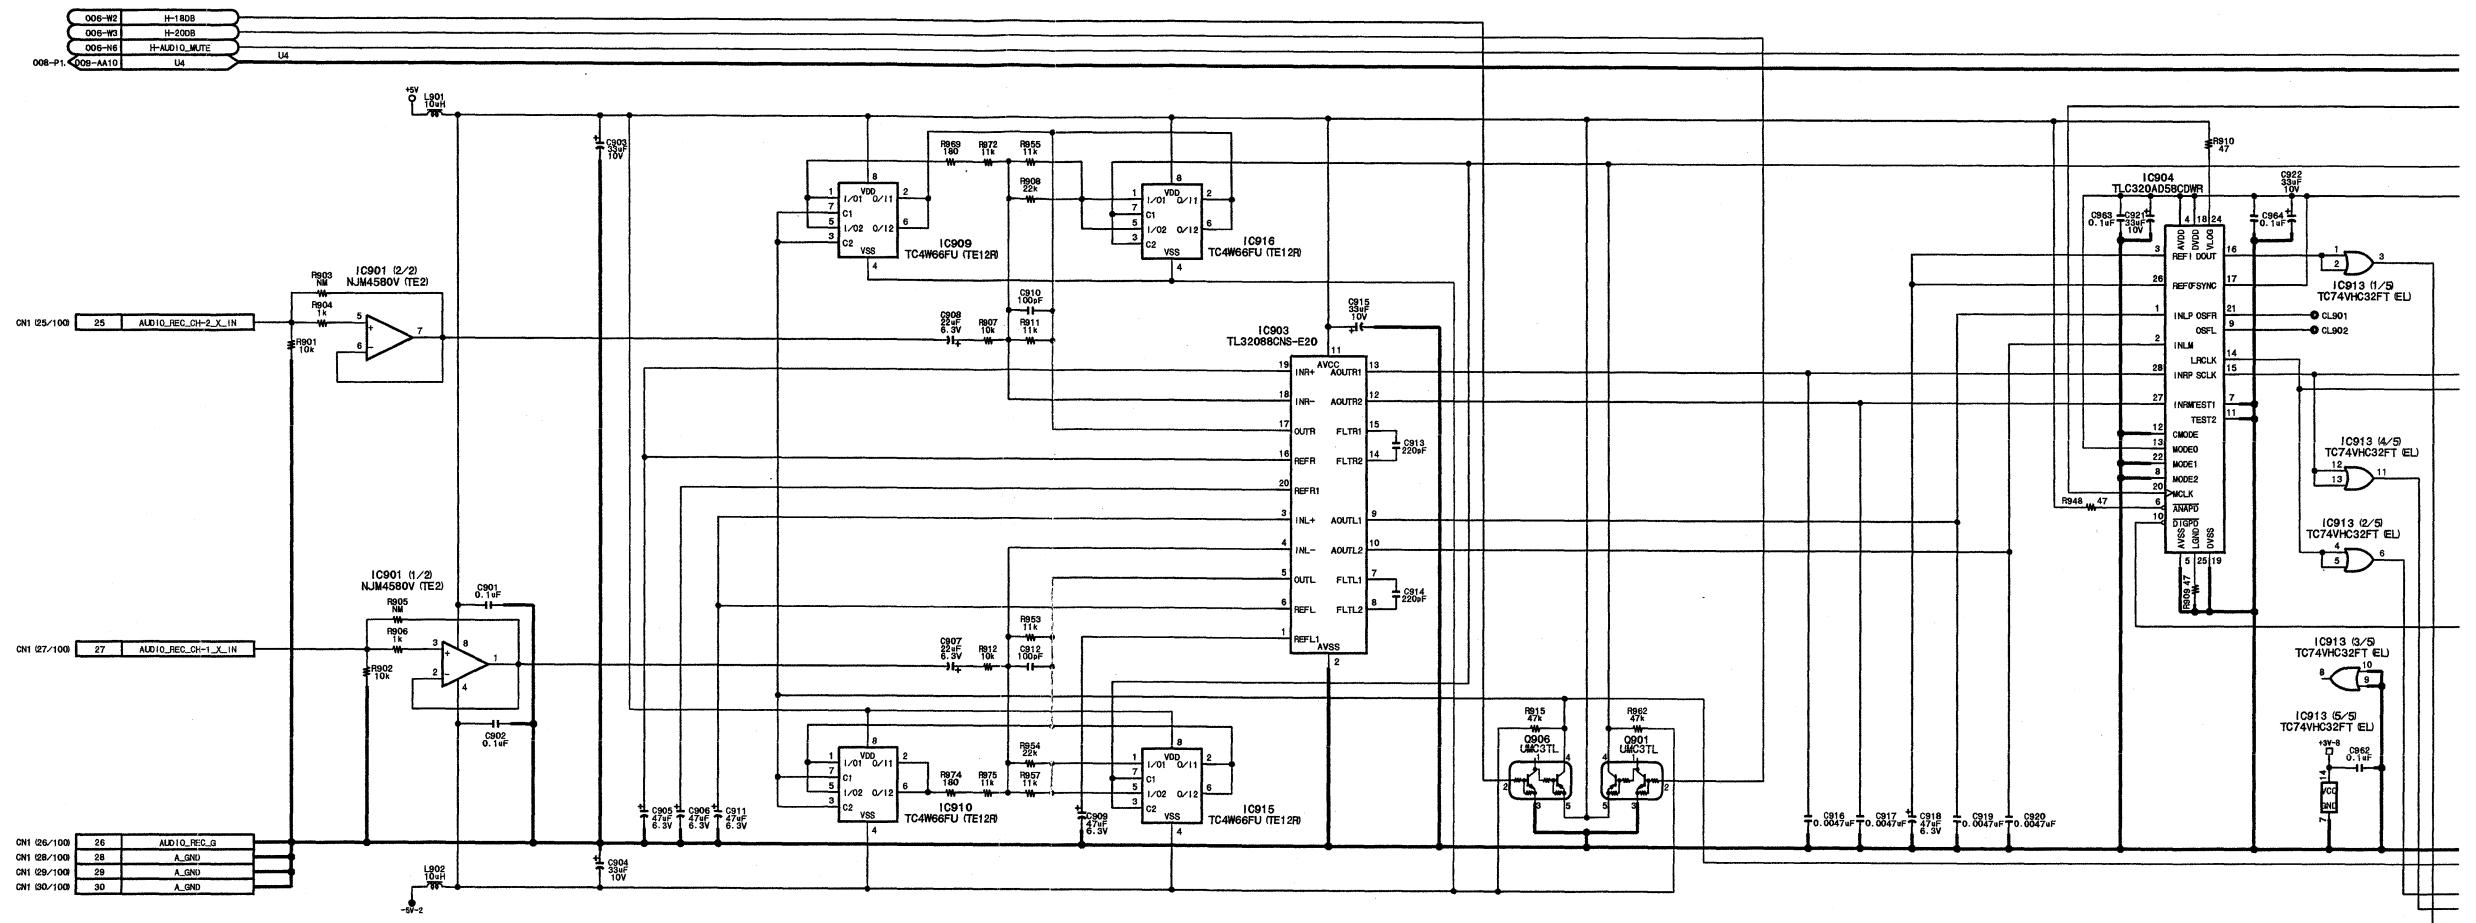


4-28 (a)

4-28 (a)


DPR-141A (9/9)
SUFFIX: -11


DPR-141A (9/9)
SUFFIX: -11

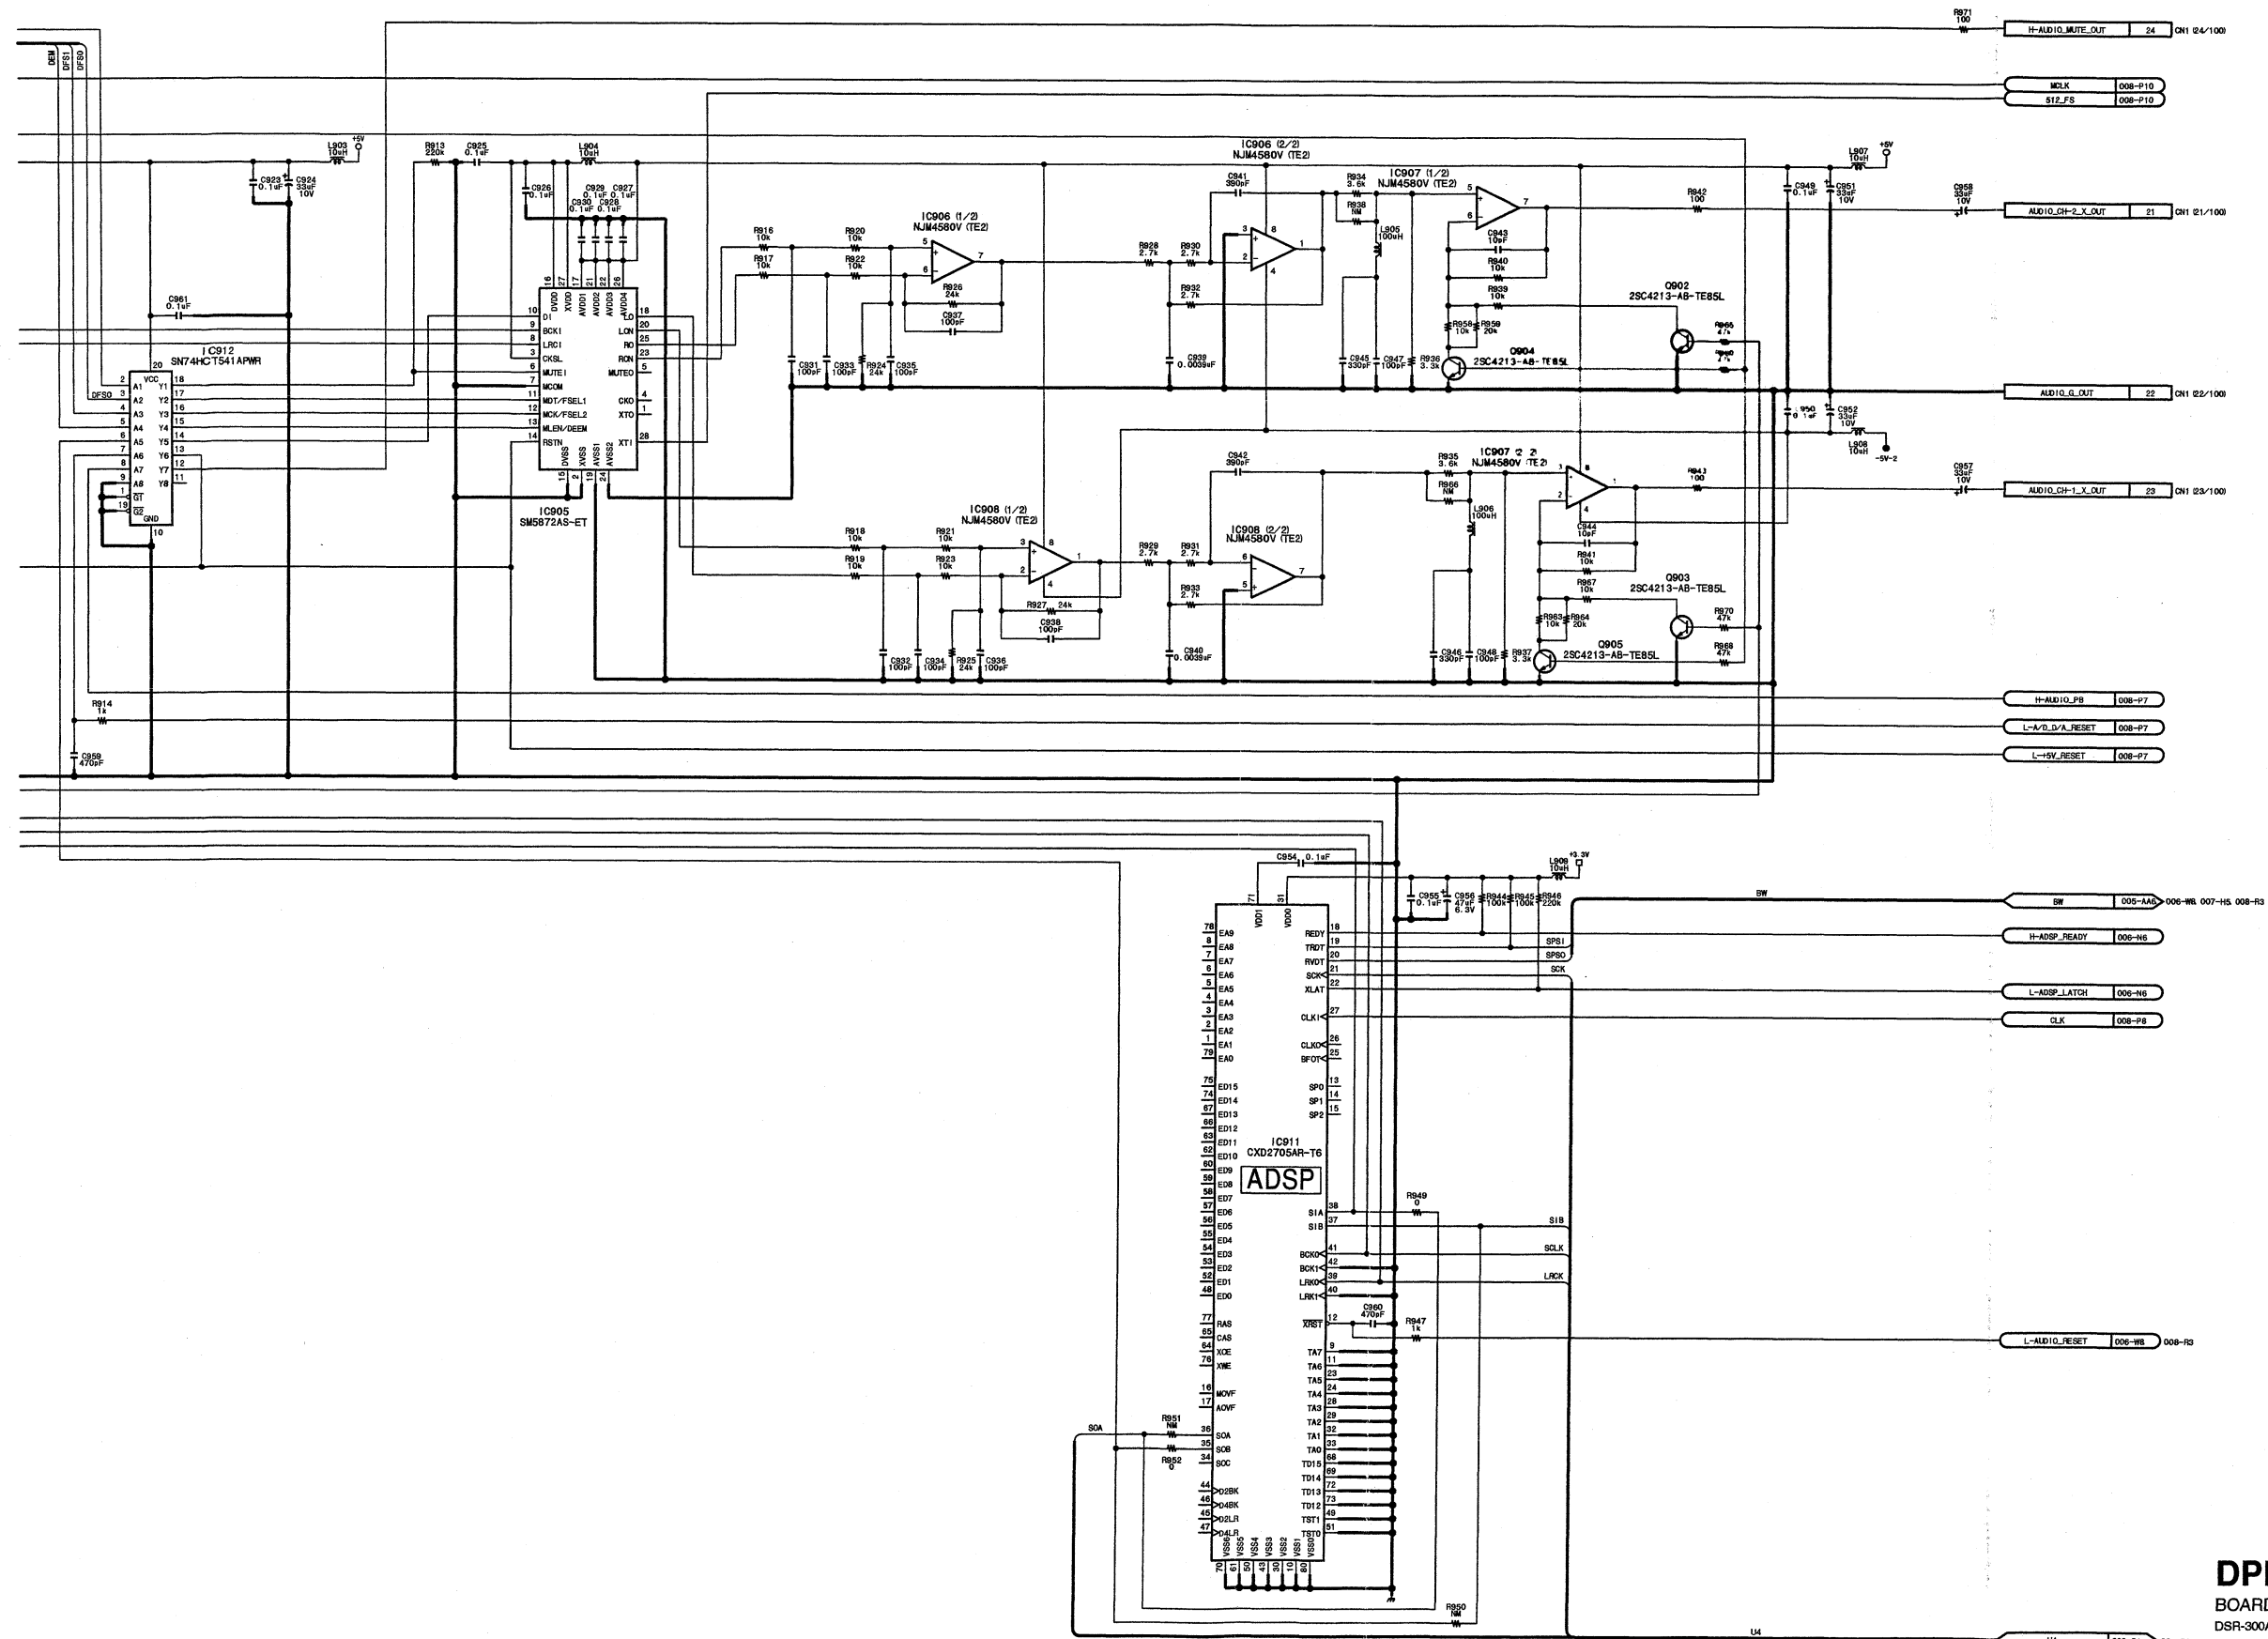

DPR-141A (9/9)
BOARD NO. 1-673-975-11
DSR-300A_DPR-141_002_9

ES-31/31P (1/4) ES-31/31P (1/4)

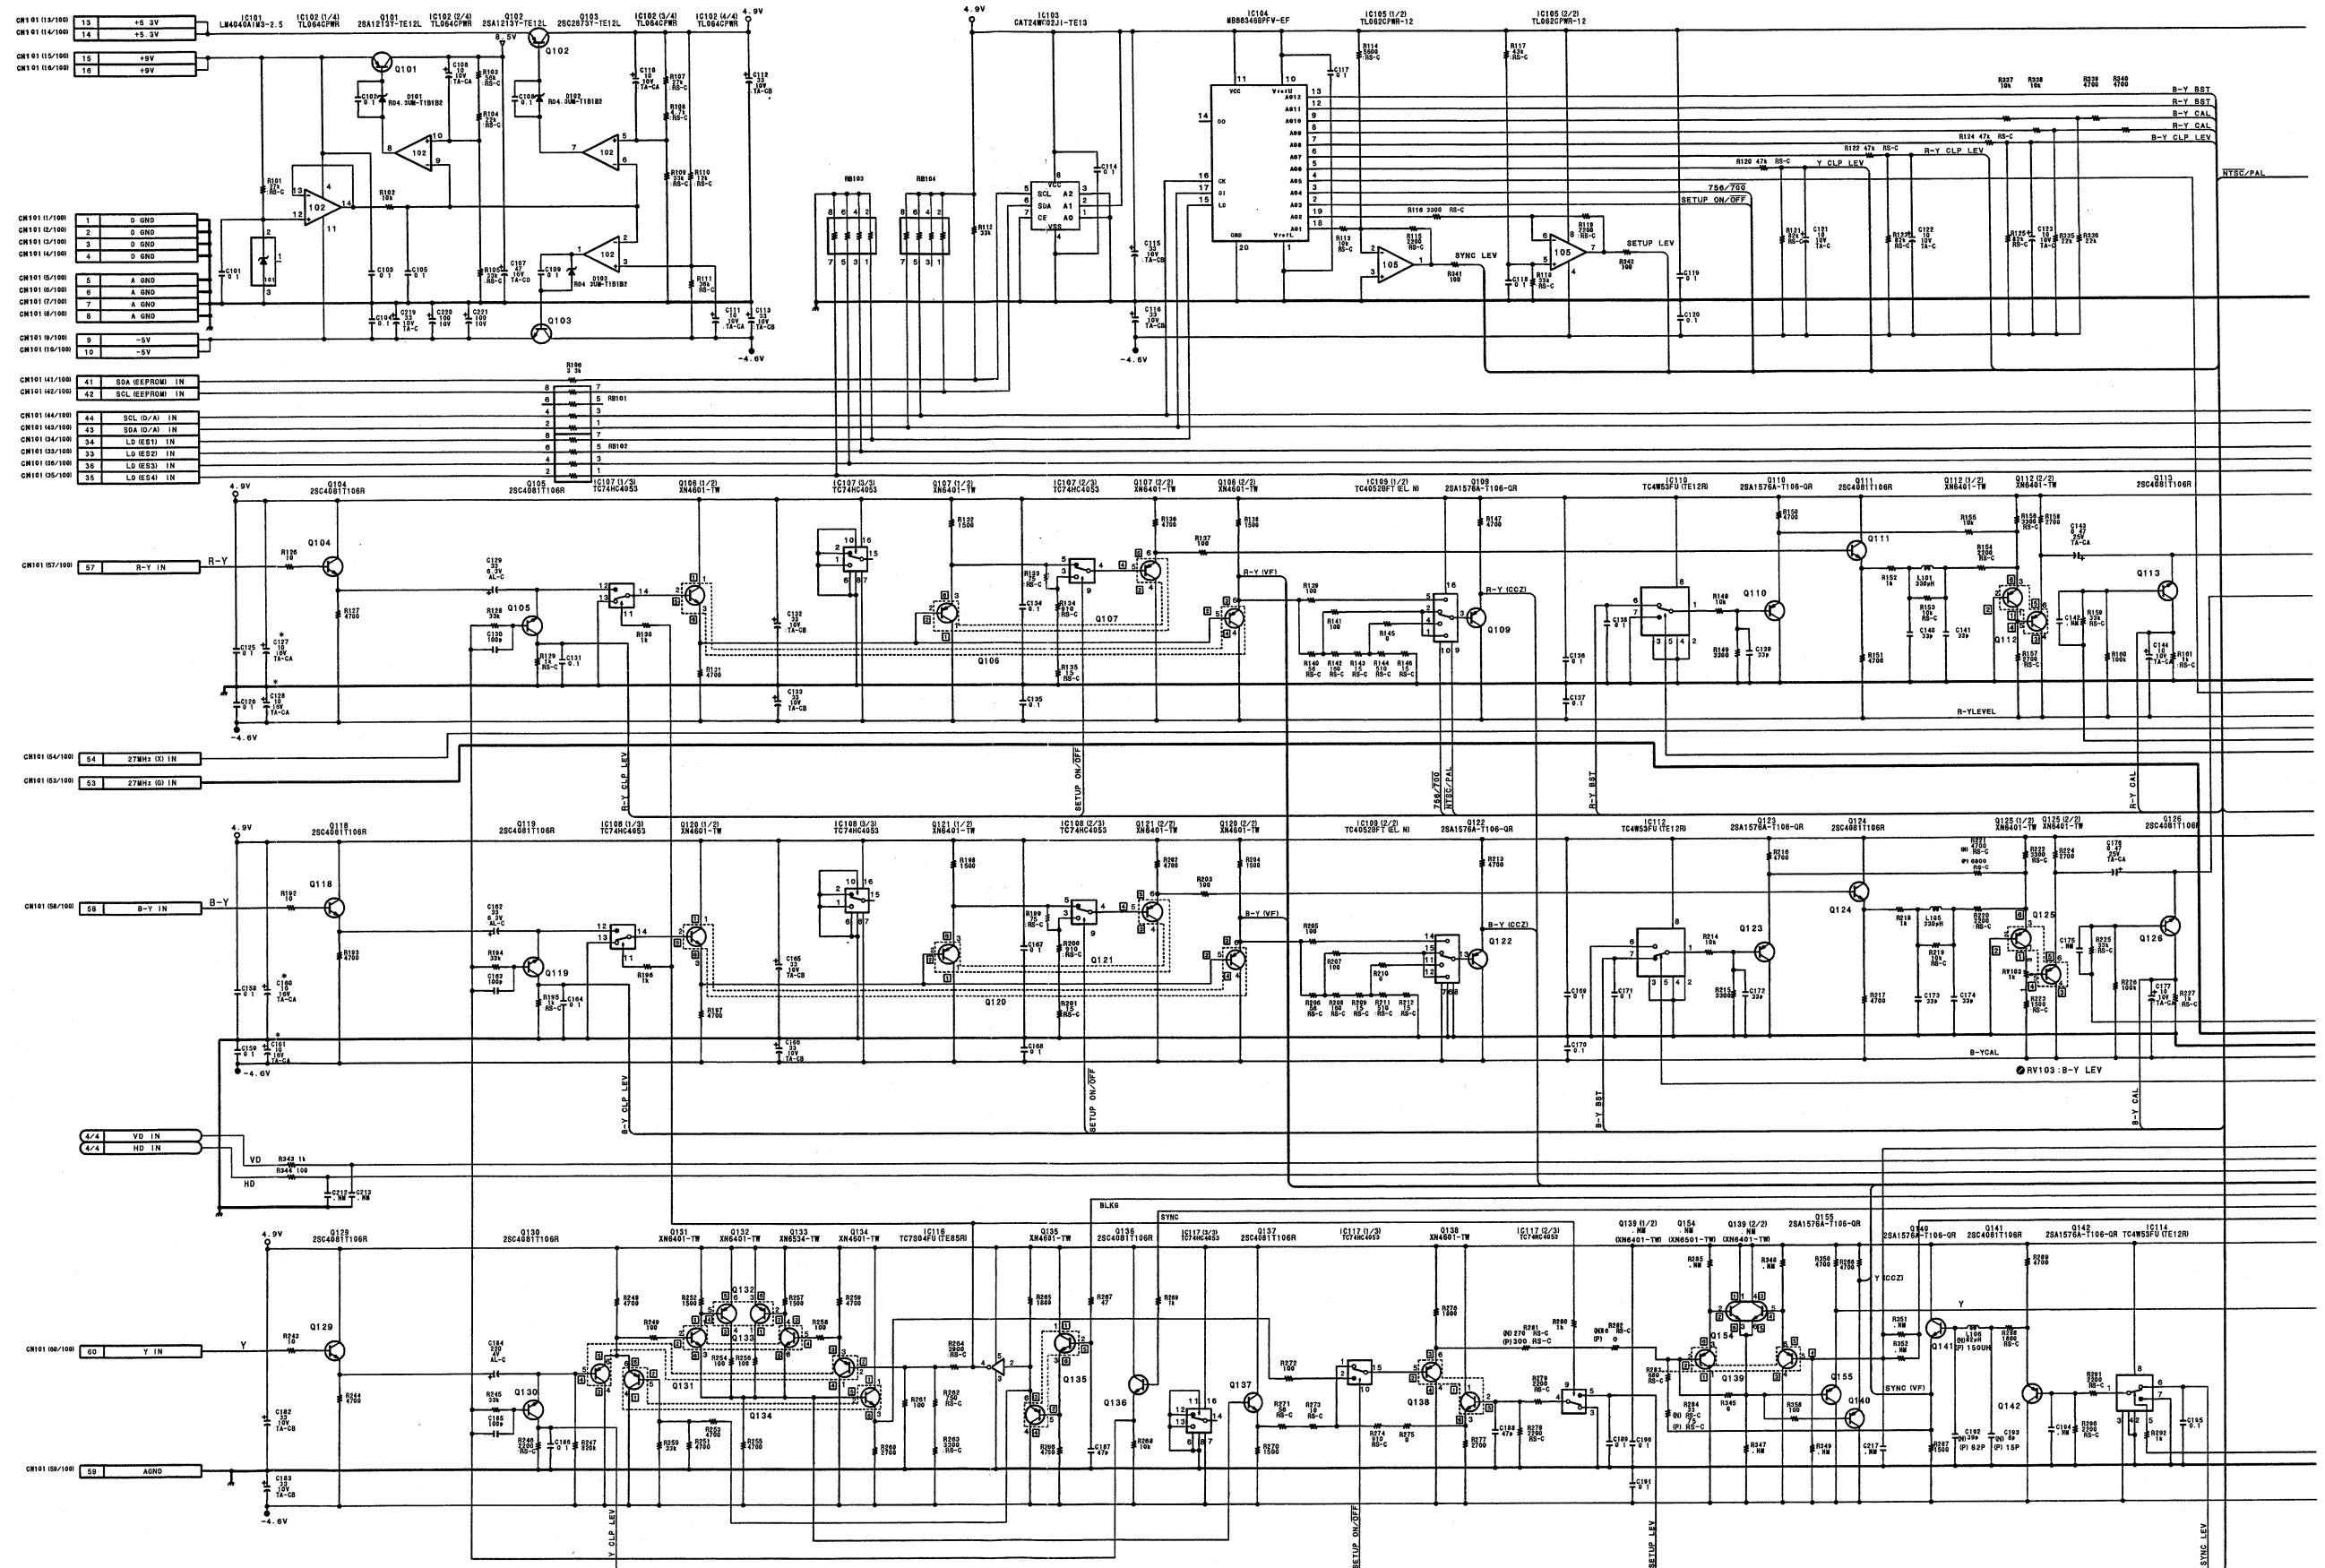

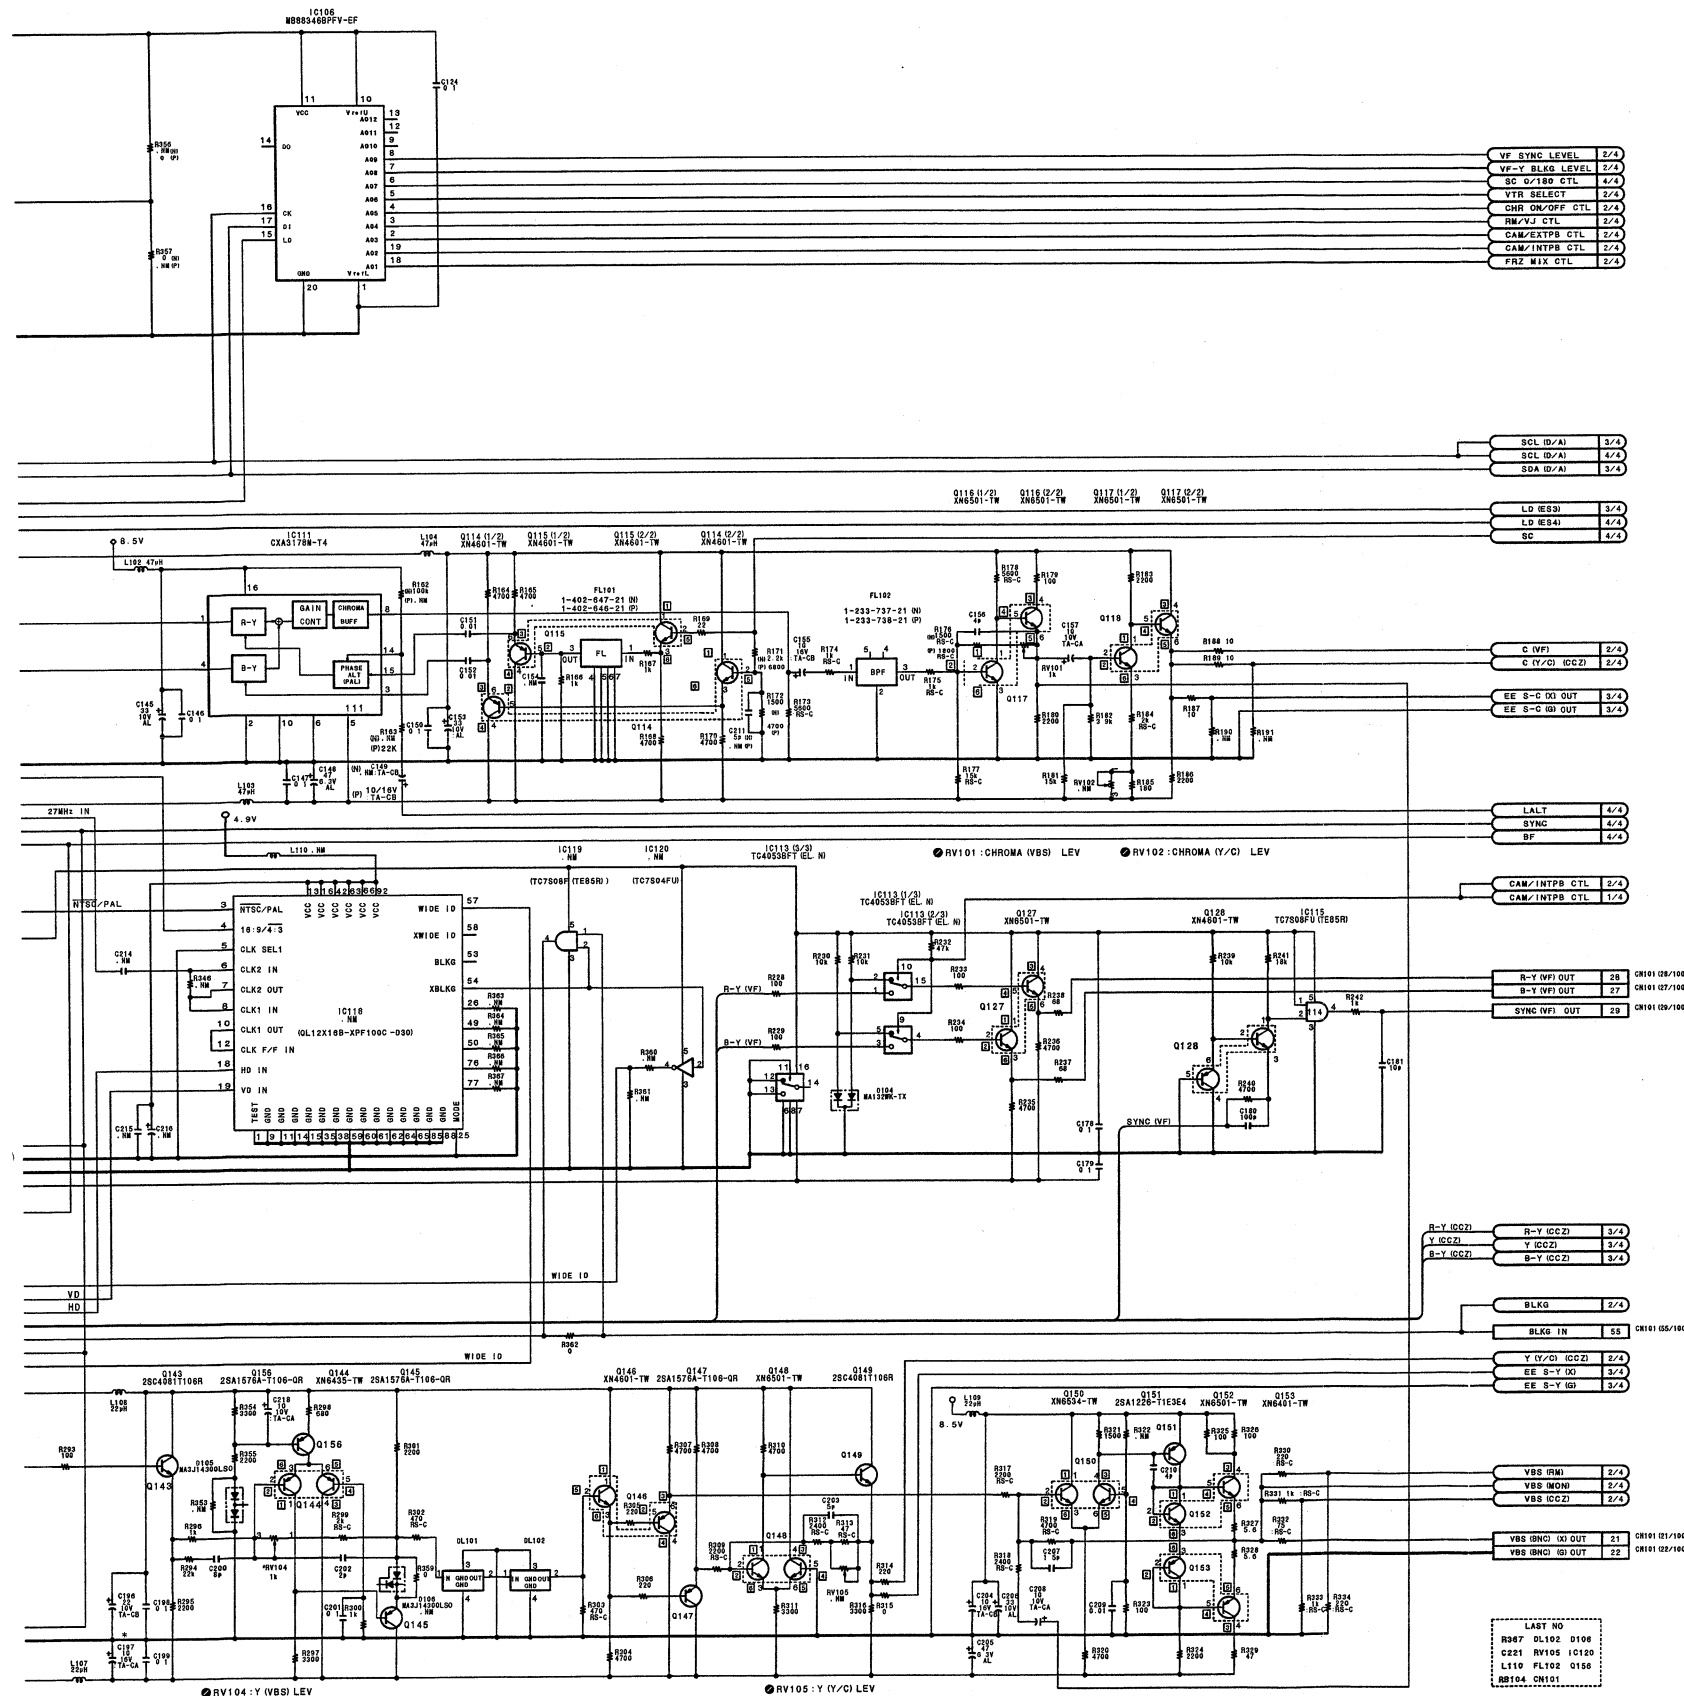


1


2

3

4

5

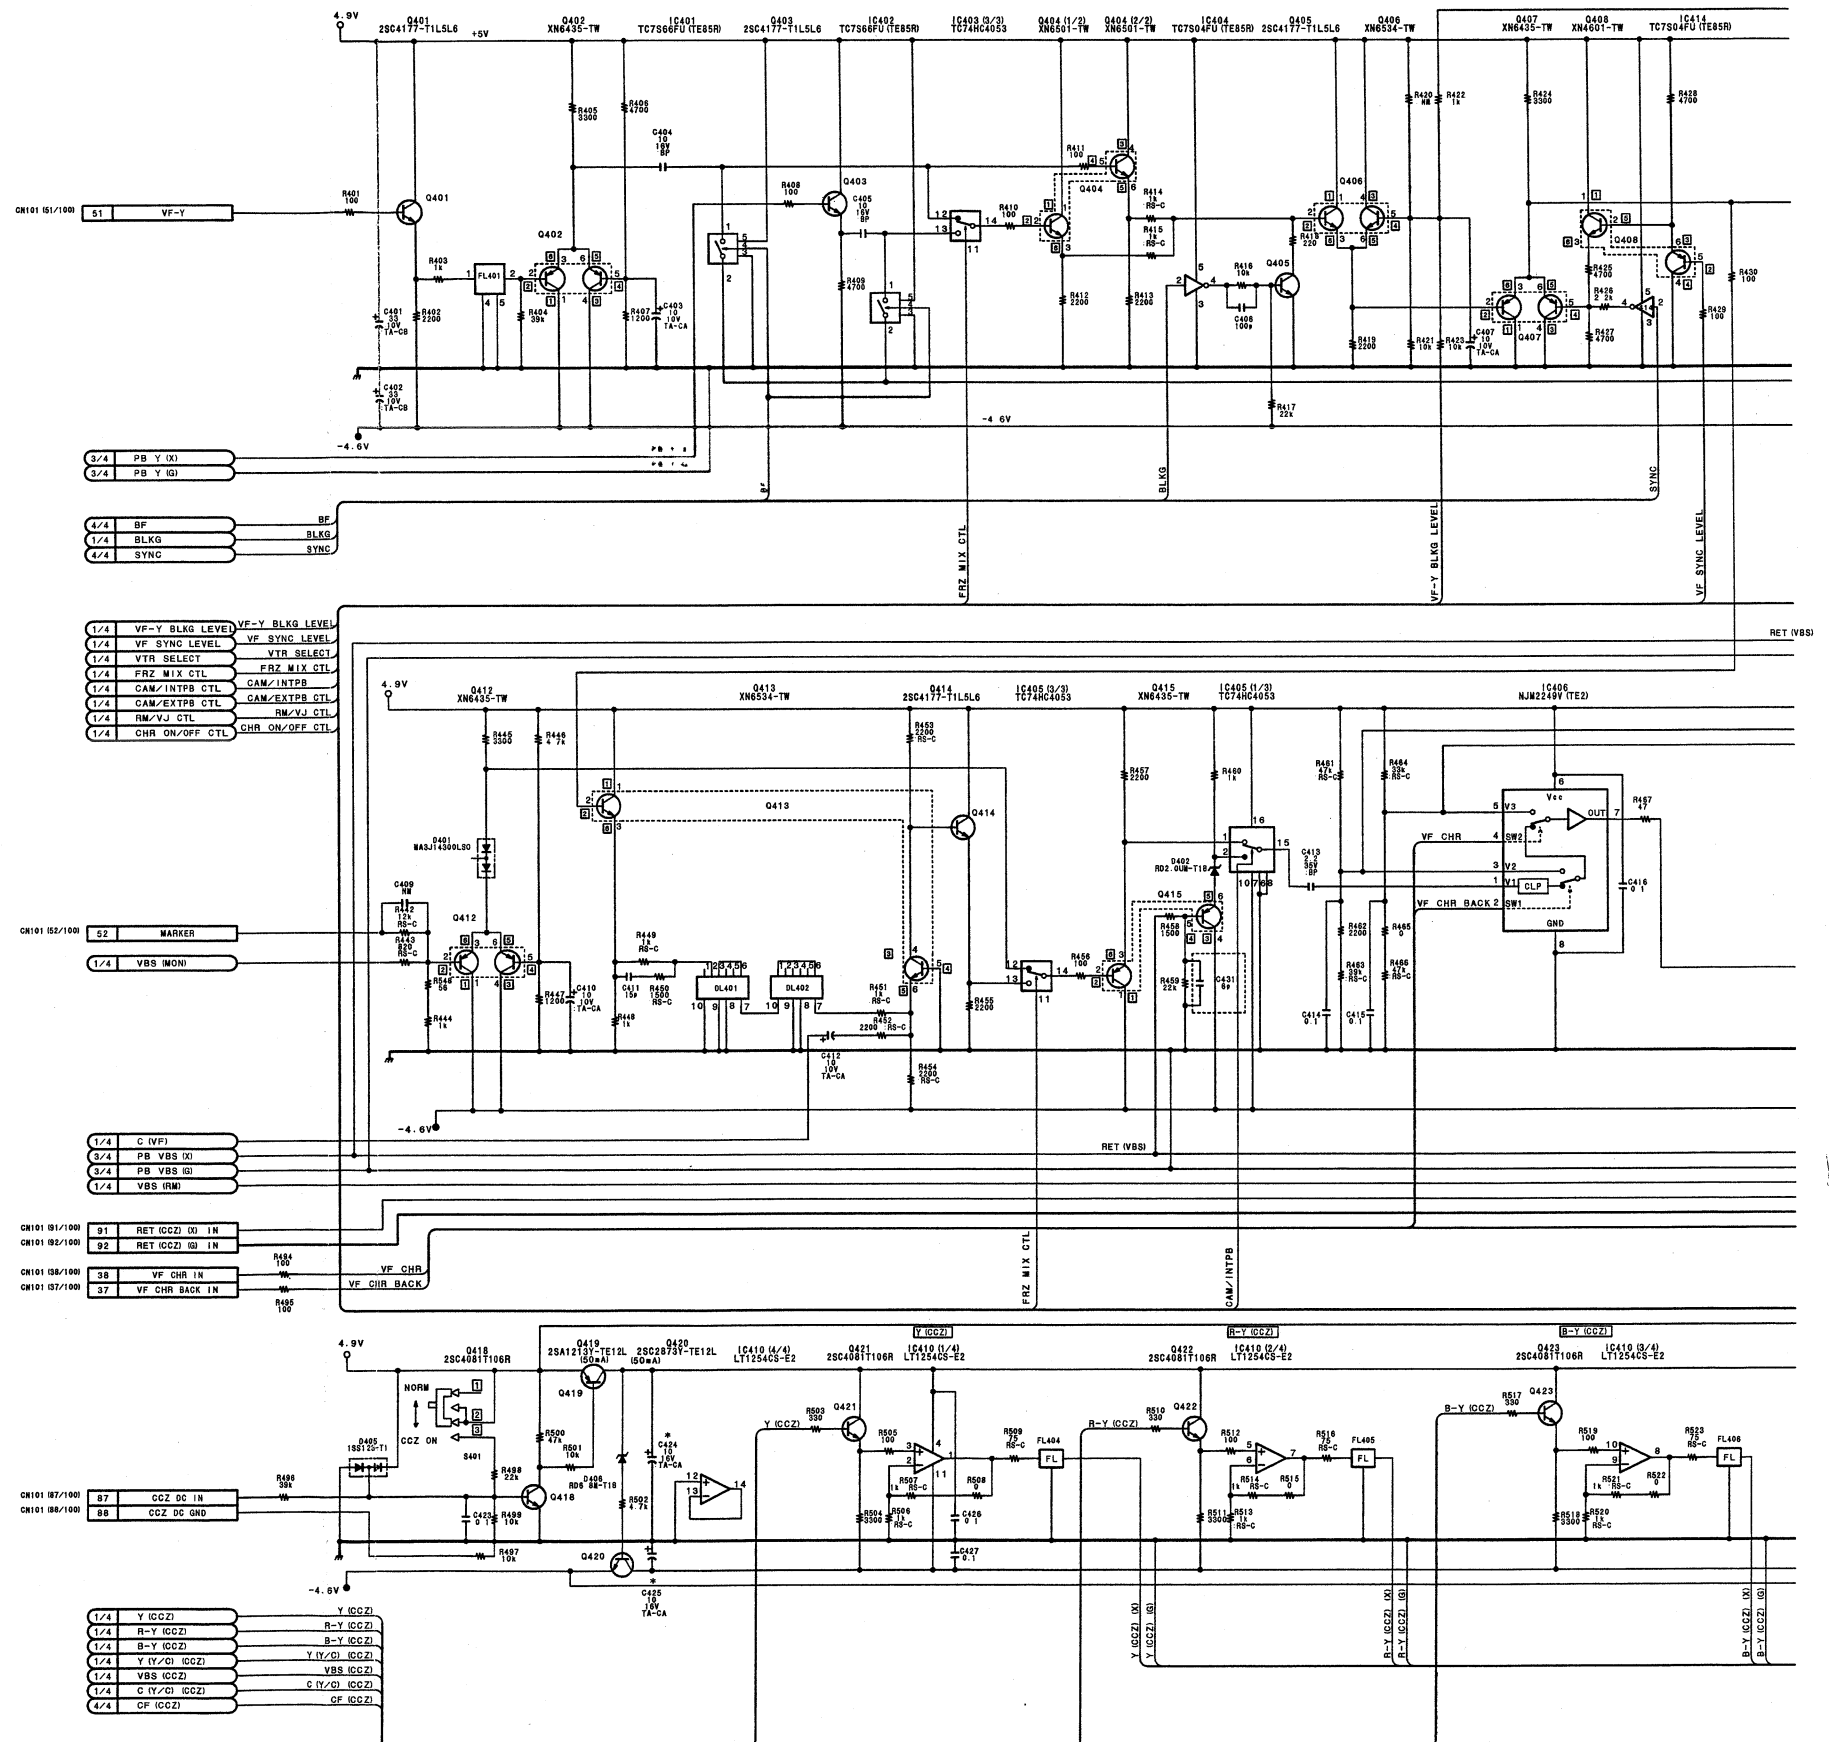




1

2


3

4

5

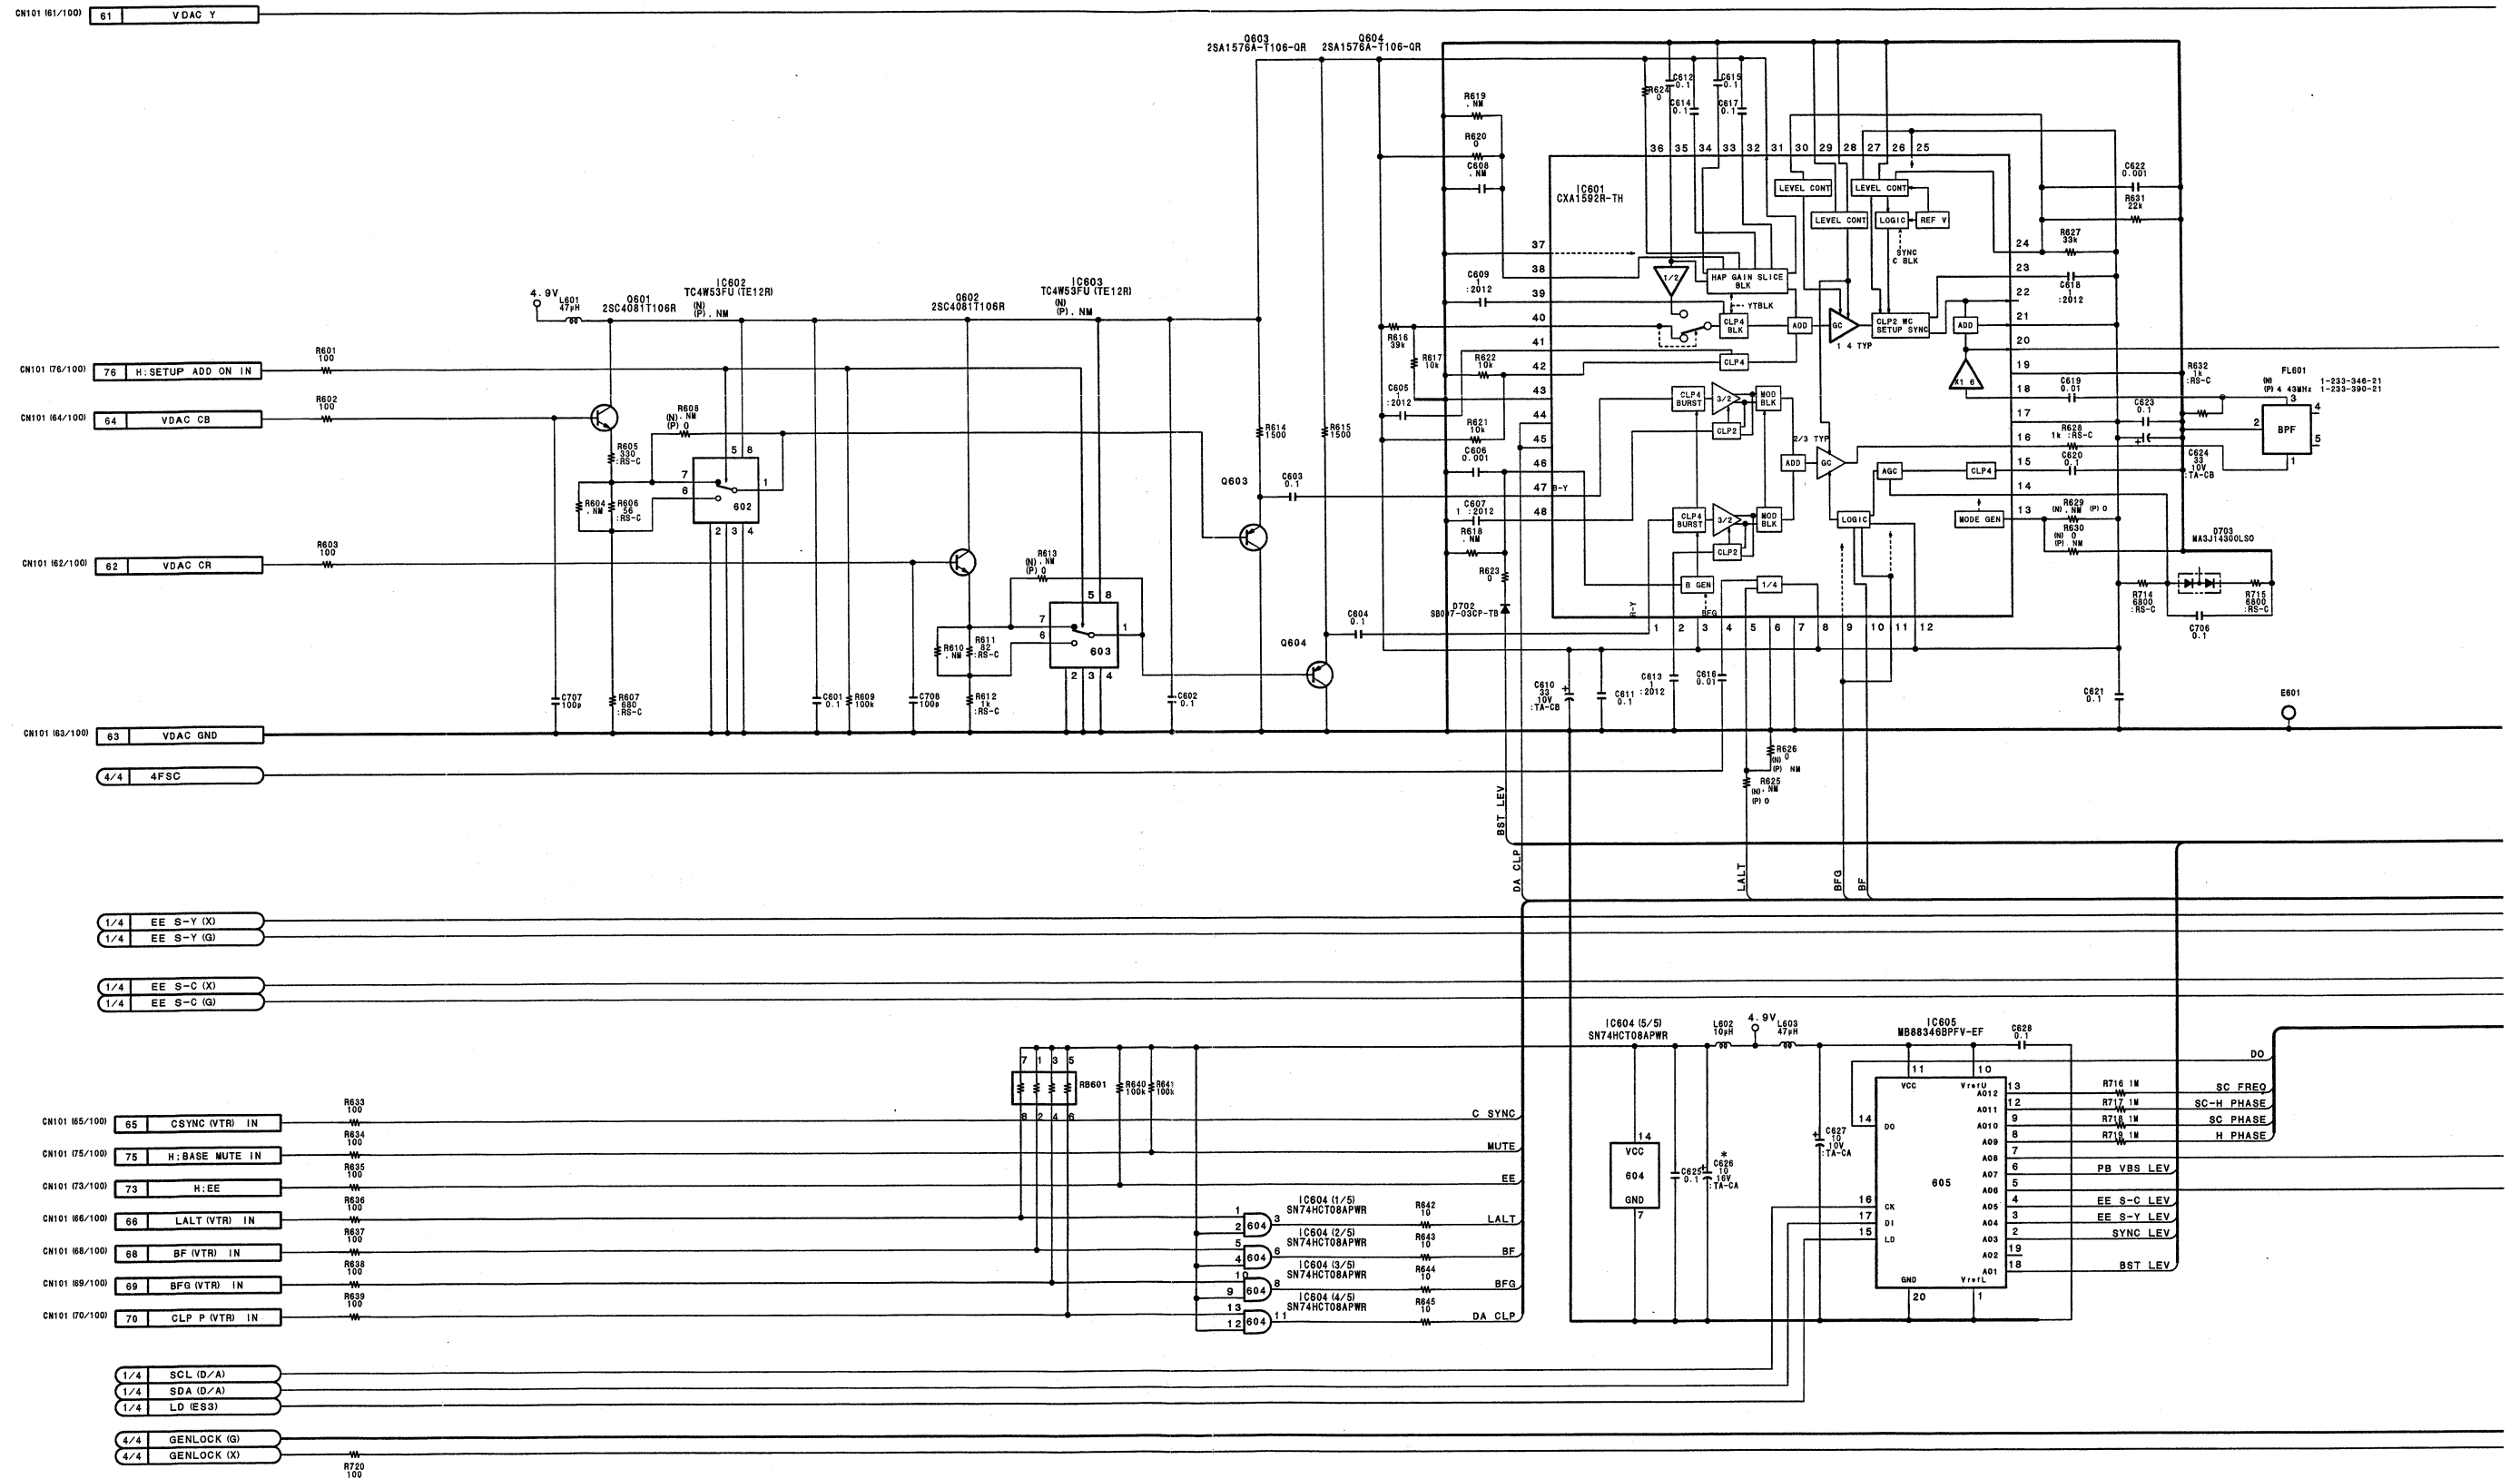

ES-31/31P (3/4)

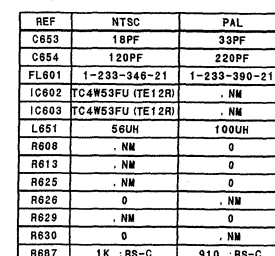



1. NC : NO CONNECTION
2. .NM :NO MOUNT
3. (N) :NTSC only
4. (P) :PAL only

| REF NO | CHANGE INFORMATION | LOT NO |
|--------|--------------------|--------|
| C626 | 10V → 16V | 221 |

BOARD NO. 1-677-371-11
B-DSR300A-ES31-11

ES-31/31P (4/4) ES-31/31P (4/4)

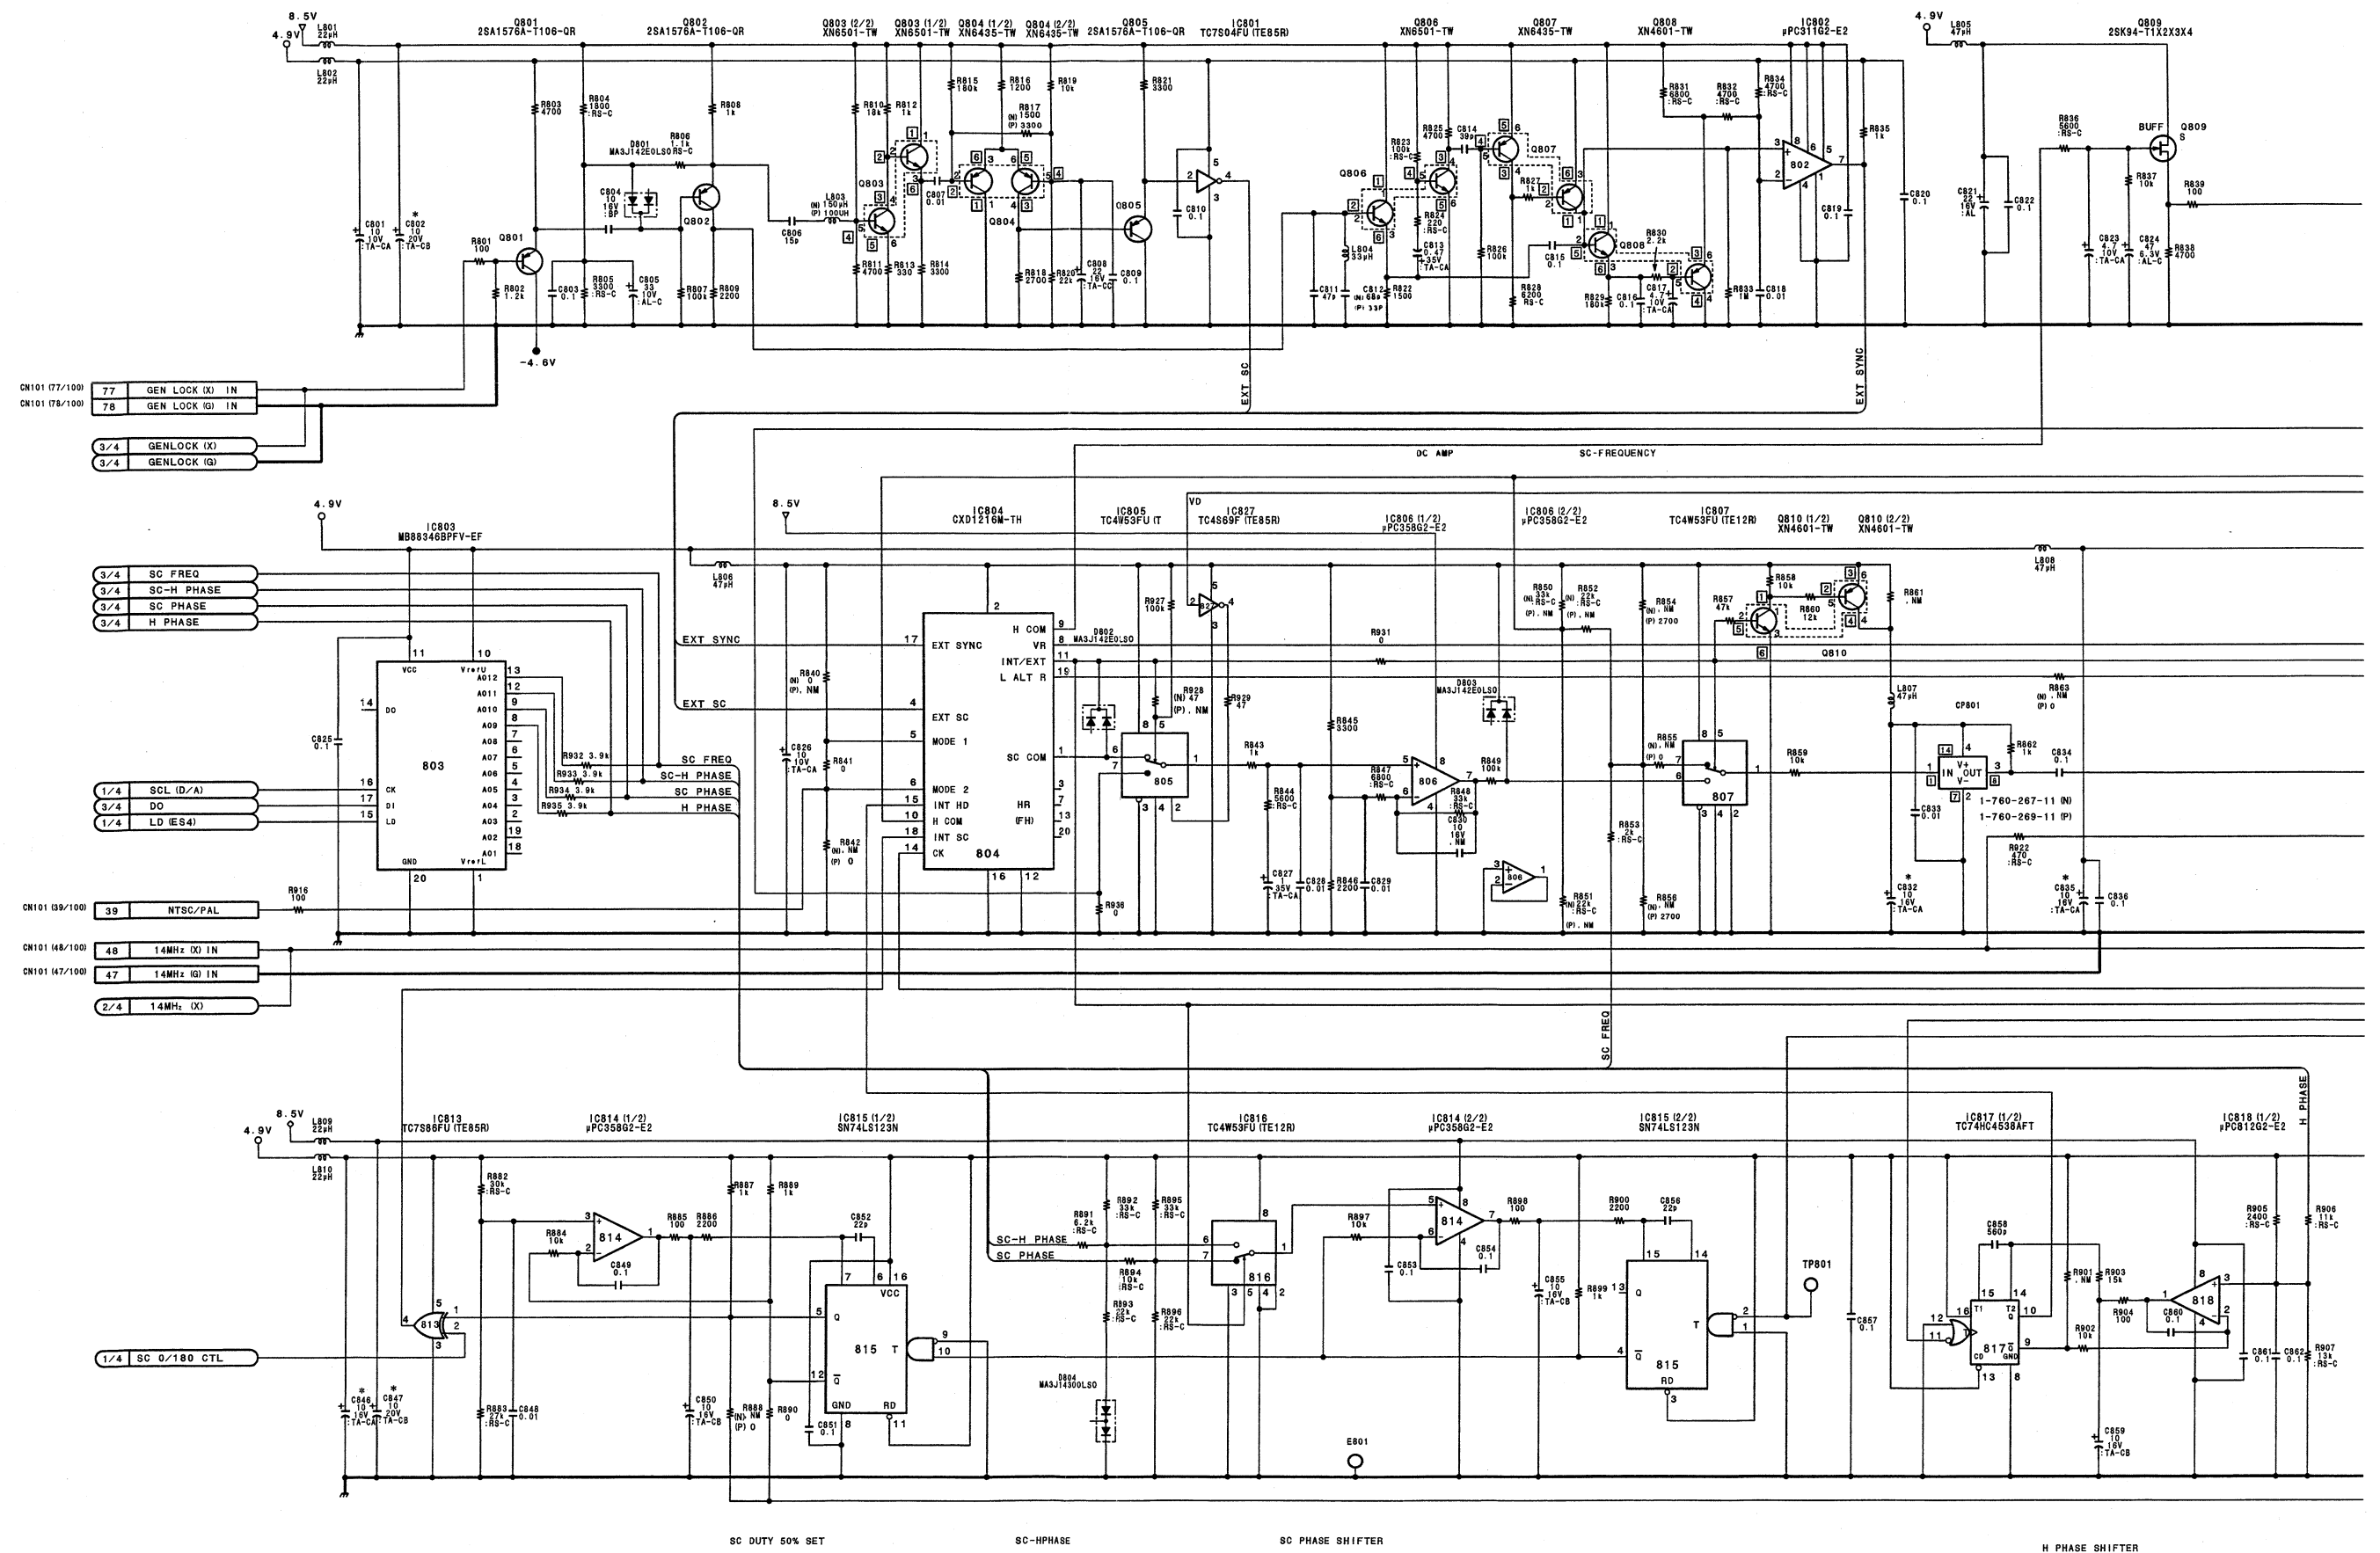

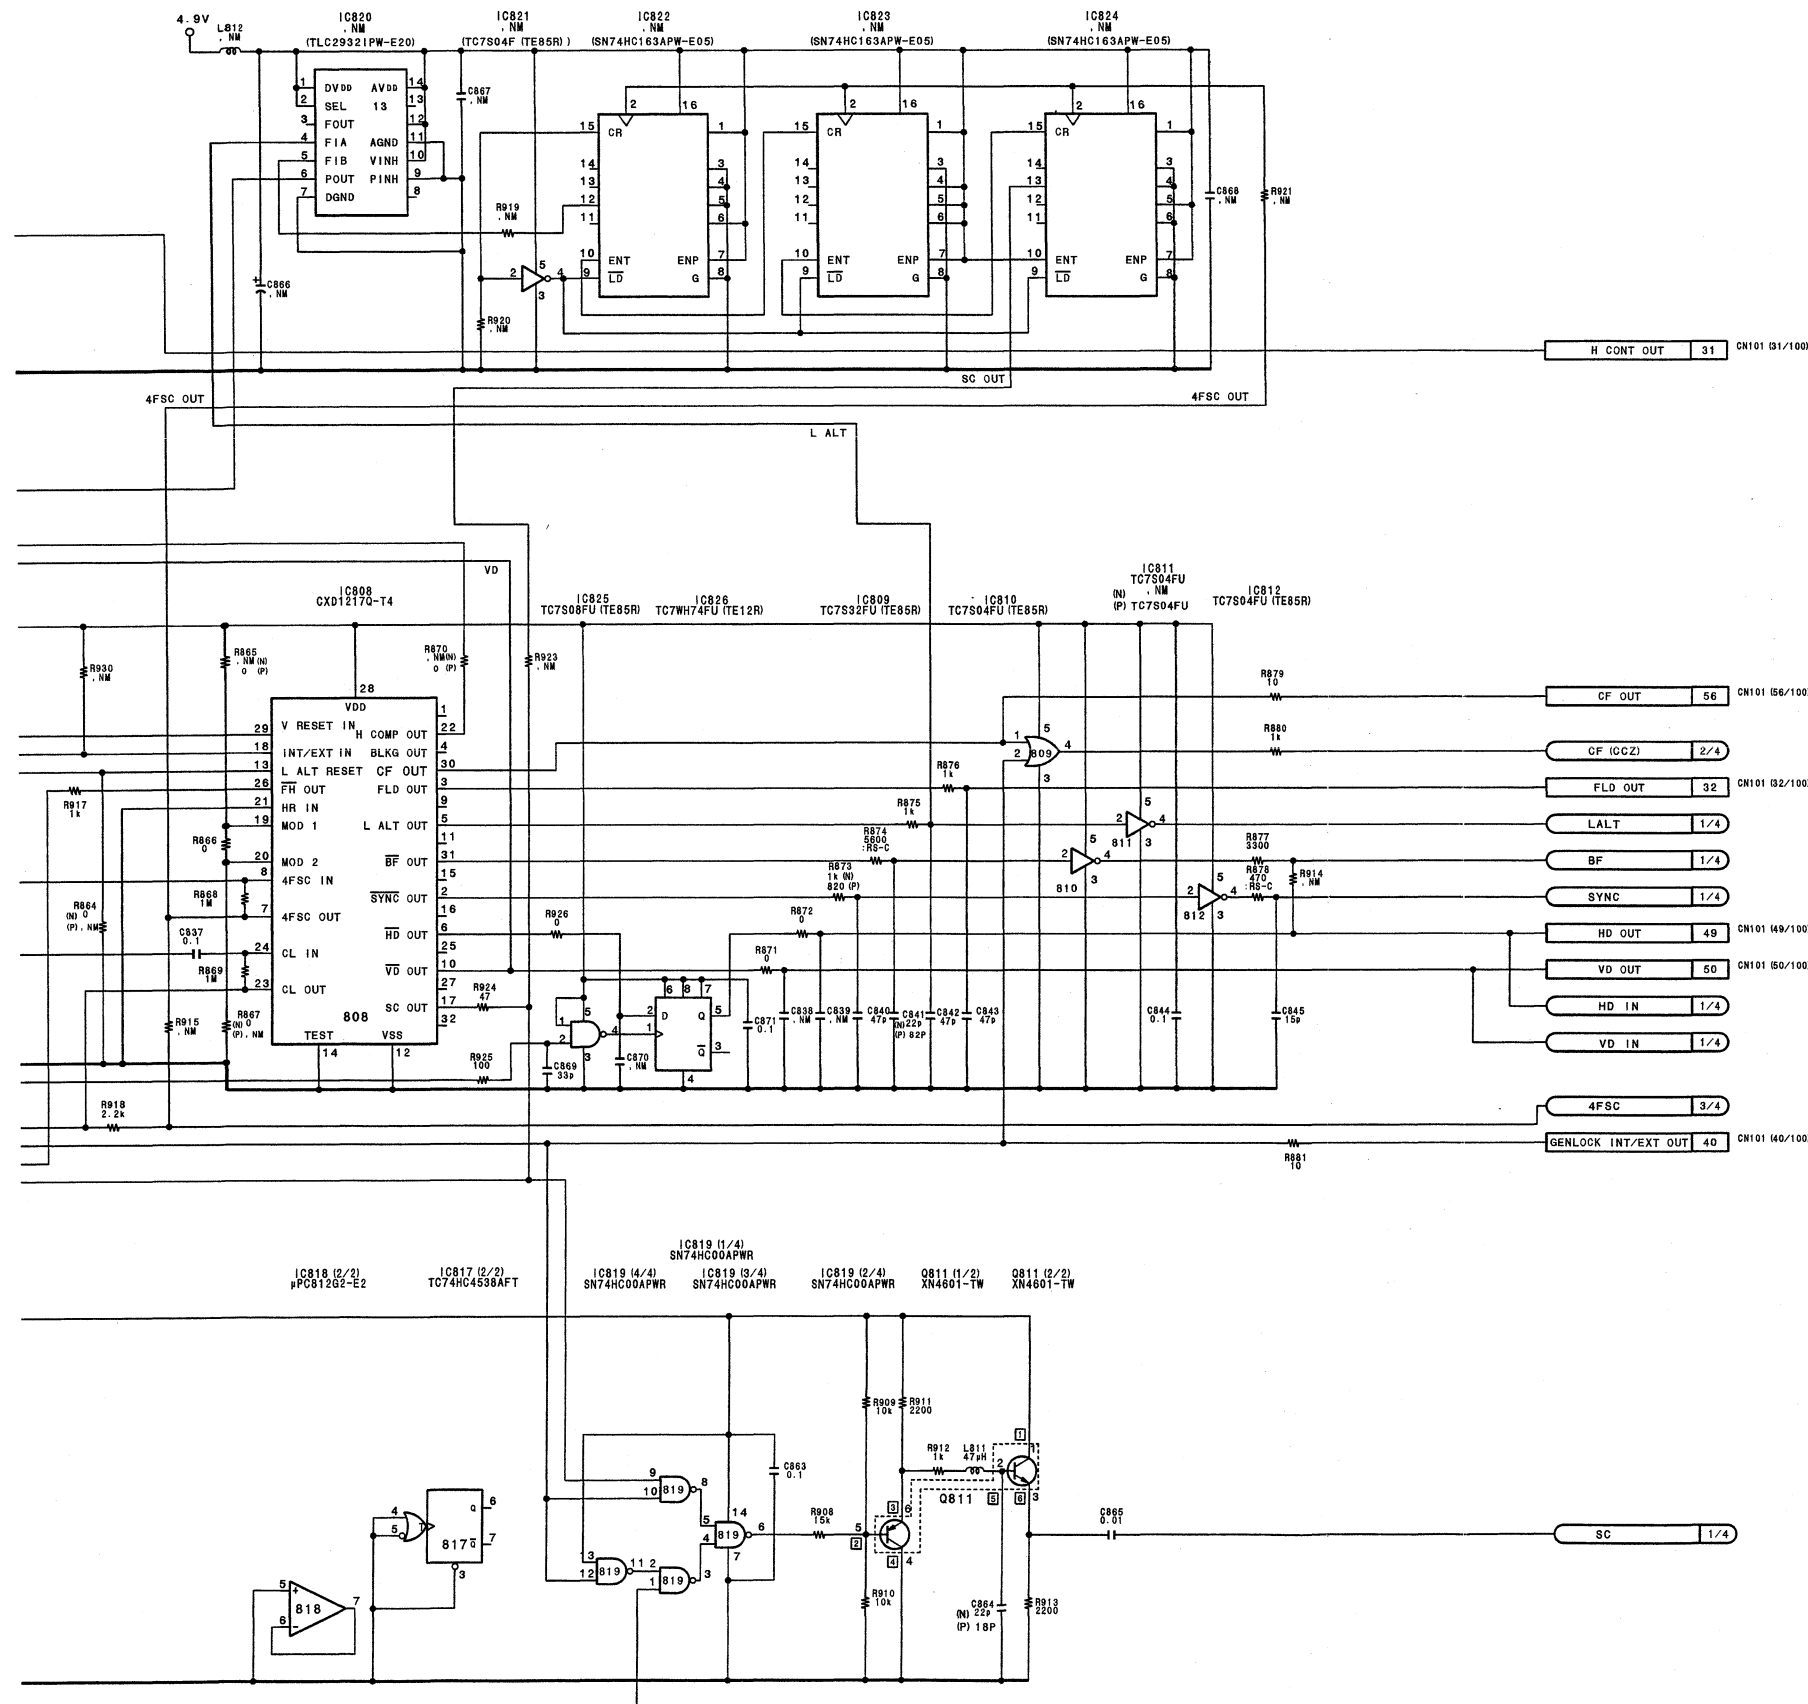


| REF | NTSC | PAL |
|-------|--------------|------------------|
| C812 | 68PF | 33PF |
| C841 | 22PF | 82PF |
| C864 | 22PF | 18PF |
| CP801 | 1-760-267-11 | 1-760-269-11 |
| IC811 | NM | TC7S04FU (TE85R) |
| L803 | 150UH | 100UH |
| R817 | 1500 | 3300 |
| R840 | 0 | NM |
| R842 | NM | 0 |
| R850 | 33K : RS-C | NM |
| R851 | 22K : RS-C | NM |
| R852 | 22K : RS-C | NM |
| R854 | NM | 2700 |
| R855 | NM | 0 |
| R856 | NM | 2700 |
| R863 | NM | 0 |
| R864 | 0 | NM |
| R865 | NM | 0 |
| R867 | 0 | NM |
| R870 | NM | 0 |
| R873 | 1K | 820 |
| R888 | NM | 0 |
| R928 | 47 | NM |

| LAST NO. |
|-------------|
| R936 L812 |
| C871 D804 |
| Q811 IC827 |
| TP801 CP801 |
| E801 |

NOTE


1. NC : NO CONNECTION
2. NM : NO MOUNT
3. (N) : NTSC only
4. (P) : PAL only

| REF NO. | CHANGE INFORMATION | LOT NO. |
|---------|--------------------|---------|
| C802 | 16V → 20V | 221 |
| C847 | | |
| C832 | 10V → 16V | |
| C835 | | |
| C846 | | |

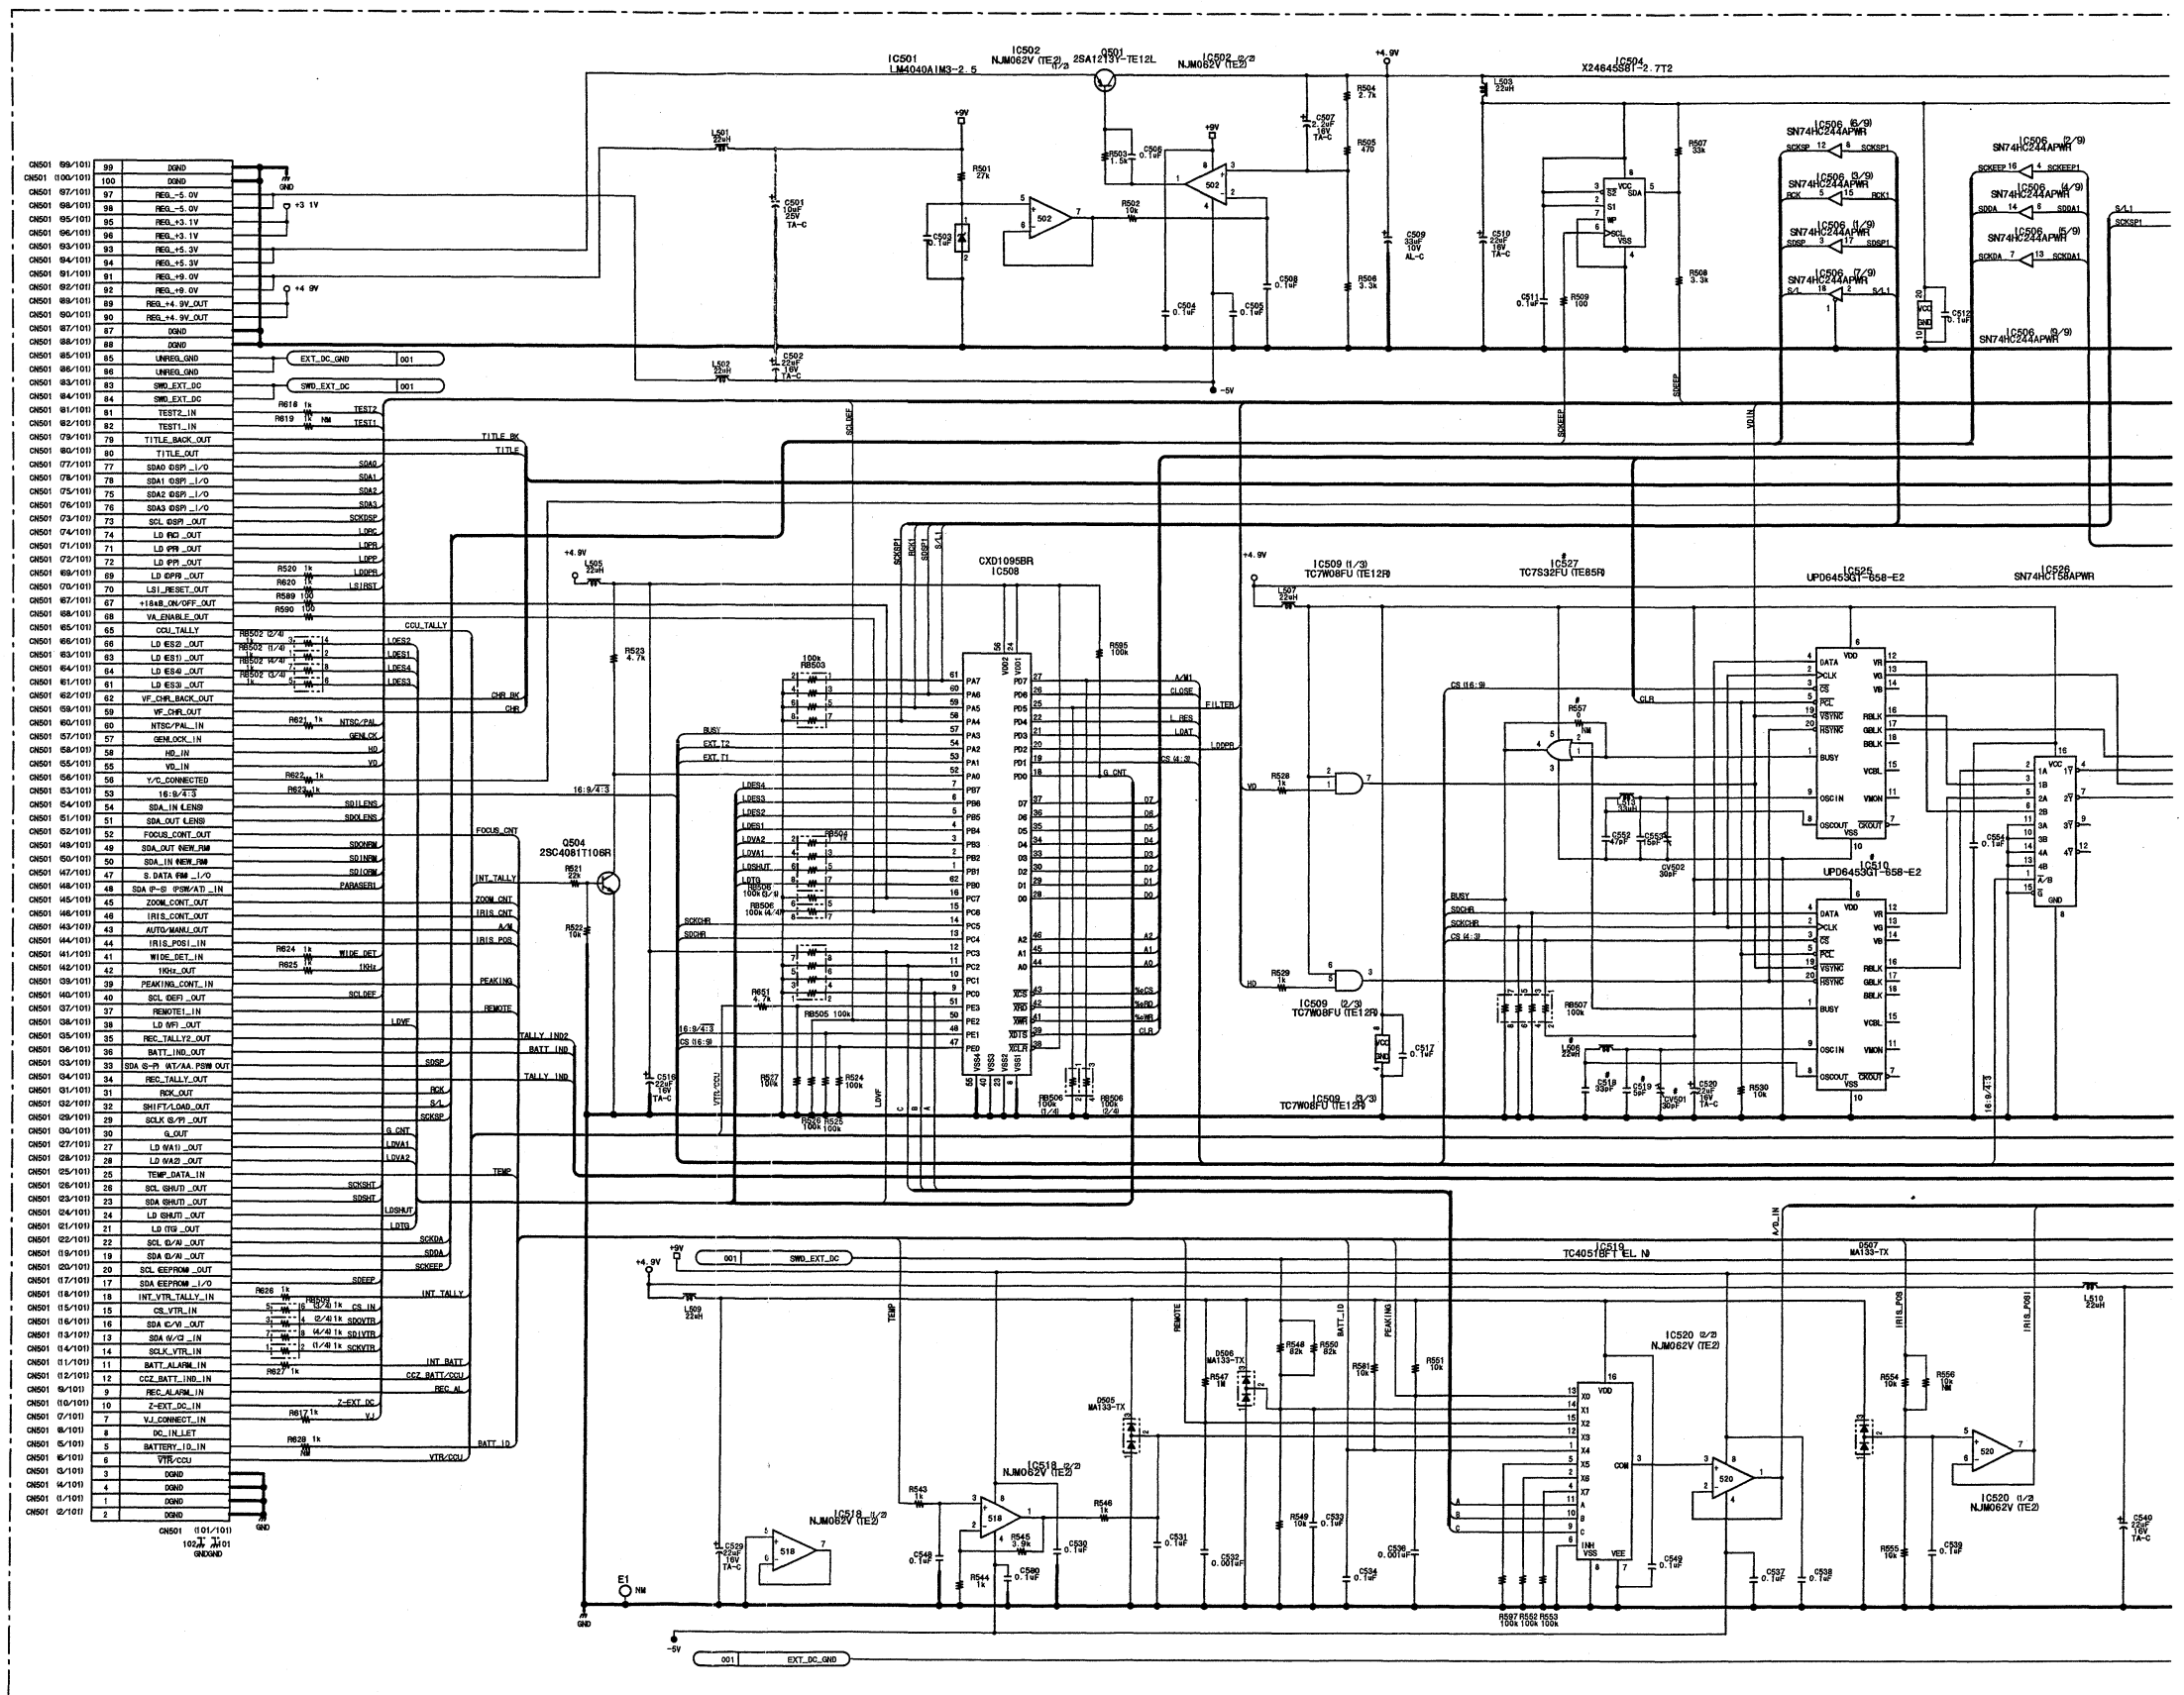

This circuit diagram is common to
DSR-370WS/370WSP.

| NOTE | DSR-370WS/370WSP | DSR-370WS/370WSP | DSR-370WS/370WSP | DSR-370WS/370WSP |
|-------|------------------|------------------|------------------|------------------|
| C518 | 0.001uF | 0.001uF | 0.001uF | 0.001uF |
| C519 | 0.001uF | 0.001uF | 0.001uF | 0.001uF |
| C556 | 0.001uF | 0.001uF | 0.001uF | 0.001uF |
| C557 | 0.001uF | 0.001uF | 0.001uF | 0.001uF |
| C558 | 0.001uF | 0.001uF | 0.001uF | 0.001uF |
| CY501 | 30uF | 30uF | 30uF | 30uF |
| D511 | 1N4148 | 1N4148 | 1N4148 | 1N4148 |
| IC510 | UPO8453ST | UPO8453ST | UPO8453ST | UPO8453ST |
| IC527 | TC733FU | TC733FU | TC733FU | TC733FU |
| IC529 | NJM2903V | NJM2903V | NJM2903V | NJM2903V |
| L506 | 25uH | 25uH | 25uH | 25uH |
| Q513 | 2SA1576A-T | 2SA1576A-T | 2SA1576A-T | 2SA1576A-T |
| R567 | 0 | 0 | 0 | 0 |
| R603 | 100 | 100 | 100 | 100 |
| R604 | 100 | 100 | 100 | 100 |

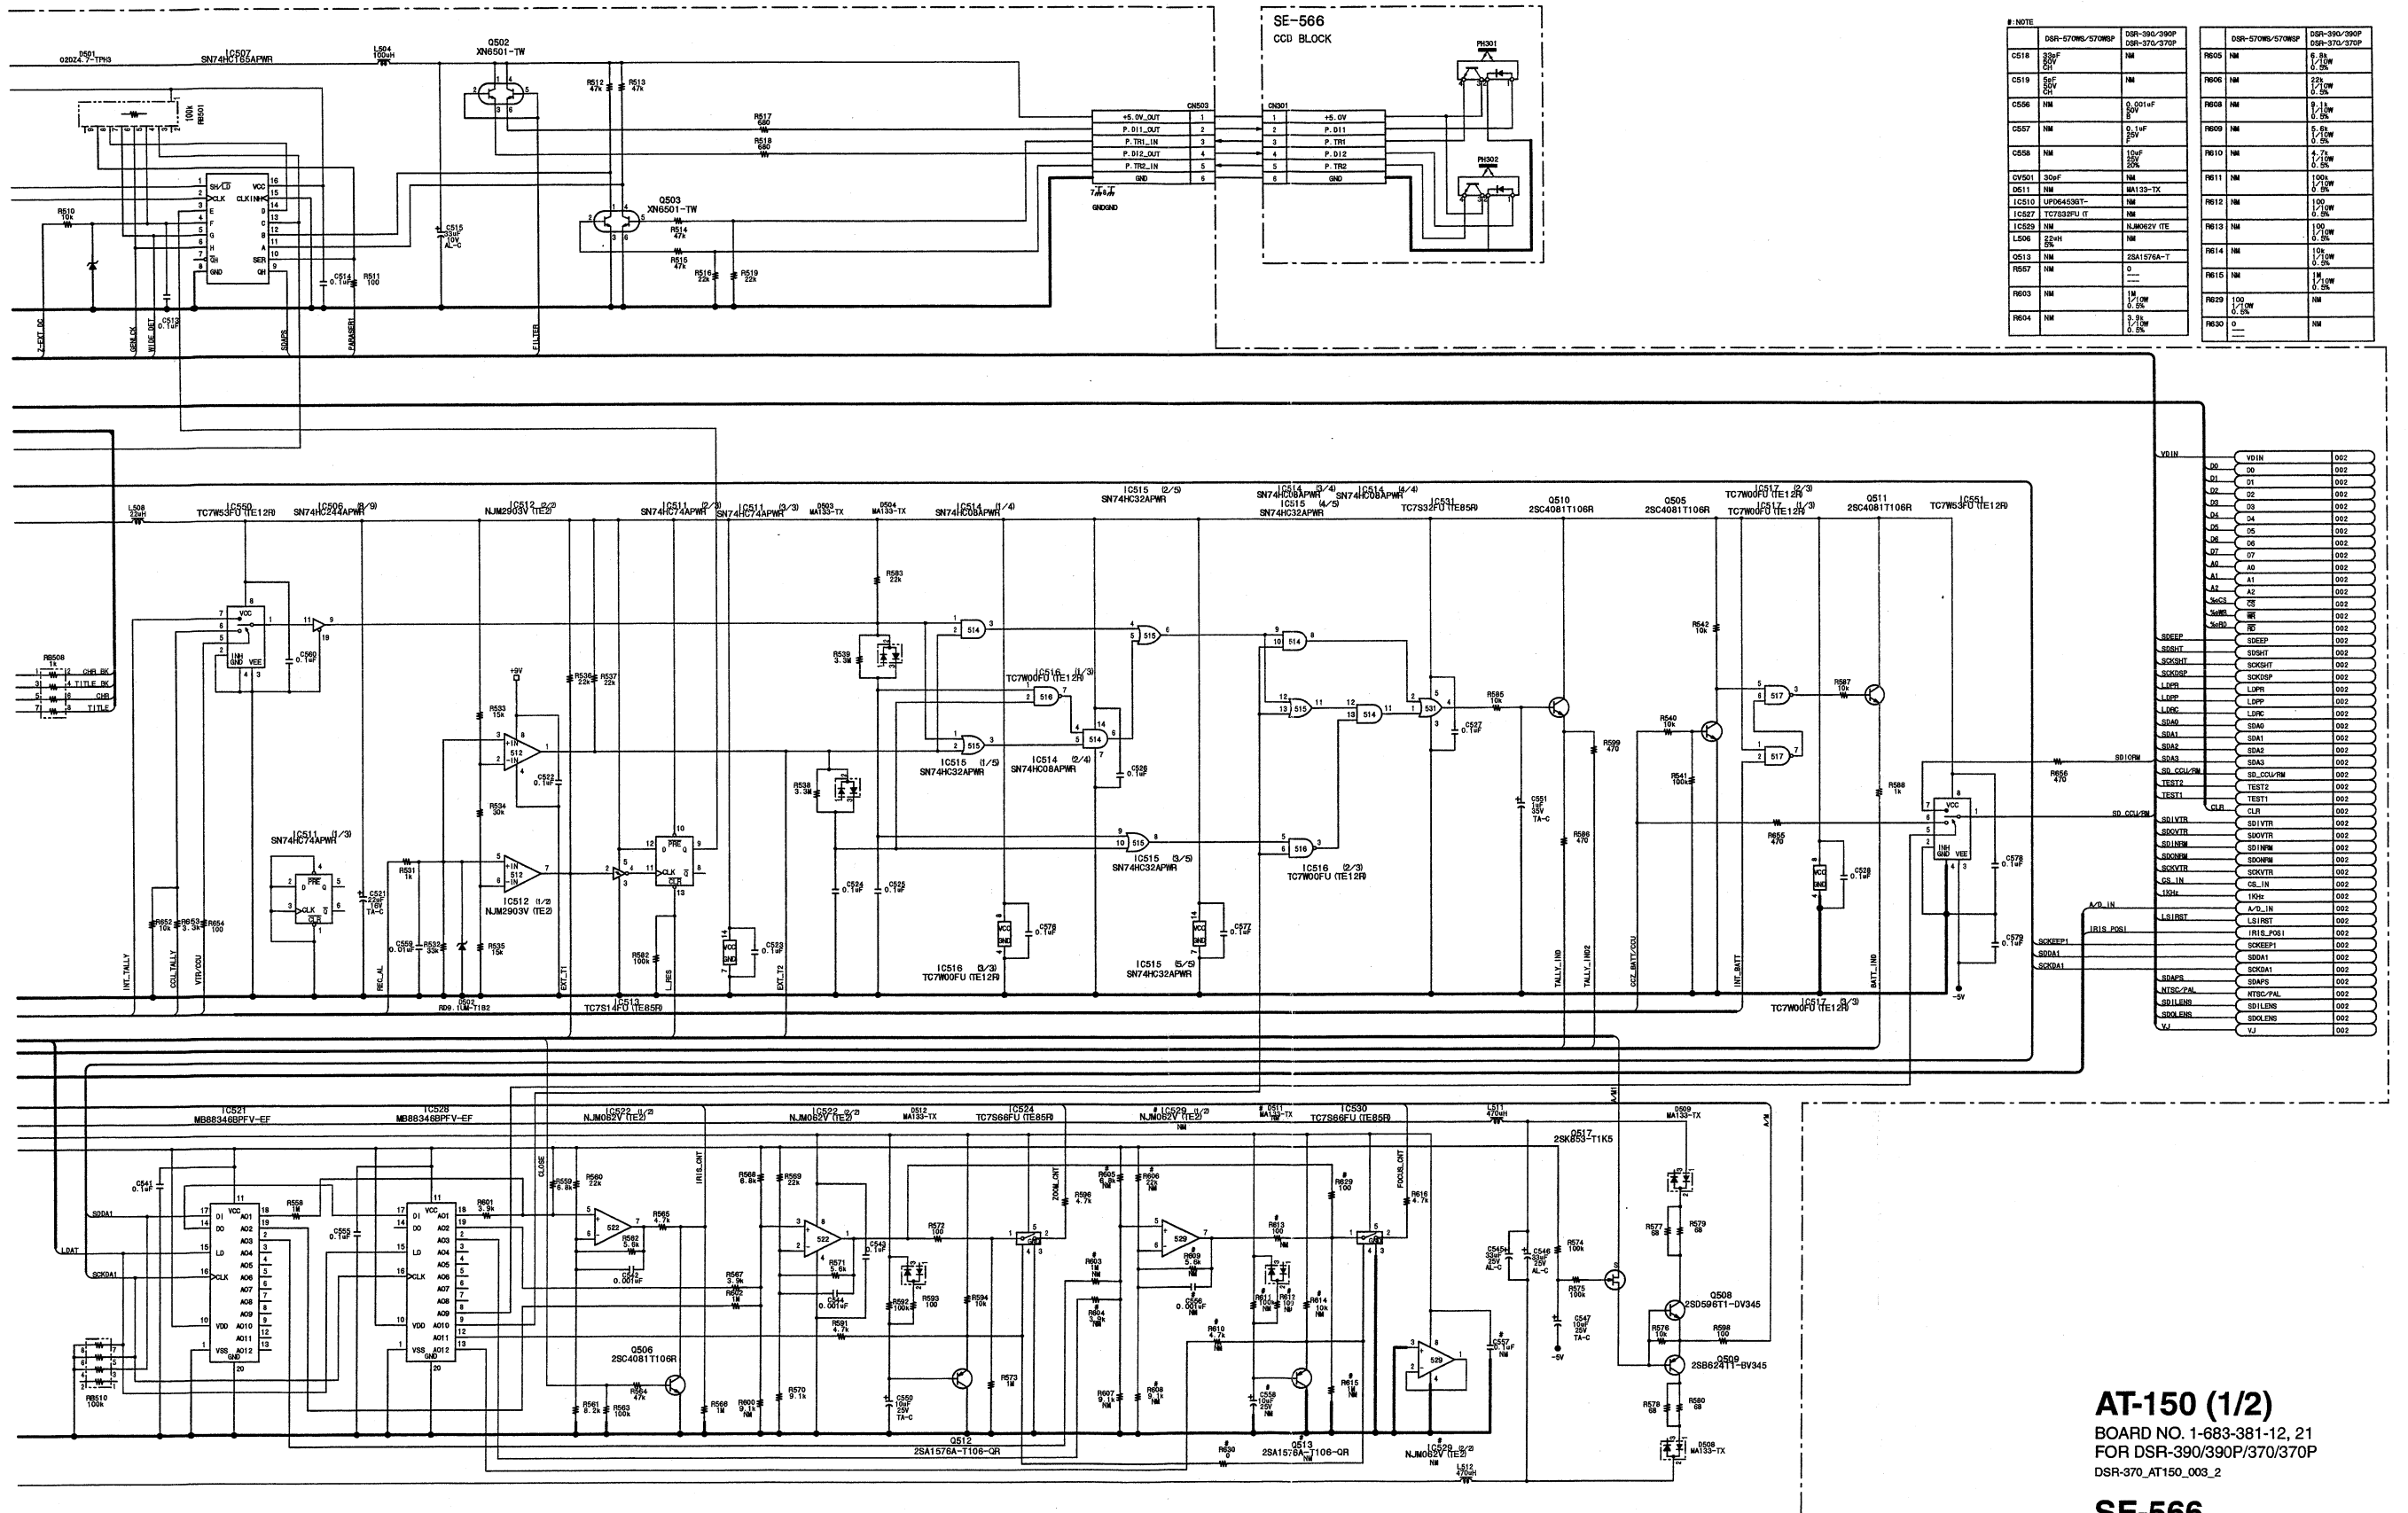

AT-150 (1/2)


BOARD NO. 1-683-381-12, 21
FOR DSR-390/390P/370/370P
DSR-370_AT150_003_2

SE-566


BOARD NO. 1-677-375-11, 12, 21
B-DSR300A-SE566-11


AT-150 (2/2) AT-150 (2/2)

This circuit diagram is common to DSR-570WS/570WSP.

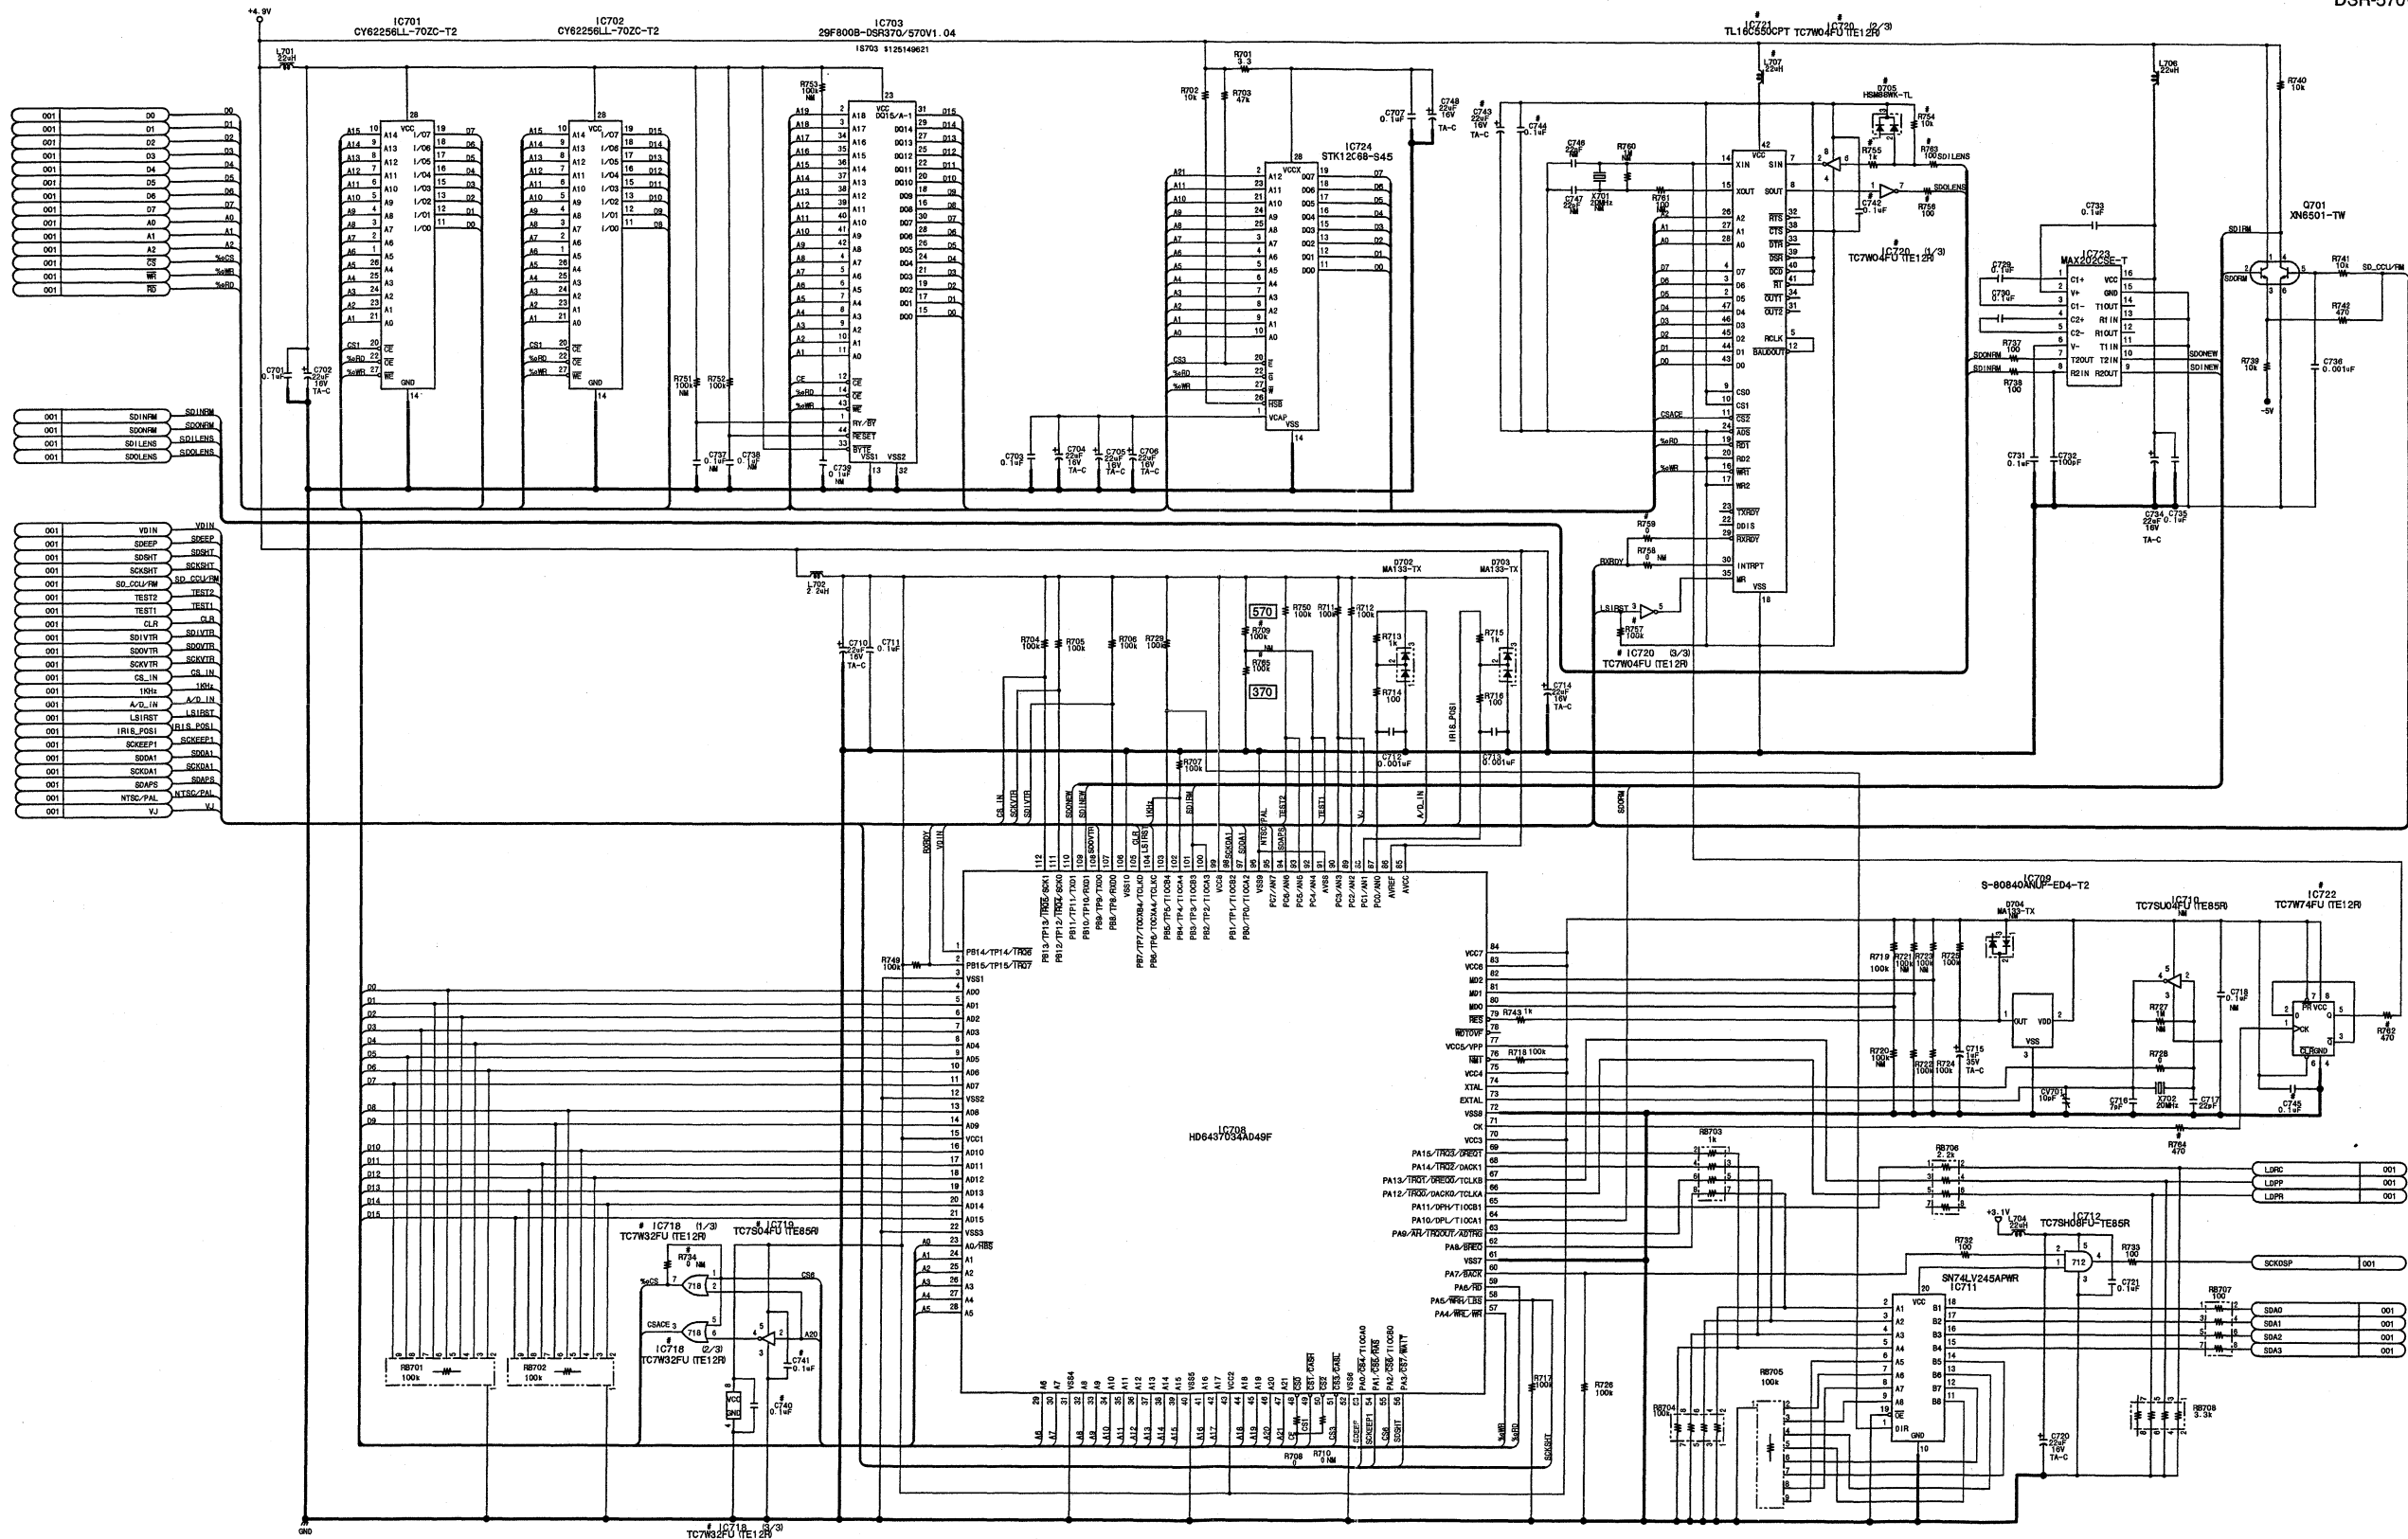

| IC | DSR-570WS/570WSP | DSR-390/390P/370/370P |
|-------|------------------|-----------------------|
| IC740 | 0.1uF | 0.1uF |
| IC741 | 0.1uF | 0.1uF |
| IC742 | 0.1uF | 0.1uF |
| IC743 | 0.1uF | 0.1uF |
| IC744 | 0.1uF | 0.1uF |
| IC745 | 0.1uF | 0.1uF |
| IC746 | 0.1uF | 0.1uF |
| IC747 | 0.1uF | 0.1uF |
| IC748 | 0.1uF | 0.1uF |
| IC749 | 0.1uF | 0.1uF |
| IC750 | 0.1uF | 0.1uF |
| IC751 | 0.1uF | 0.1uF |
| IC752 | 0.1uF | 0.1uF |
| IC753 | 0.1uF | 0.1uF |
| IC754 | 0.1uF | 0.1uF |
| IC755 | 0.1uF | 0.1uF |
| IC756 | 0.1uF | 0.1uF |
| IC757 | 0.1uF | 0.1uF |
| IC758 | 0.1uF | 0.1uF |
| IC759 | 0.1uF | 0.1uF |
| IC760 | 0.1uF | 0.1uF |
| IC761 | 0.1uF | 0.1uF |
| IC762 | 0.1uF | 0.1uF |
| IC763 | 0.1uF | 0.1uF |
| IC764 | 0.1uF | 0.1uF |
| IC765 | 0.1uF | 0.1uF |

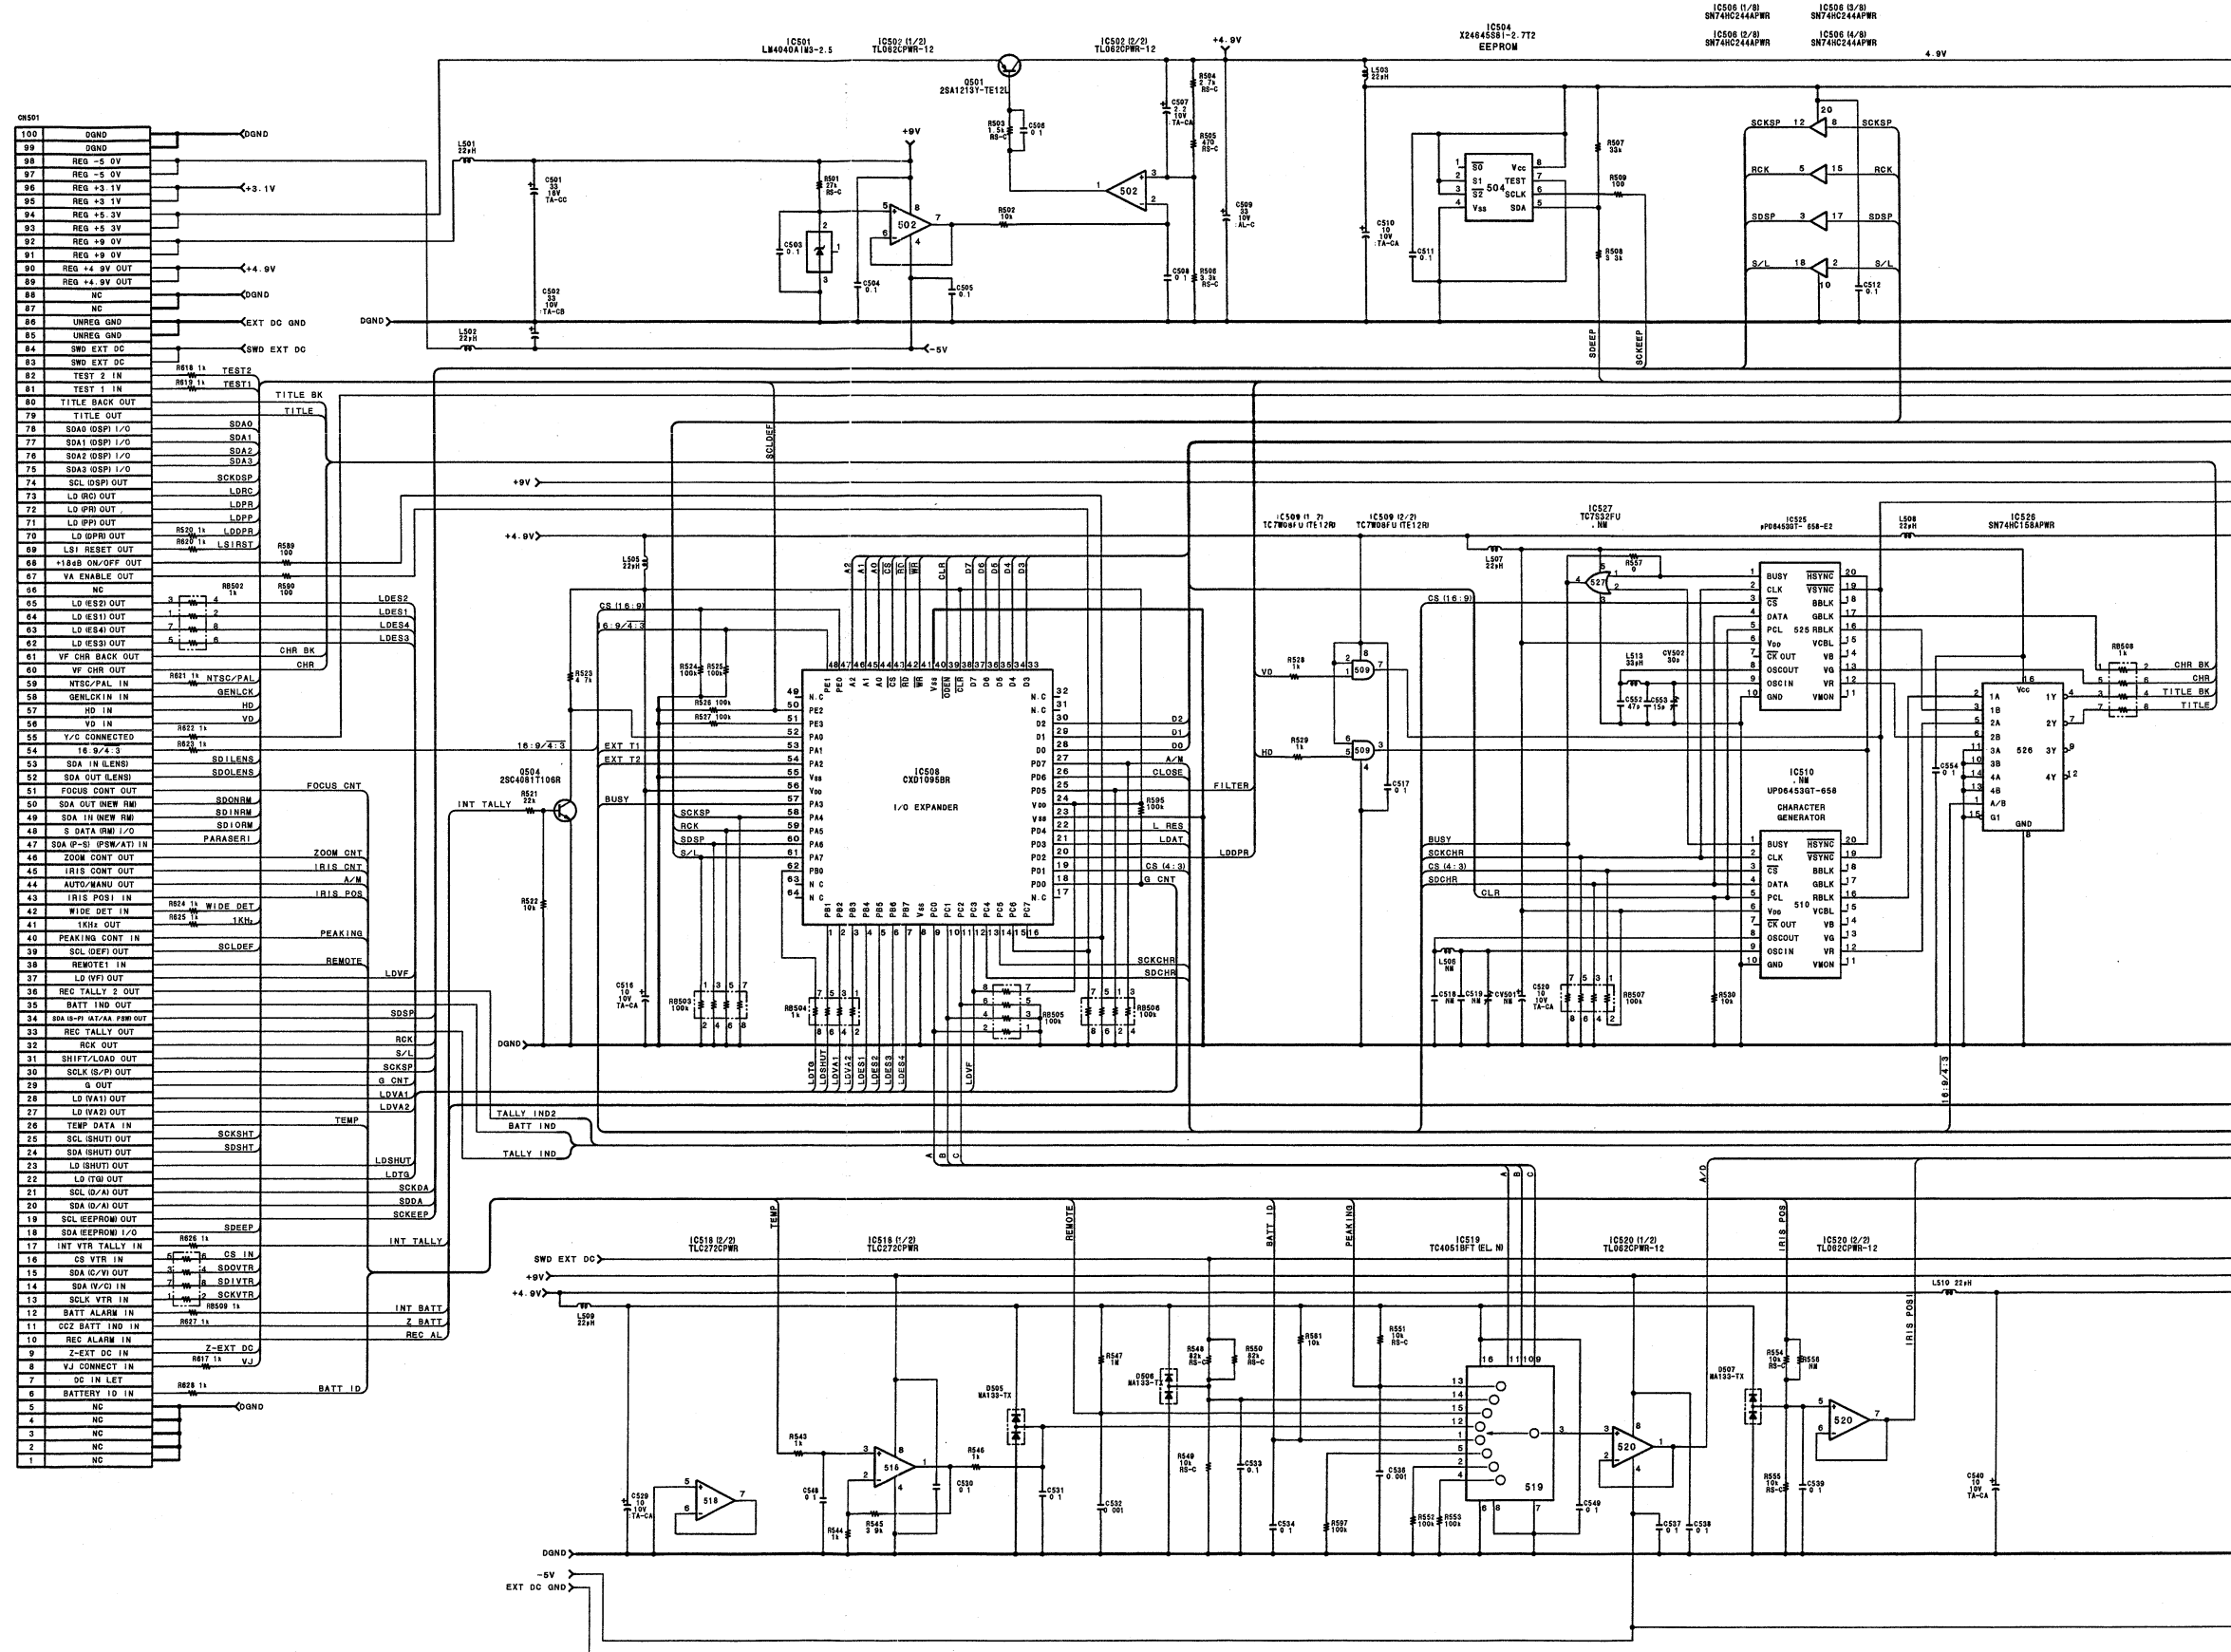

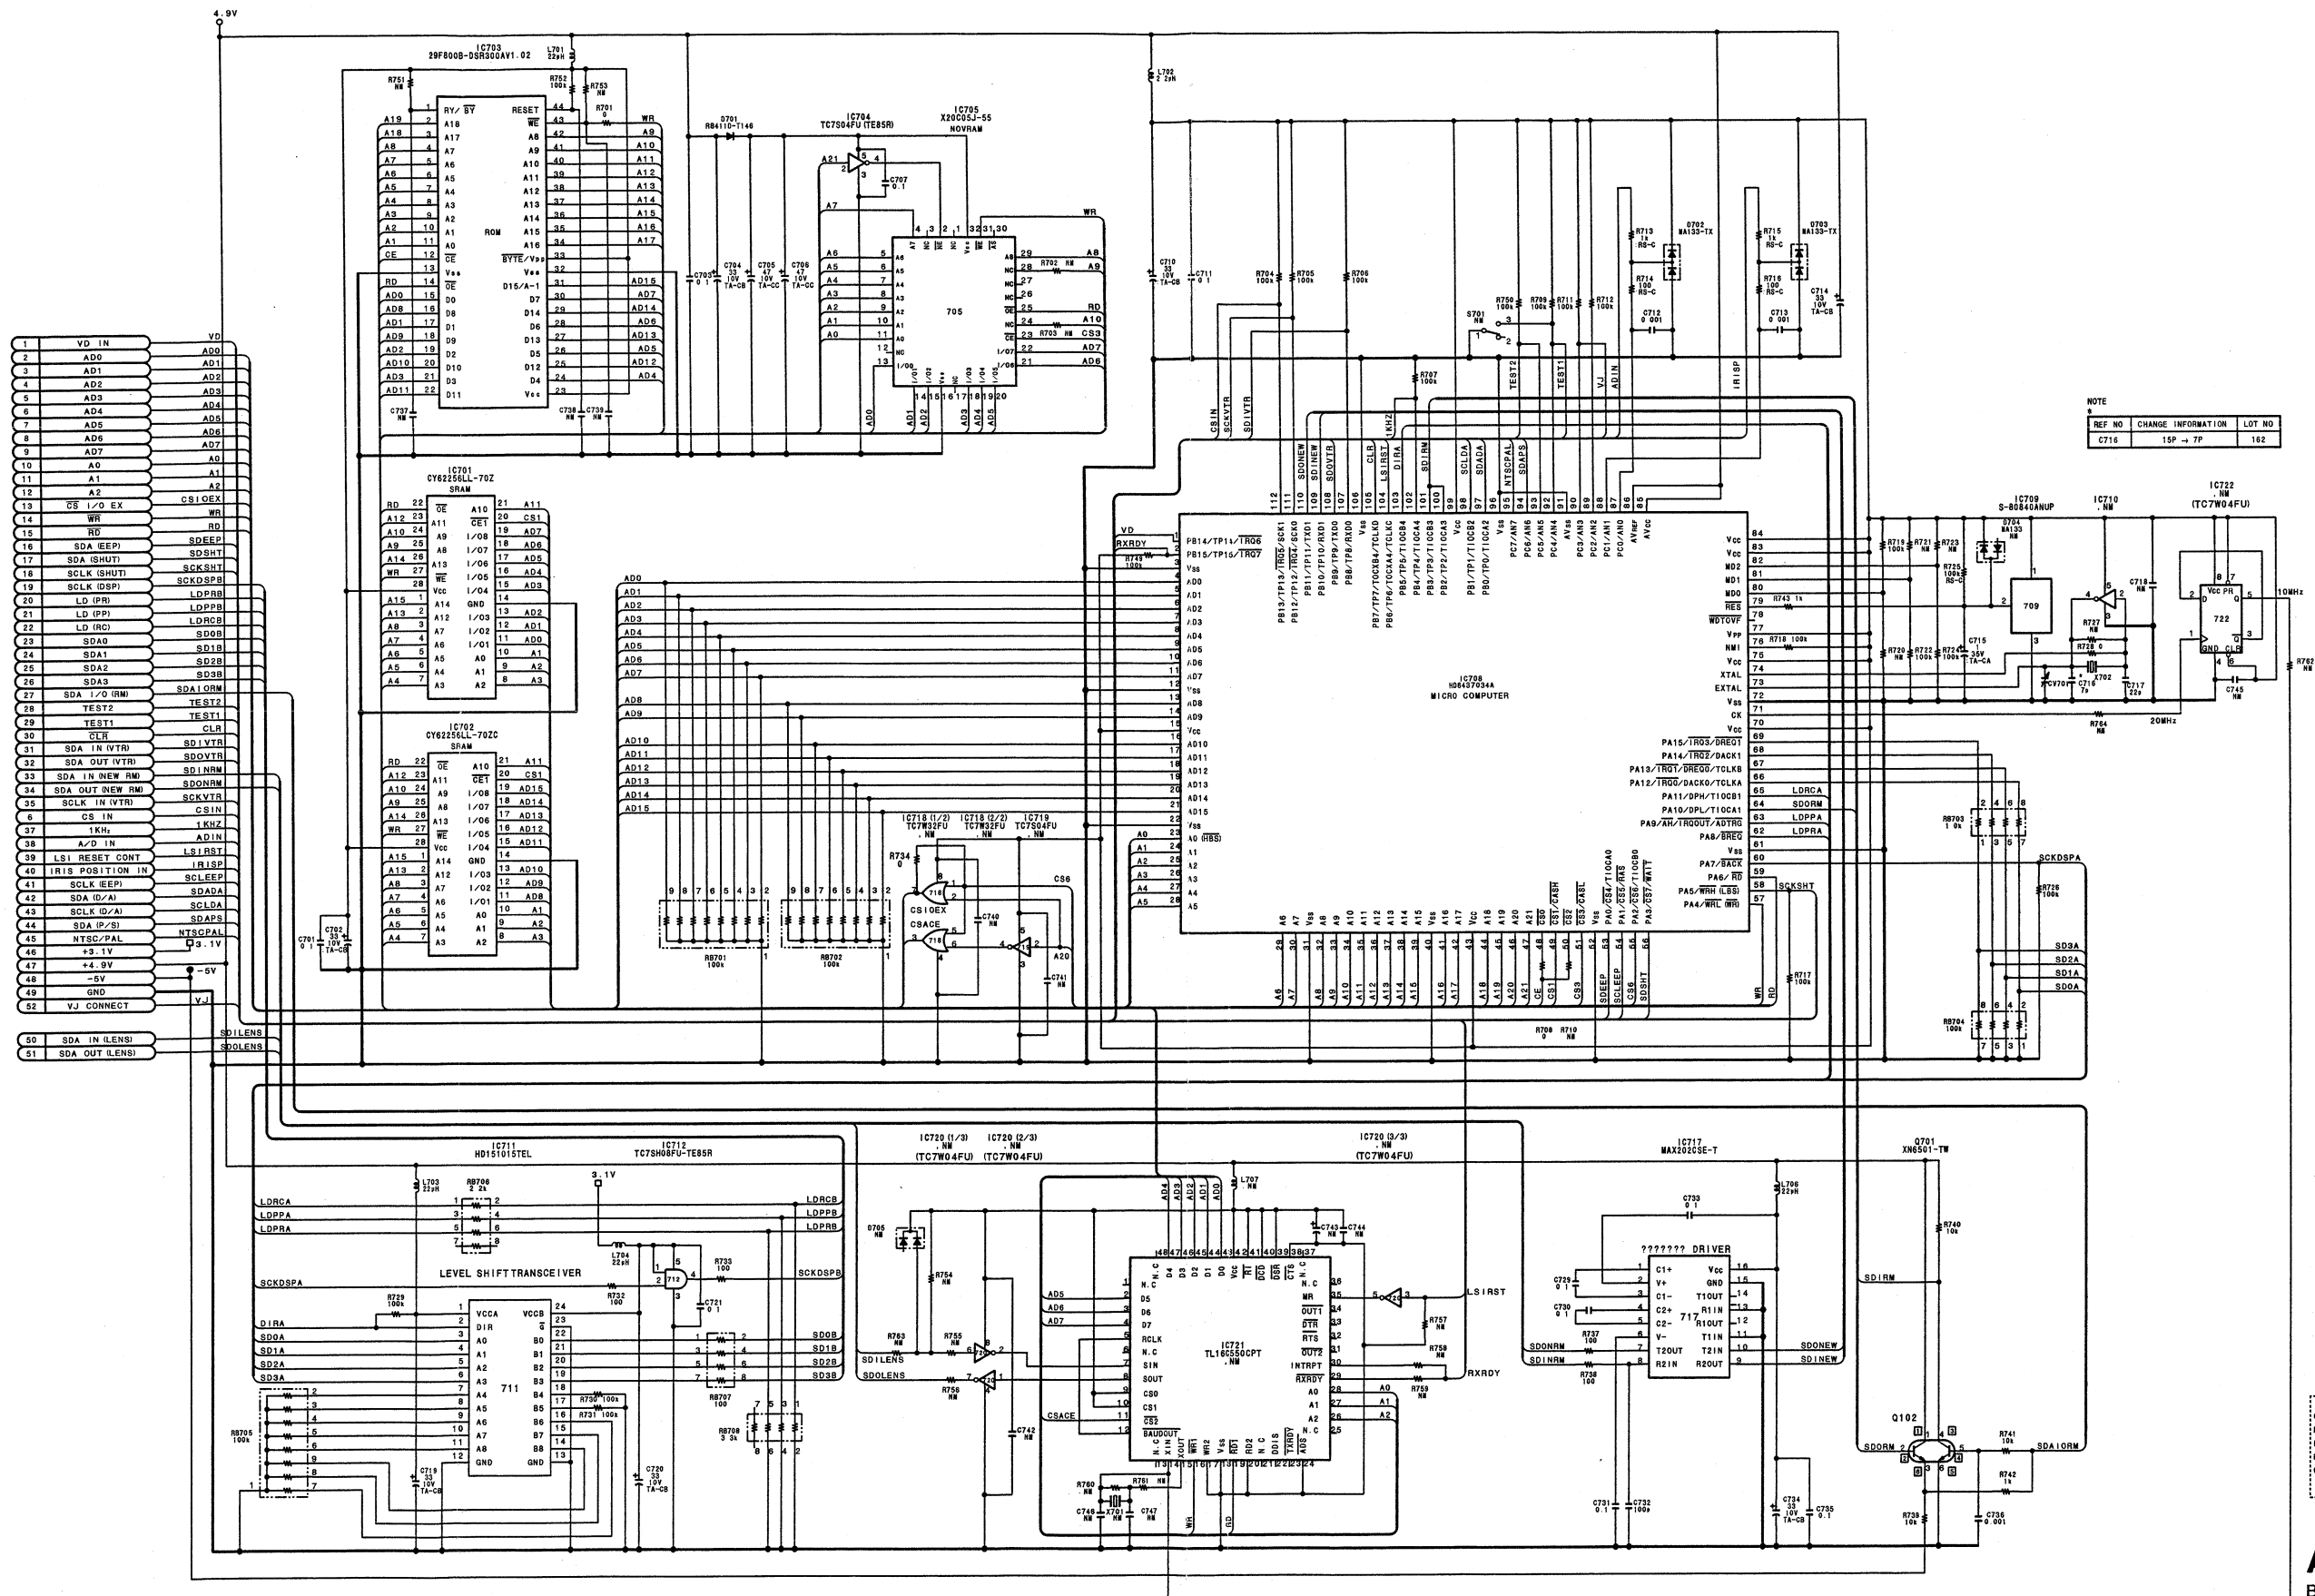



CN-1811 CN-1811

| CN1 (WB) | | CN2 (AT) | |
|-------------|-----|-------------|----|
| 1 | 2 | 2 | 1 |
| 3 | 4 | 7 | 6 |
| 5 | 6 | 9 | 8 |
| 7 | 8 | 9 | 7 |
| 9 | 10 | 10 | 6 |
| 11 | 12 | 11 | 11 |
| 13 | 14 | 14 | 13 |
| 15 | 16 | 15 | 15 |
| 17 | 18 | 16 | 17 |
| 19 | 20 | 18 | 19 |
| 21 | 22 | 22 | 21 |
| 23 | 24 | 23 | 24 |
| 25 | 26 | 25 | 25 |
| 27 | 28 | 27 | 27 |
| 29 | 30 | 29 | 29 |
| 31 | 32 | 31 | 31 |
| 33 | 34 | 34 | 33 |
| 35 | 36 | 35 | 35 |
| 37 | 38 | 37 | 37 |
| 39 | 40 | 39 | 40 |
| 41 | 42 | 41 | 41 |
| 43 | 44 | 43 | 43 |
| 45 | 46 | 45 | 45 |
| 47 | 48 | 47 | 47 |
| 49 | 50 | 49 | 49 |
| 51 | 52 | 51 | 51 |
| 53 | 54 | 53 | 53 |
| 55 | 56 | 55 | 55 |
| 57 | 58 | 57 | 57 |
| 59 | 60 | 59 | 59 |
| 61 | 62 | 61 | 61 |
| 63 | 64 | 63 | 63 |
| 65 | 66 | 65 | 65 |
| 67 | 68 | 67 | 67 |
| 69 | 70 | 69 | 69 |
| 71 | 72 | 71 | 71 |
| 73 | 74 | 73 | 73 |
| 75 | 76 | 75 | 75 |
| 77 | 78 | 77 | 77 |
| 79 | 80 | 79 | 79 |
| 81 | 82 | 81 | 81 |
| 83 | 84 | 83 | 83 |
| 85 | 86 | 85 | 85 |
| 87 | 88 | 87 | 87 |
| 89 | 90 | 89 | 89 |
| 91 | 92 | 91 | 91 |
| 93 | 94 | 93 | 93 |
| 95 | 96 | 95 | 95 |
| 97 | 98 | 97 | 97 |
| 99 | 100 | 101 | 66 |

CN-1811

BOARD NO. 1-673-966-11
B-DSR500WS-CN1811-SM

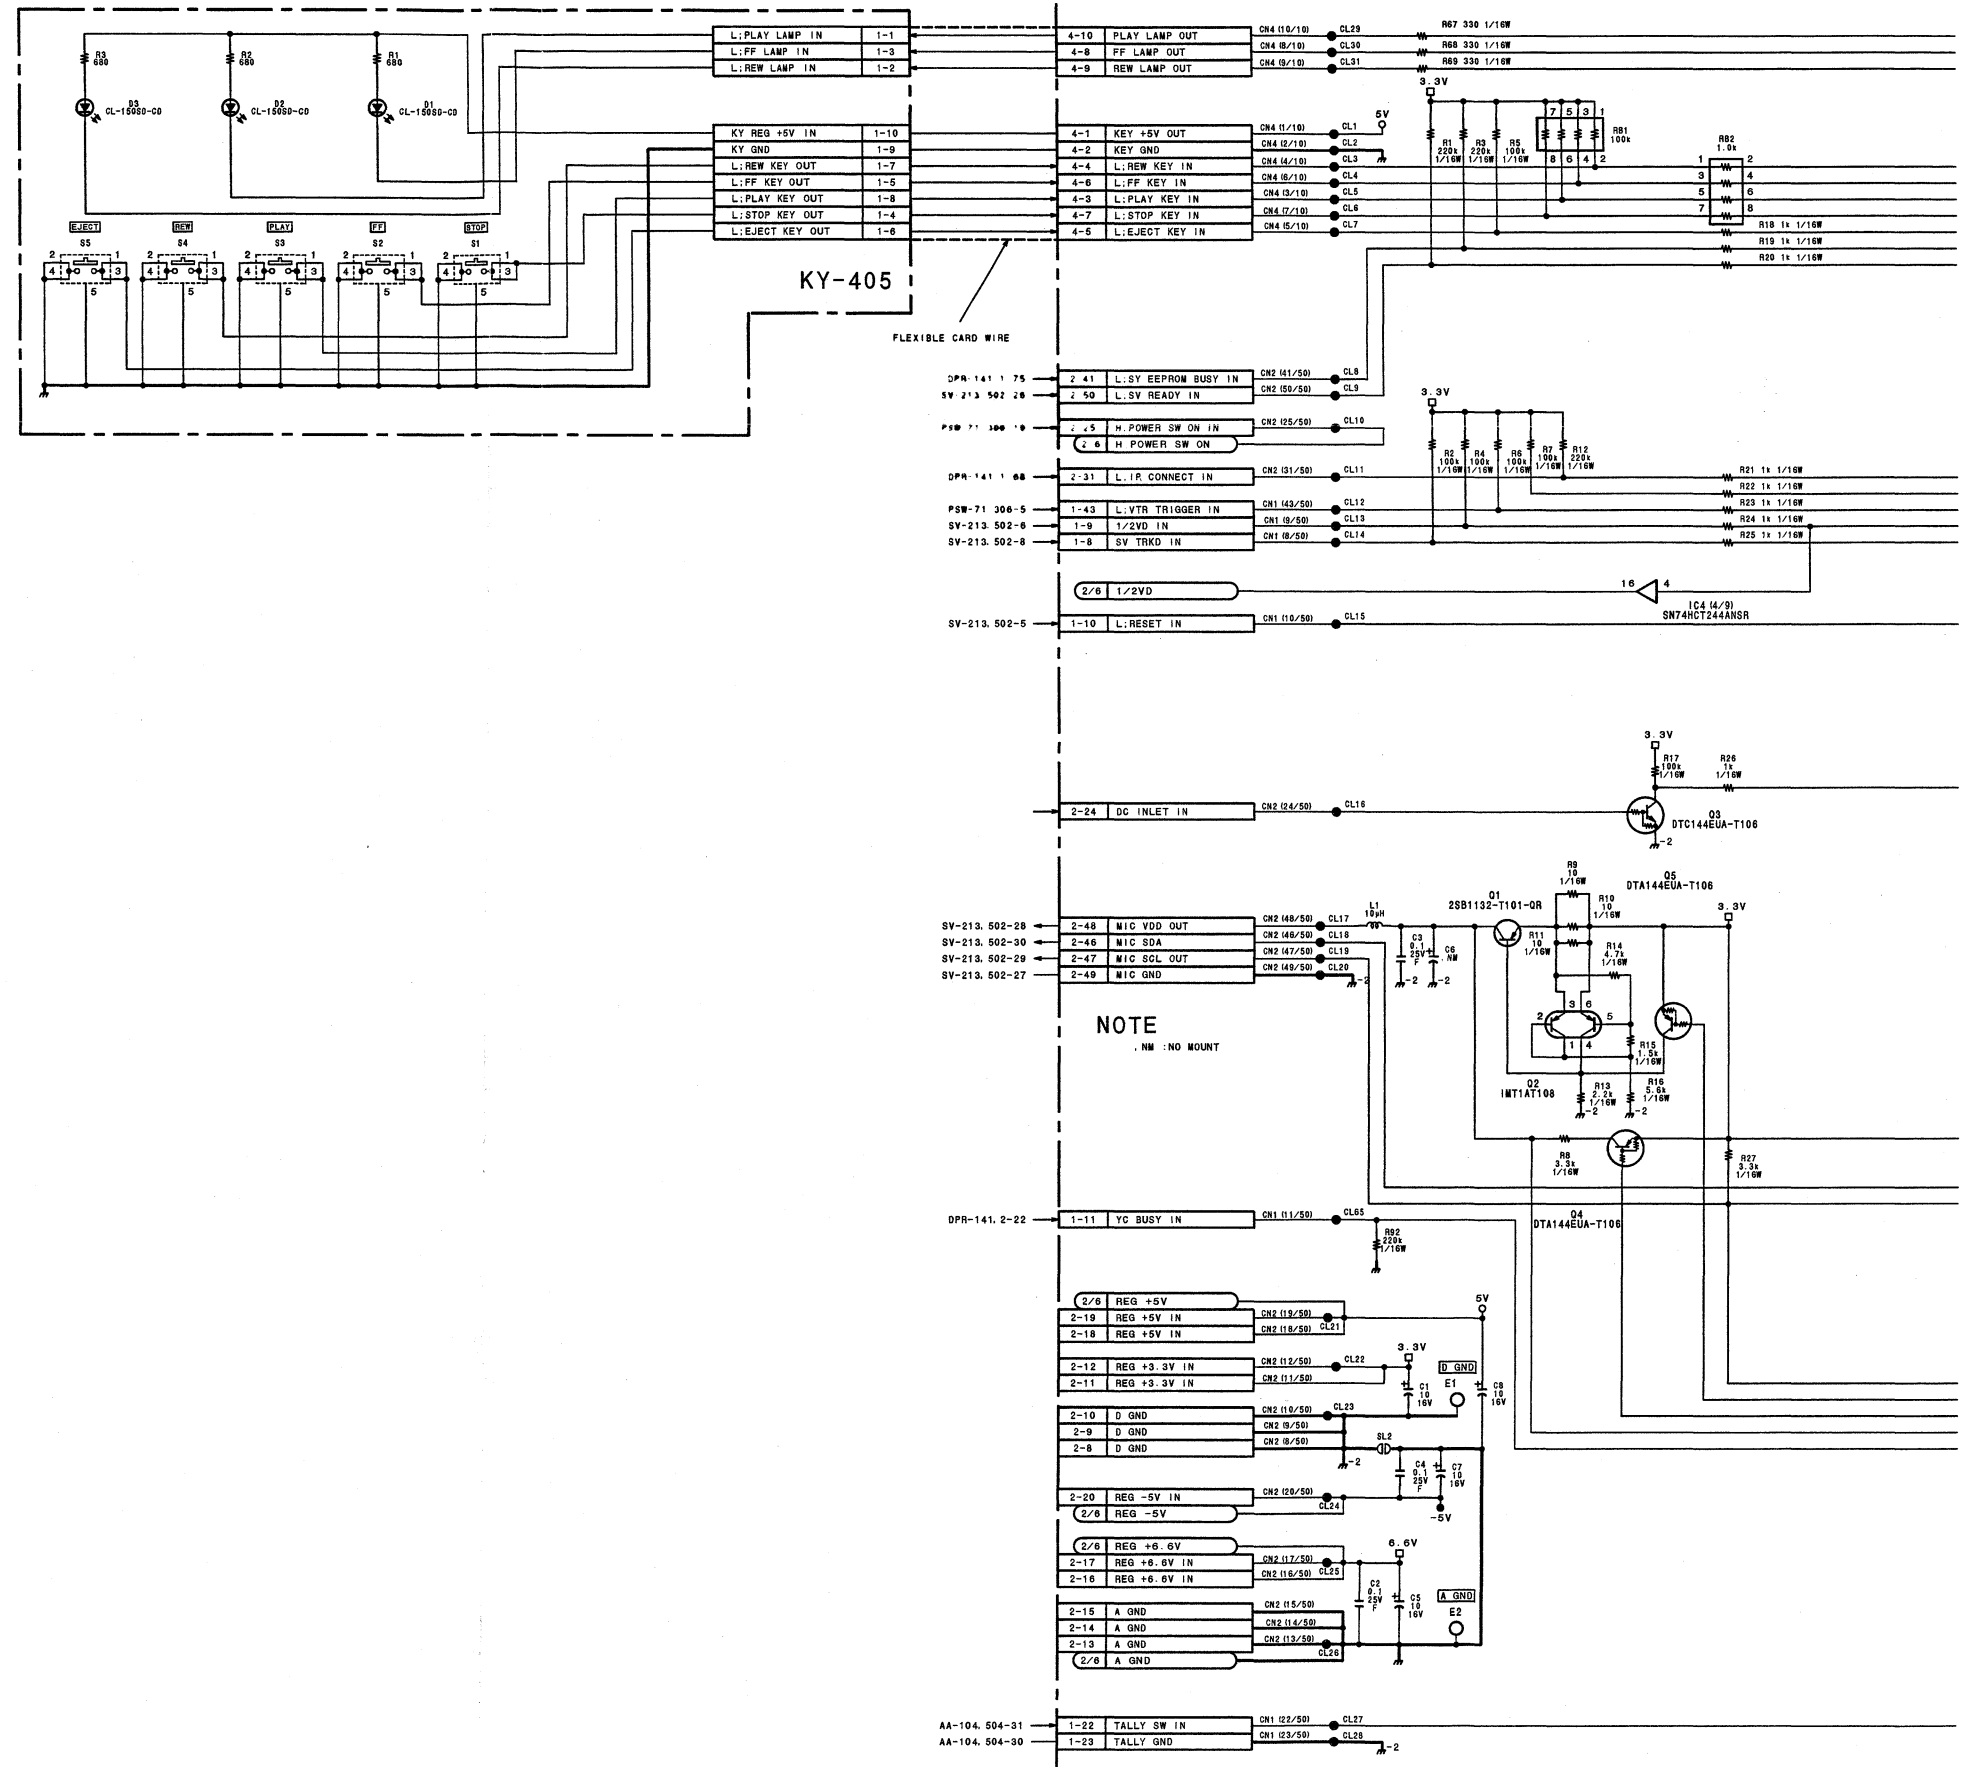

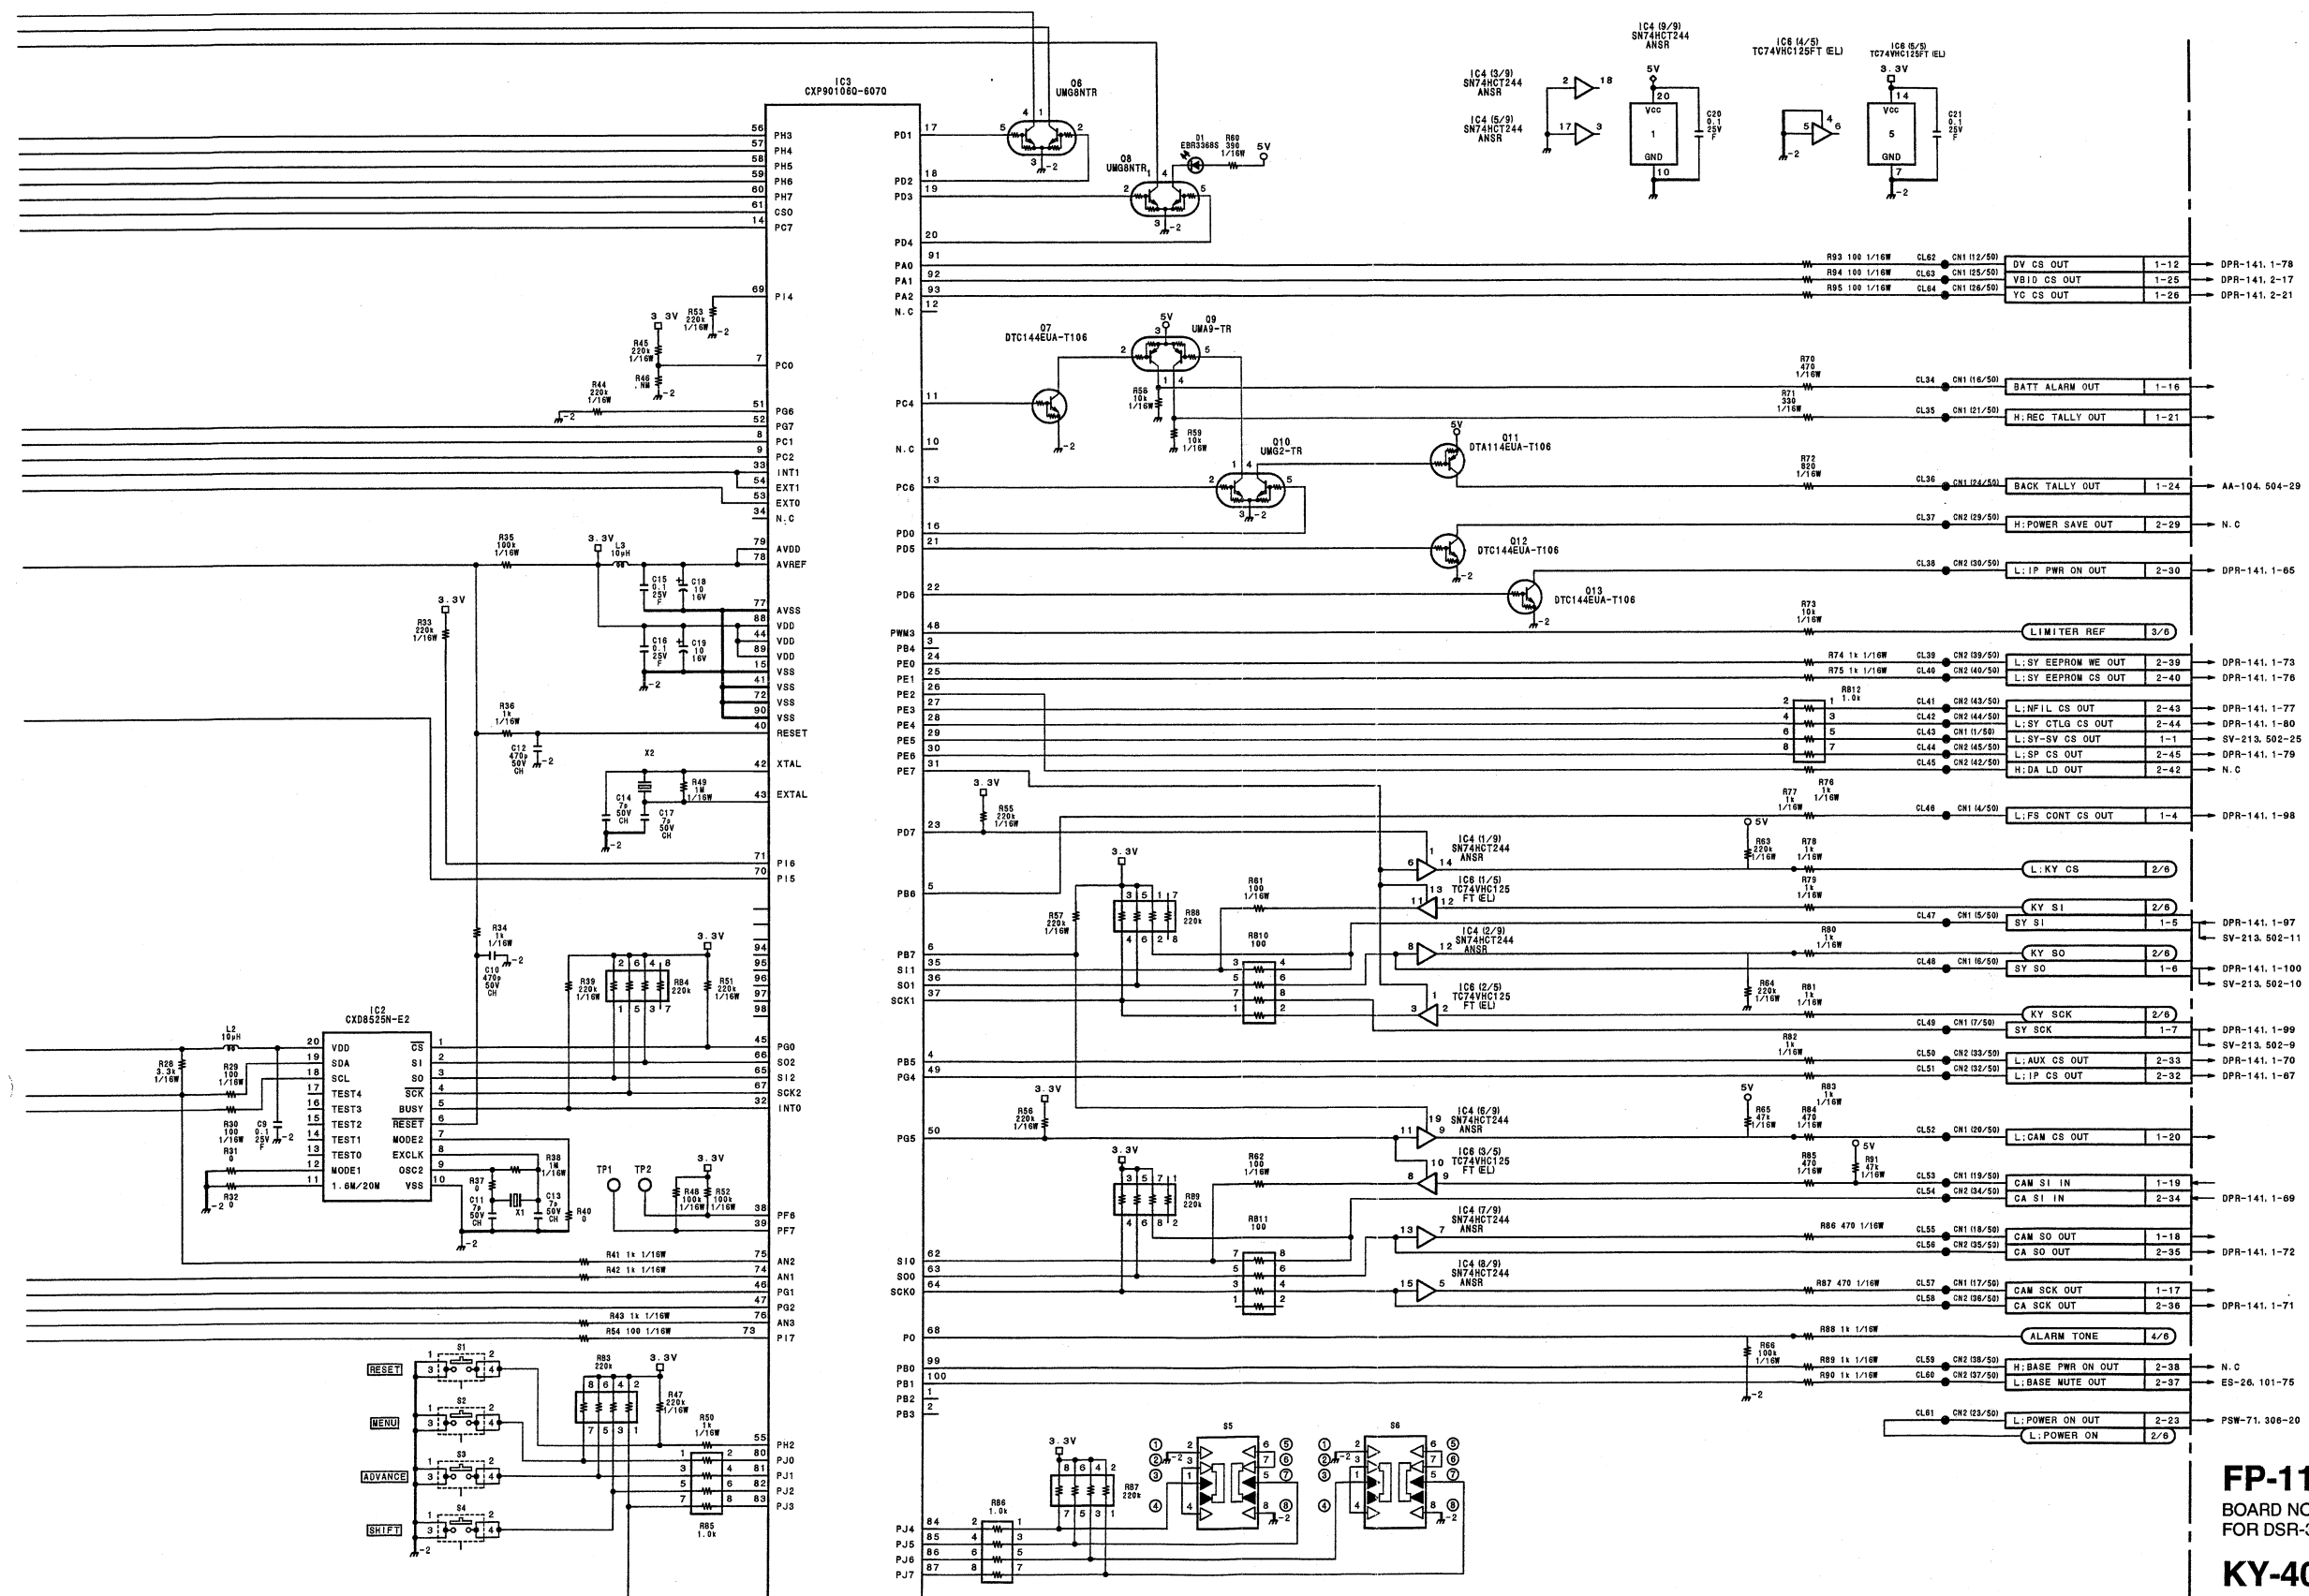


1

2

3


4

5

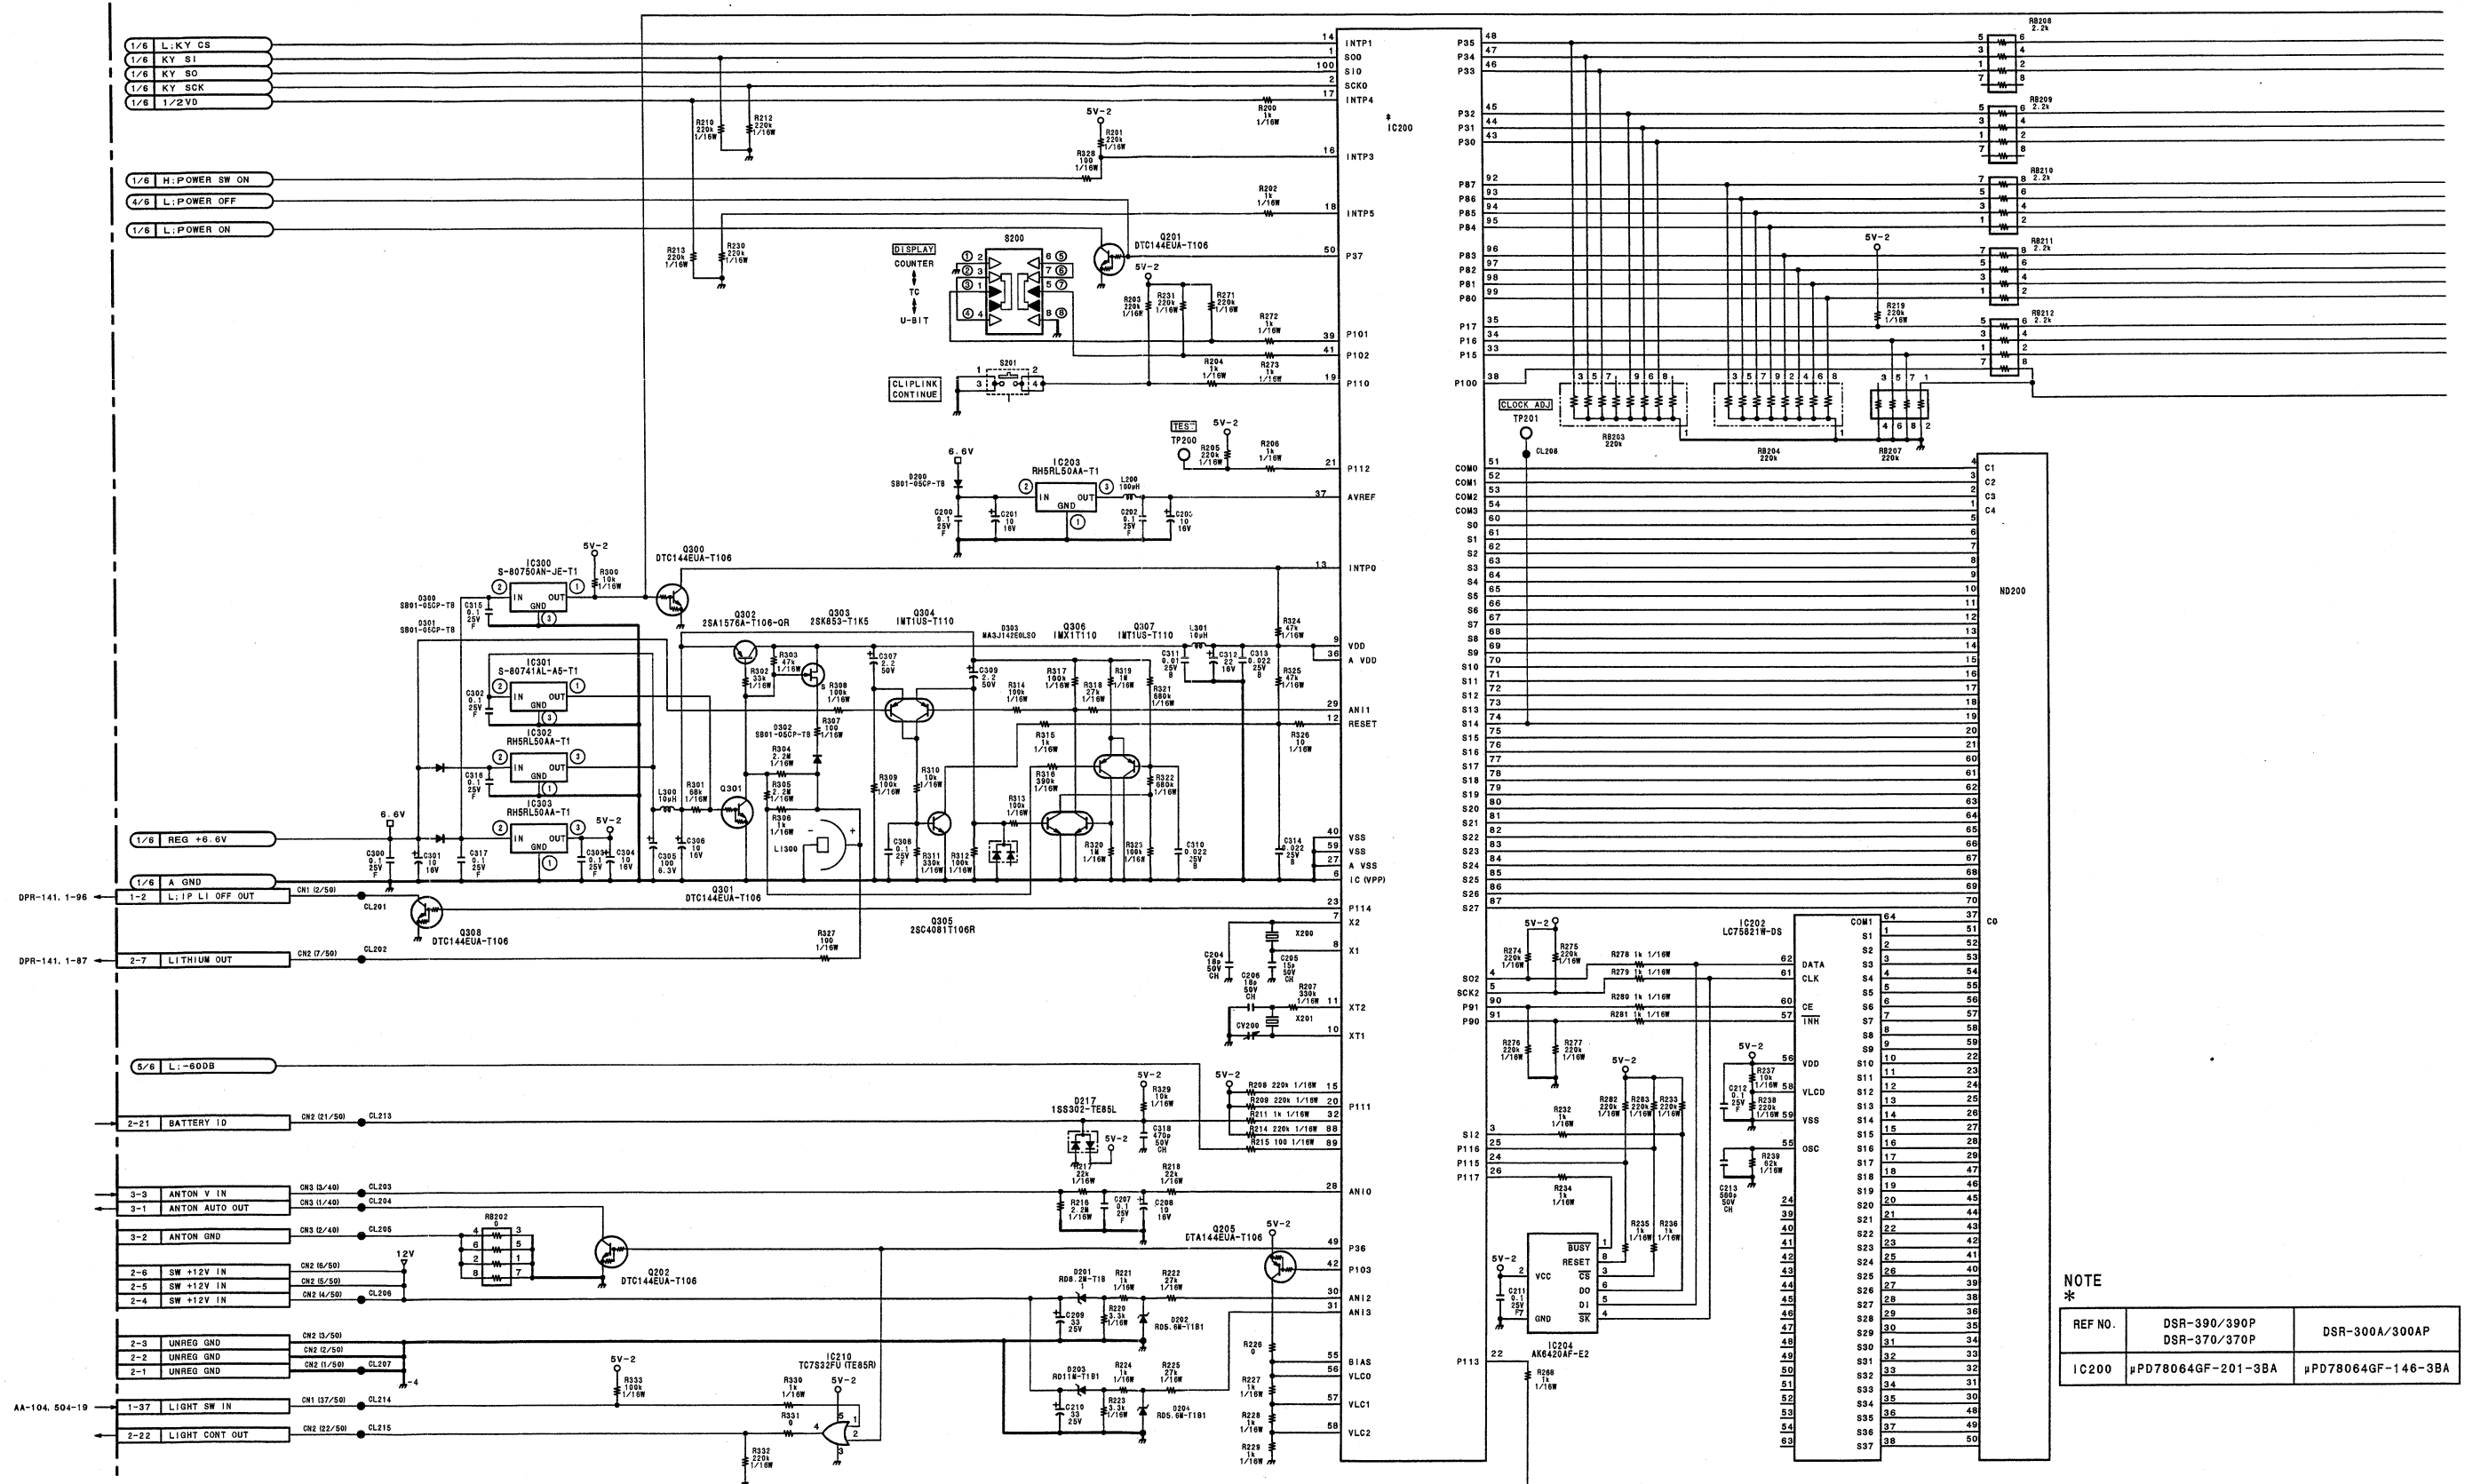

NOTE


| REF. NO. | DSR-390/390P | DSR-370/370P | DSR-300A/300AP |
|----------|--------------------|--------------------|----------------|
| IC200 | #PD78064GF-201-3BA | #PD78064GF-146-3BA | |





FP-118A (2/6)
BOARD NO. 1-673-967-13
FOR DSR-390/390P/370/370P
B-DSR500WS-FP118-SM

#NOTE

| REF NO. | DSR-390/390P DSR-370/370P | DSR-300A/300AP |
|---------|------------------------------|----------------|
| D403 | MA3J143 | 1SS119 |

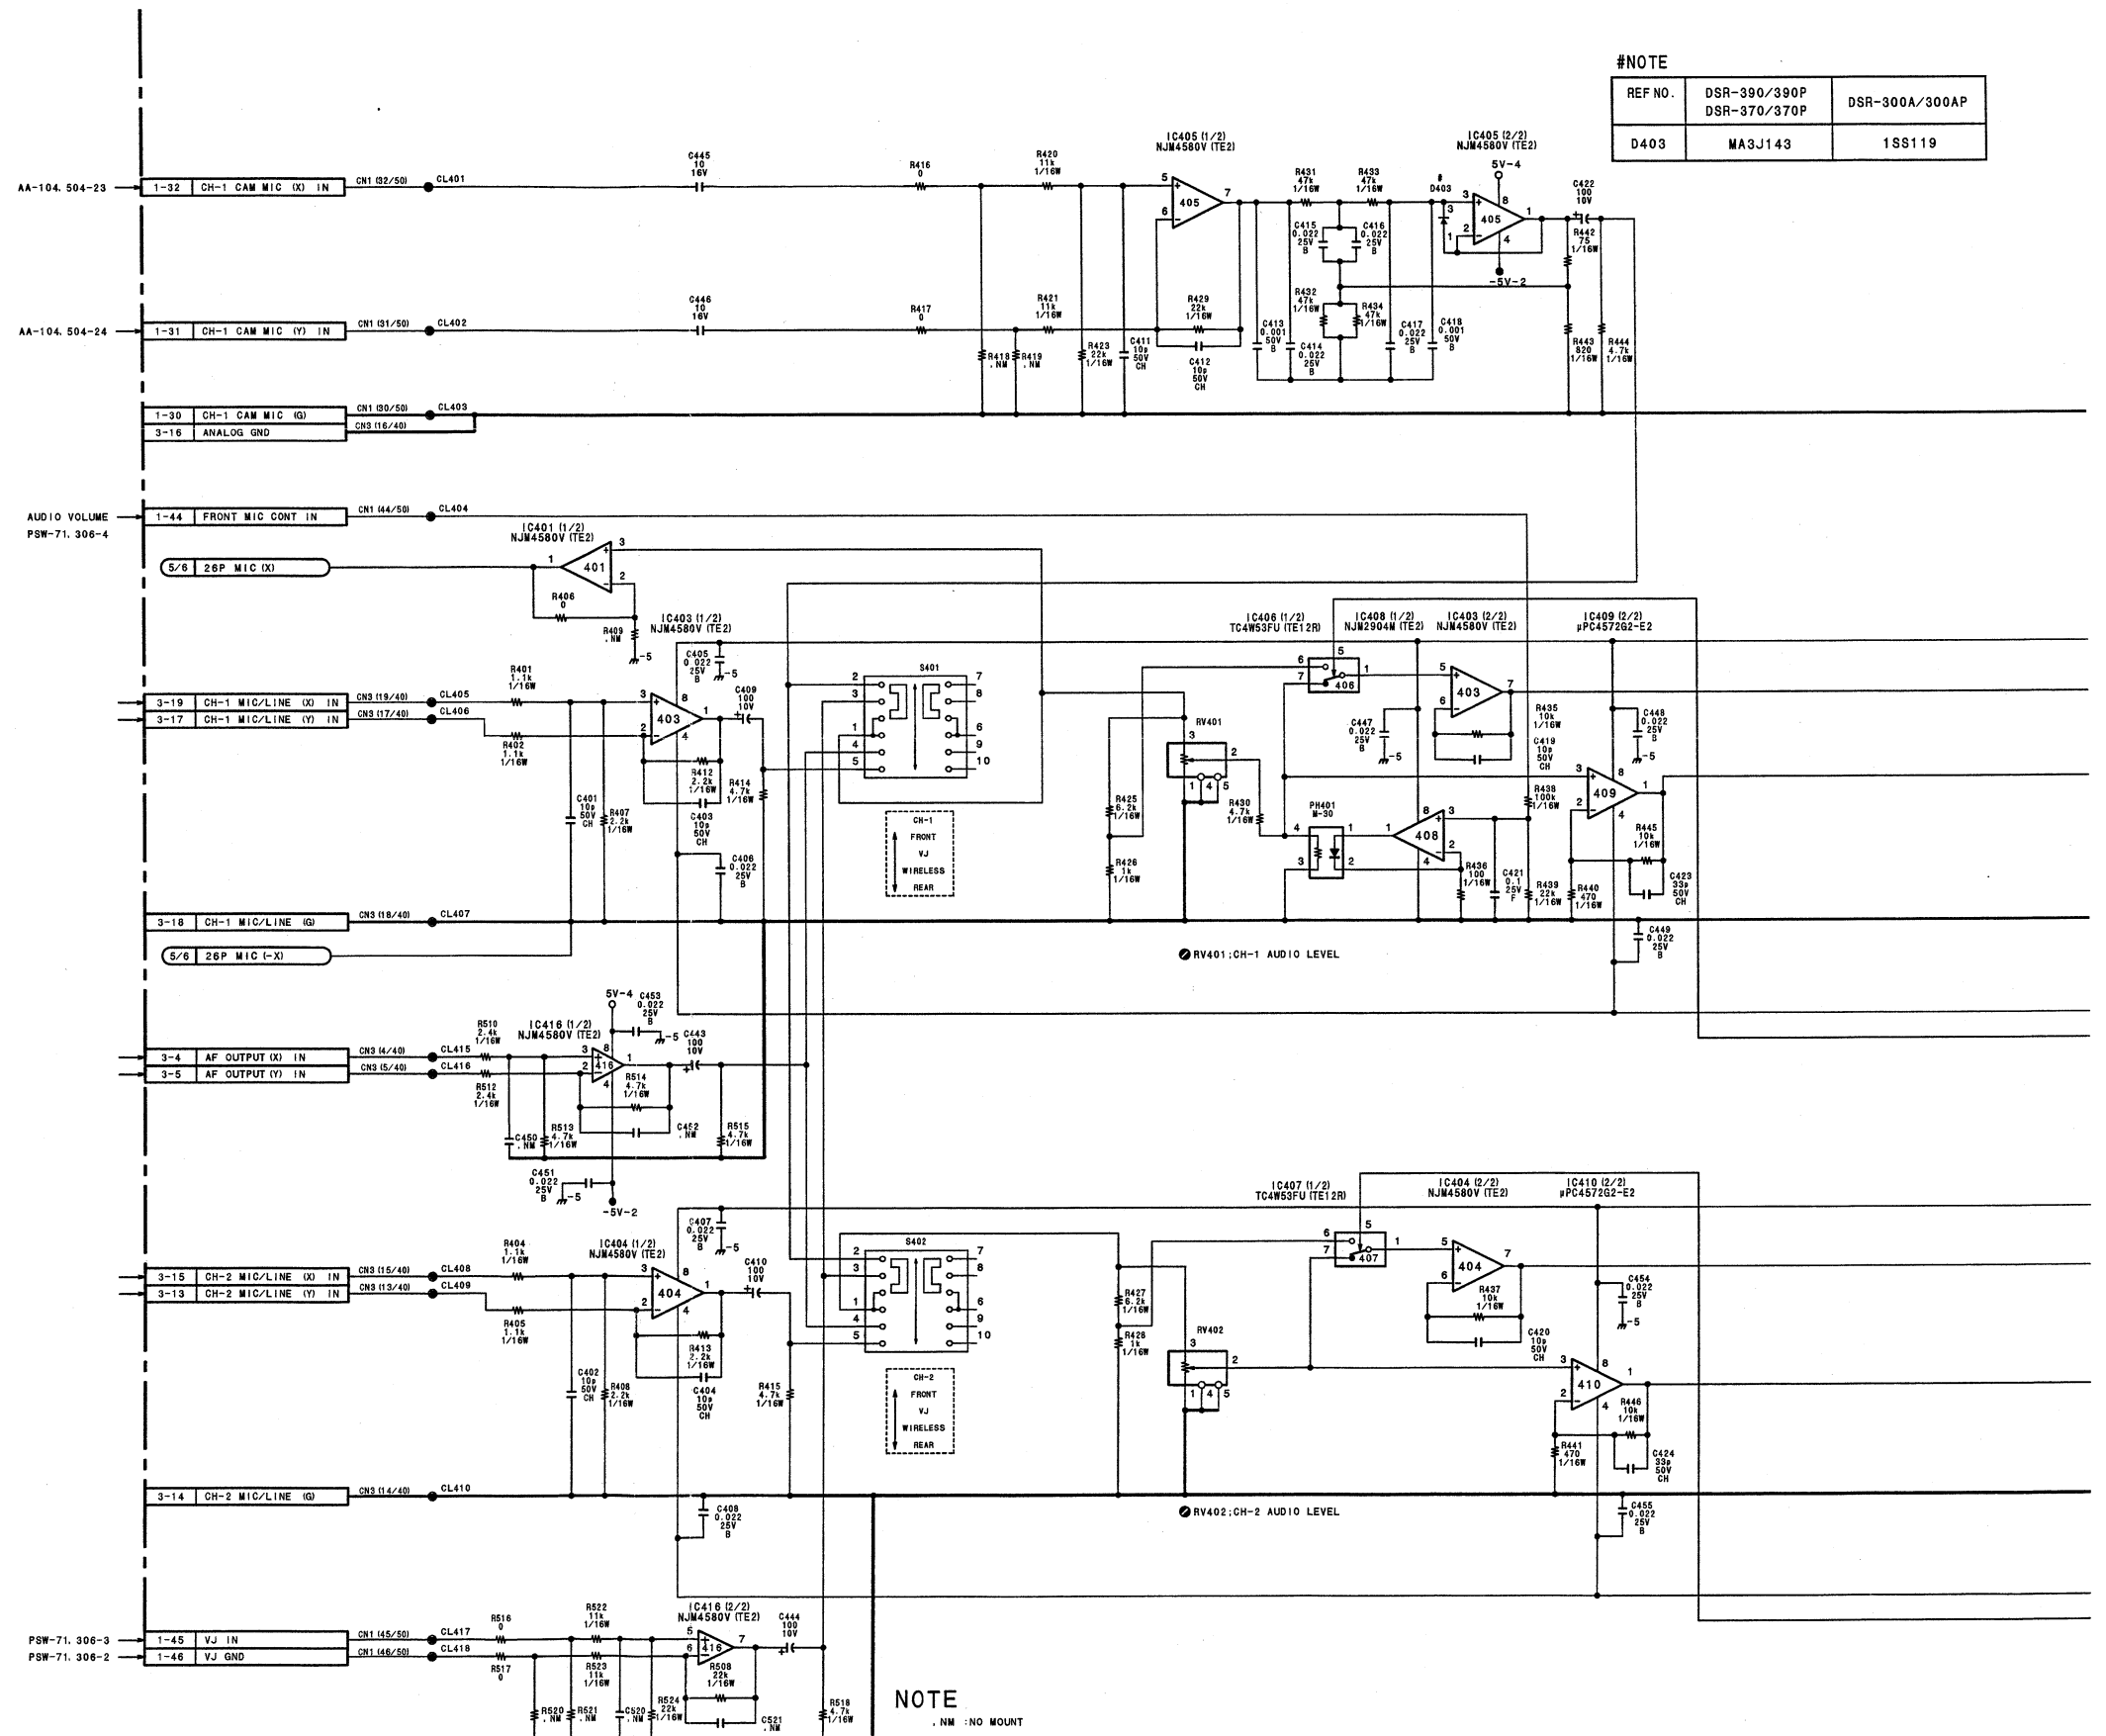



FP-118A (3/6) FP-118A (3/6)

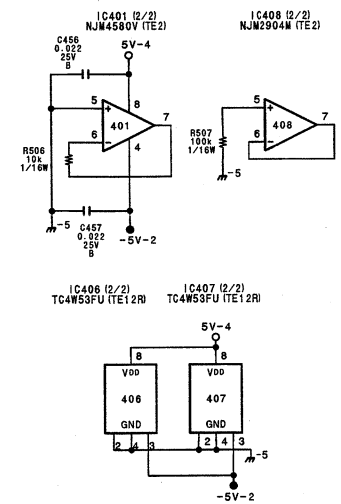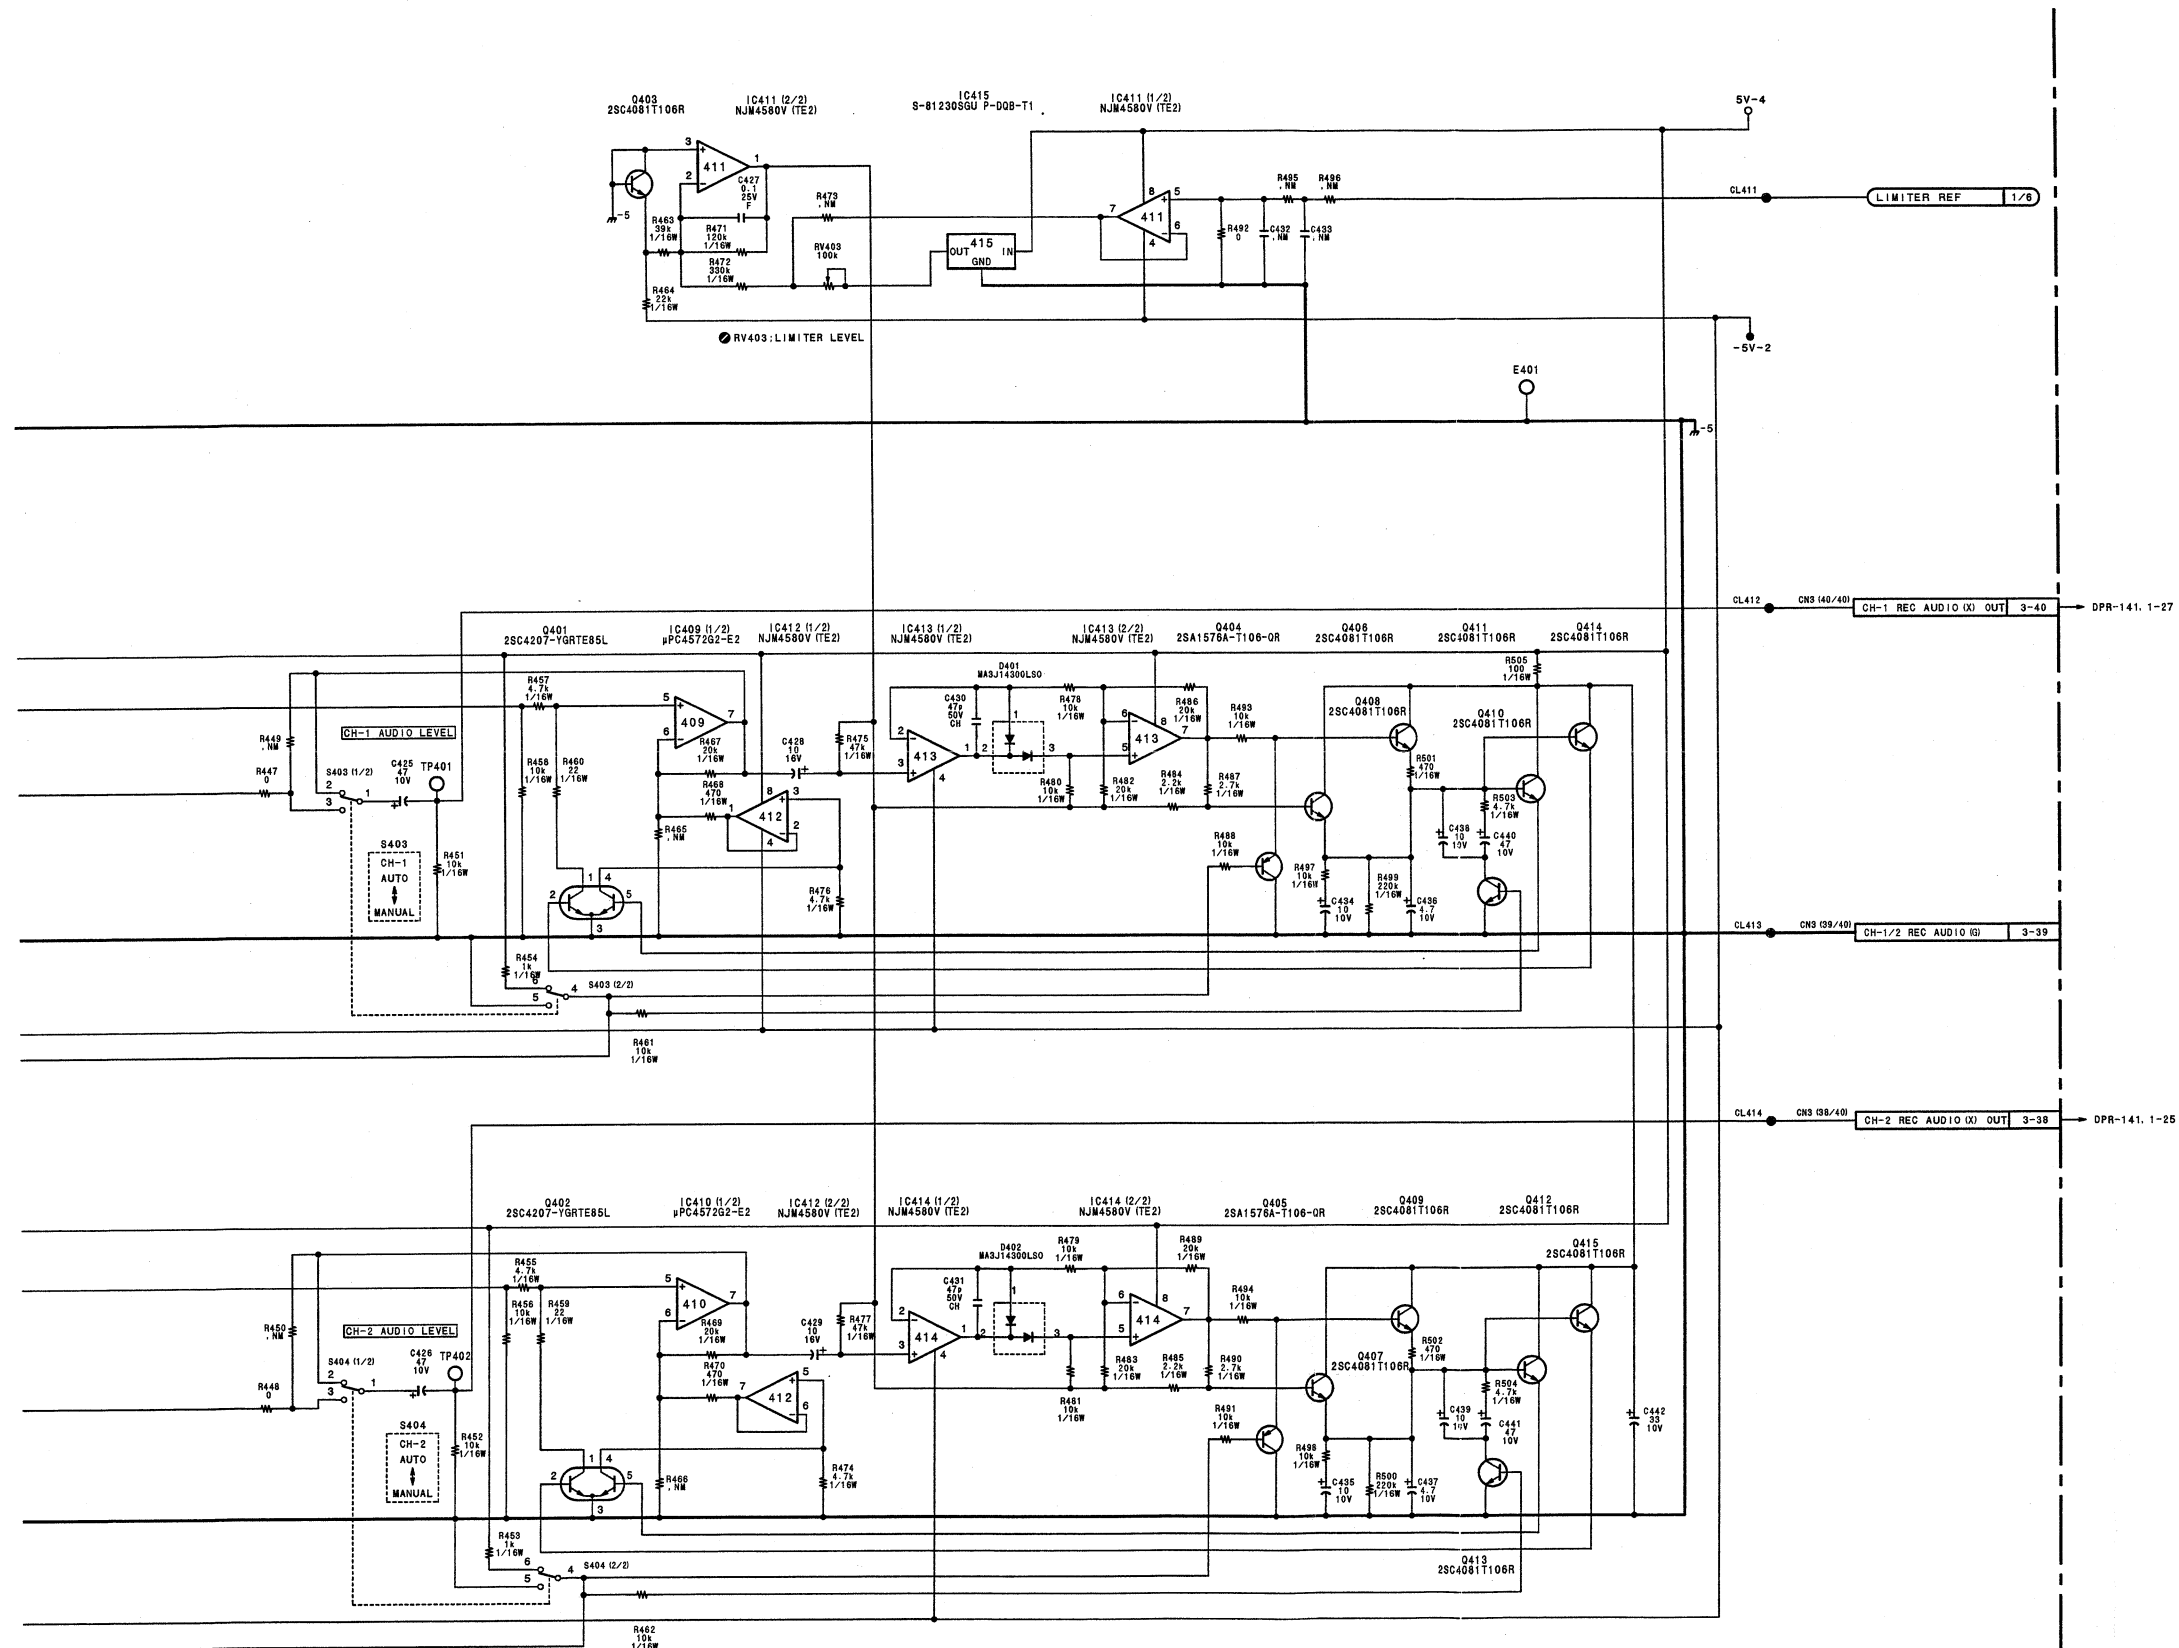


FP-118A (3/6)
BOARD NO. 1-673-967-13
FOR DSR-390/390P/370/370P
B-DSR500WS-FP118-SM

FP-118A (4/6)



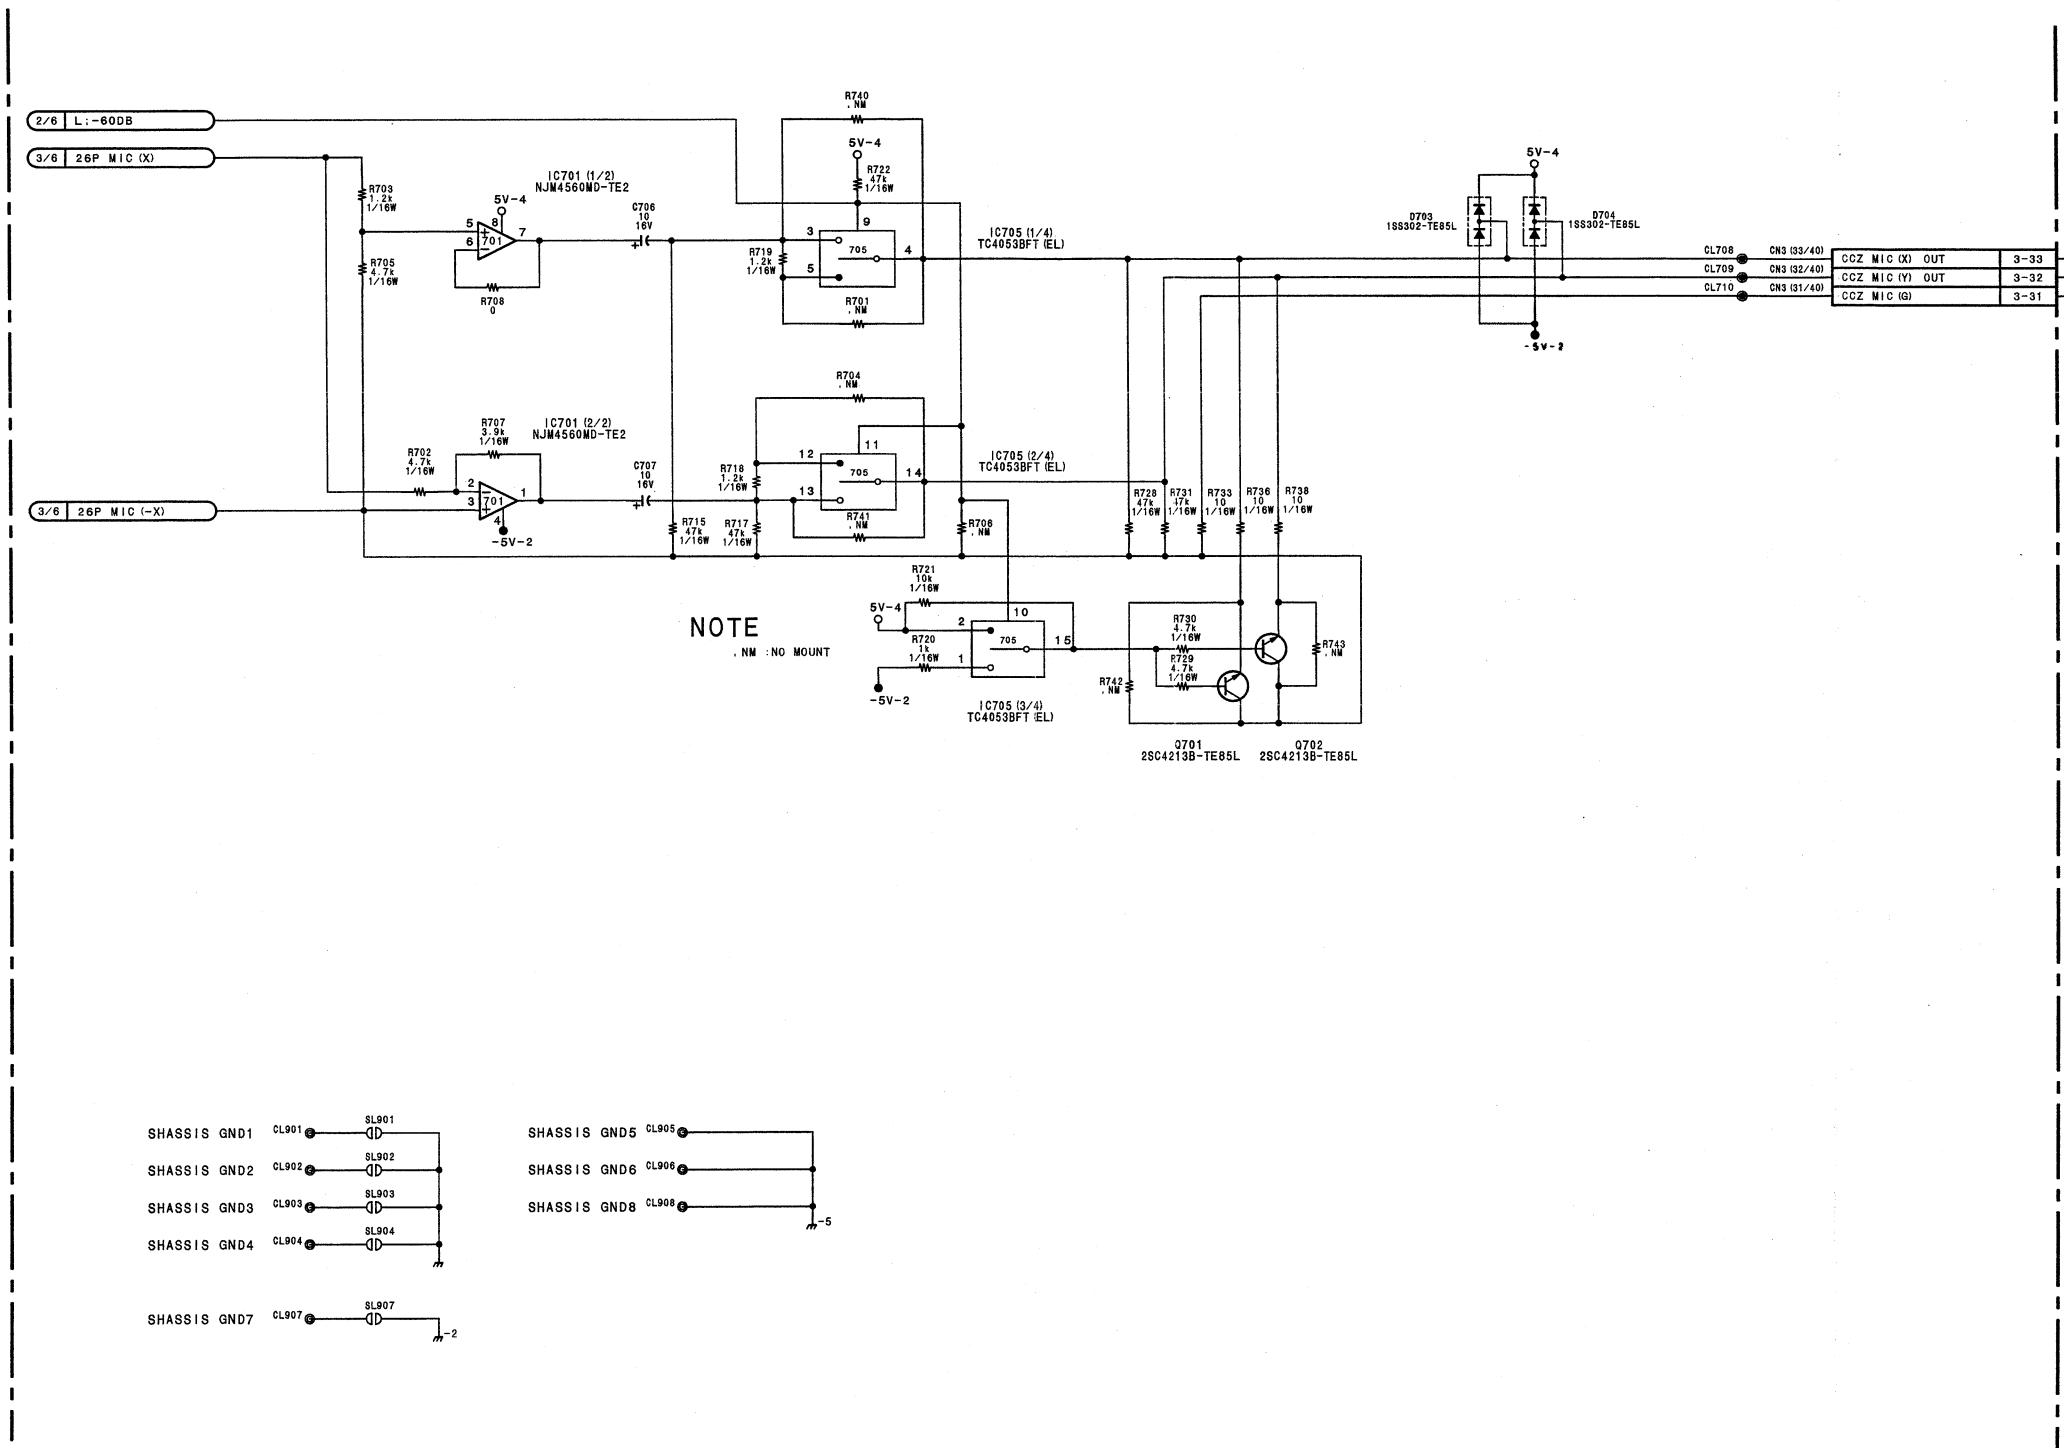

FP-118A (5/6)
BOARD NO. 1-673-967-13
FOR DSR-390/390P/370/370P
B-DSR500WS-FP118-SM

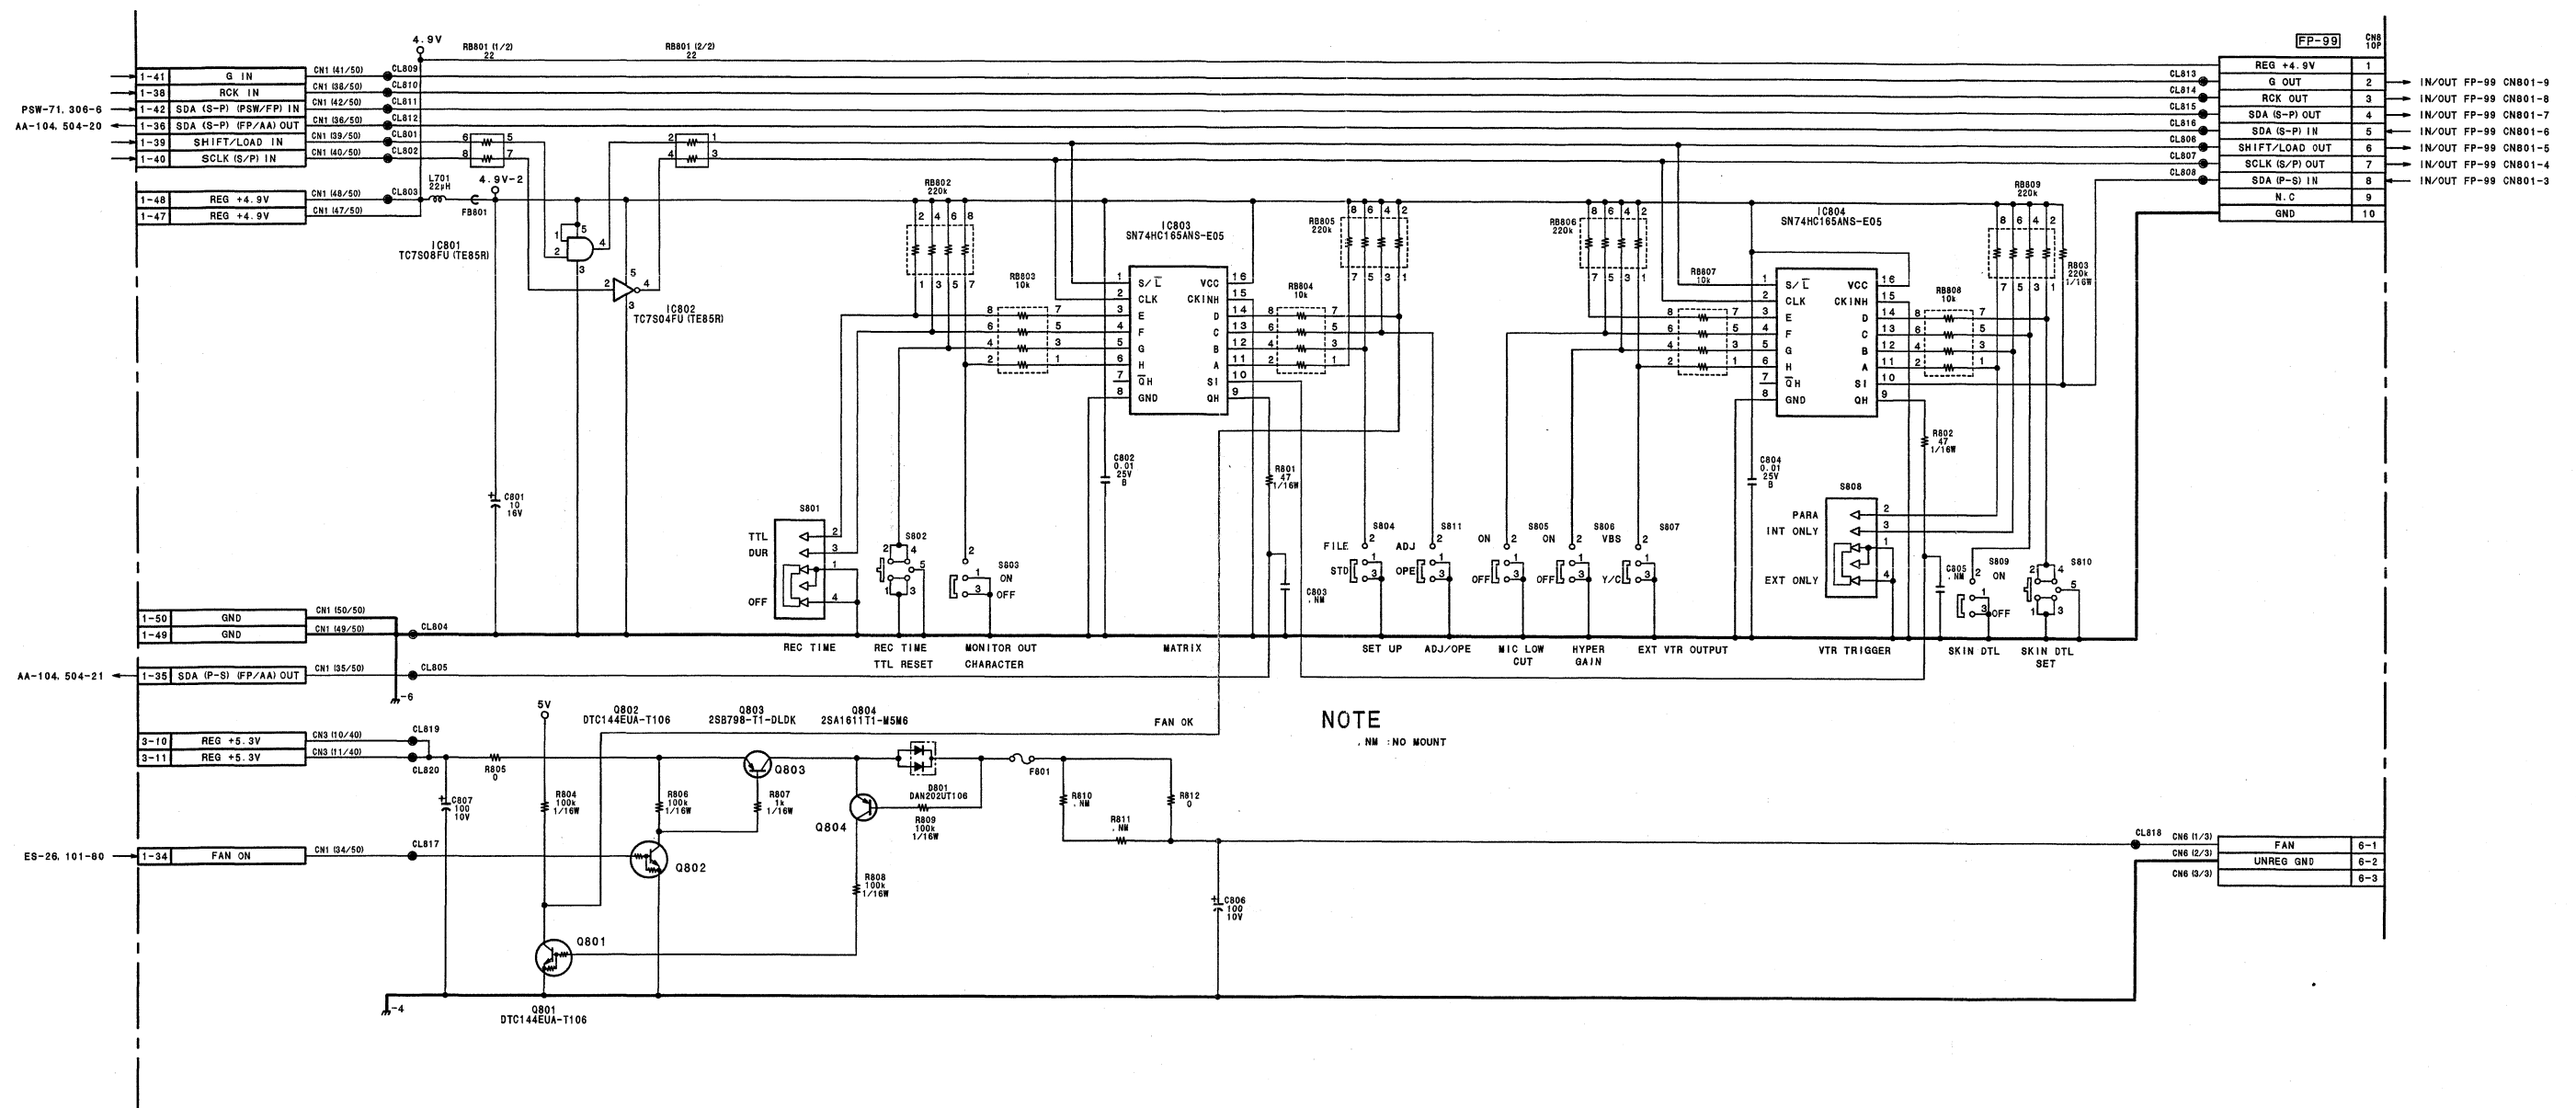

FP-118A (6/6)
 BOARD NO. 1-673-967-13
 FOR DSR-390/390P/370/370P
 B-DSR500WS-FP118-SM


1



2

3

4

5

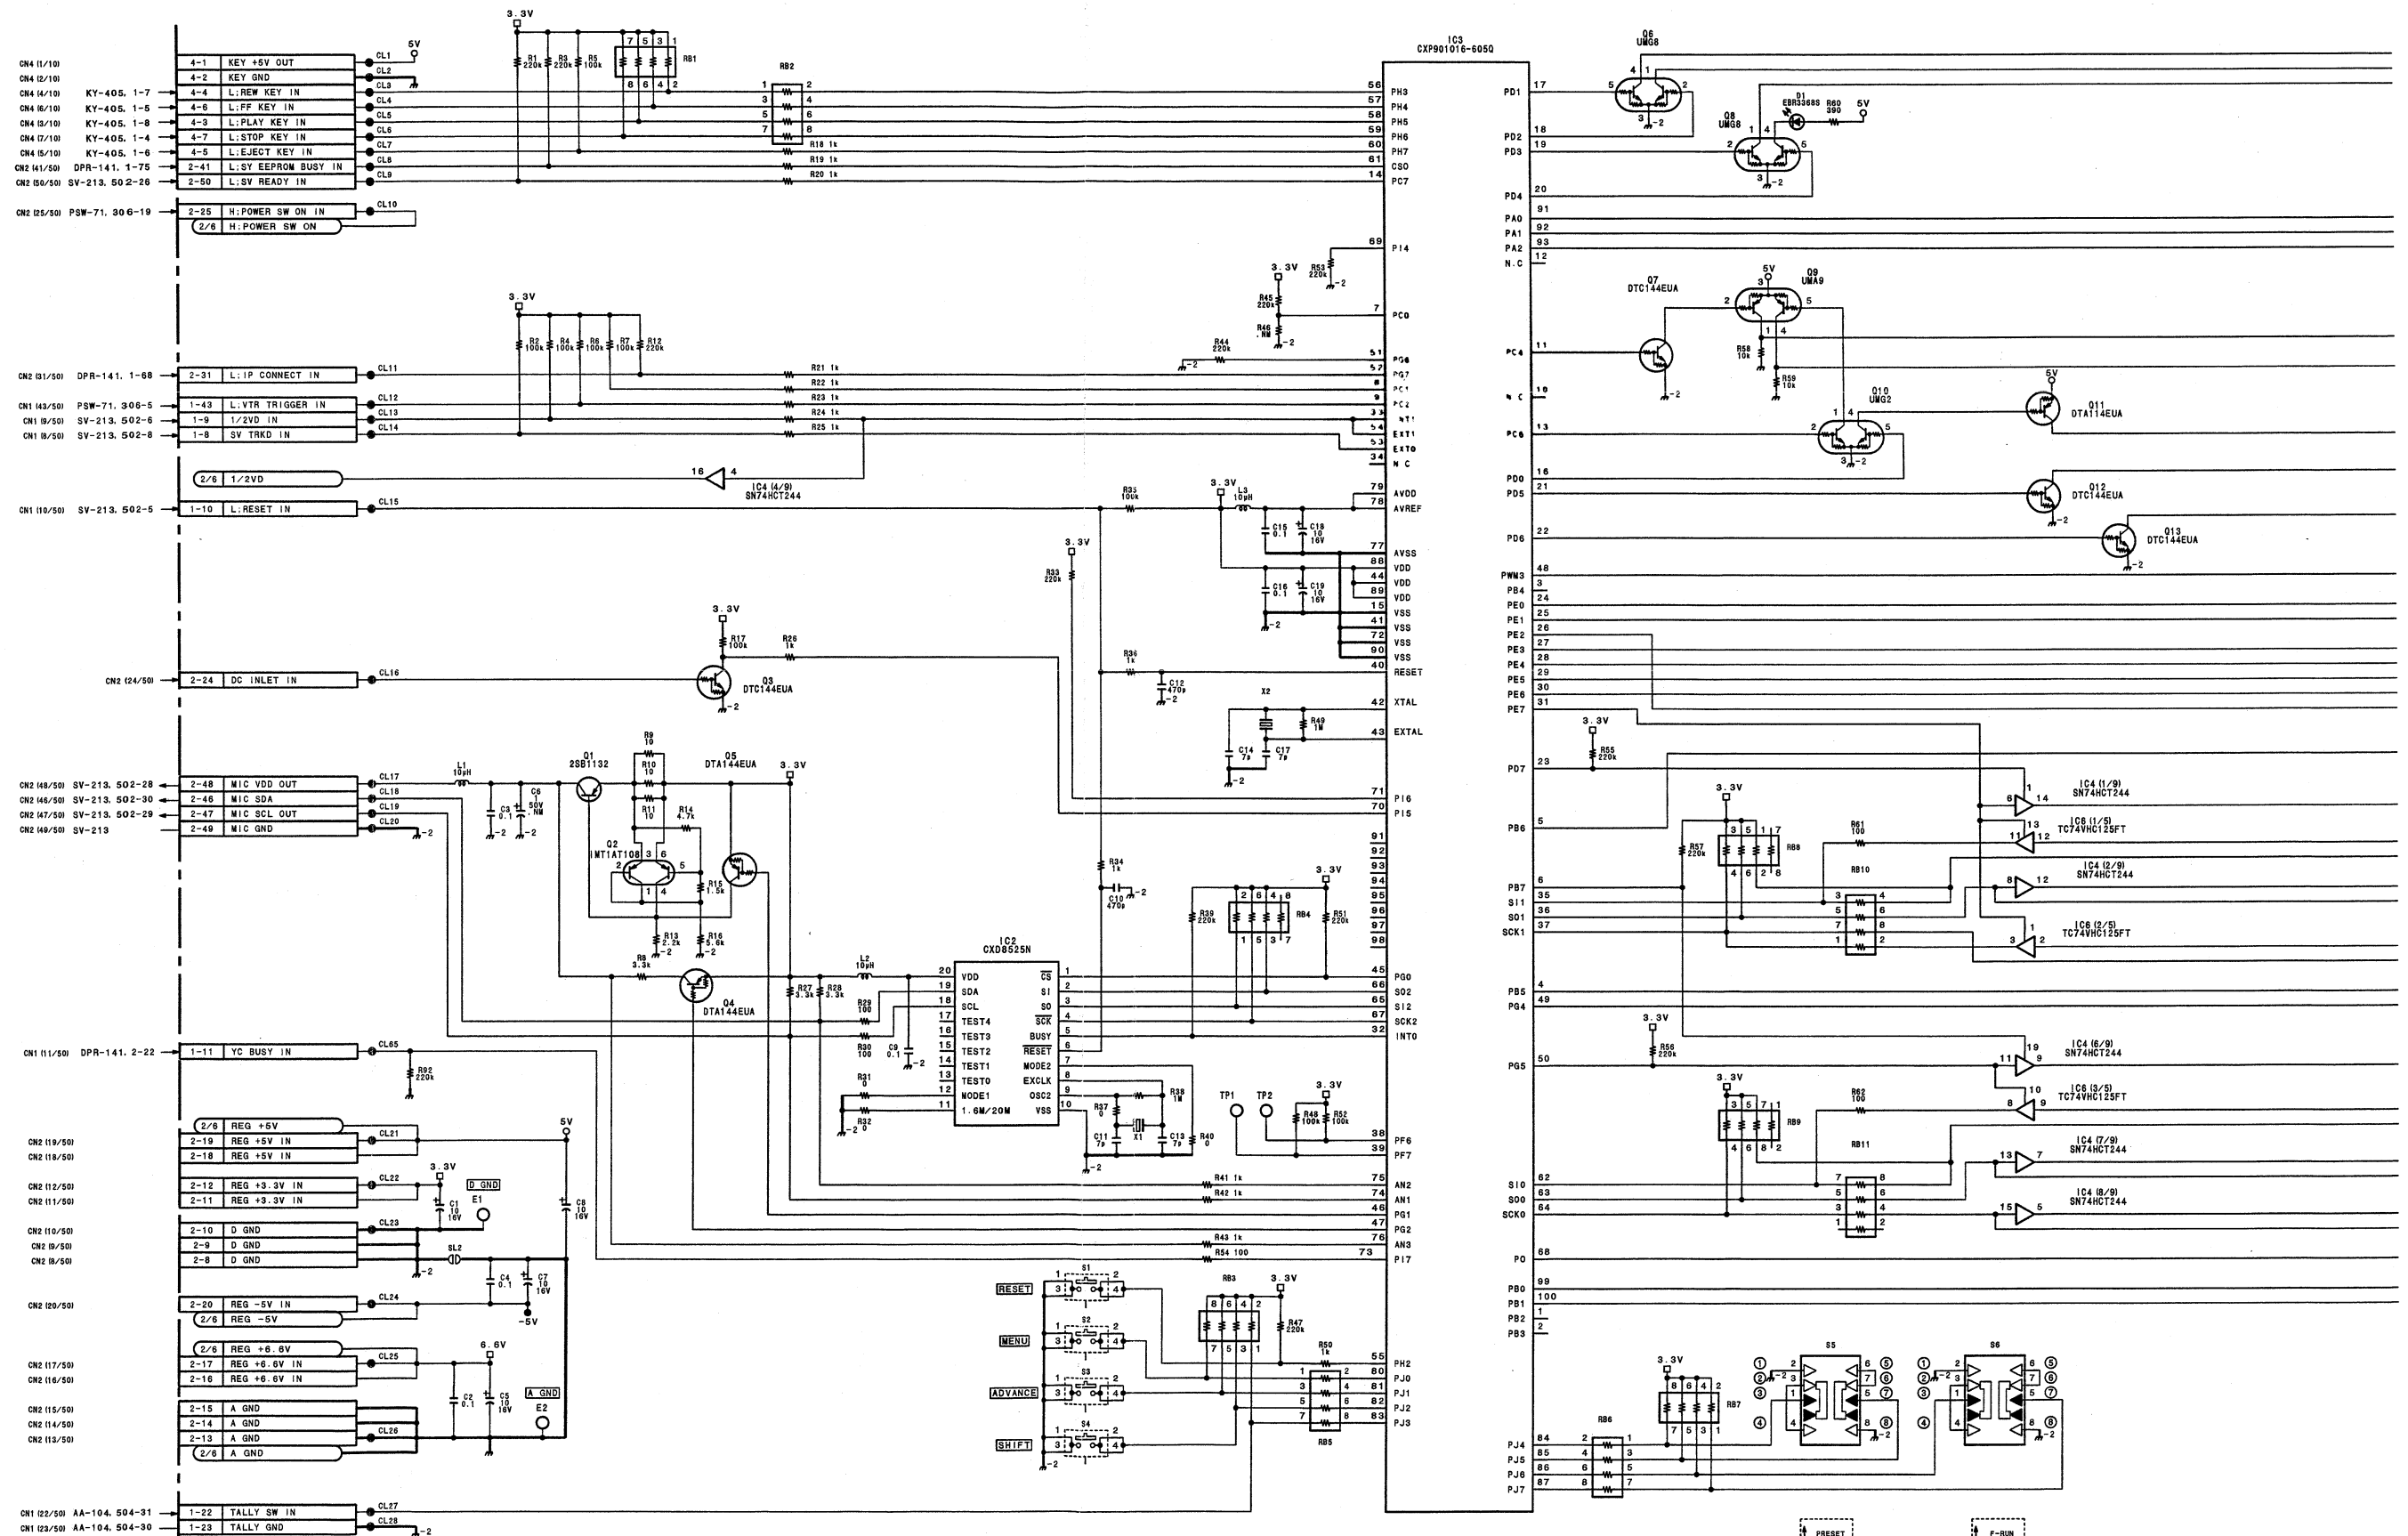

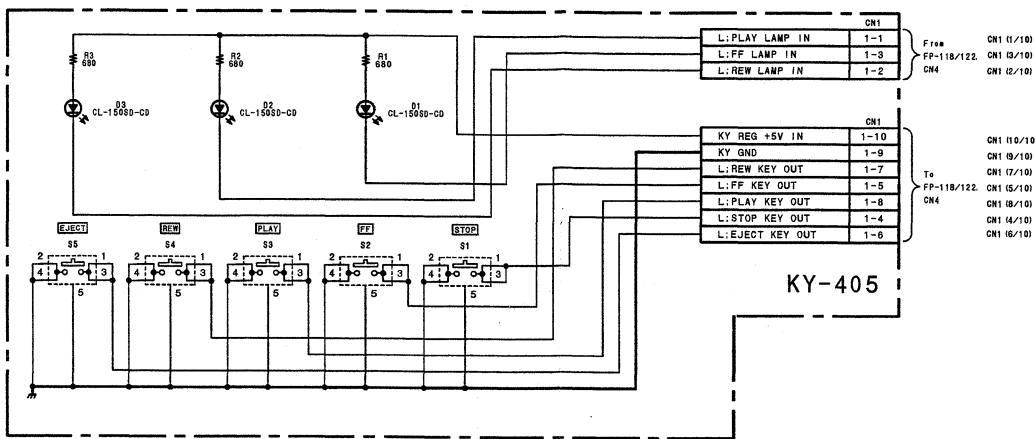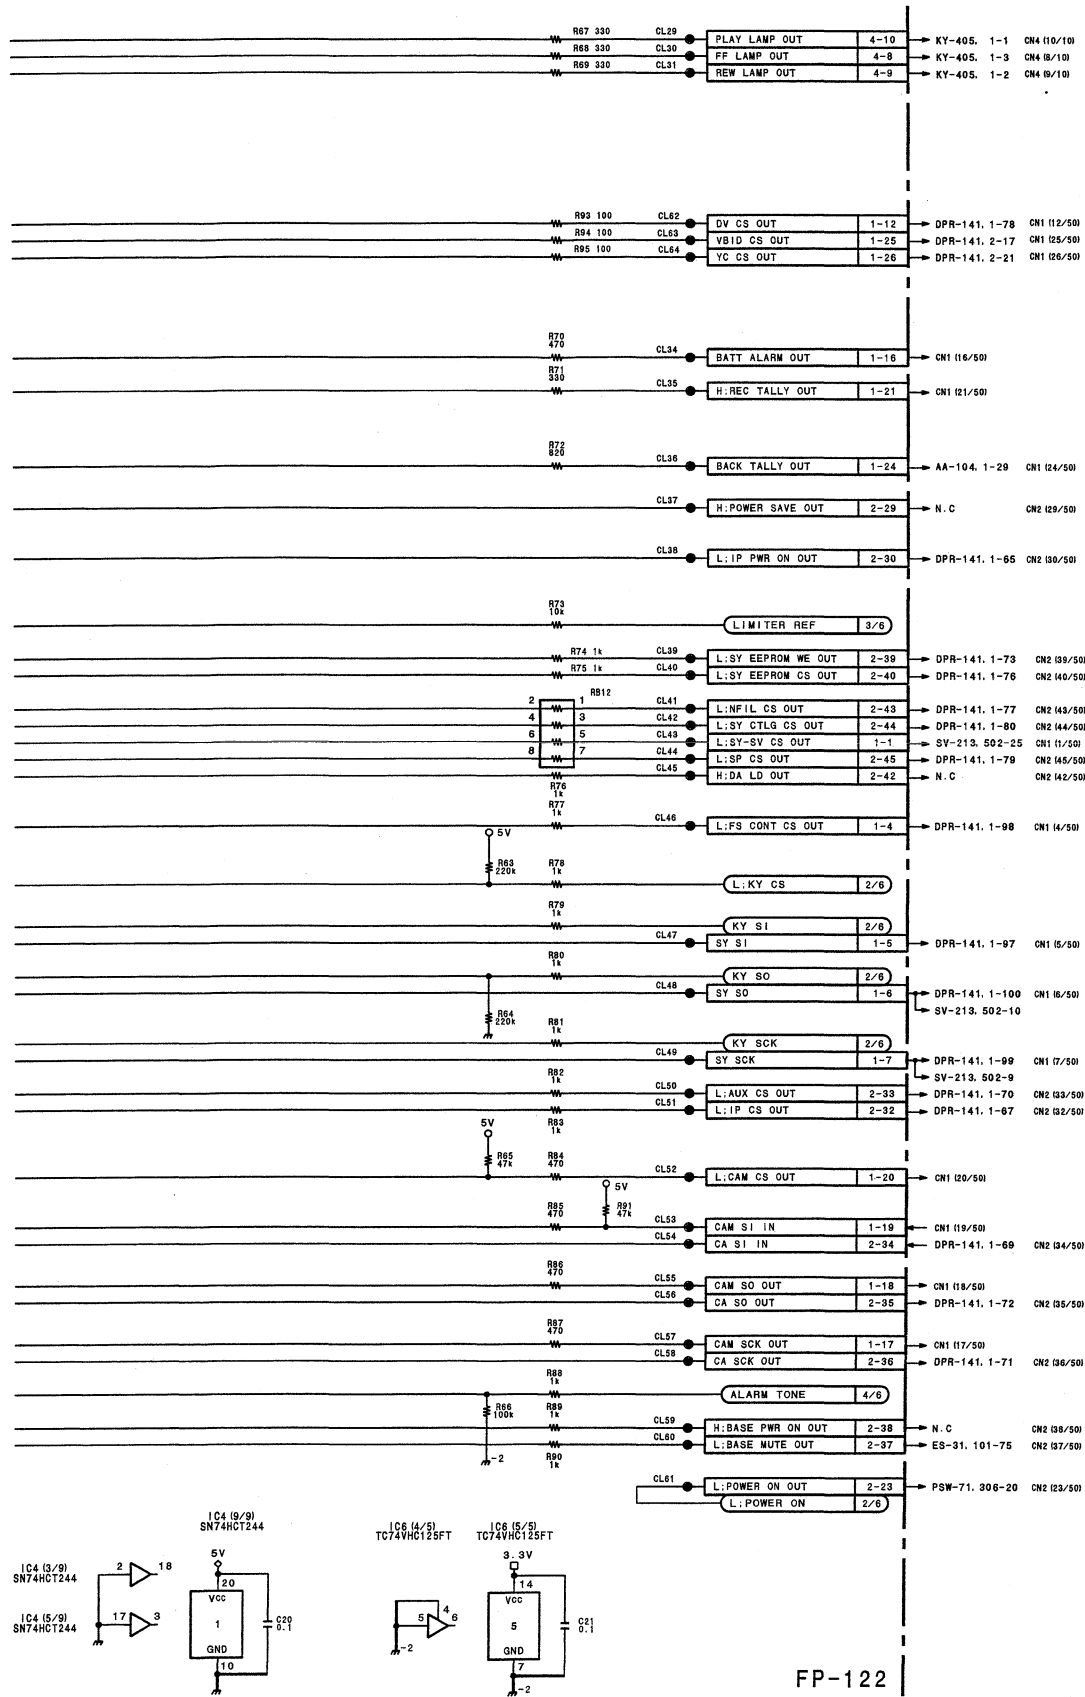



FP-122 (1/6)


BOARD NO. 1-677-372-11
FOR DSR-300A/300AP
B-DSR300A-FP122-11

KY-405

BOARD NO. 1-669-105-11
B-DSR500WS-FP118-SM



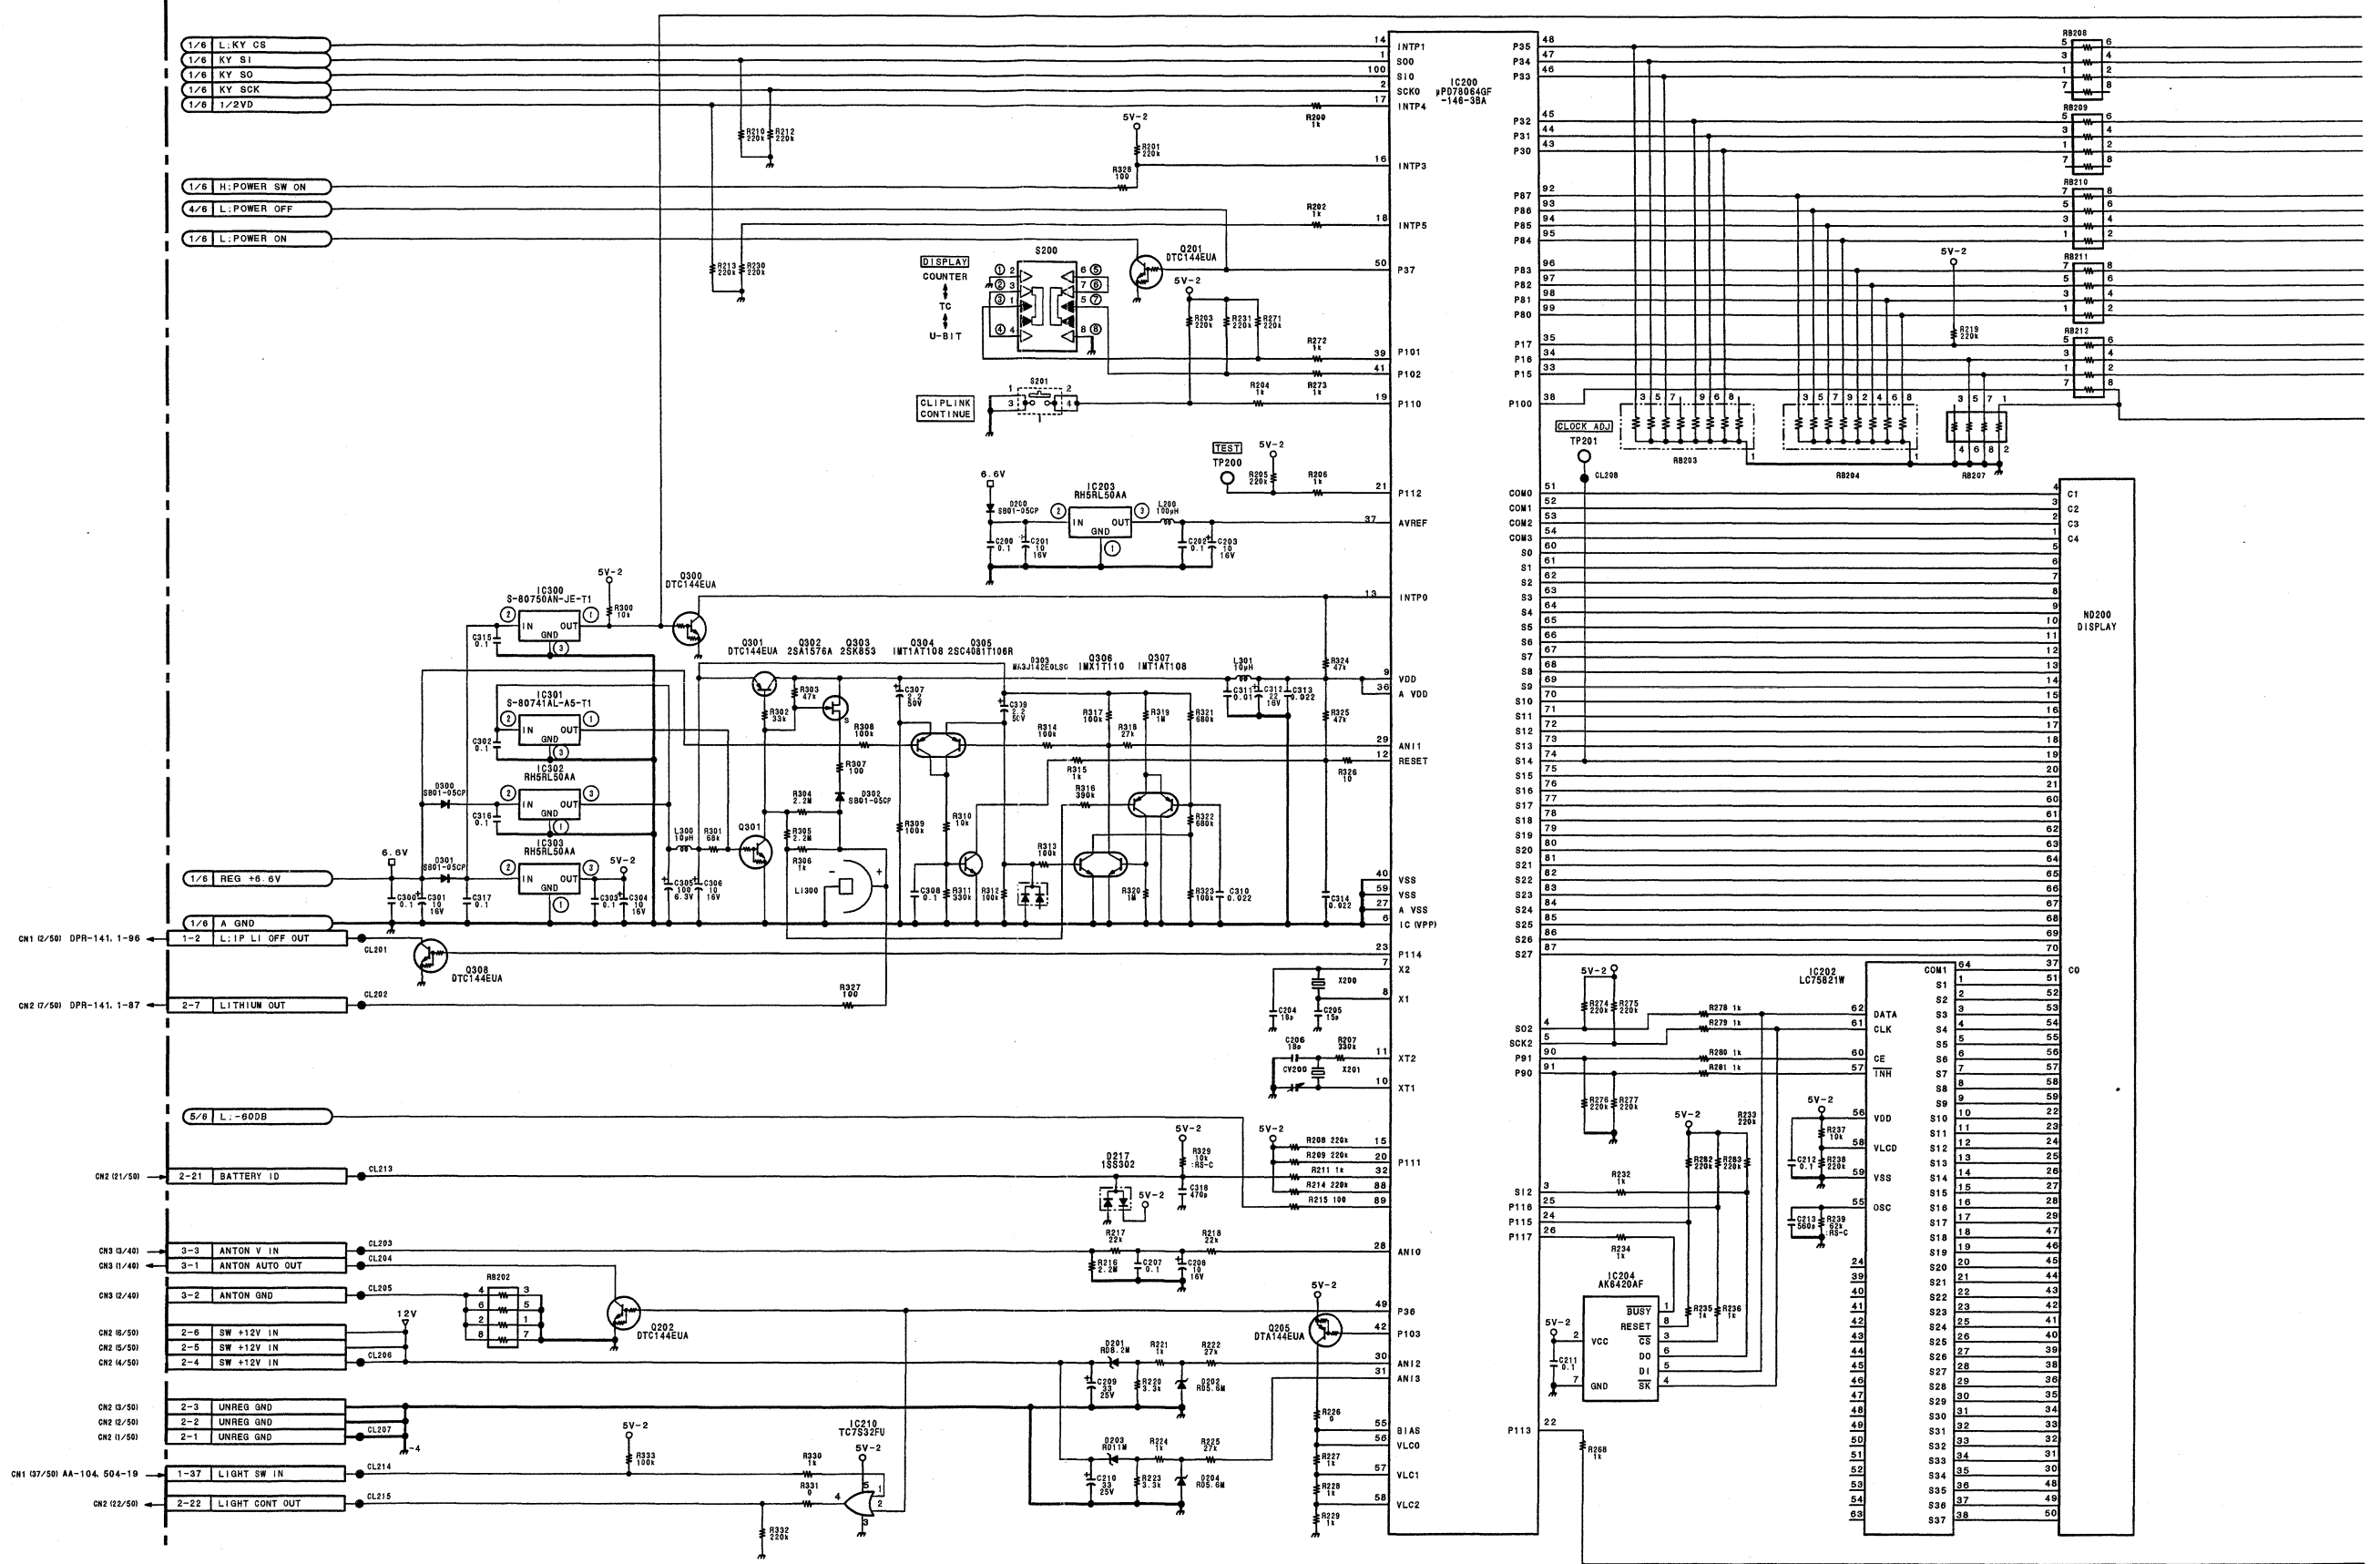




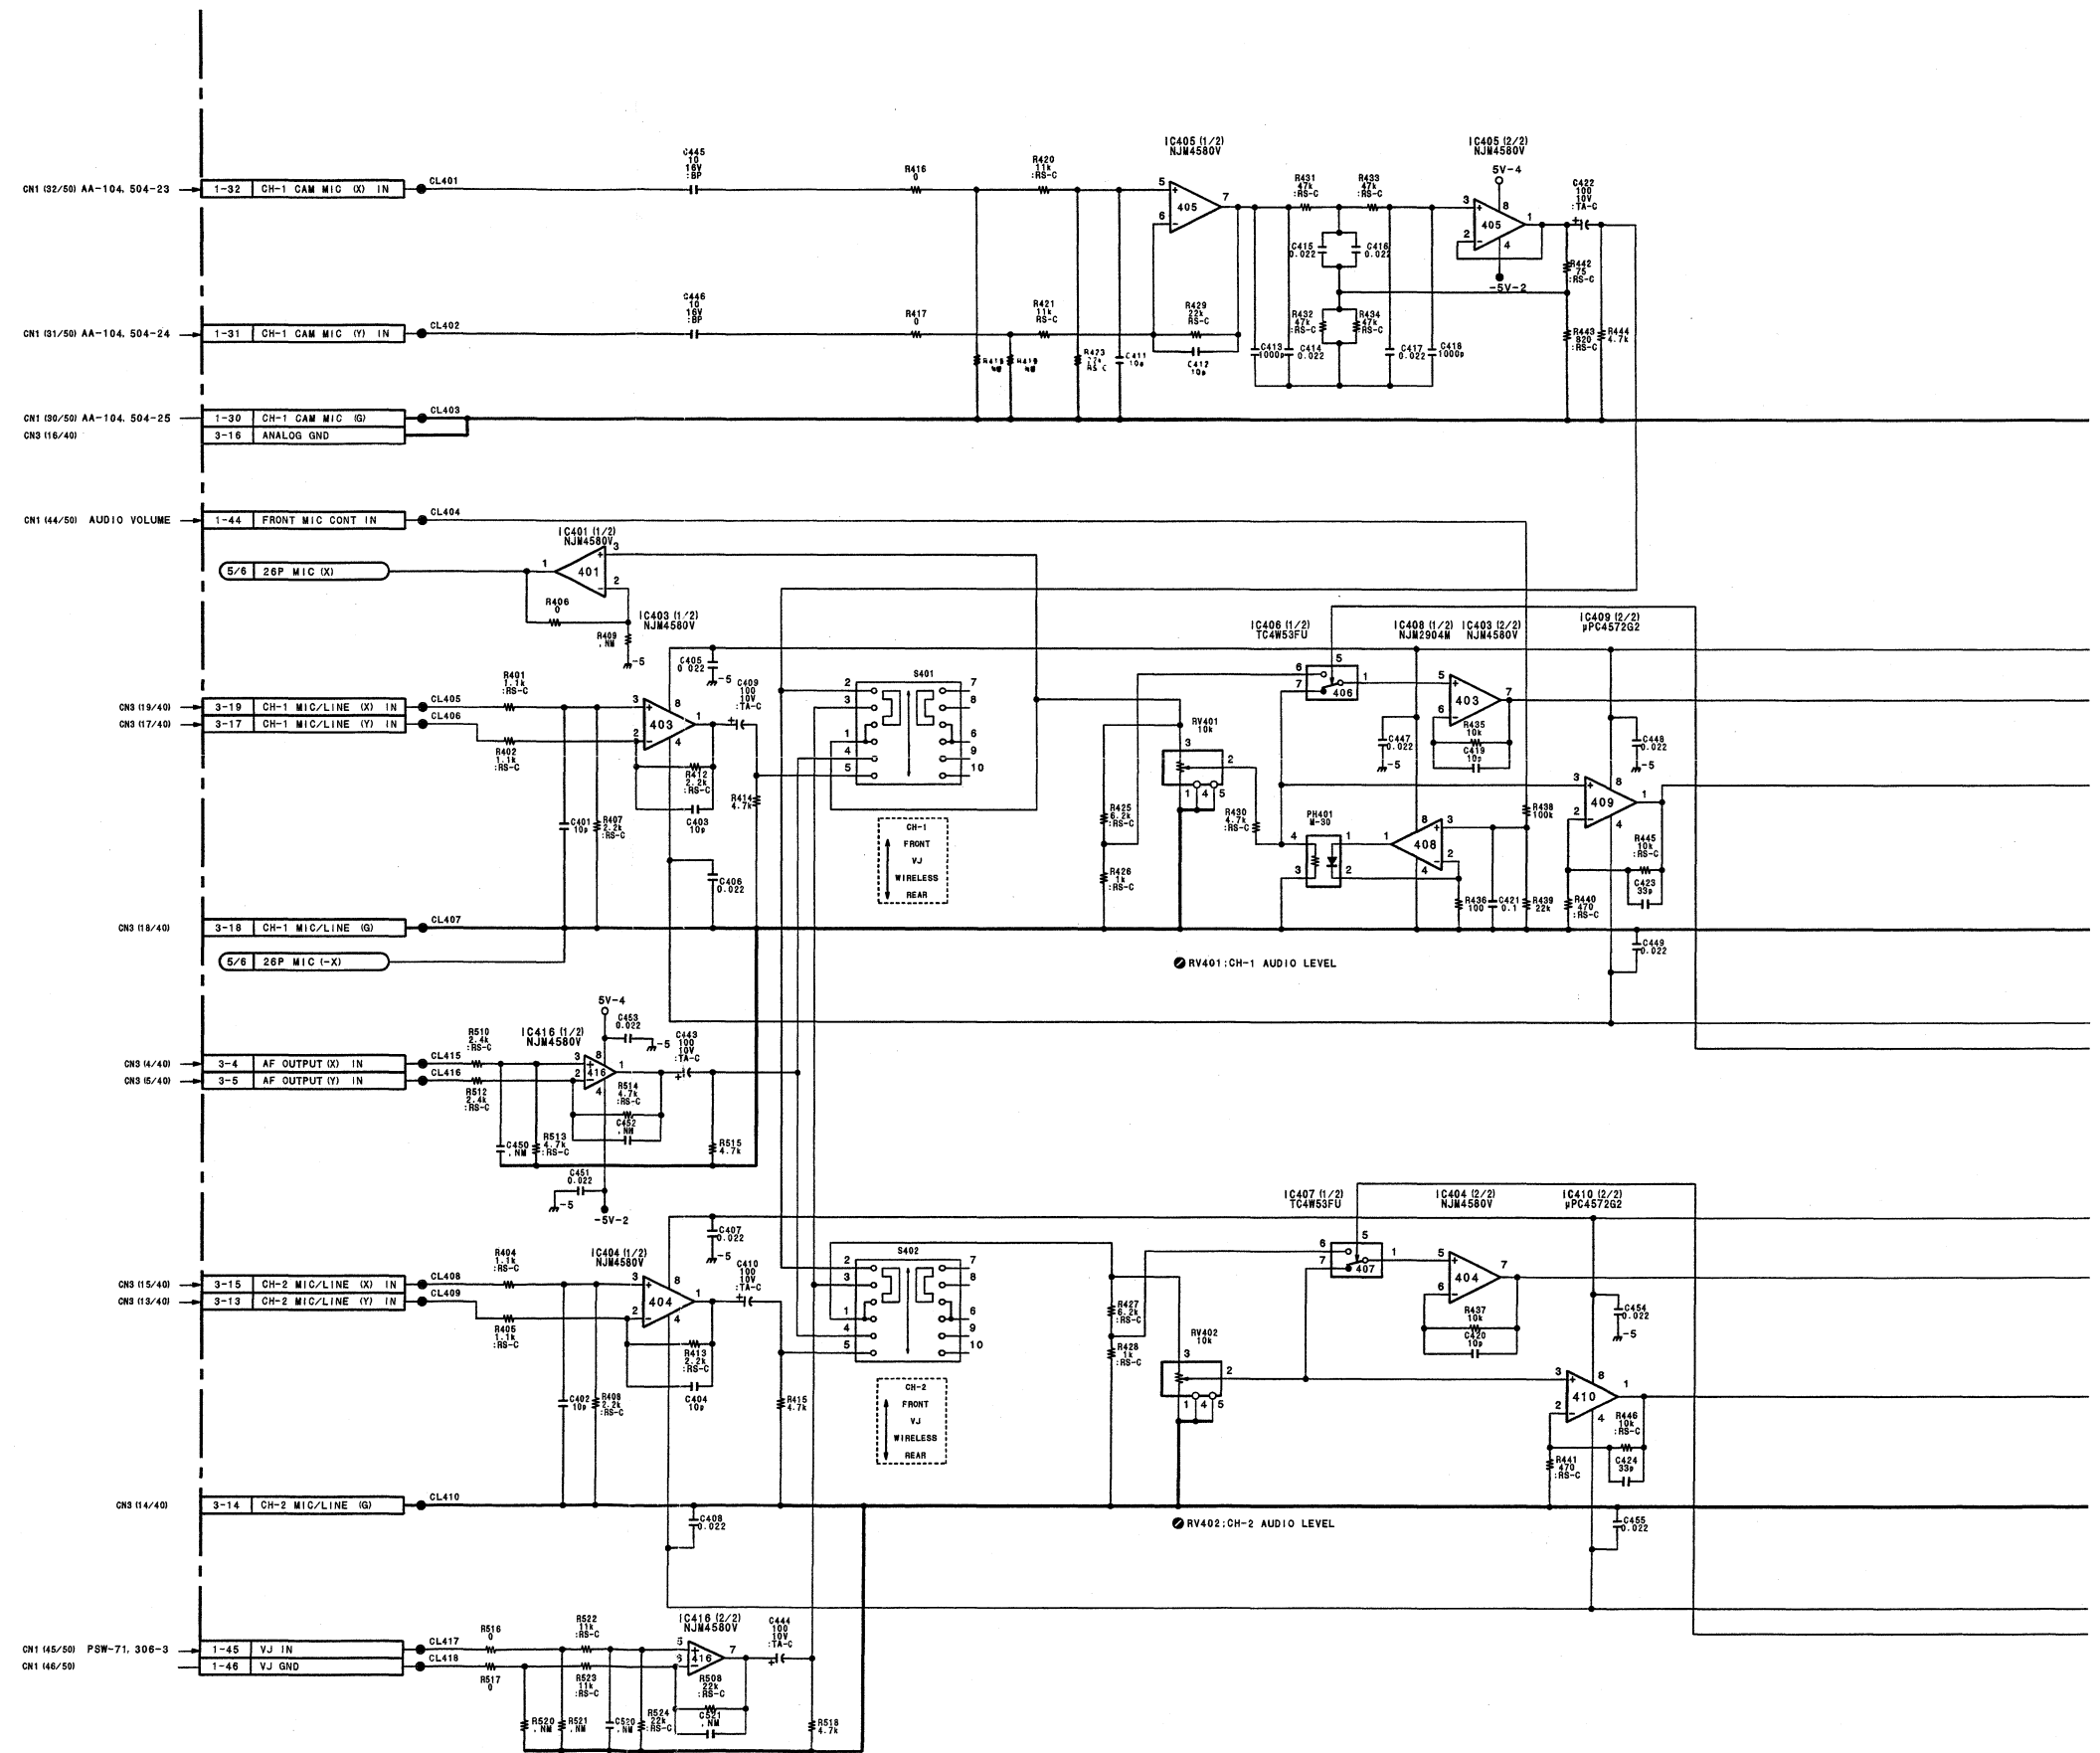


4-60


4-60

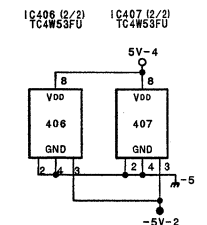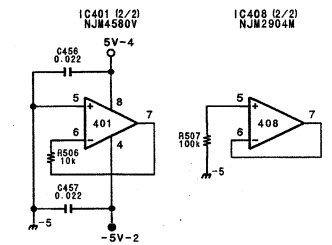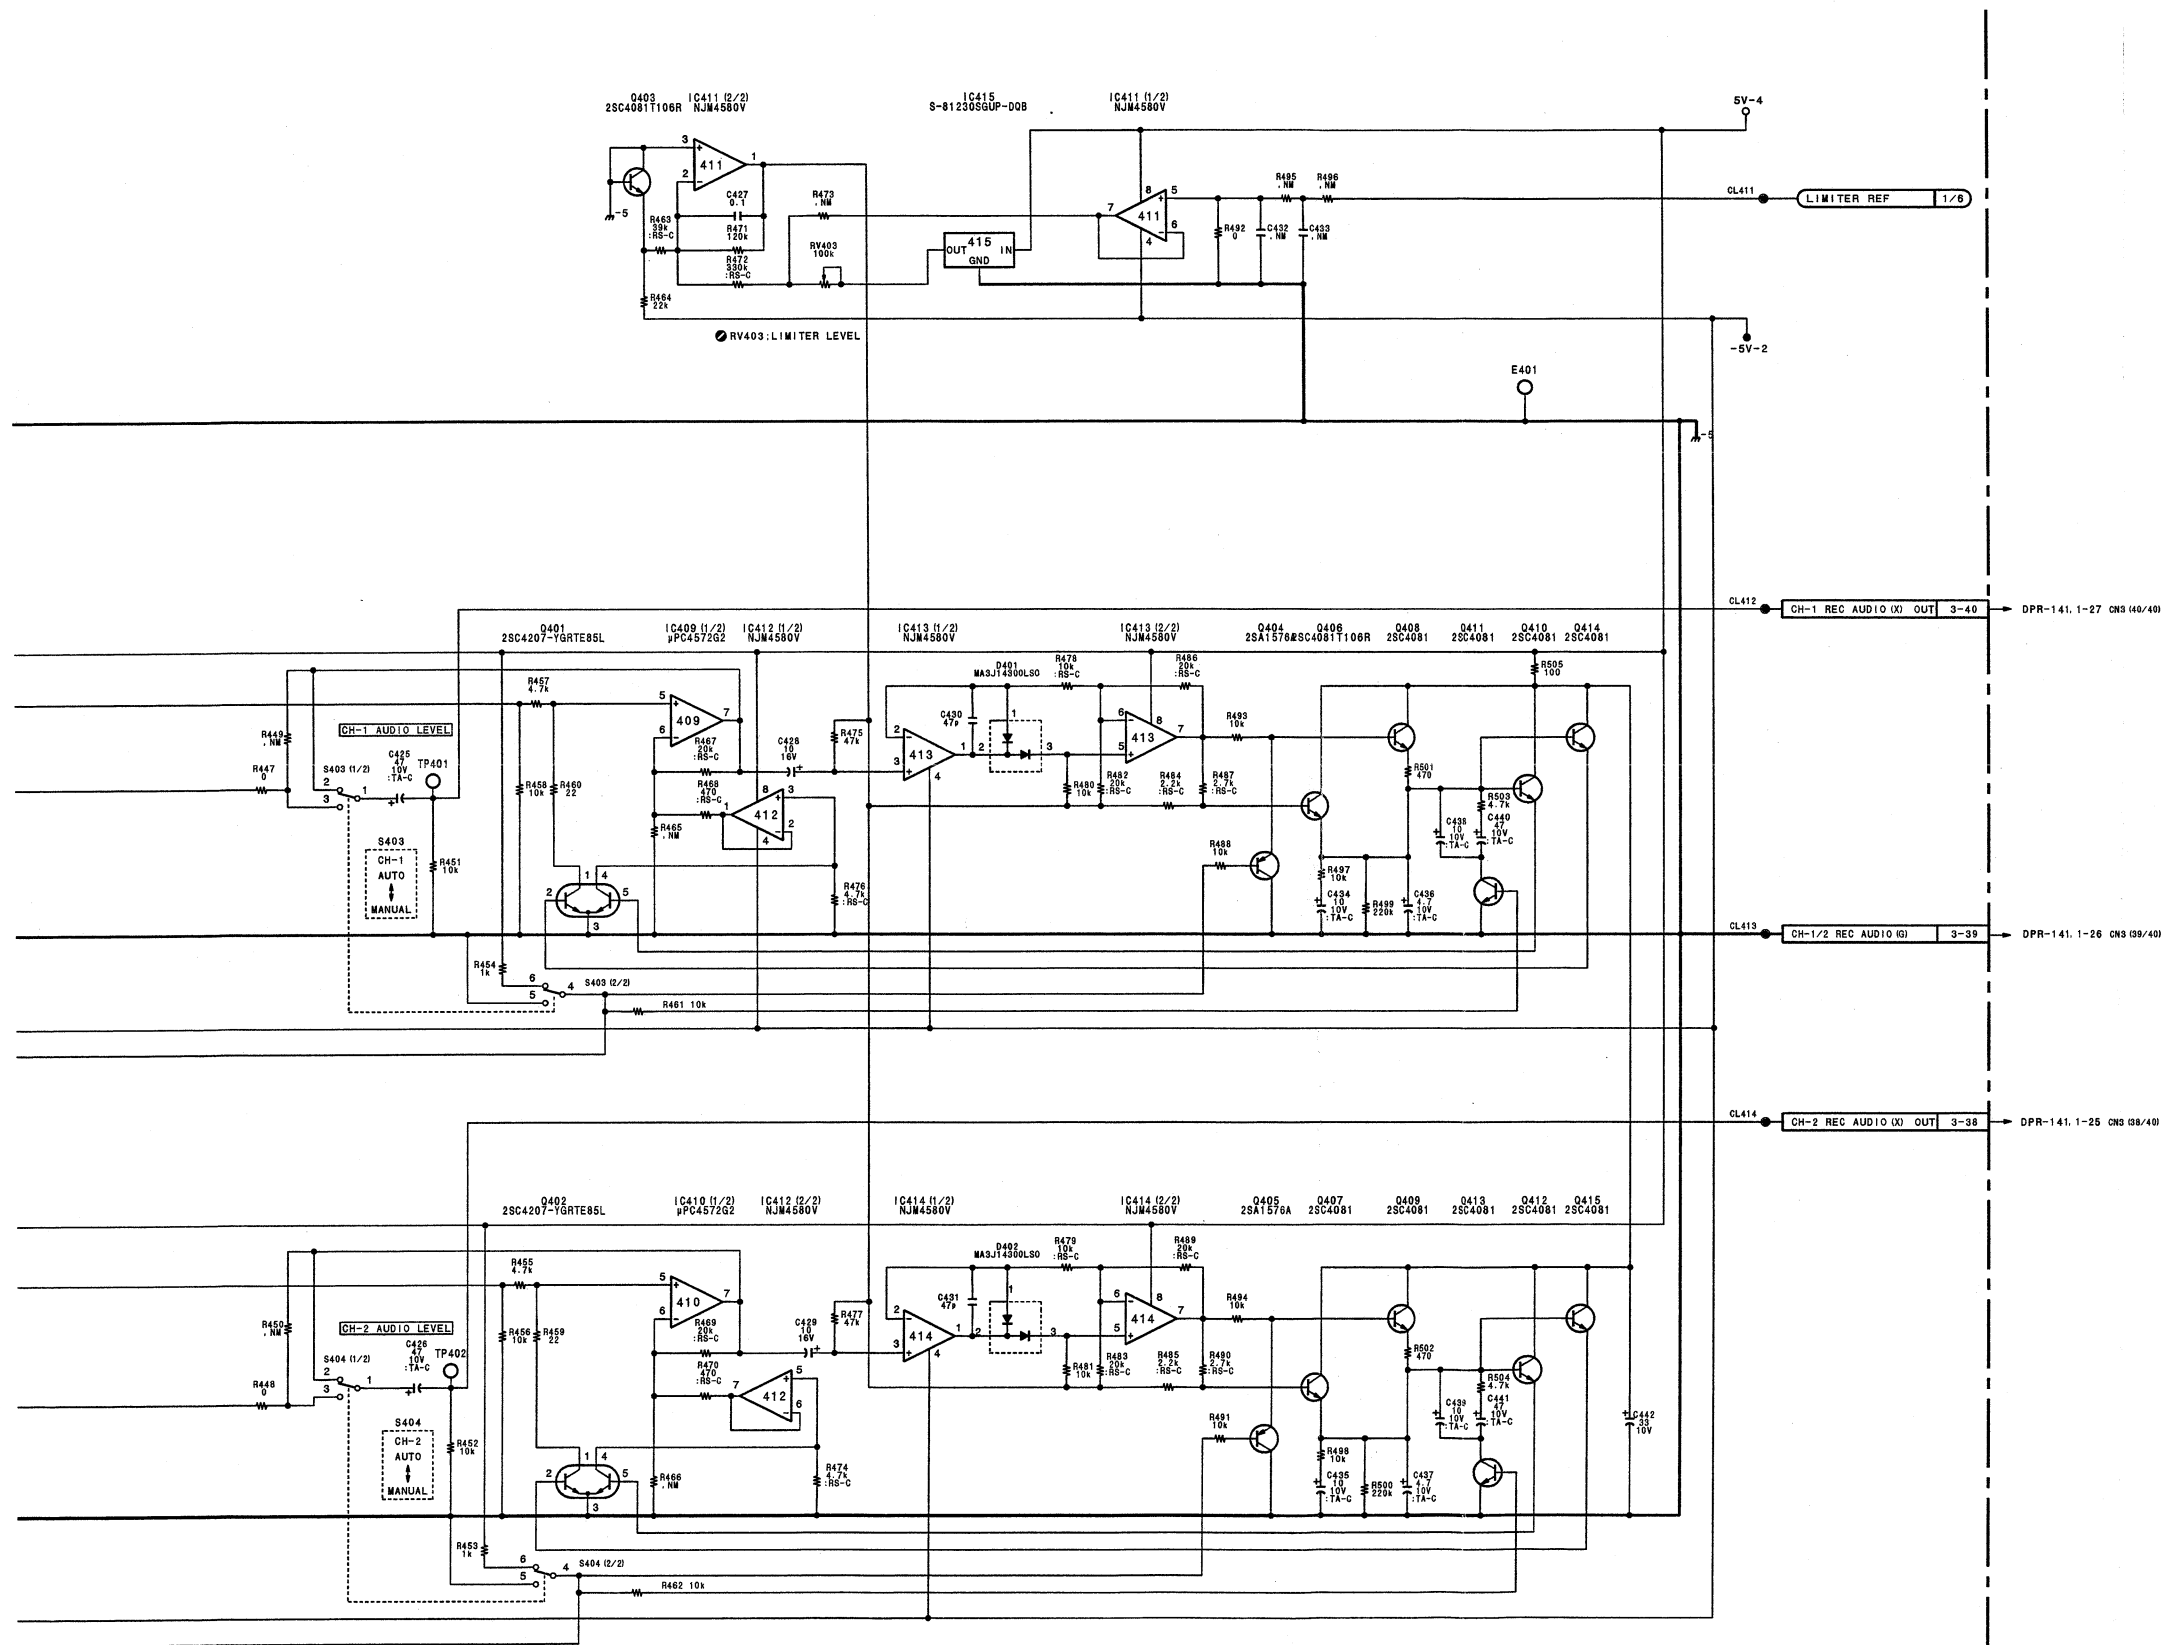


FP-122 (3/6)
BOARD NO. 1-677-372-11
FOR DSR-300A/300AP
B-DSR300A-FP122-11

FP-122 (4/6)

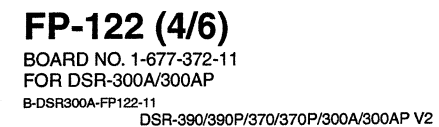


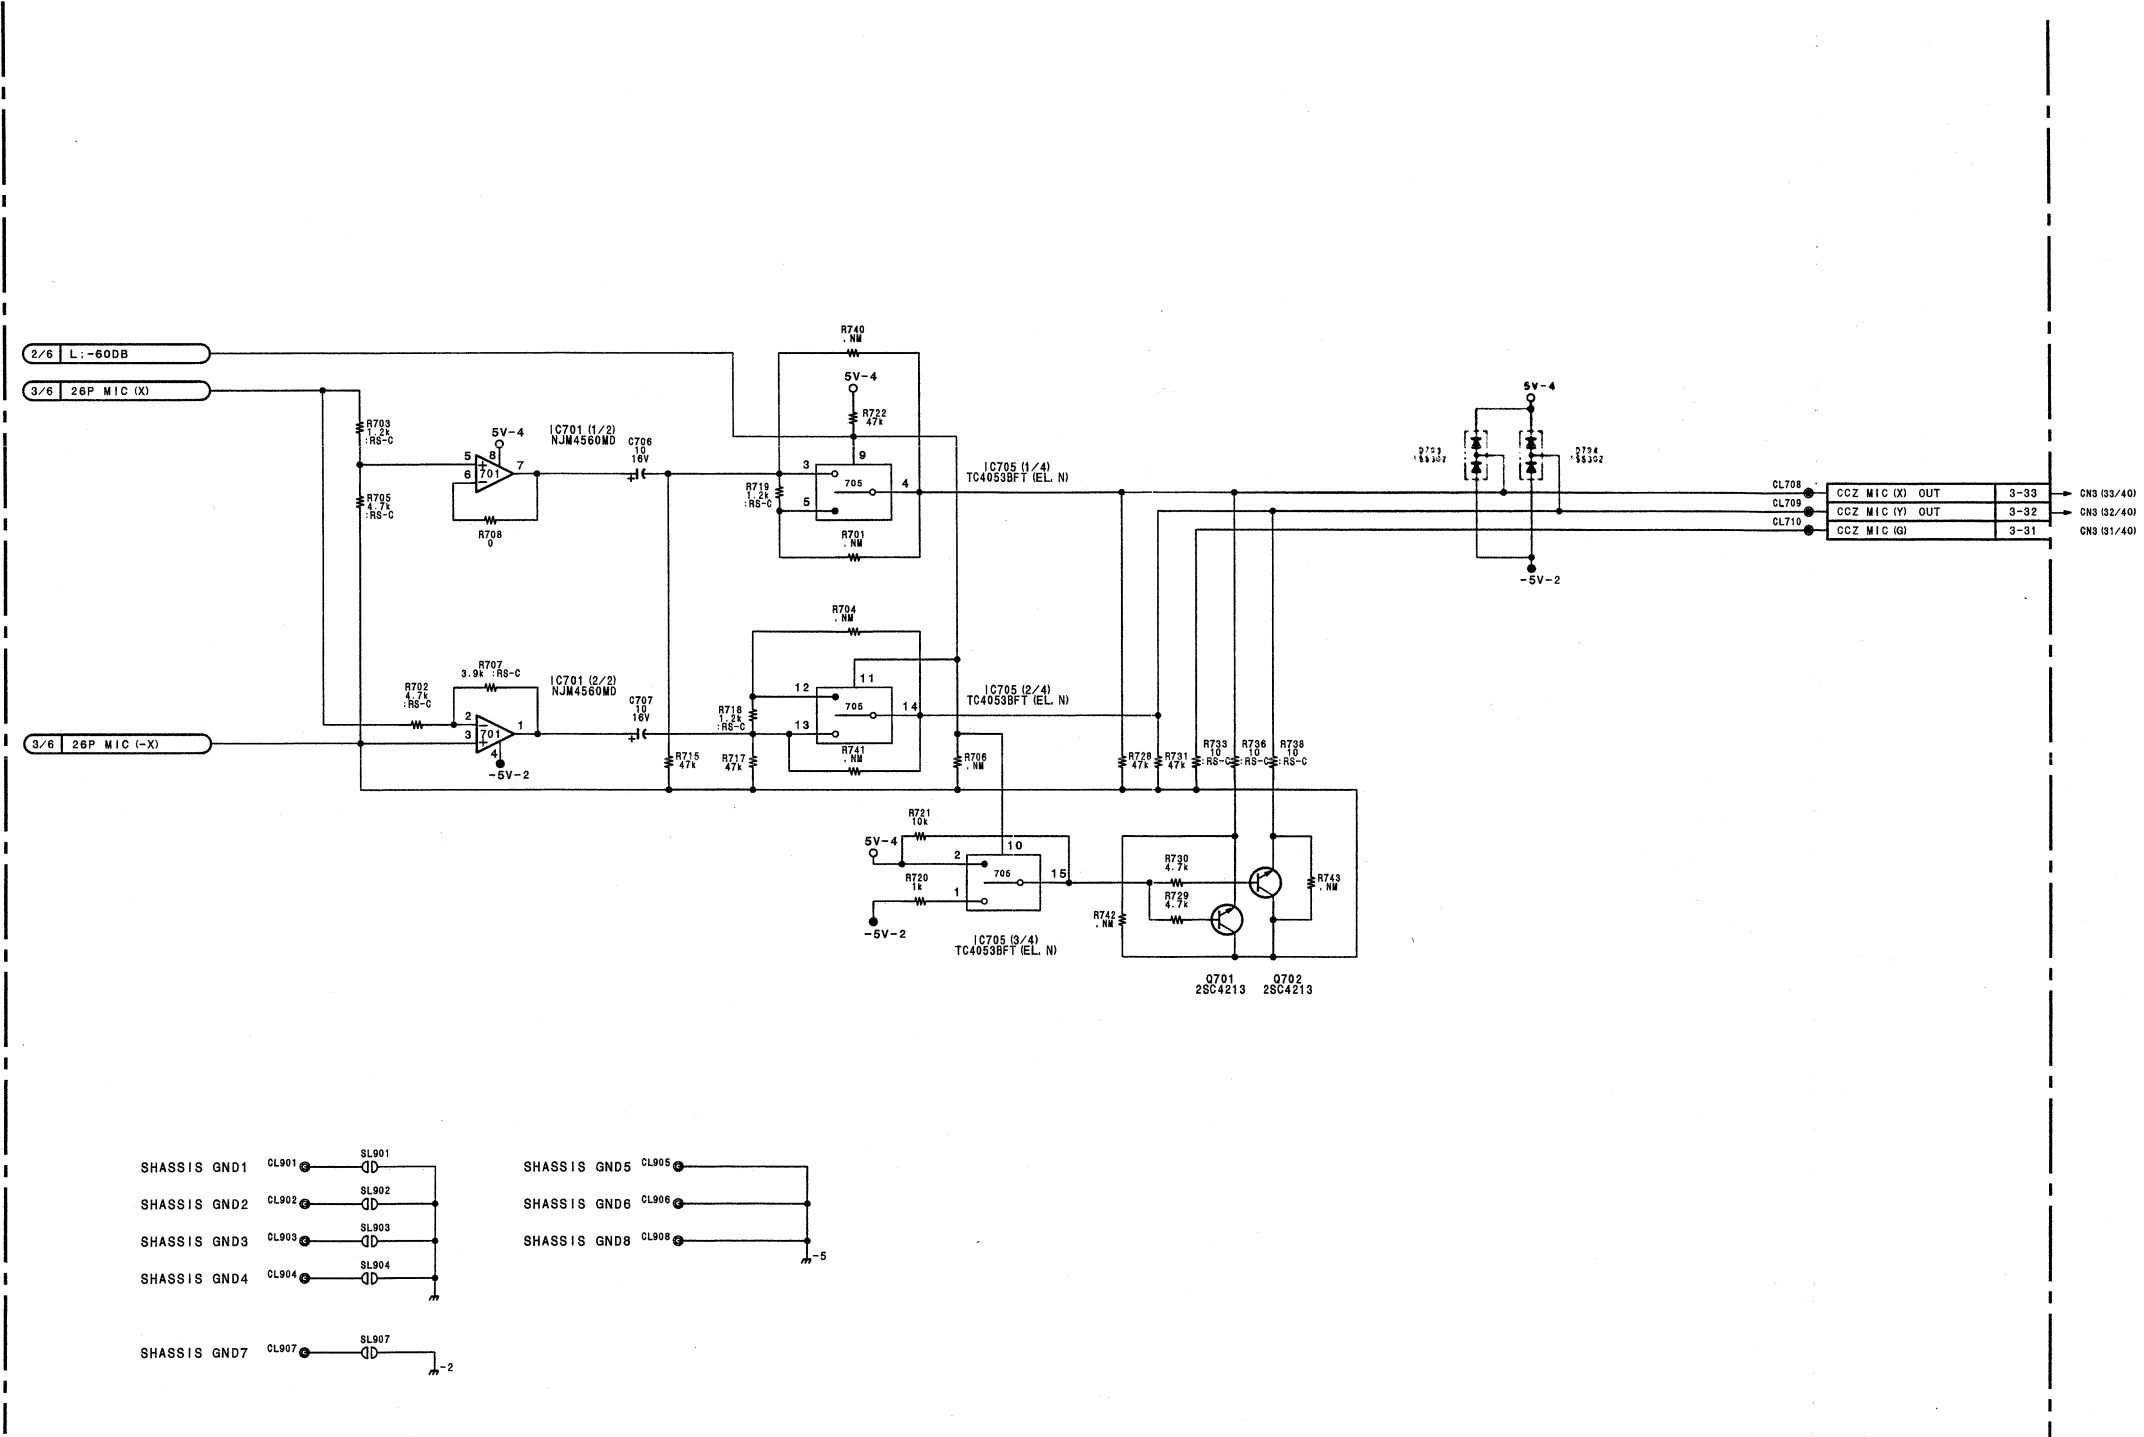

FP-122 (5/6)
BOARD NO. 1-677-372-11
FOR DSR-300A/300AP
B-DSR300A-FP122-11

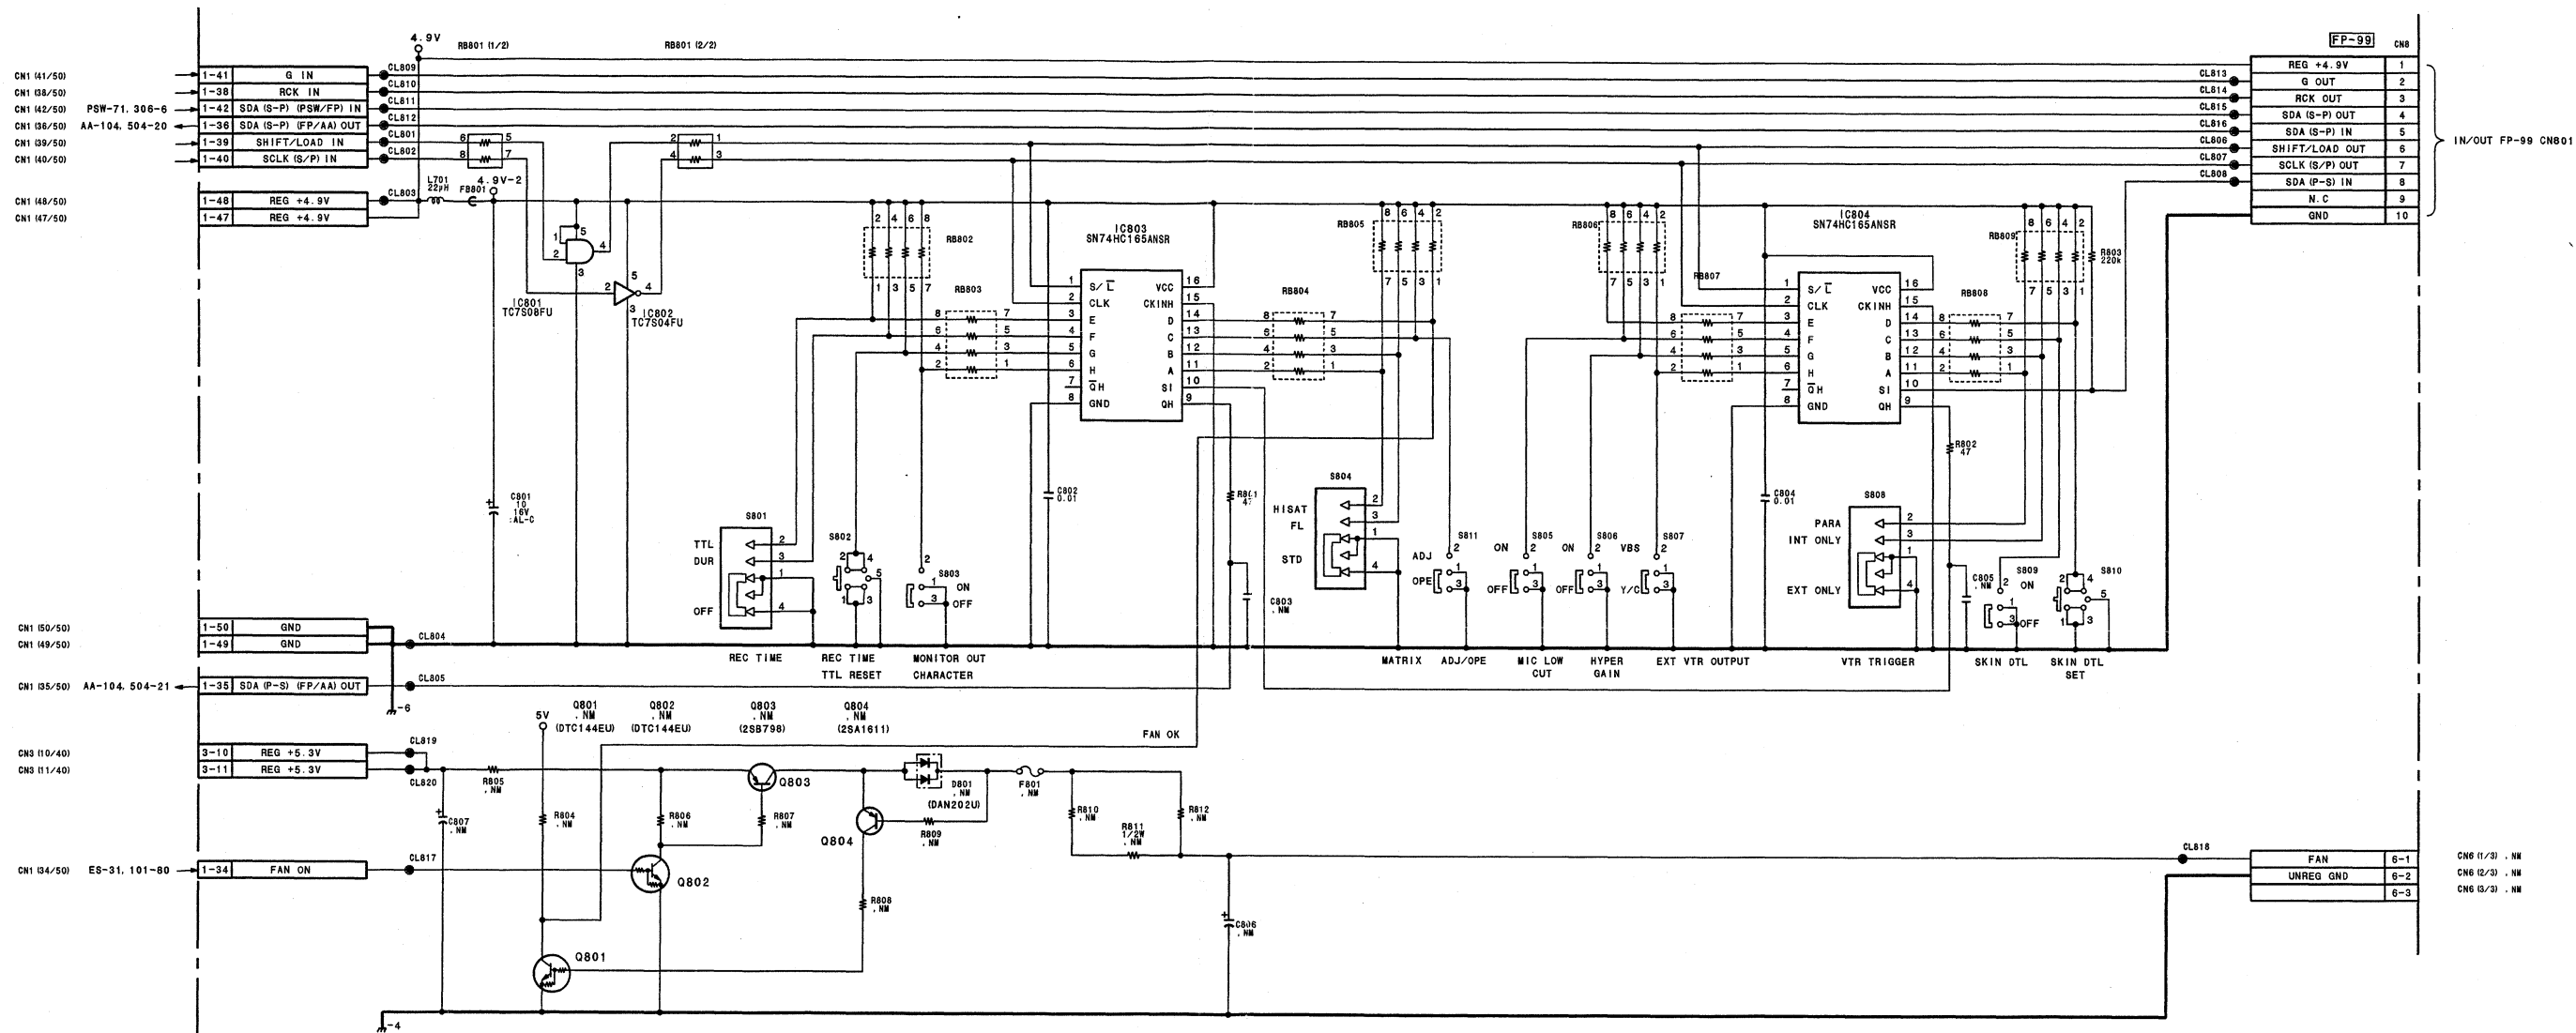


FP-122 (6/6)
BOARD NO. 1-677-372-11
FOR DSR-300A/300AP
B-DSR300A-FP122-11

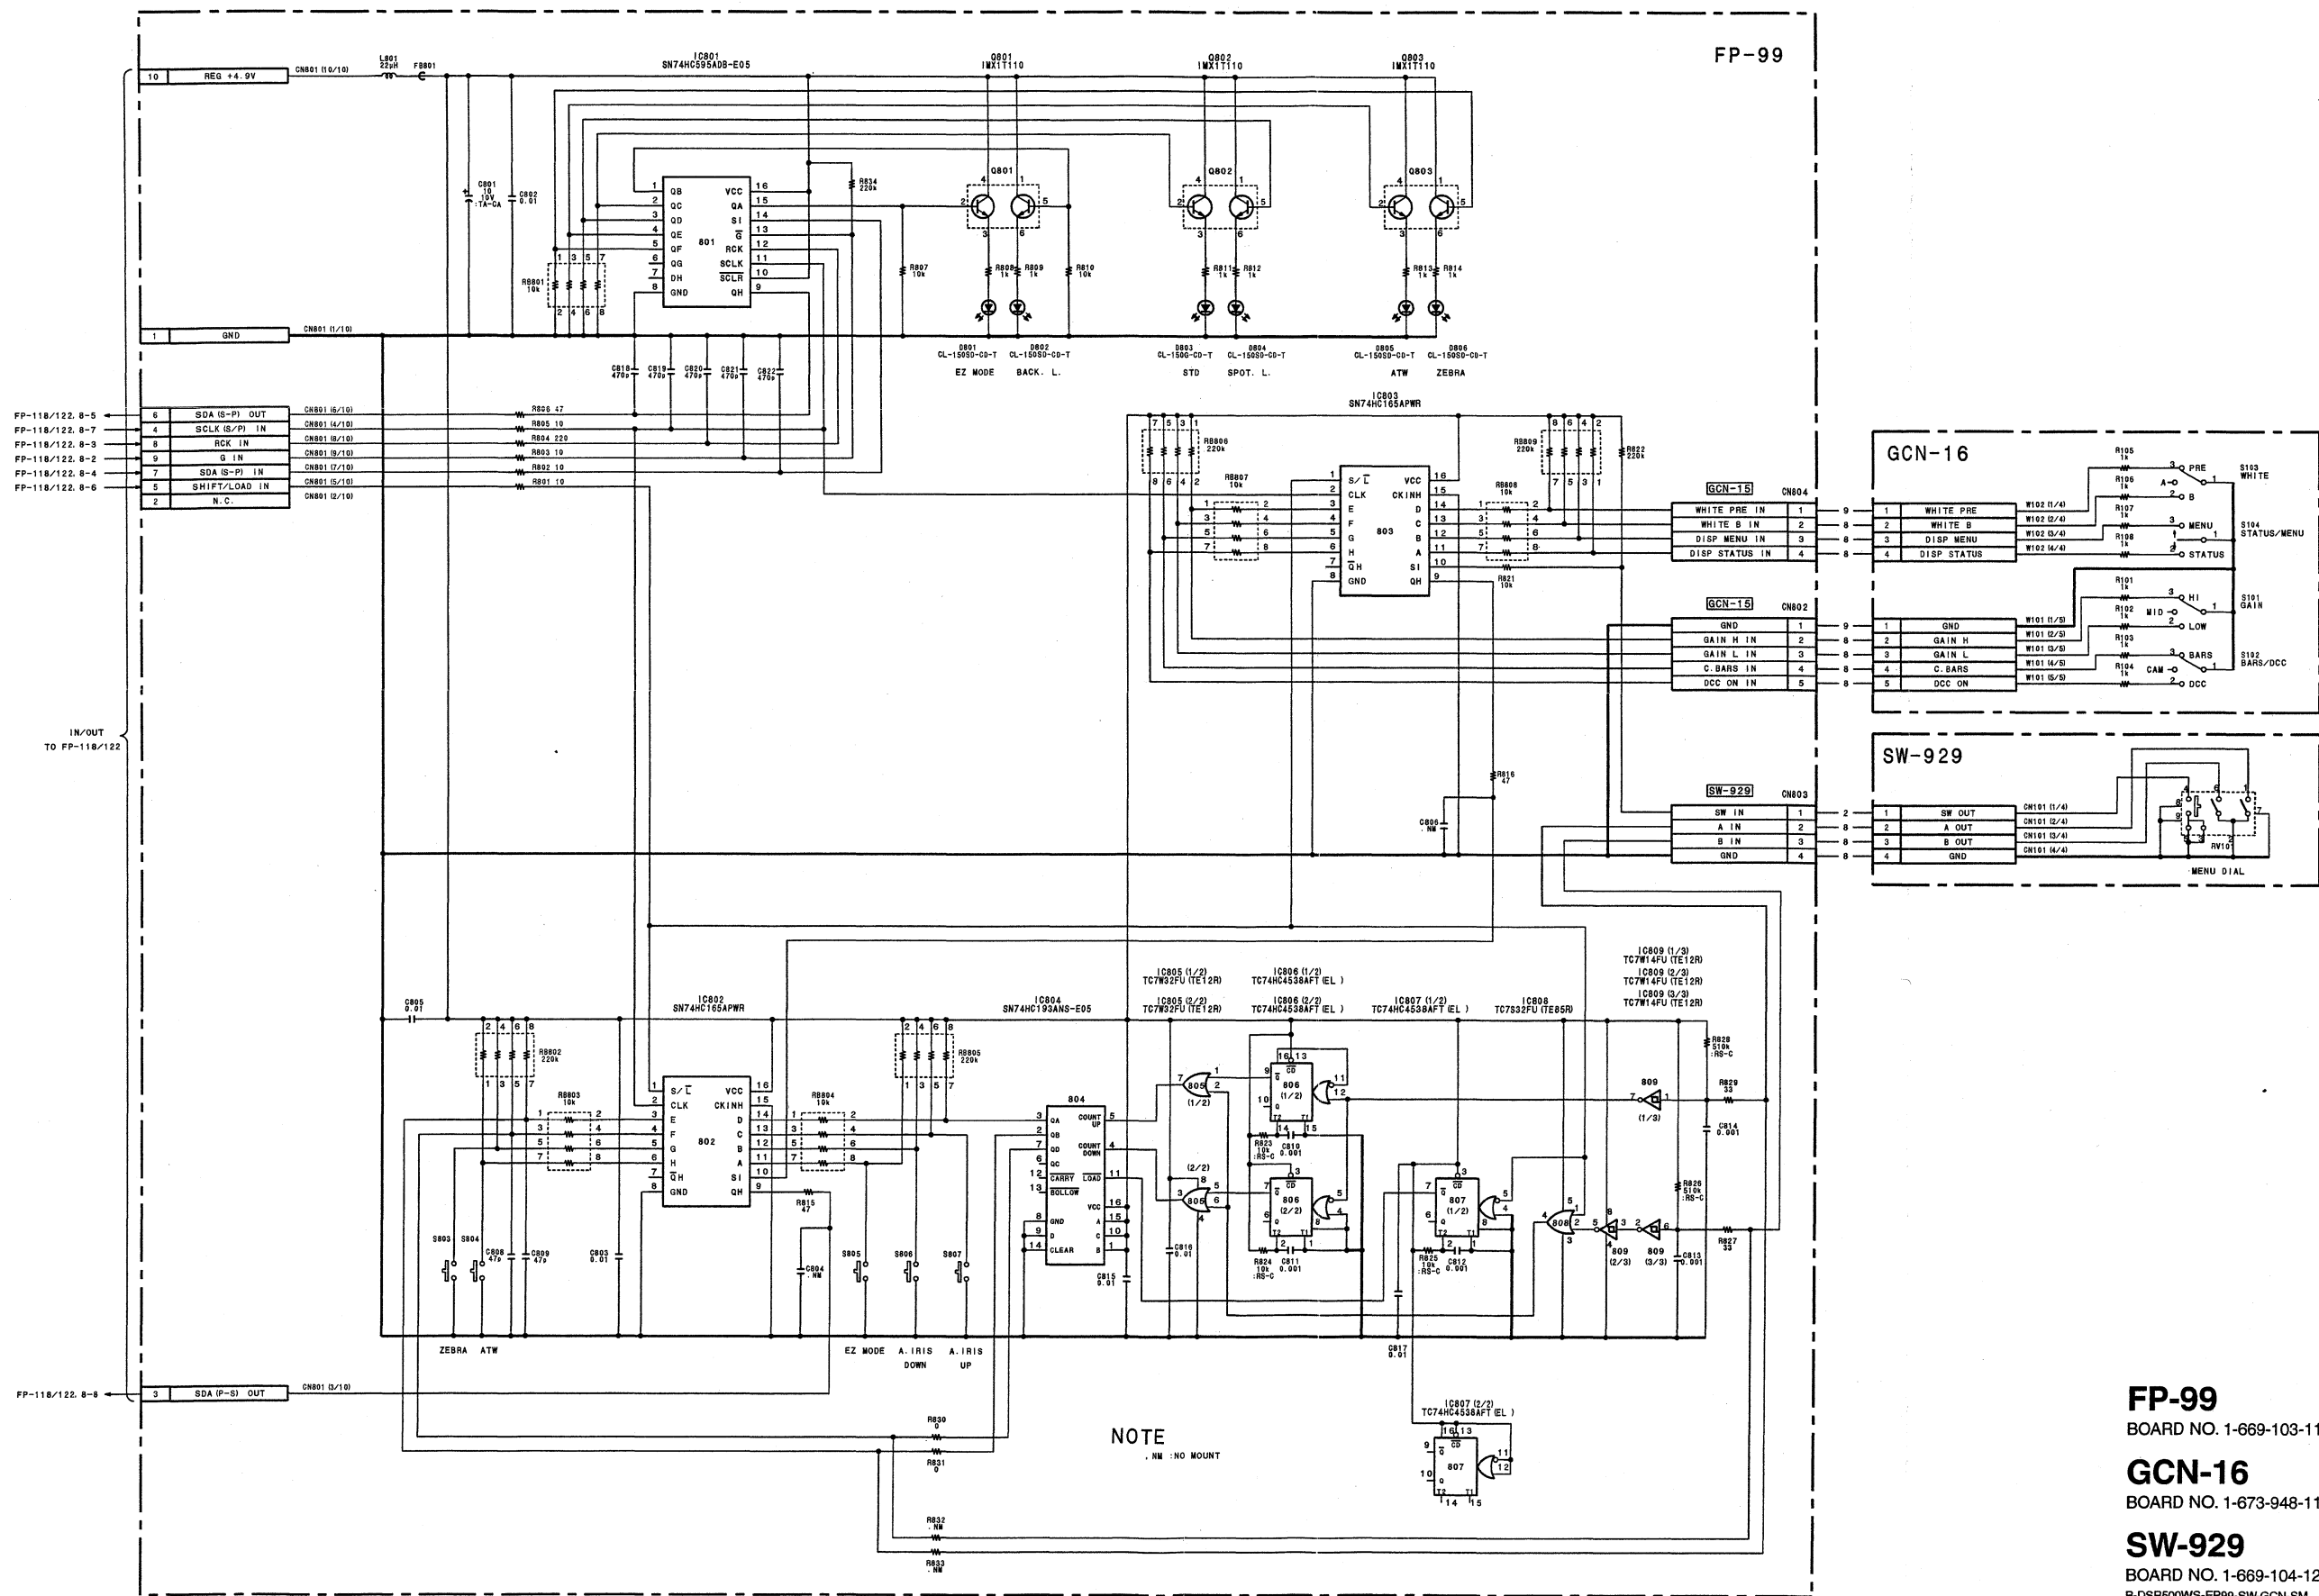



FP-99
BOARD NO. 1-669-103-11, 21


GCN-16
BOARD NO. 1-673-948-11, 21


SW-929
BOARD NO. 1-669-104-12, 21
B-DSR500WS-FP99-SW-GCN-SM

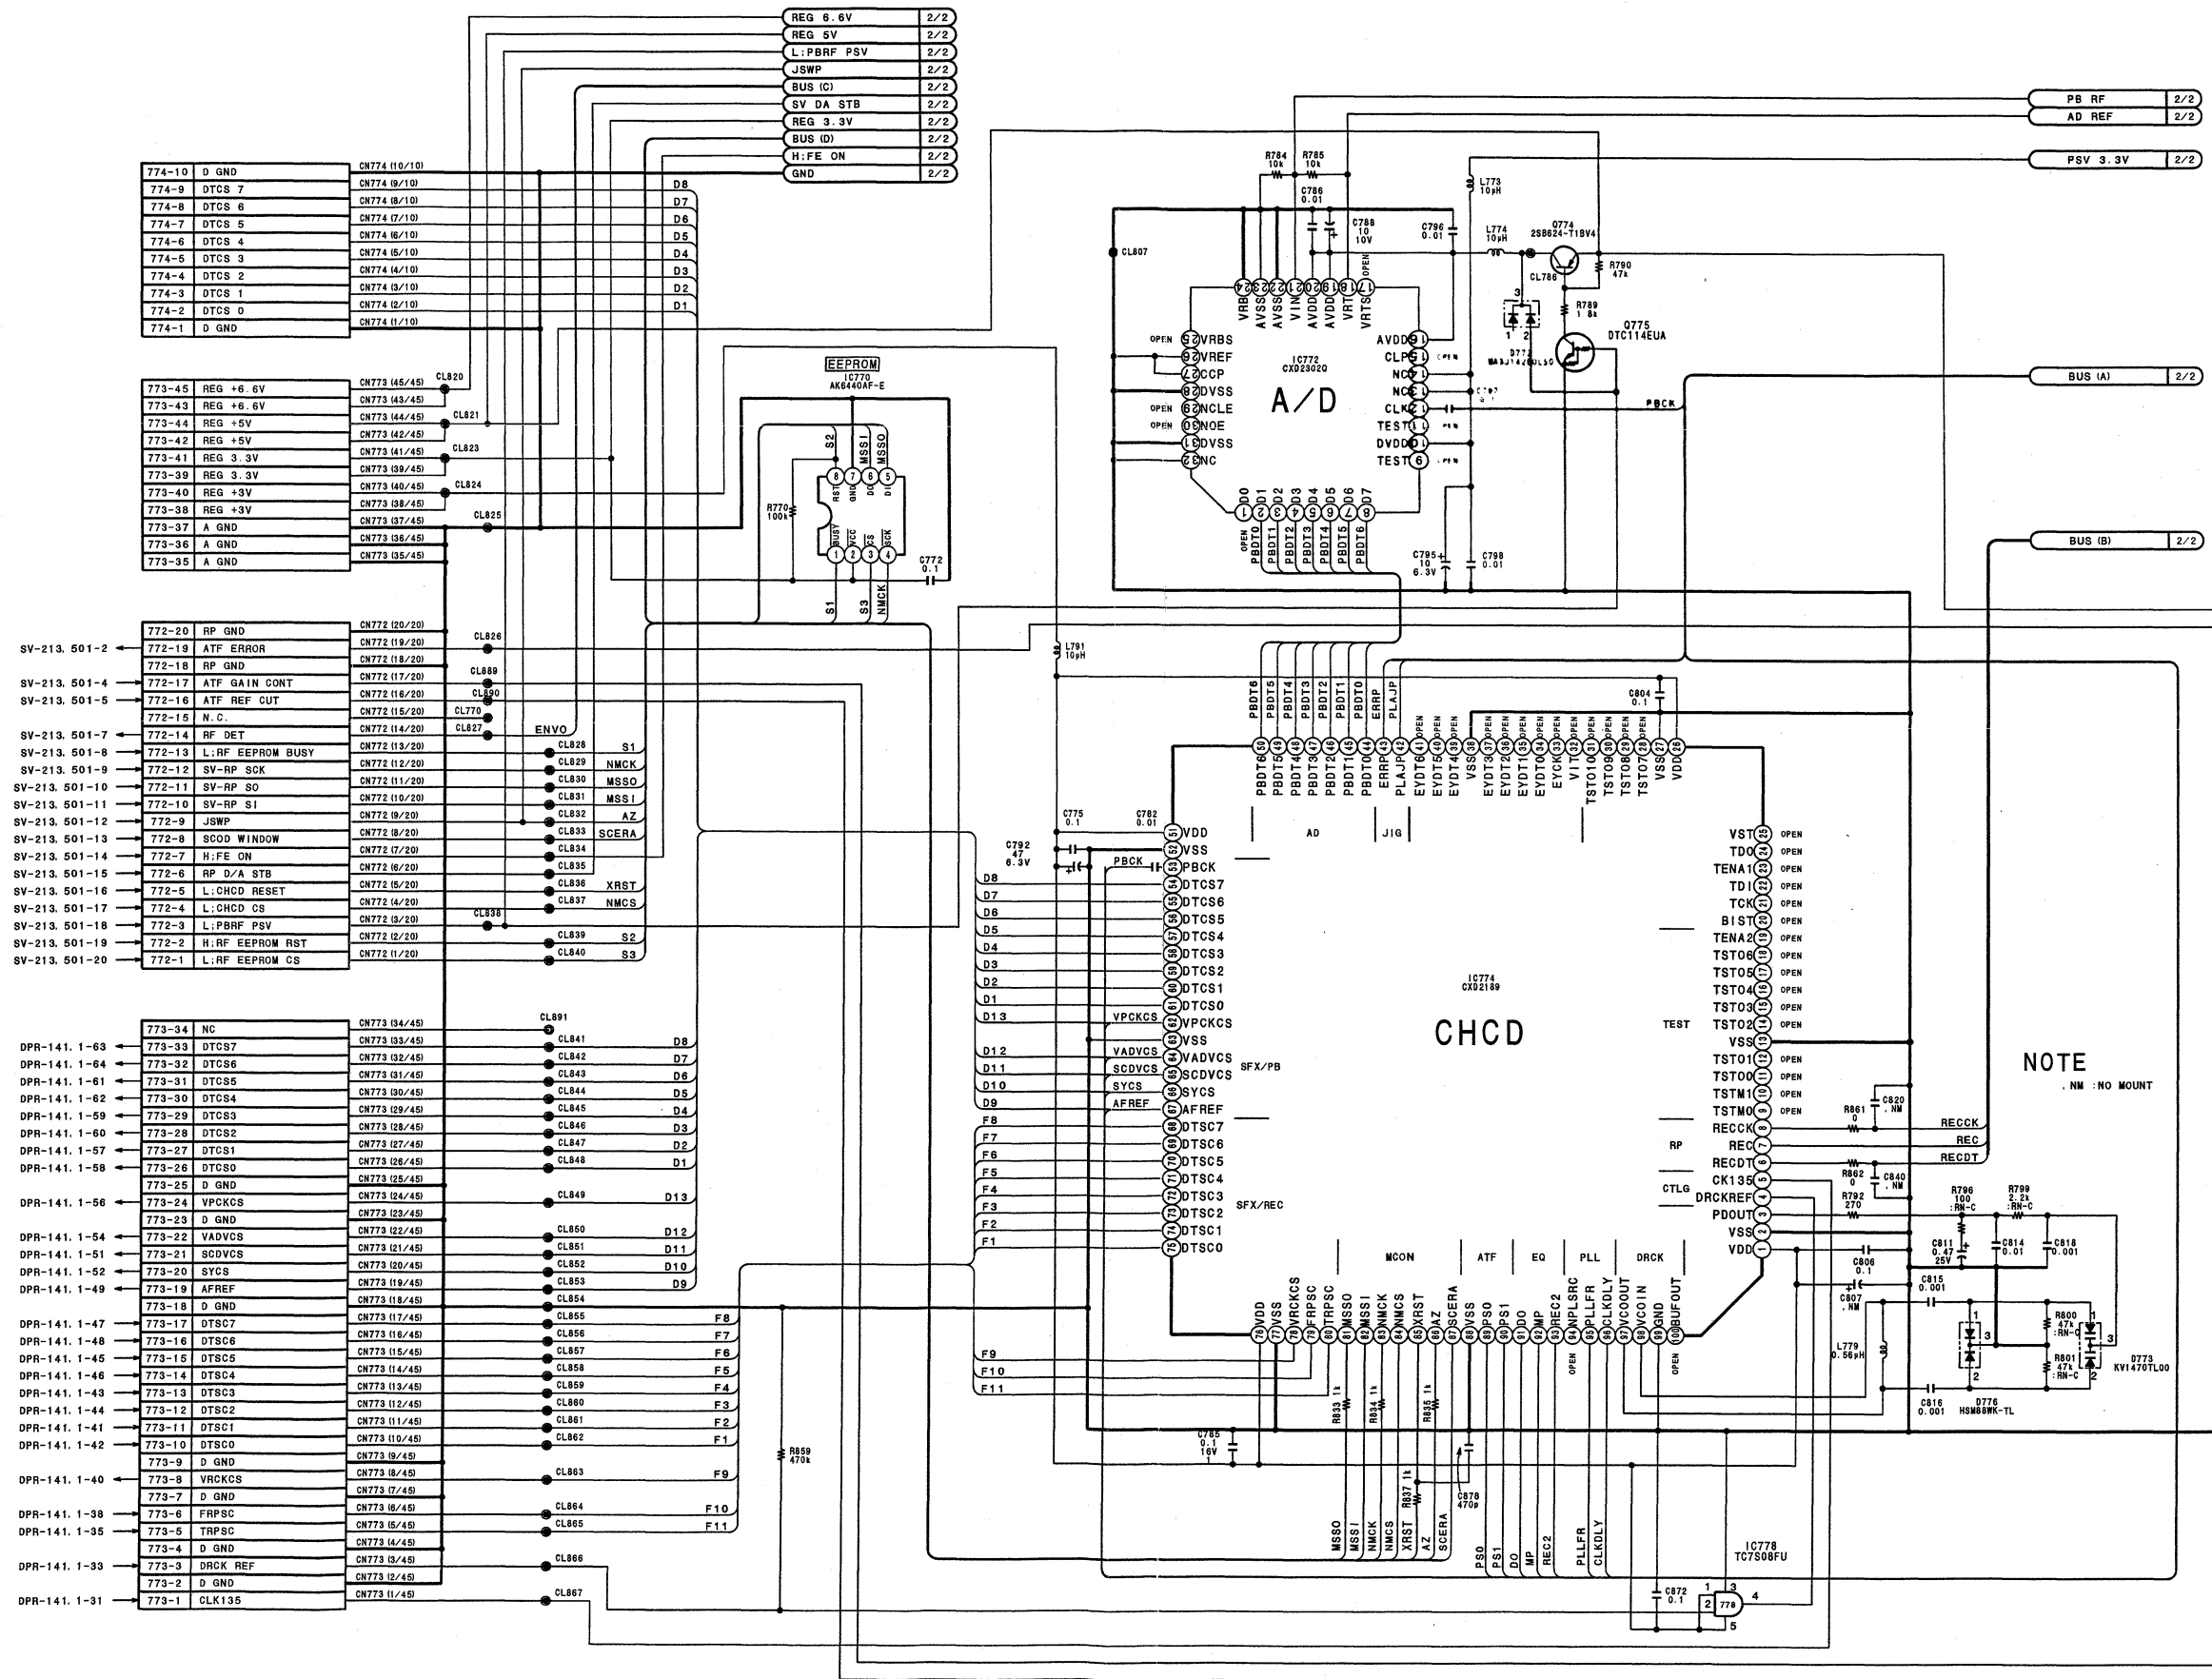


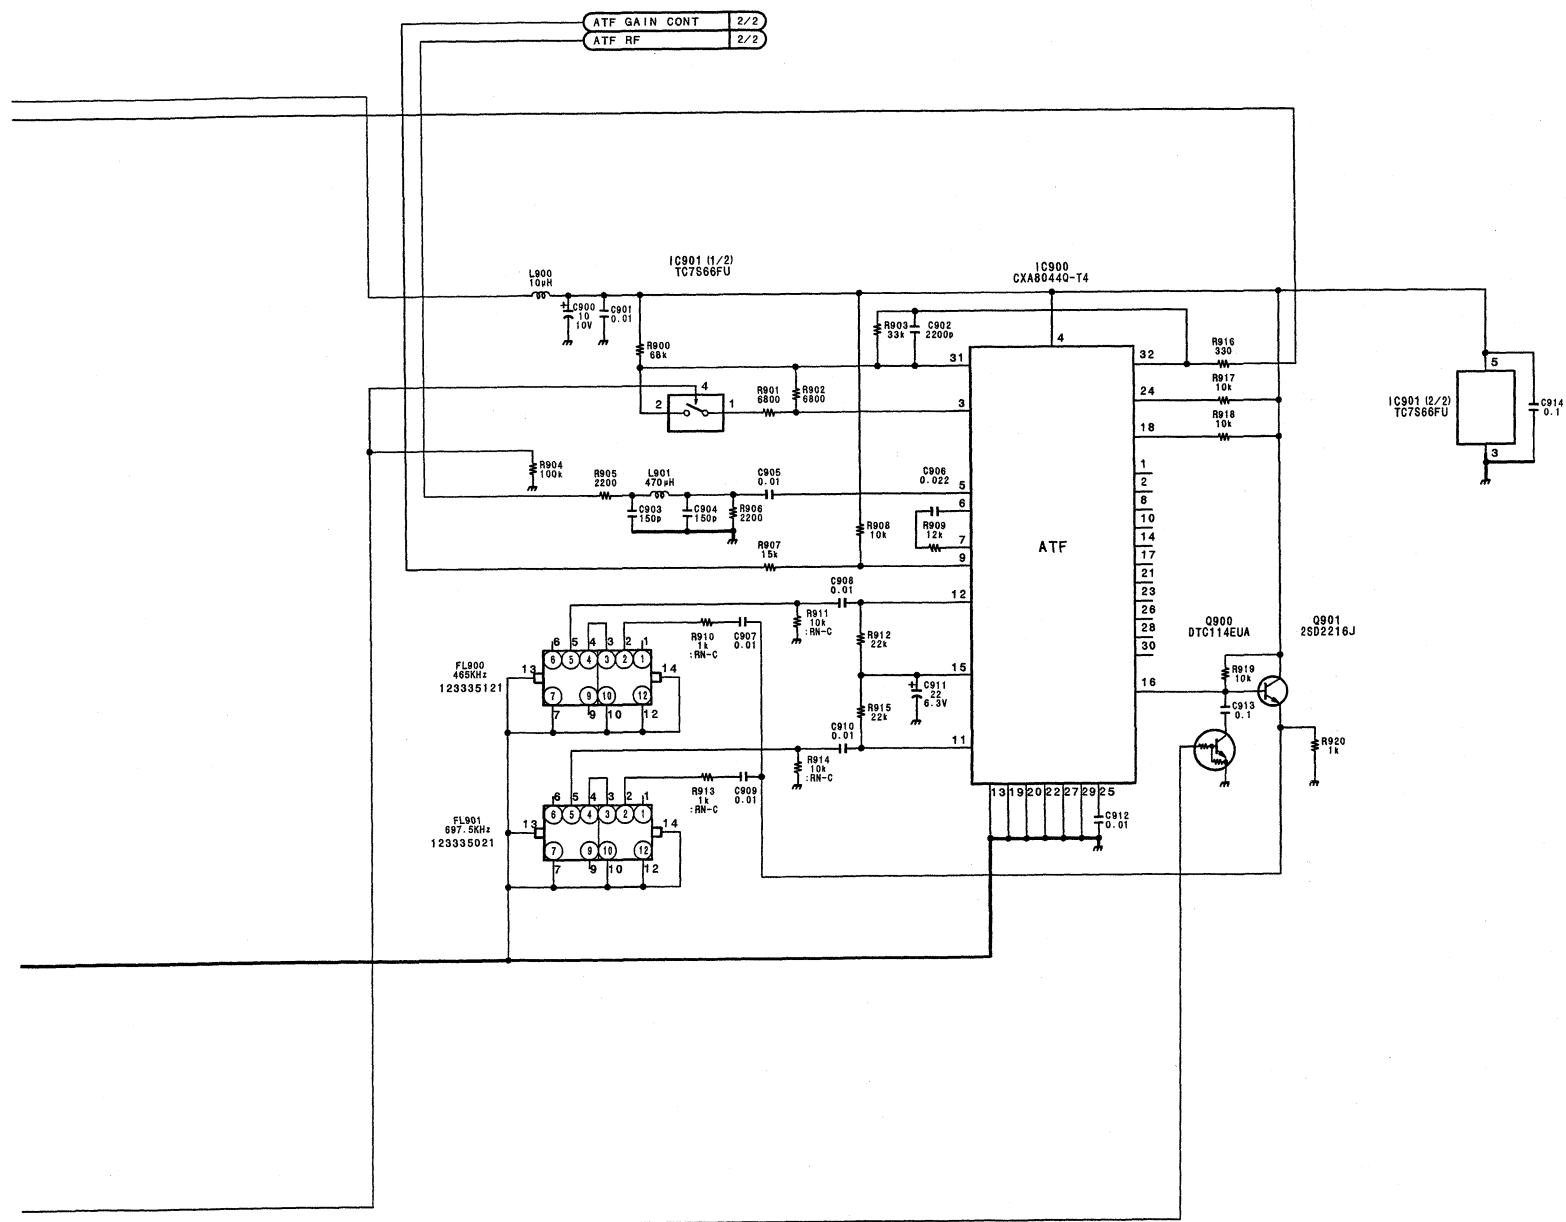





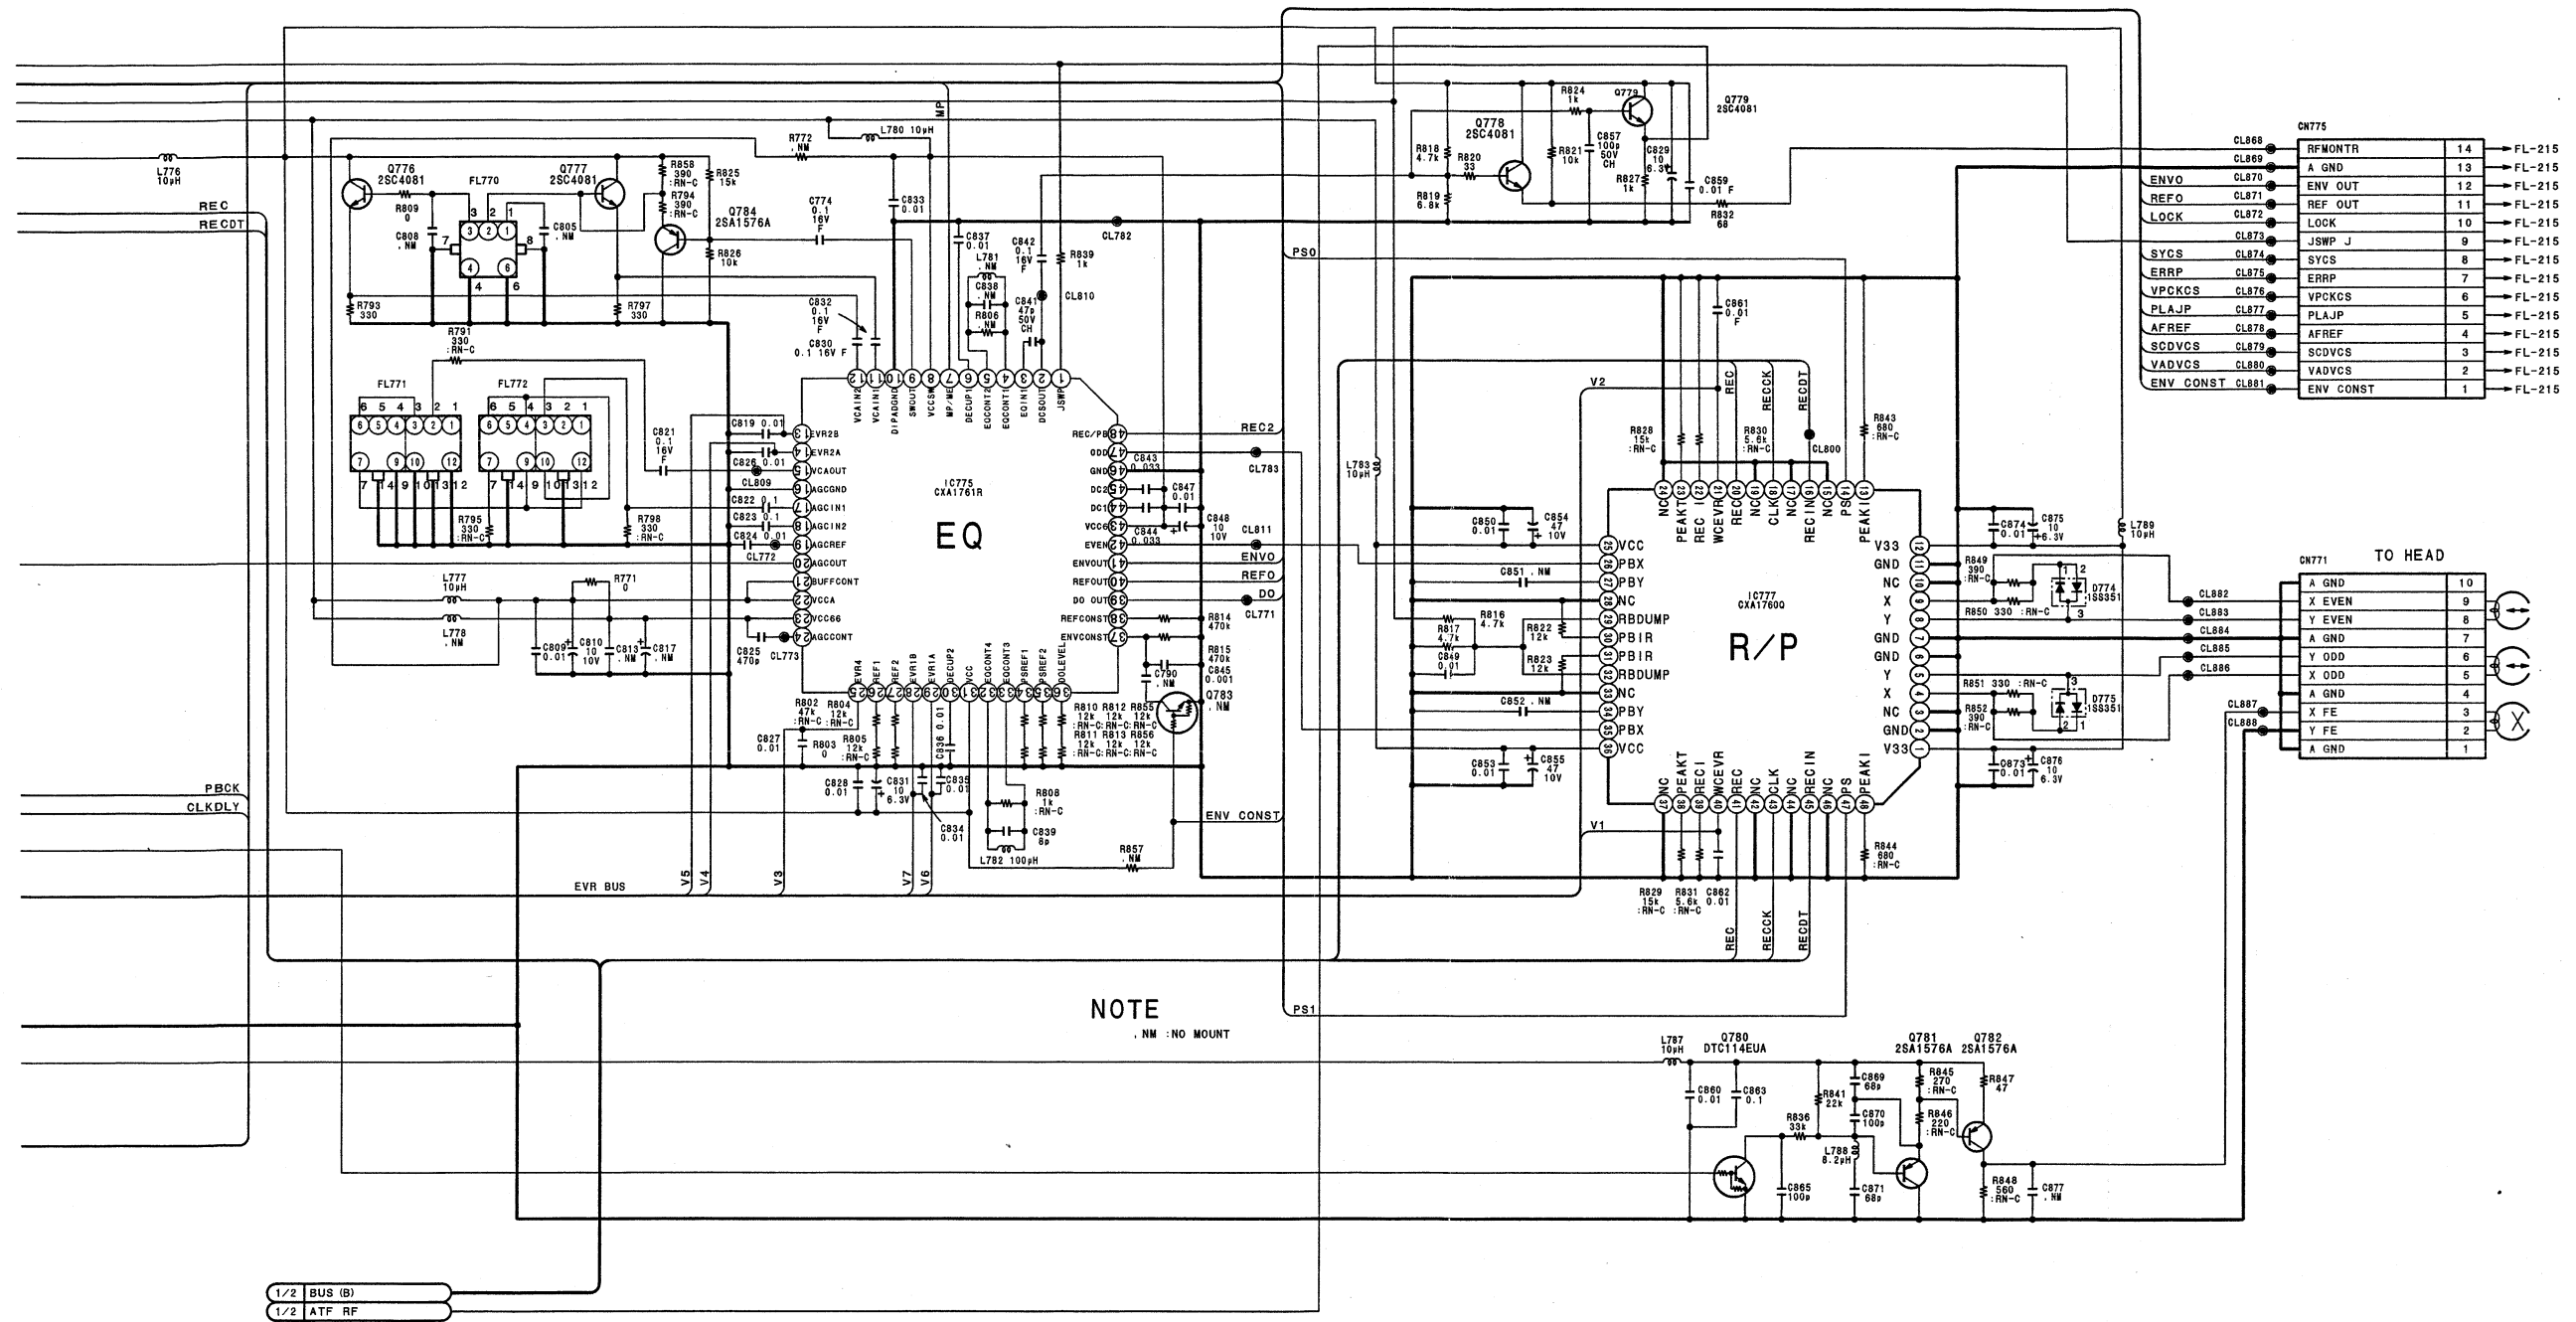


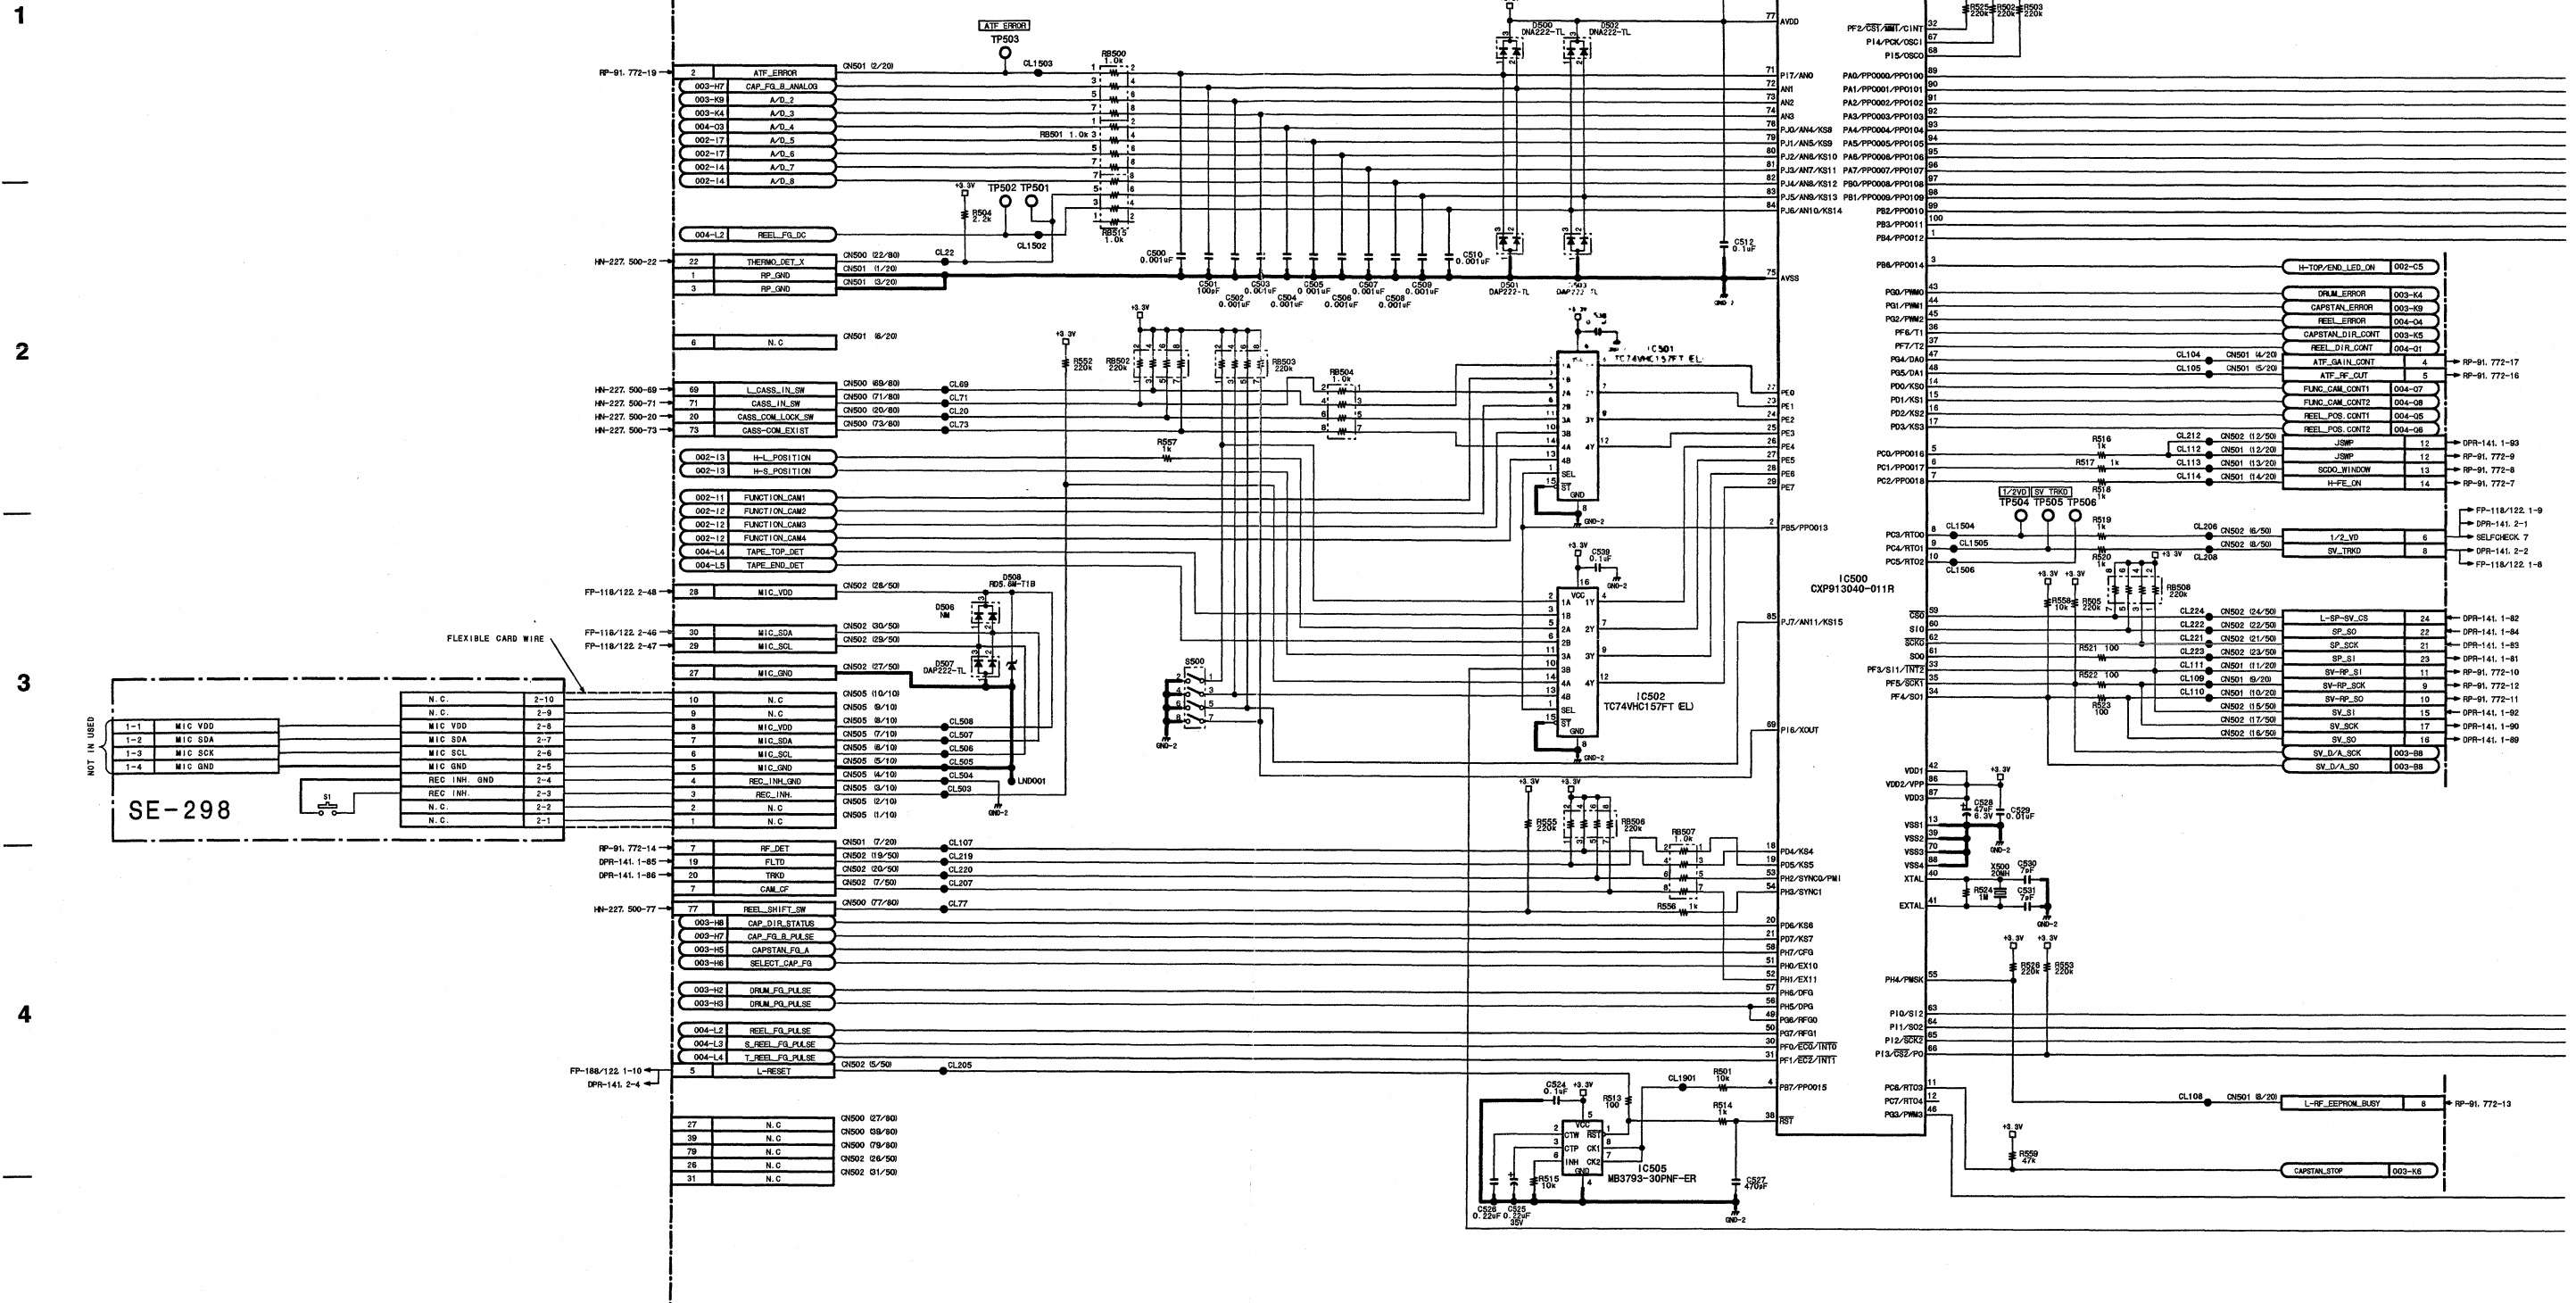

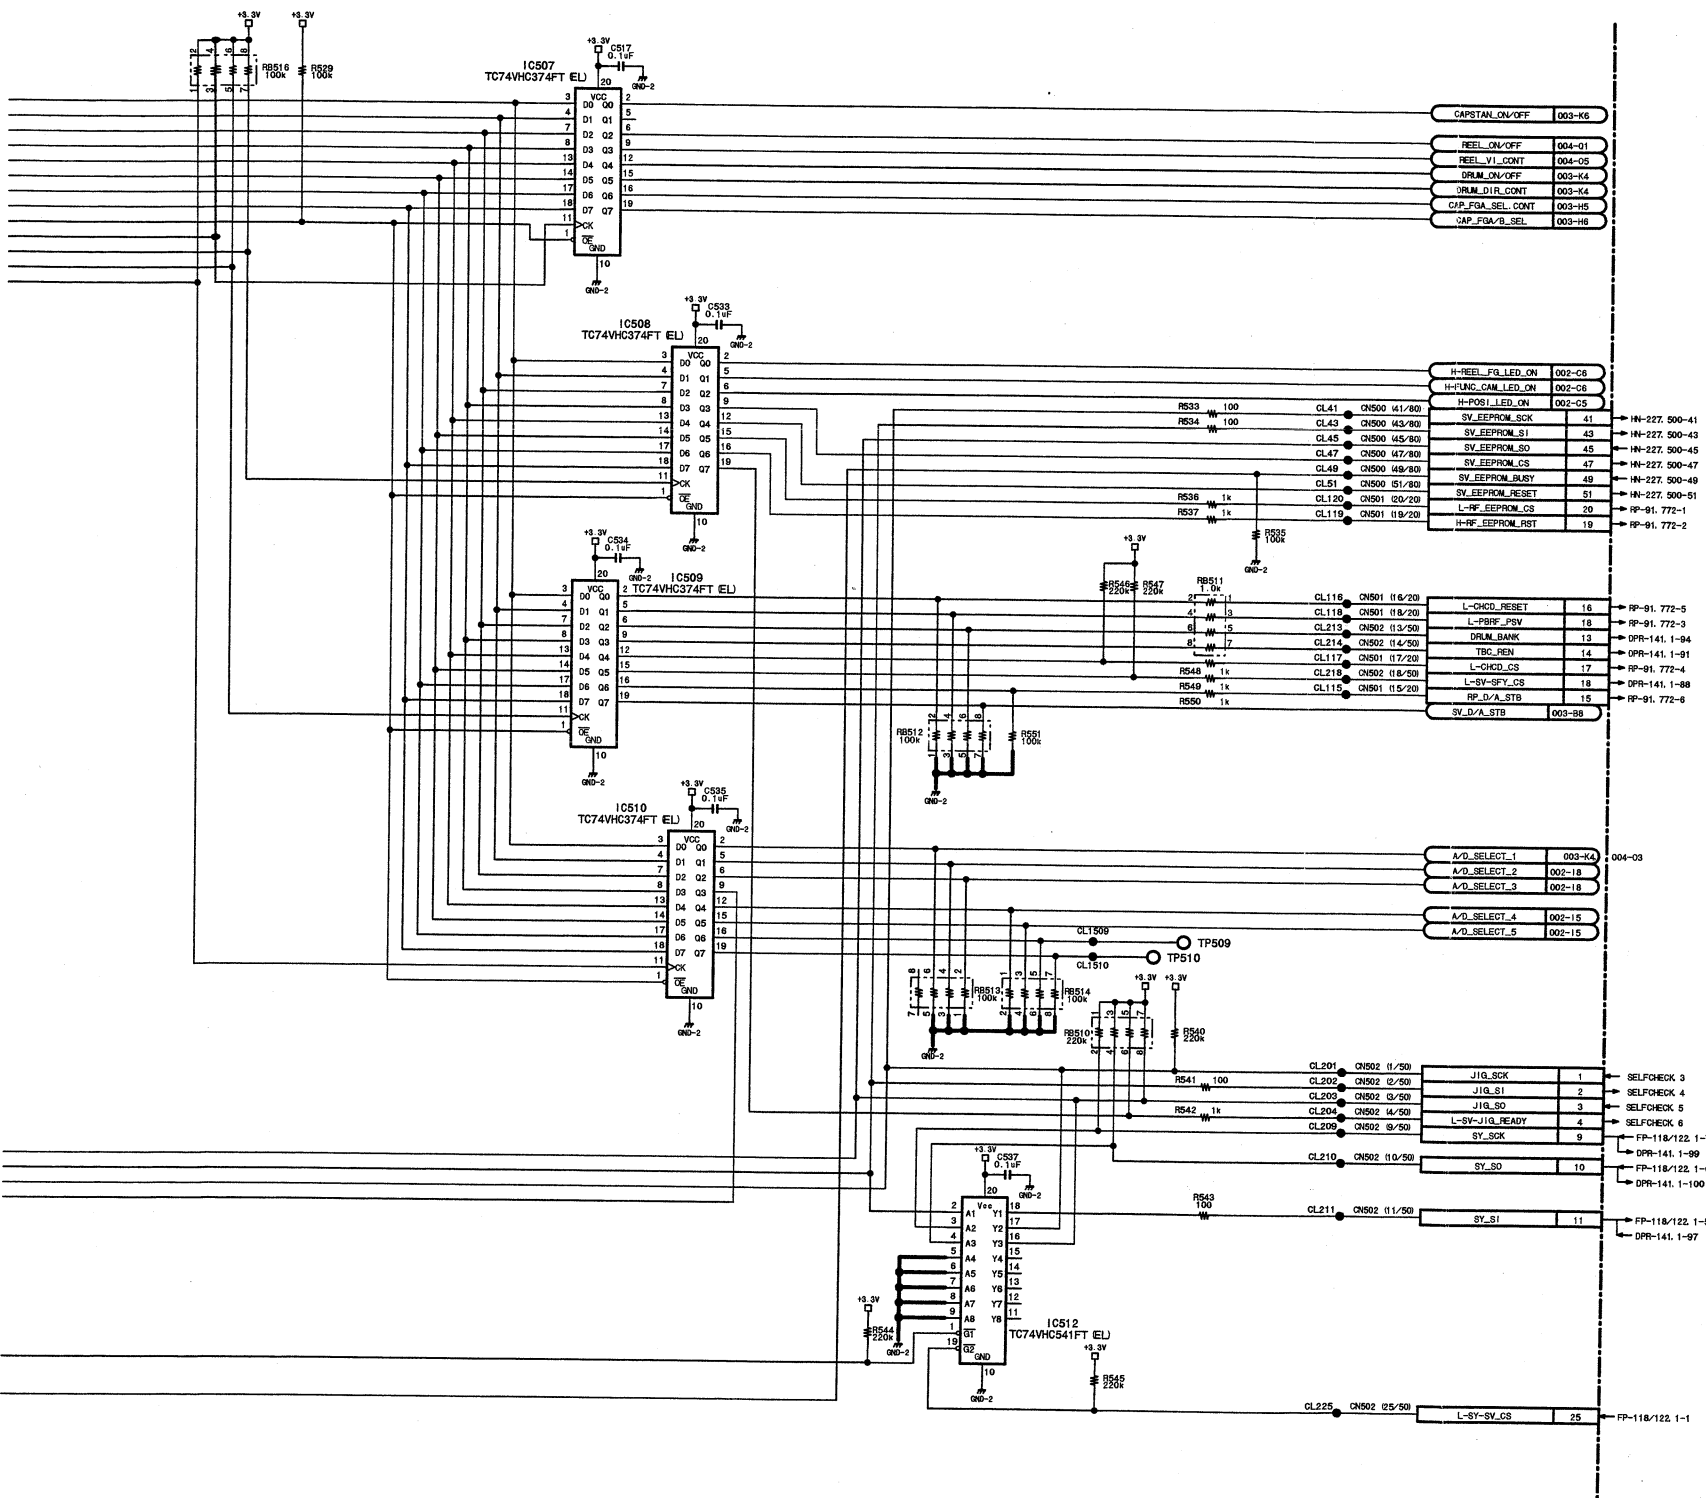


SE-298
BOARD NO. 1-662-986-11
SV-213 (1/4)
BOARD NO. 1-673-983-12
DSR-500WSL_SV-213_001

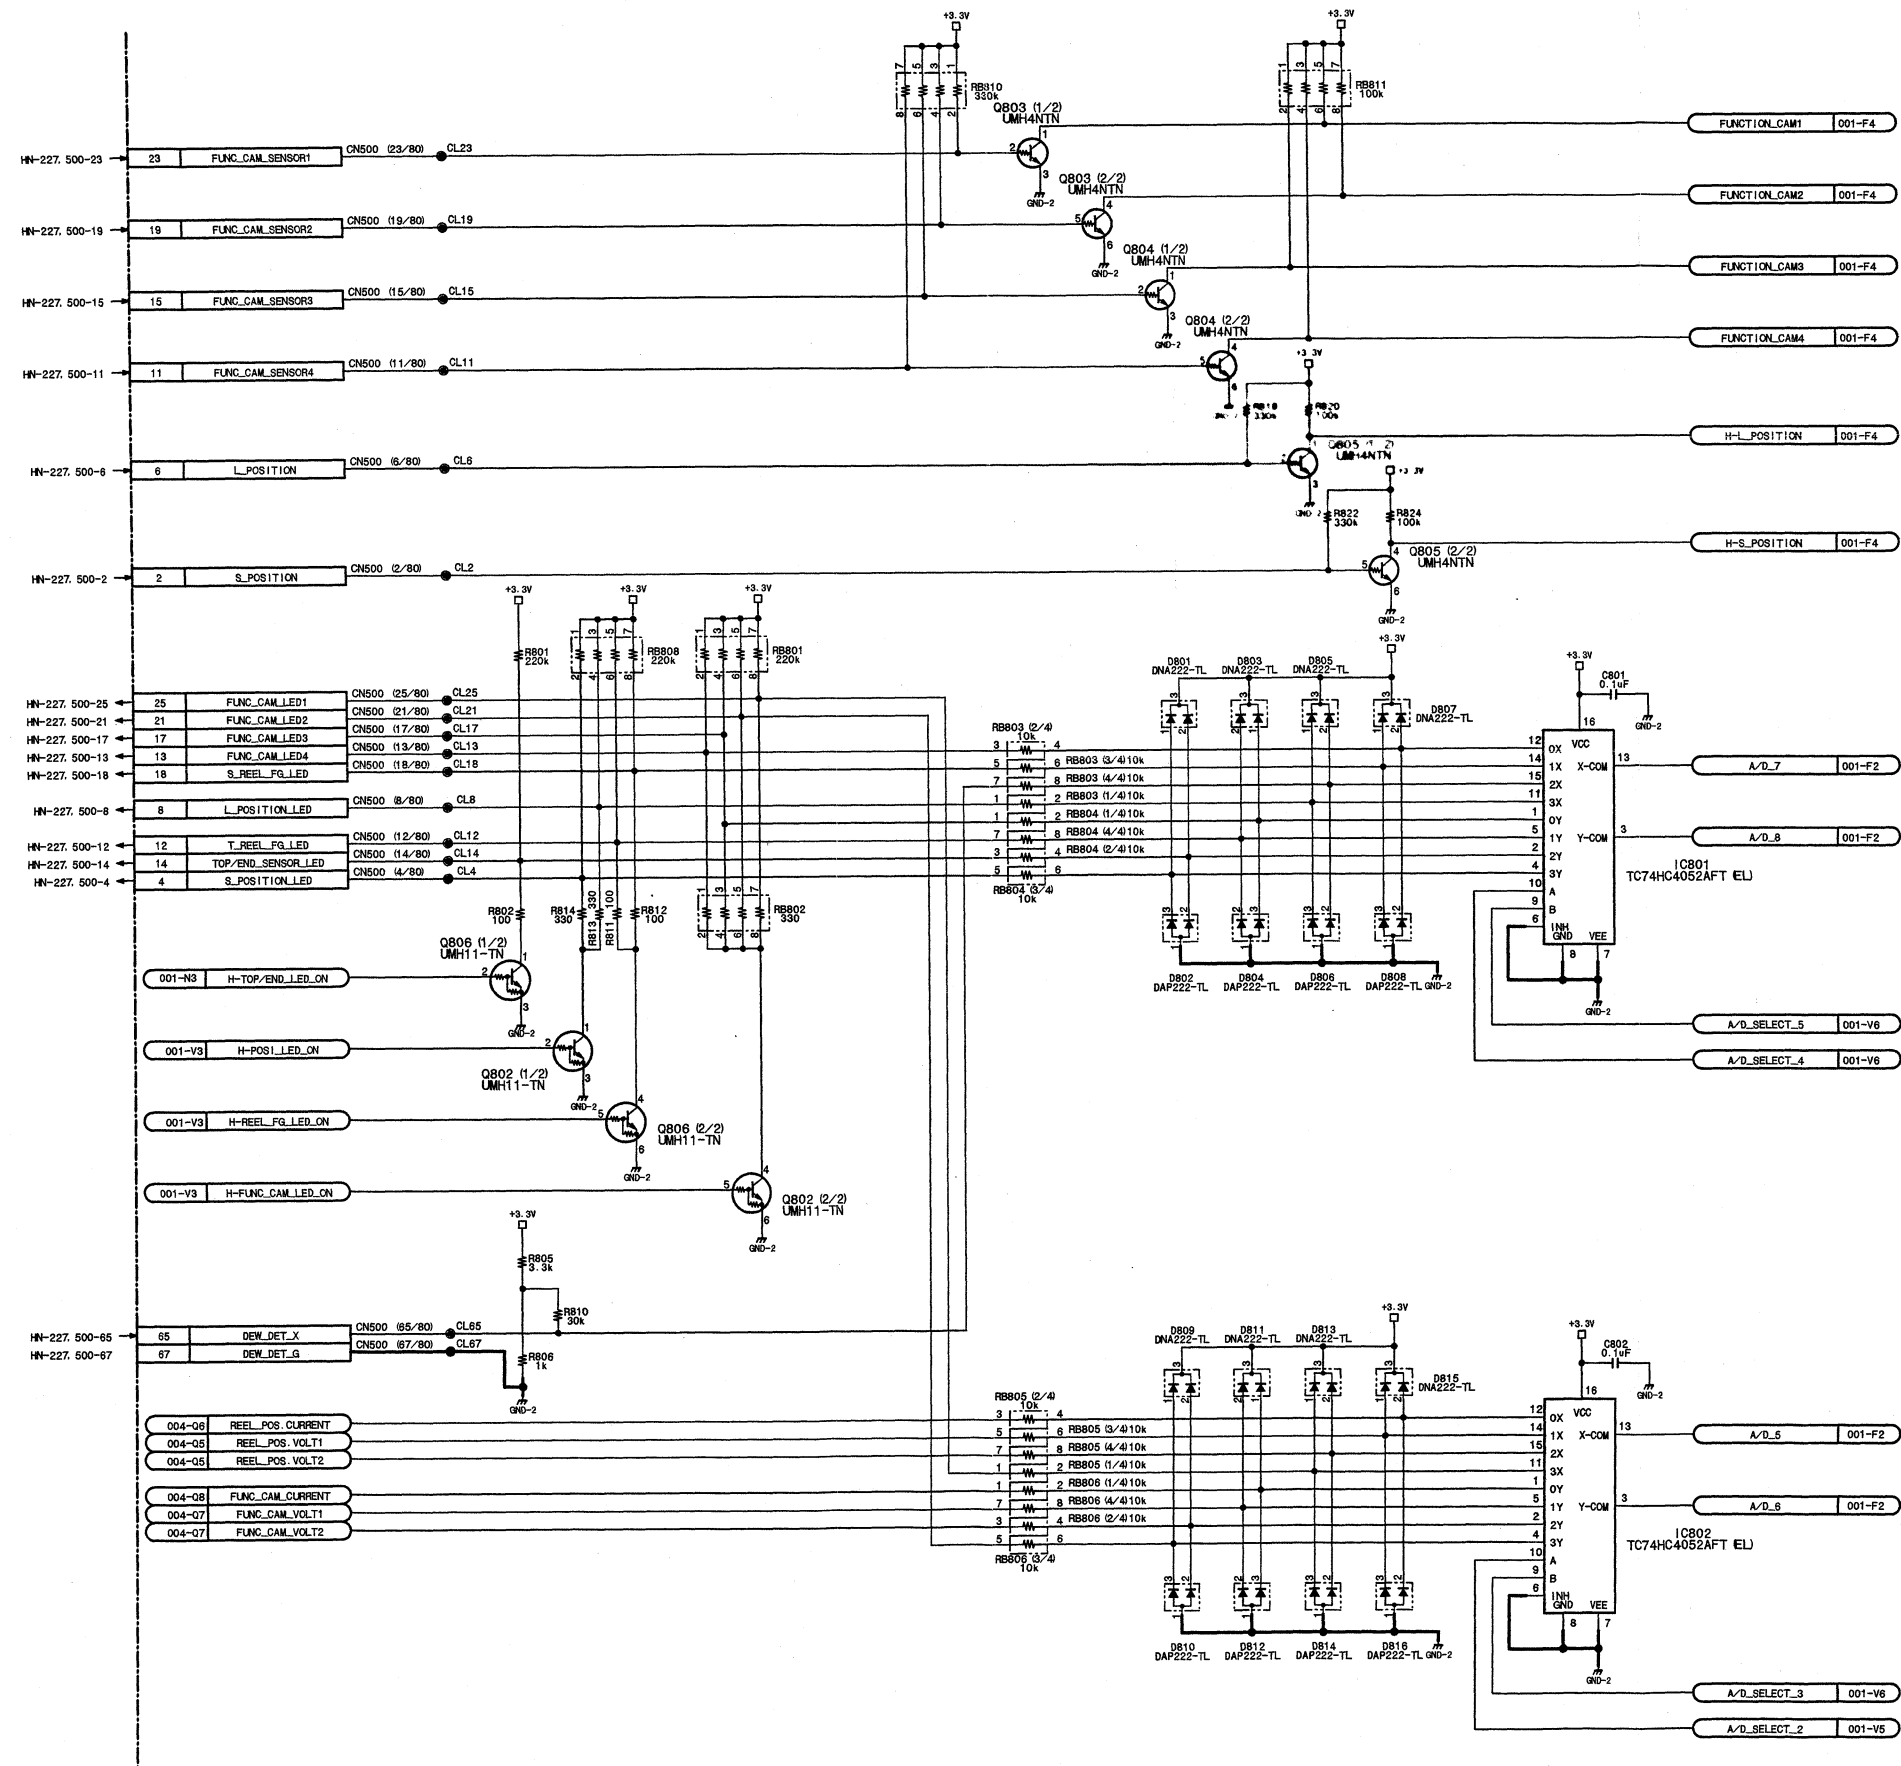


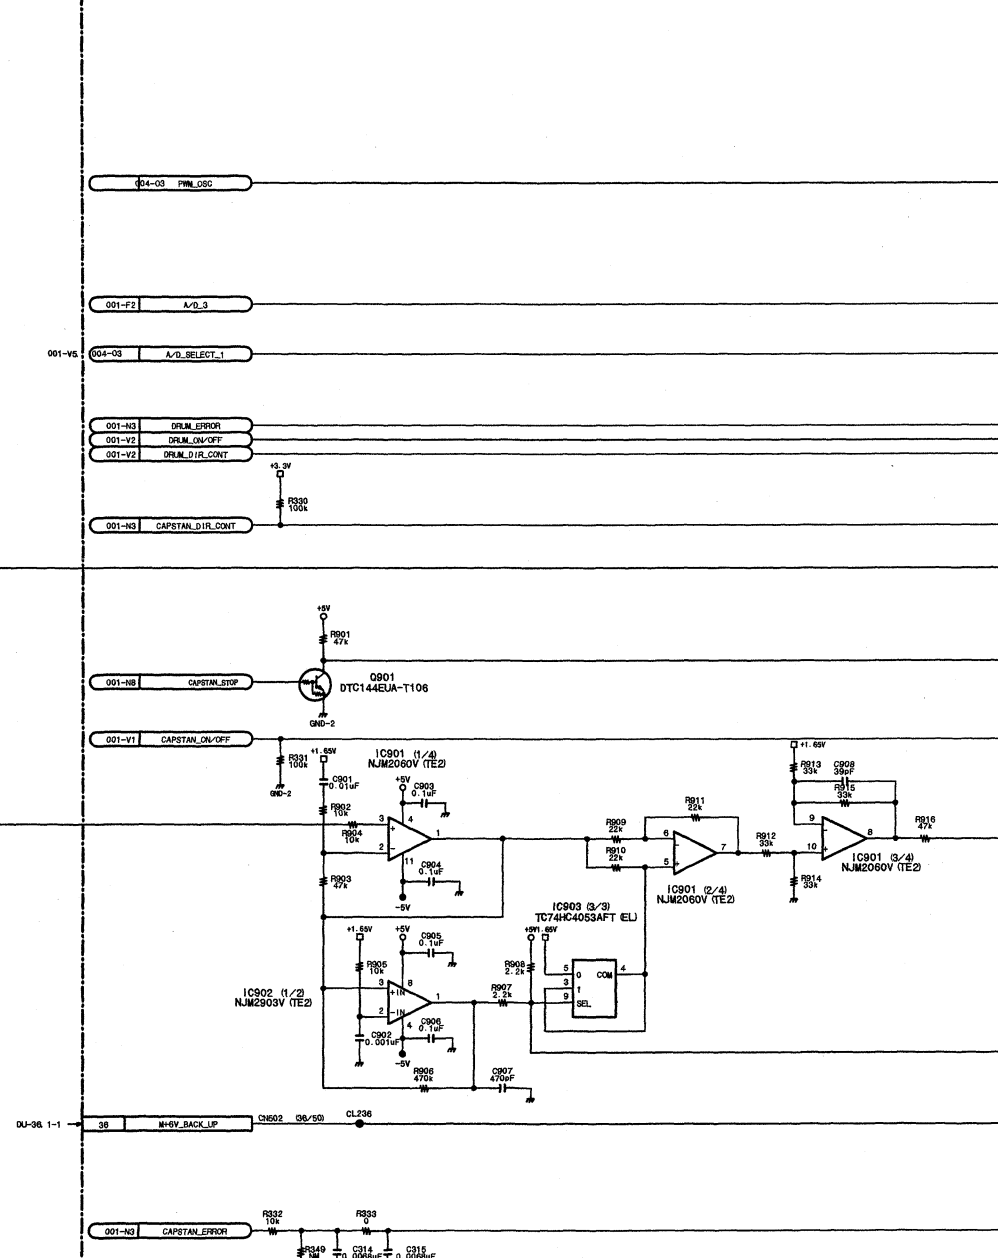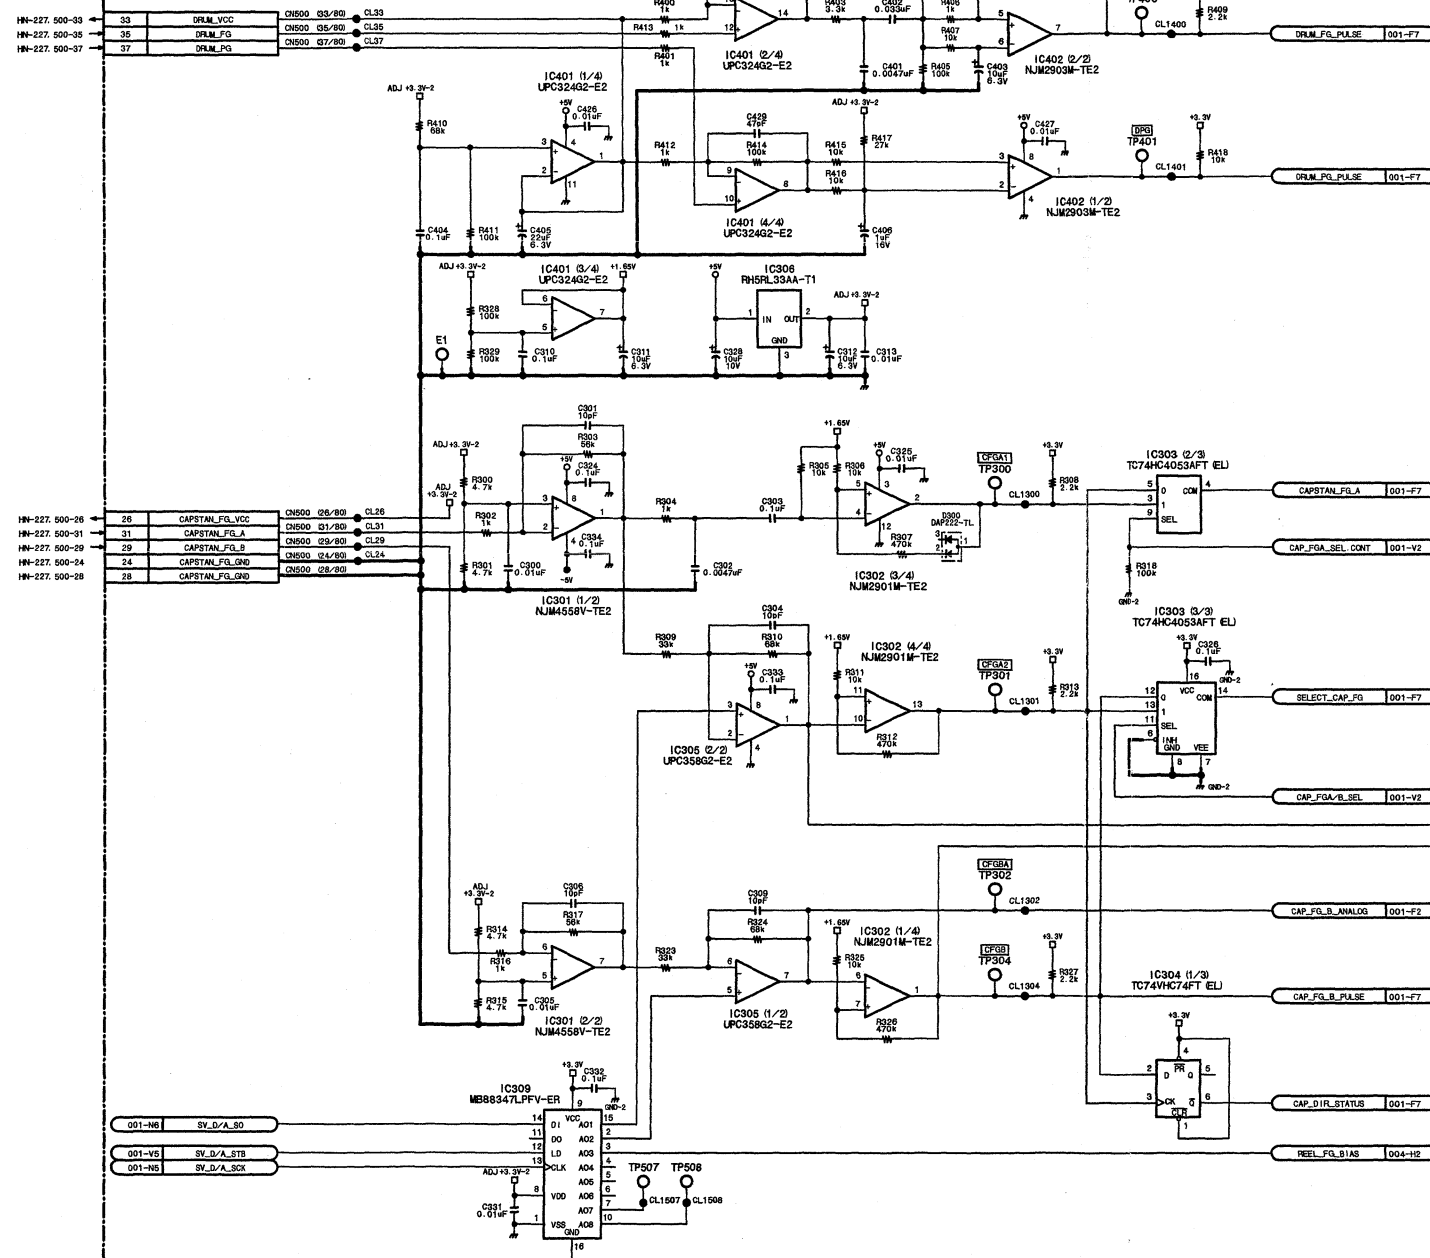

SV-213 (3/4)

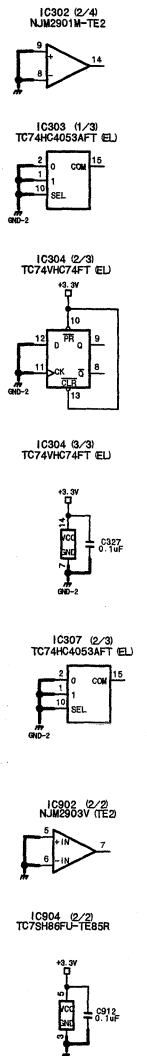


SV-213 (3/4)
BOARD NO. 1-673-983-12
DSR-500WSL_SV-213_001

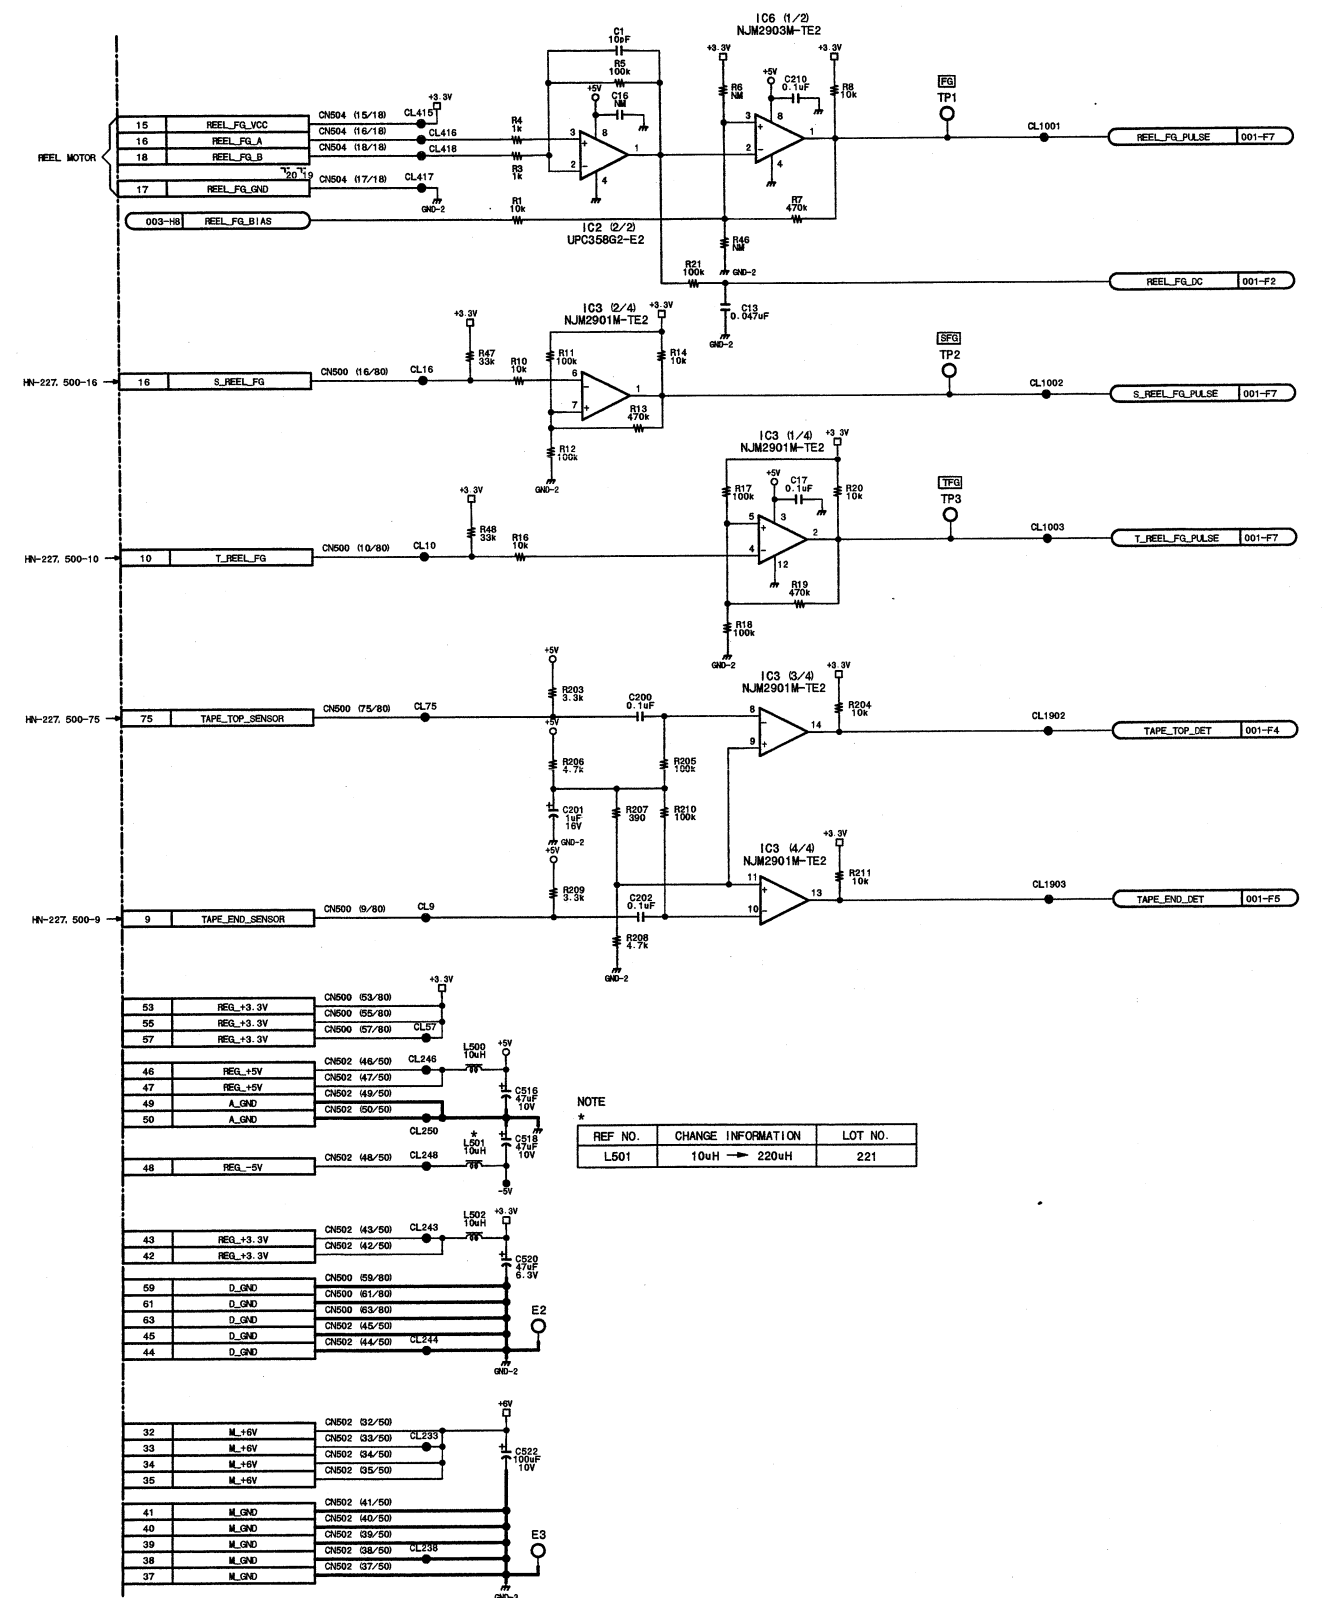



(M

BOARD NO. 1-673-983-12
DSR-500WSL_SV-213_001

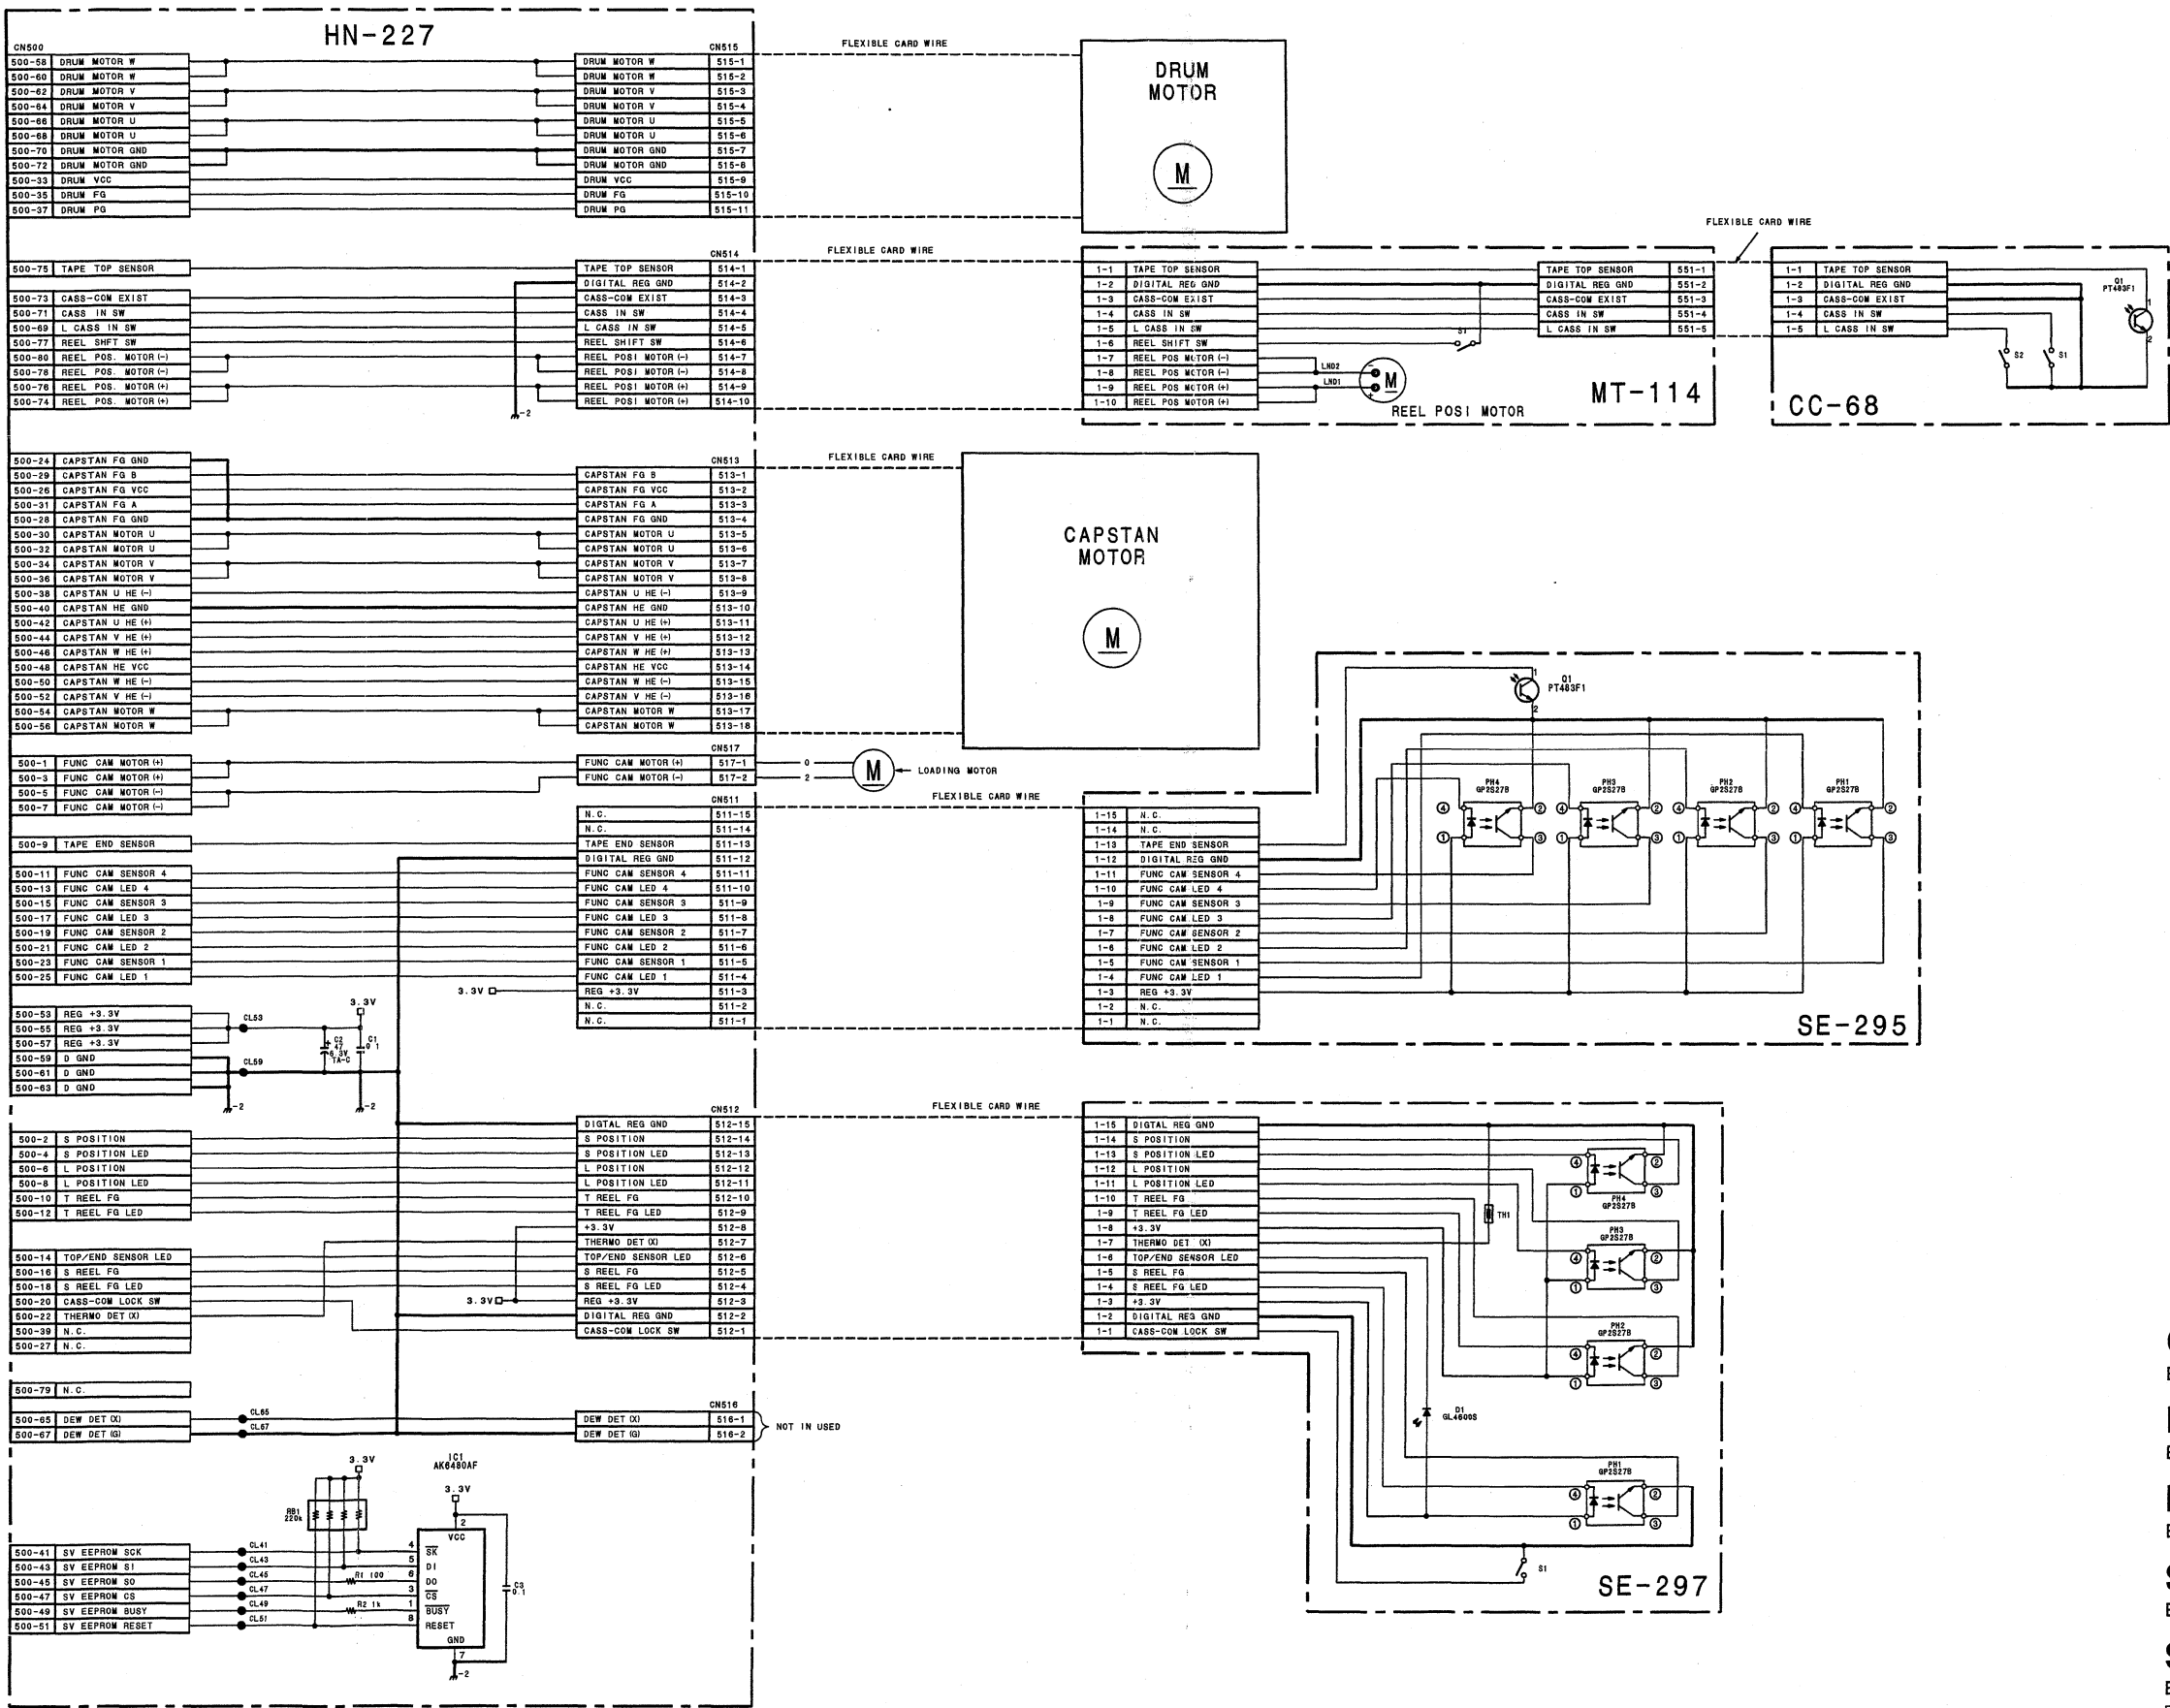

CC-68

BOARD NO. 1-662-883-12

HN-227

BOARD NO. 1-662-879-12

MT-114

BOARD NO. 1-662-884-12


SE-295

BOARD NO. 1-662-881-13, 14

SE-297

BOARD NO. 1-662-882-13

B-D5R500WS-HN-SE-SM

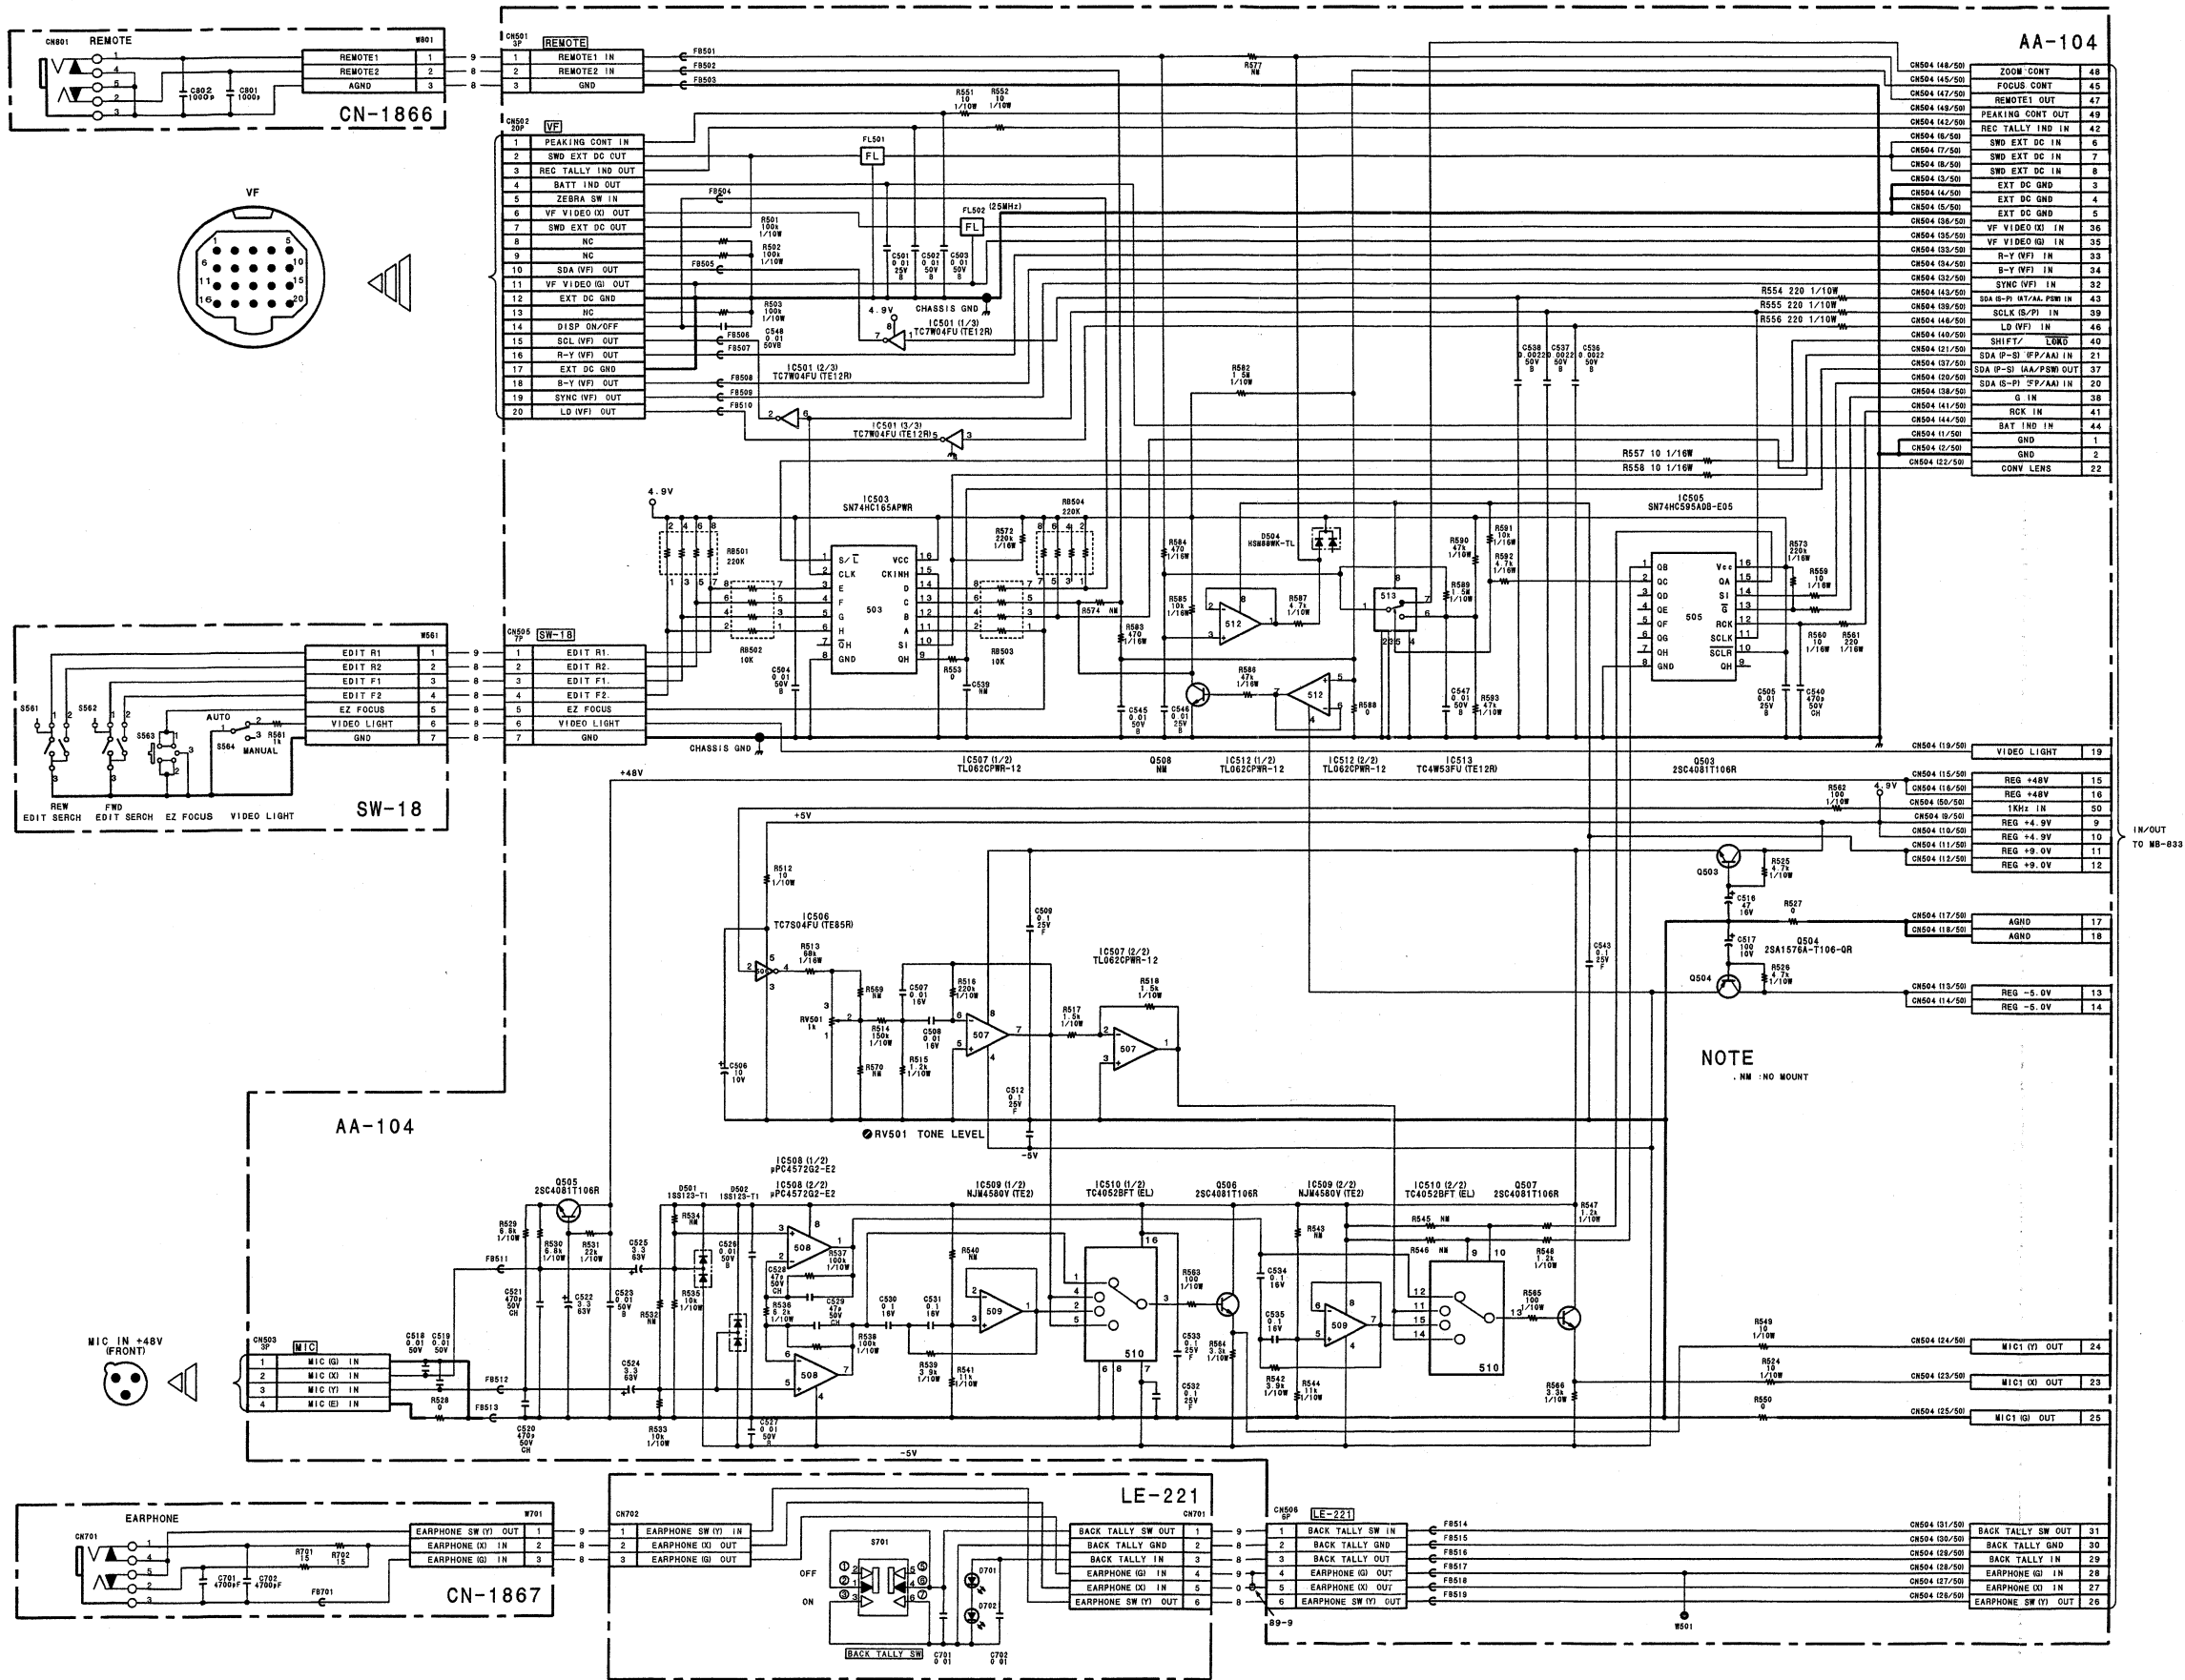

AA-104
BOARD NO. 1-673-943-12, 13, 21


CN-1866
BOARD NO. 1-673-947-12, 21


CN-1867
BOARD NO. 1-673-950-12, 21

LE-221
BOARD NO. 1-673-949-11, 21

SW-18
BOARD NO. 1-673-844-11, 21
B-DSR500WS-AA-CN-SW-SM



CP-373 (1/5) CP-373 (1/5)

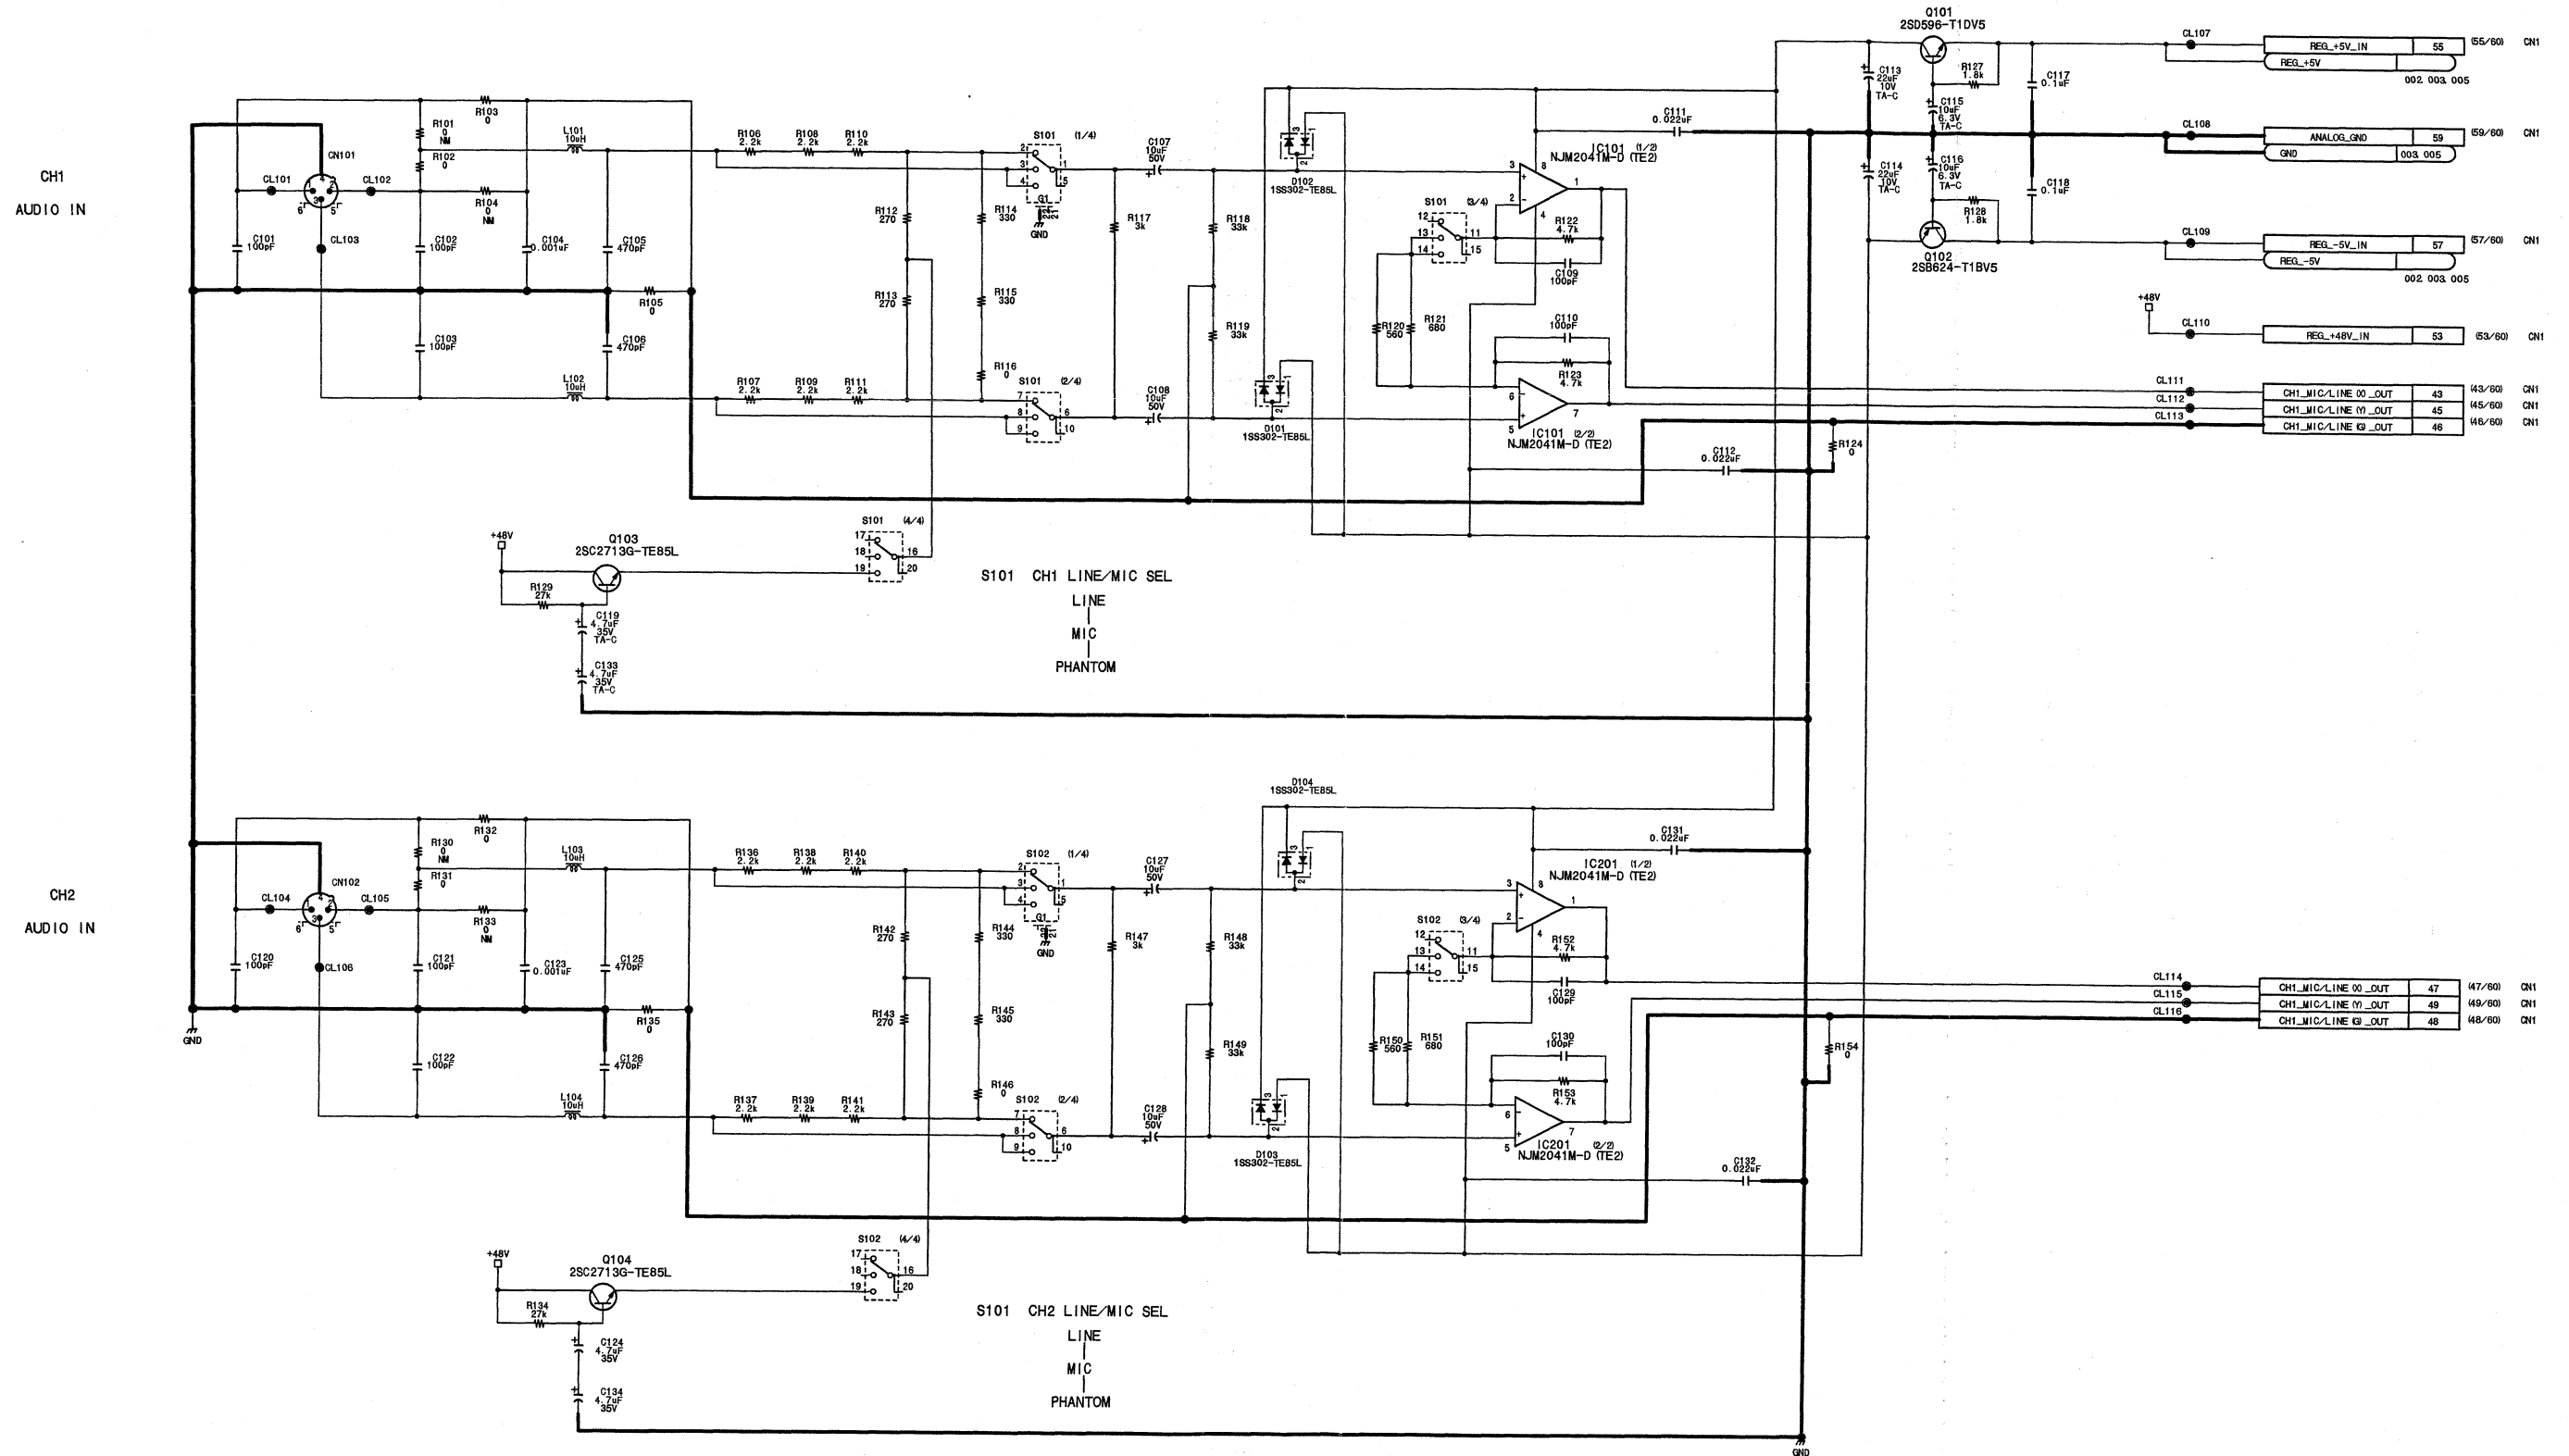

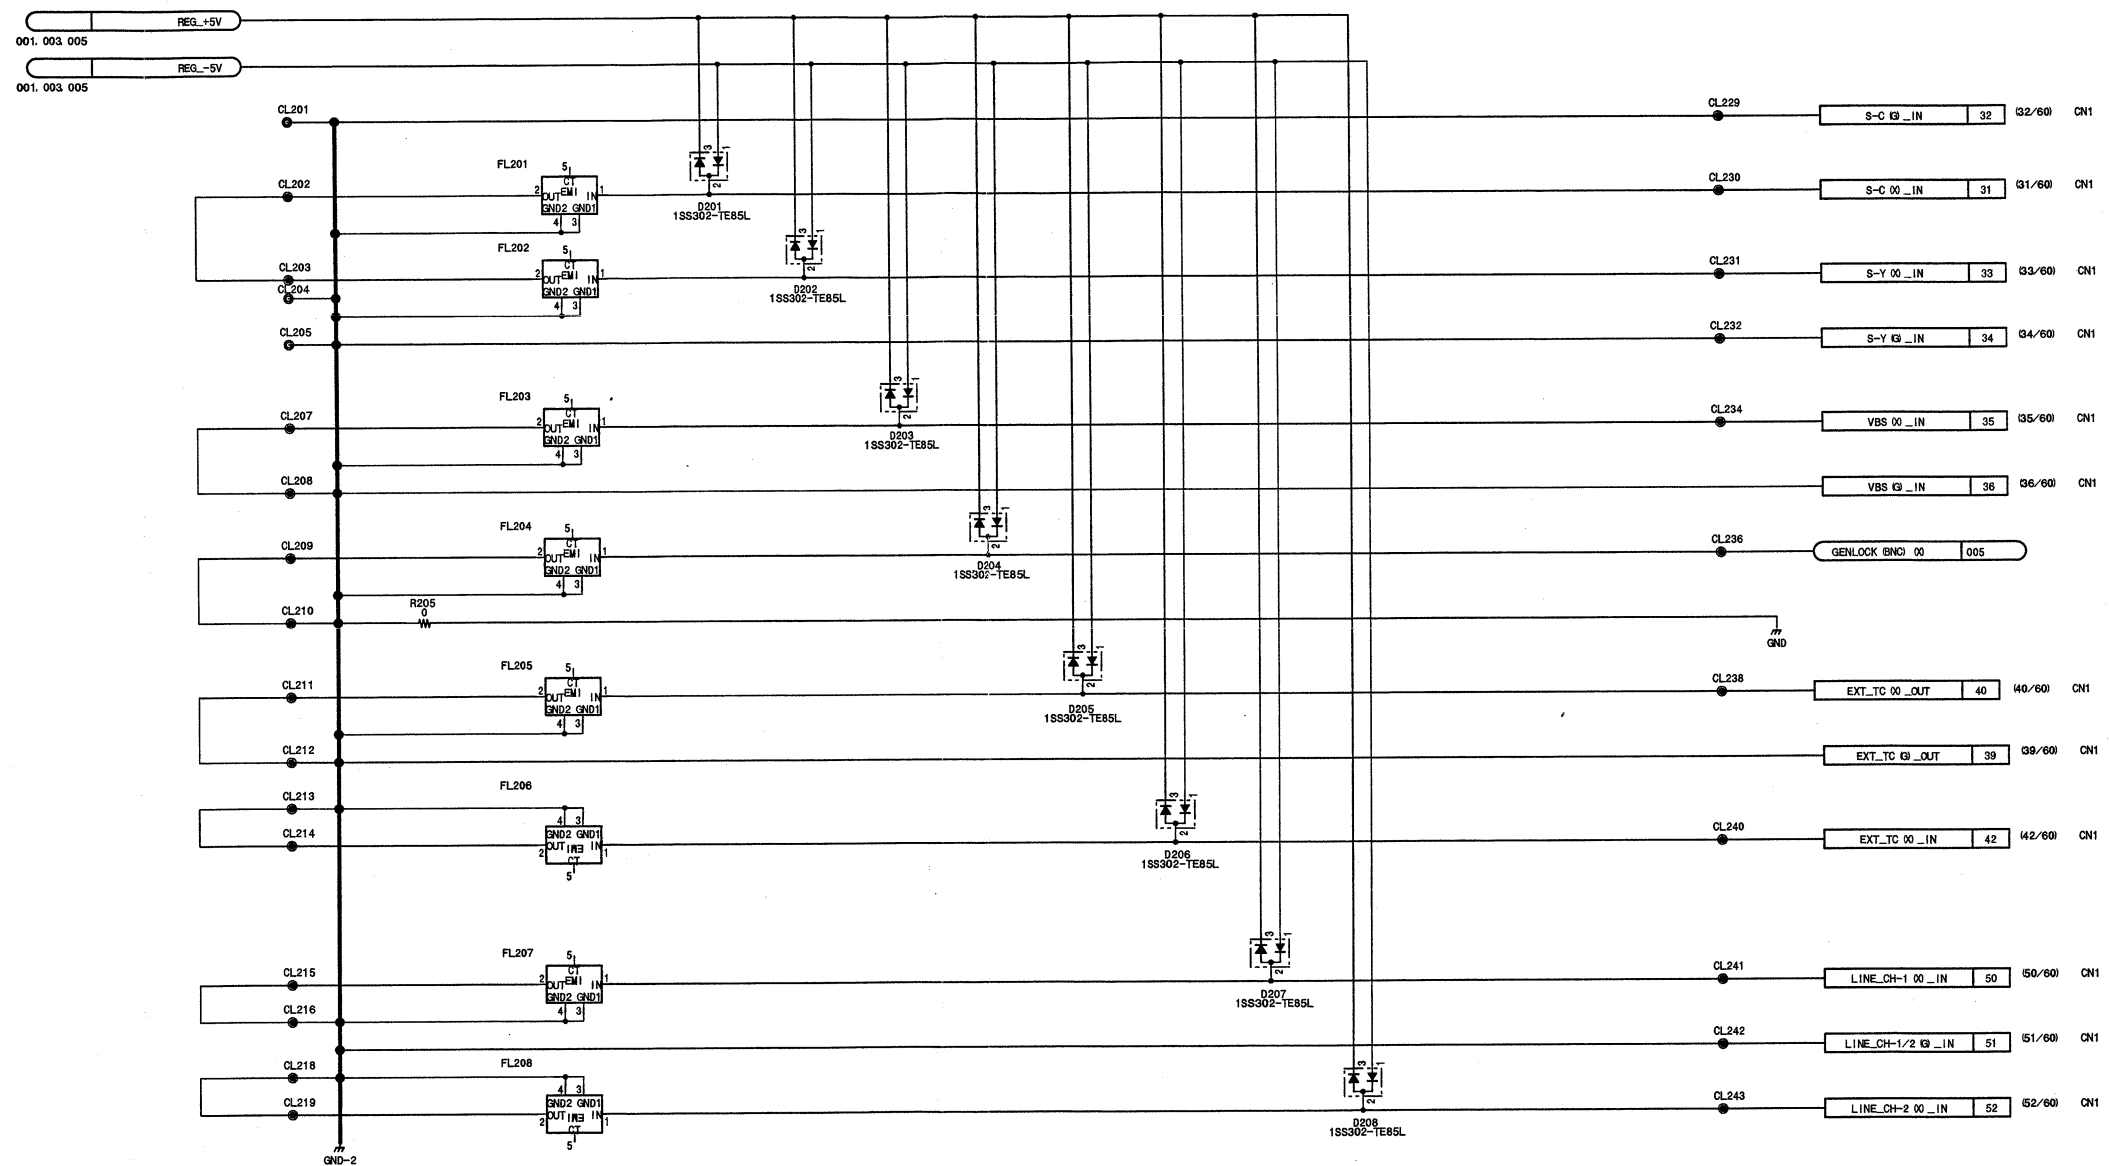


CP-373 (2/5)
 BOARD NO. 1-683-382-11, 12
 FOR DSR-390/390P/370/370P
 DSR-370_CP-373_005_2

CP-373 (3/5) CP-373 (3/5)

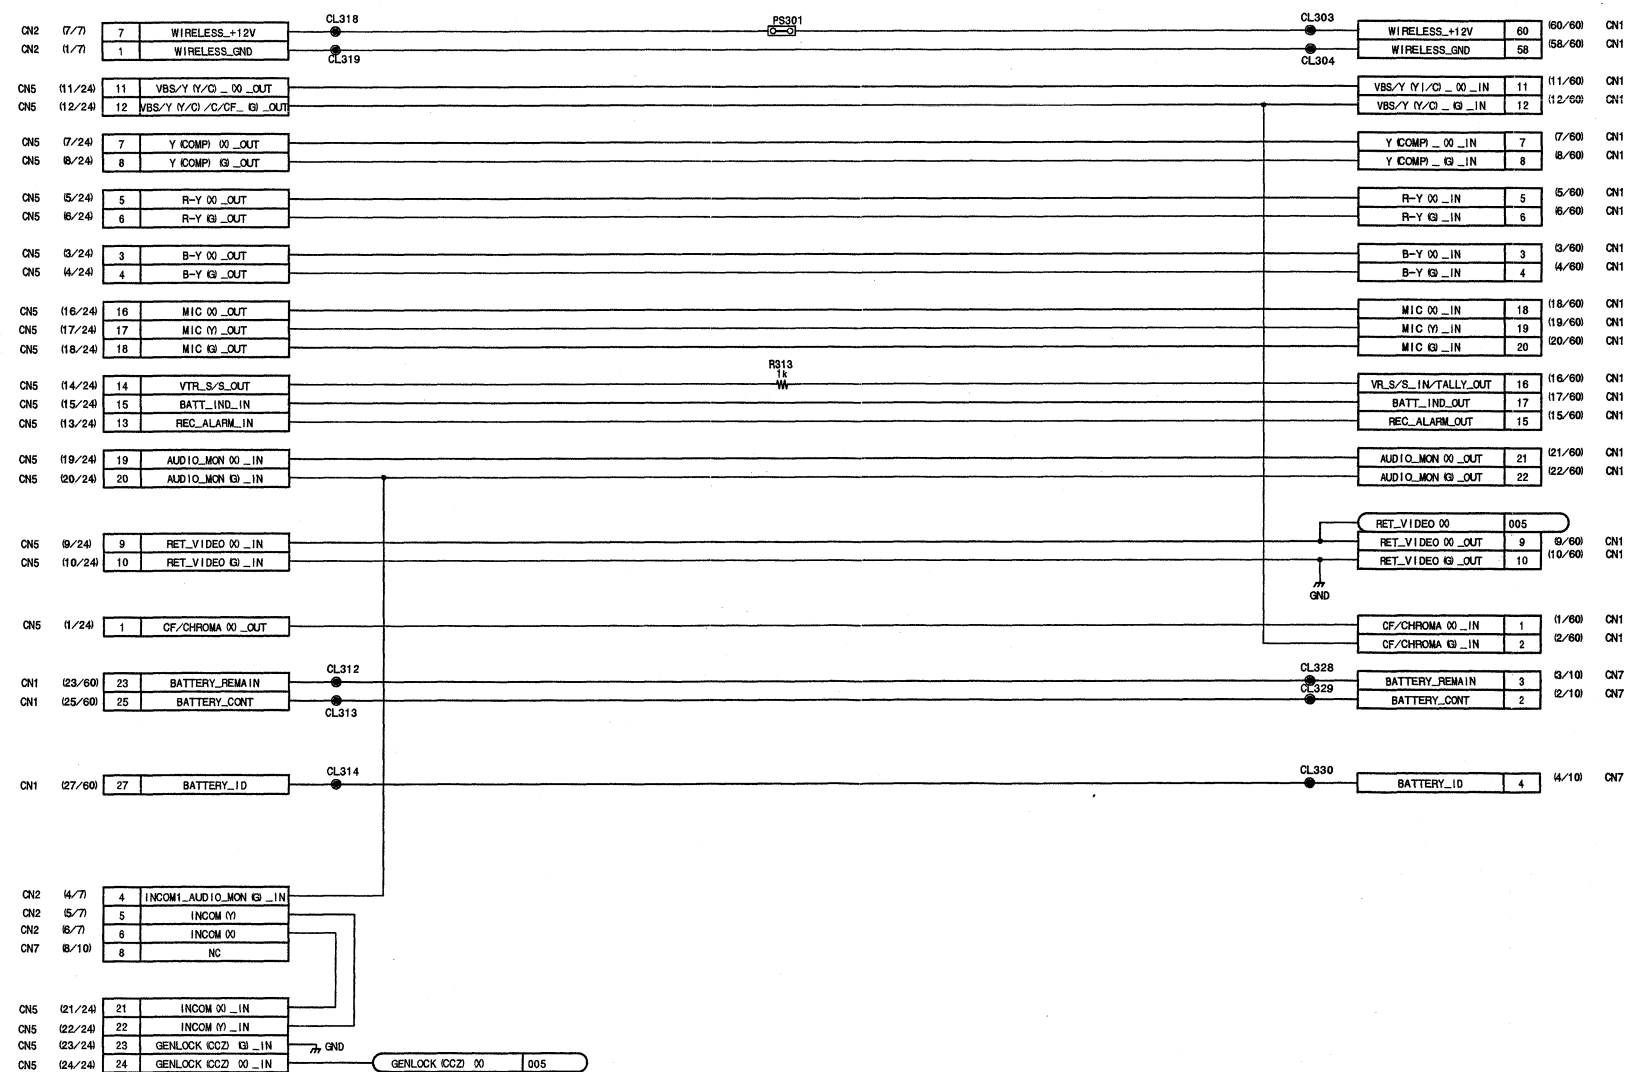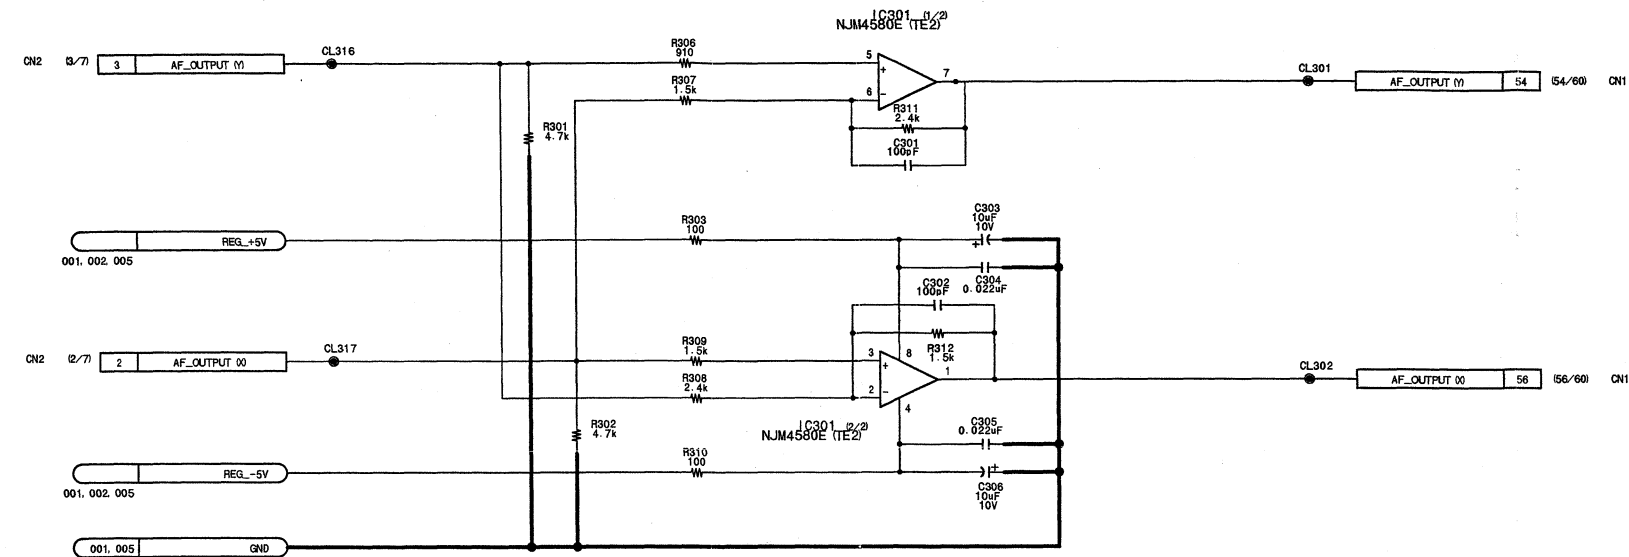


CP-373 (3/5)
BOARD NO. 1-683-382-11, 12
FOR DSR-390/390P/370/370P
DSR-370_CP-373_005_3

CP-373 (4/5) CP-373 (4/5)

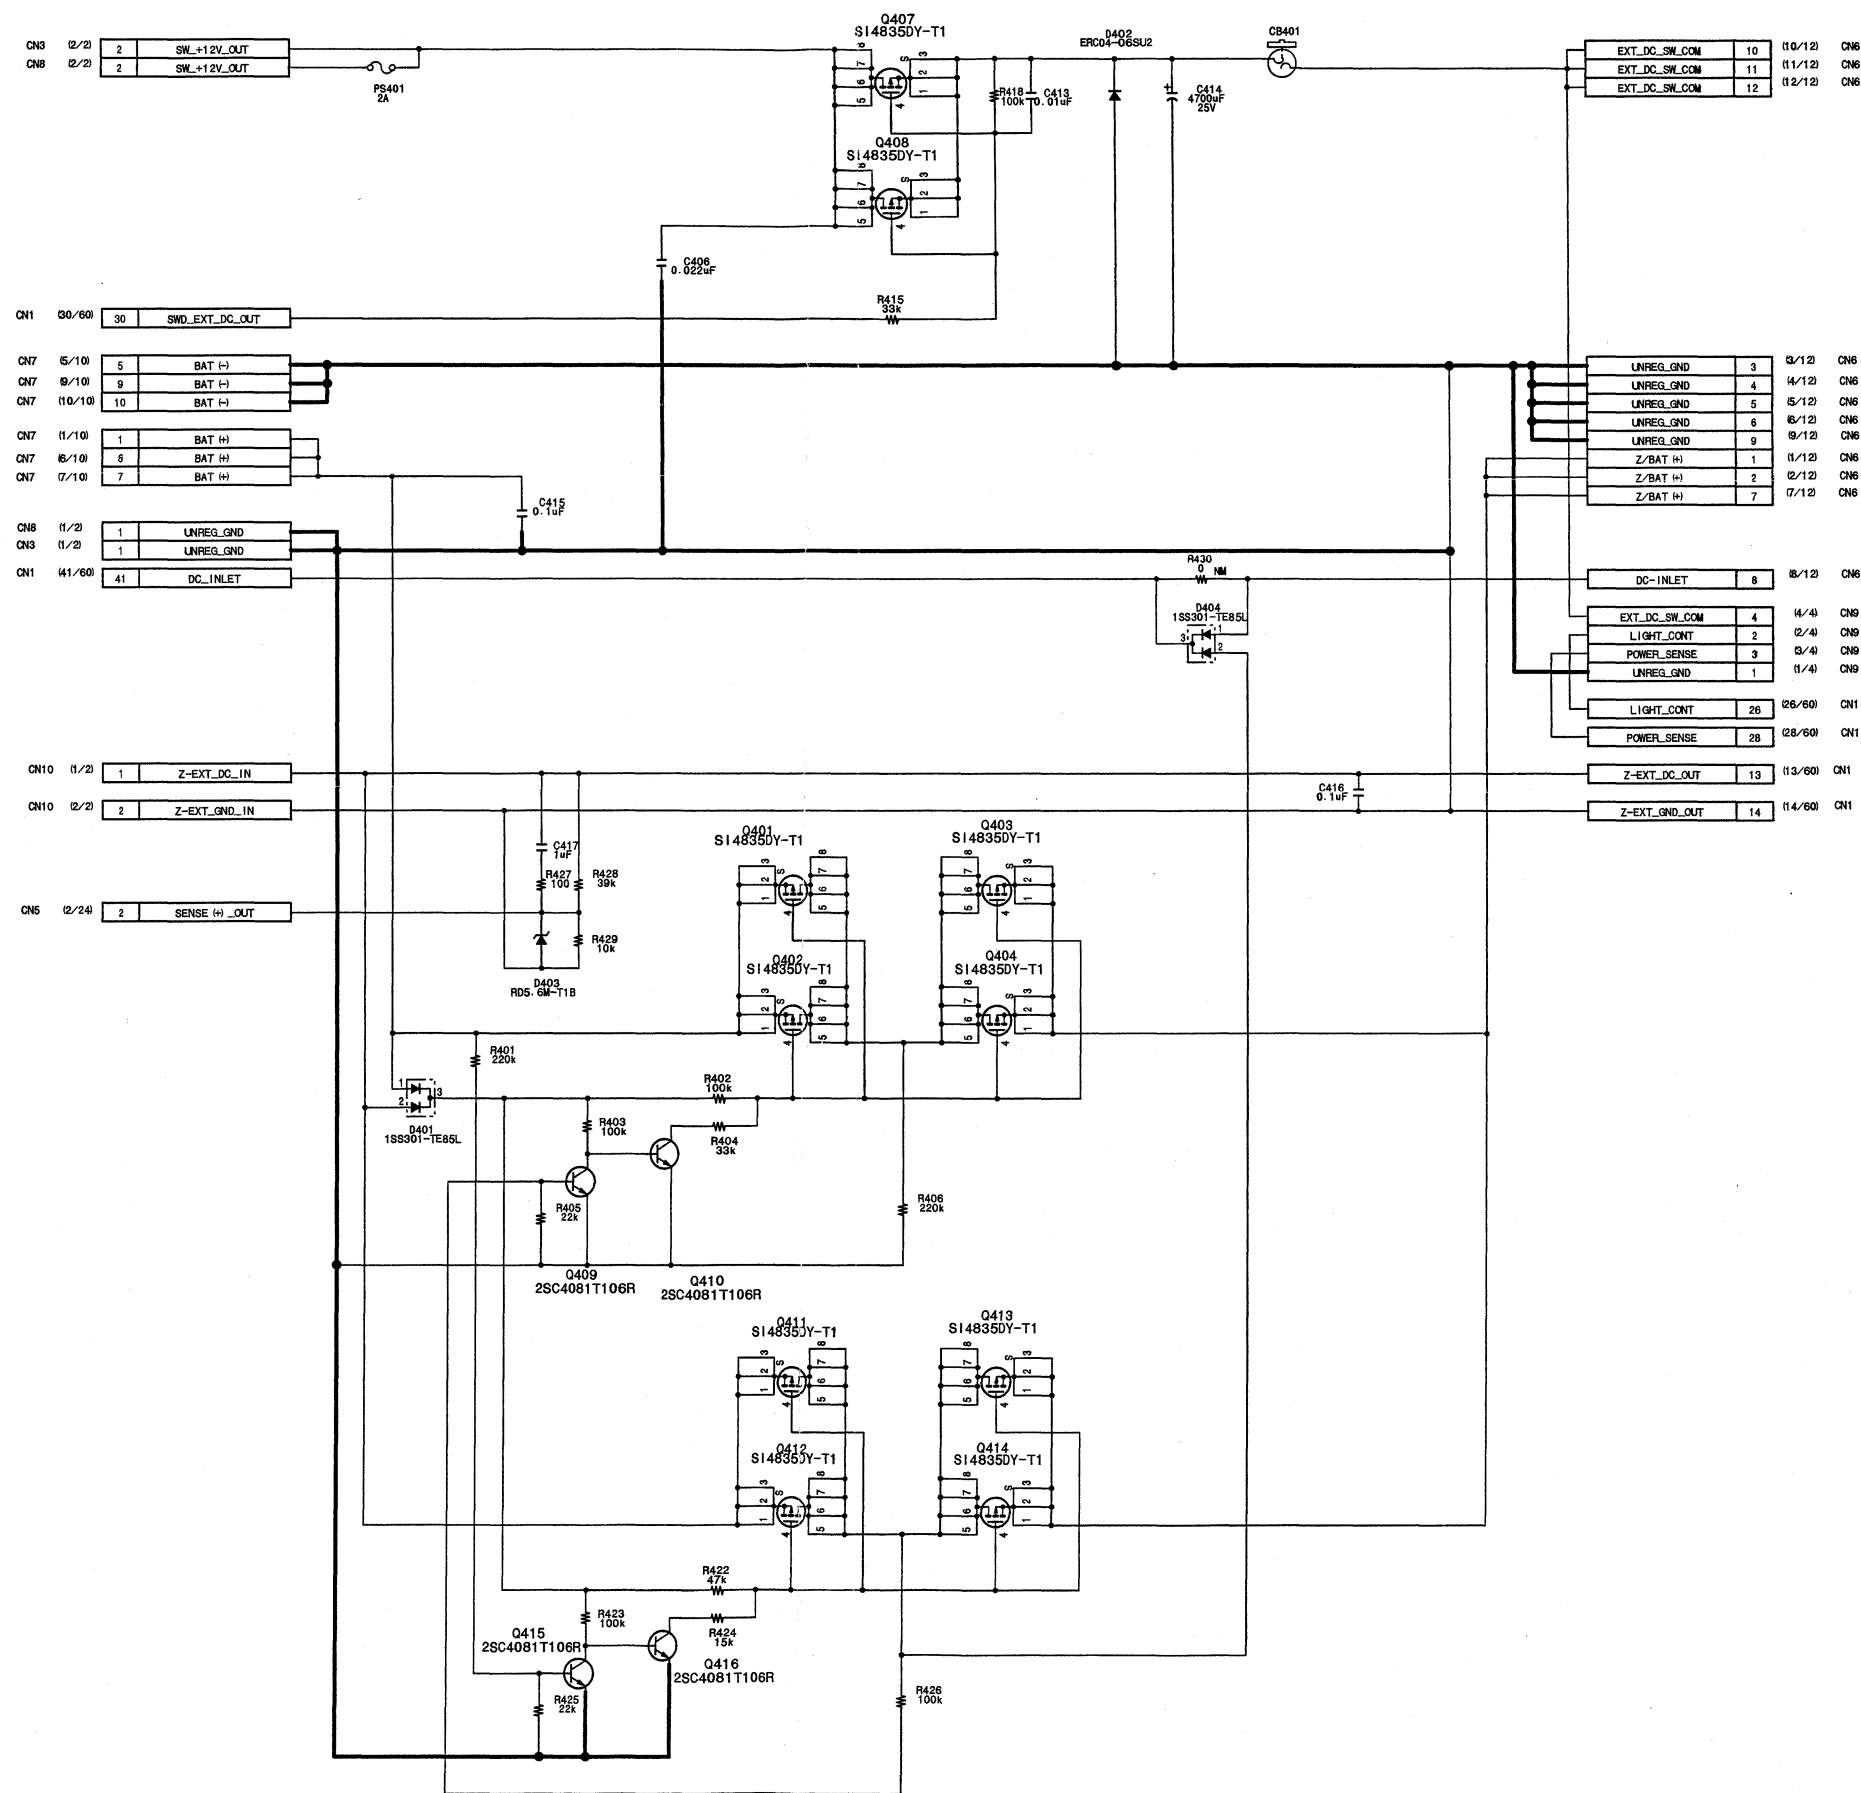


CP-373 (4/5)

BOARD NO. 1-683-382-11, 12
FOR DSR-390/390P/370/370P
DSR-370_CP-373_005_4

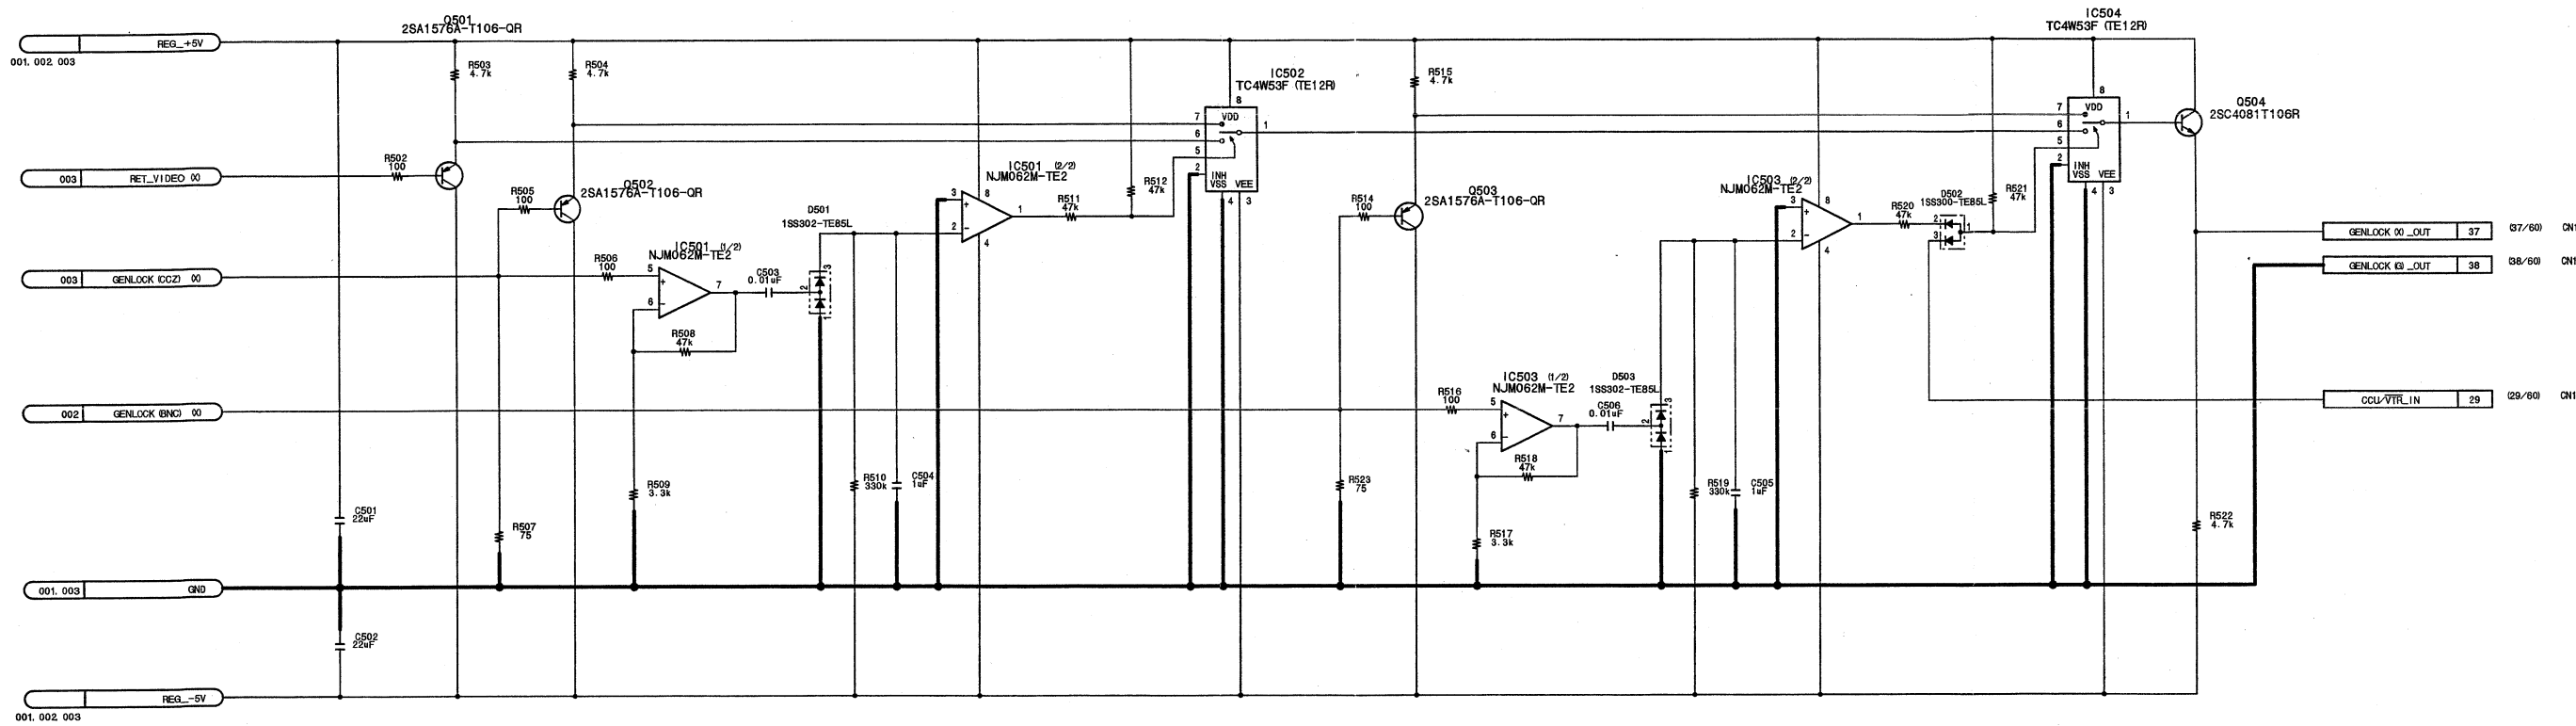

CN-2277 CN-2277

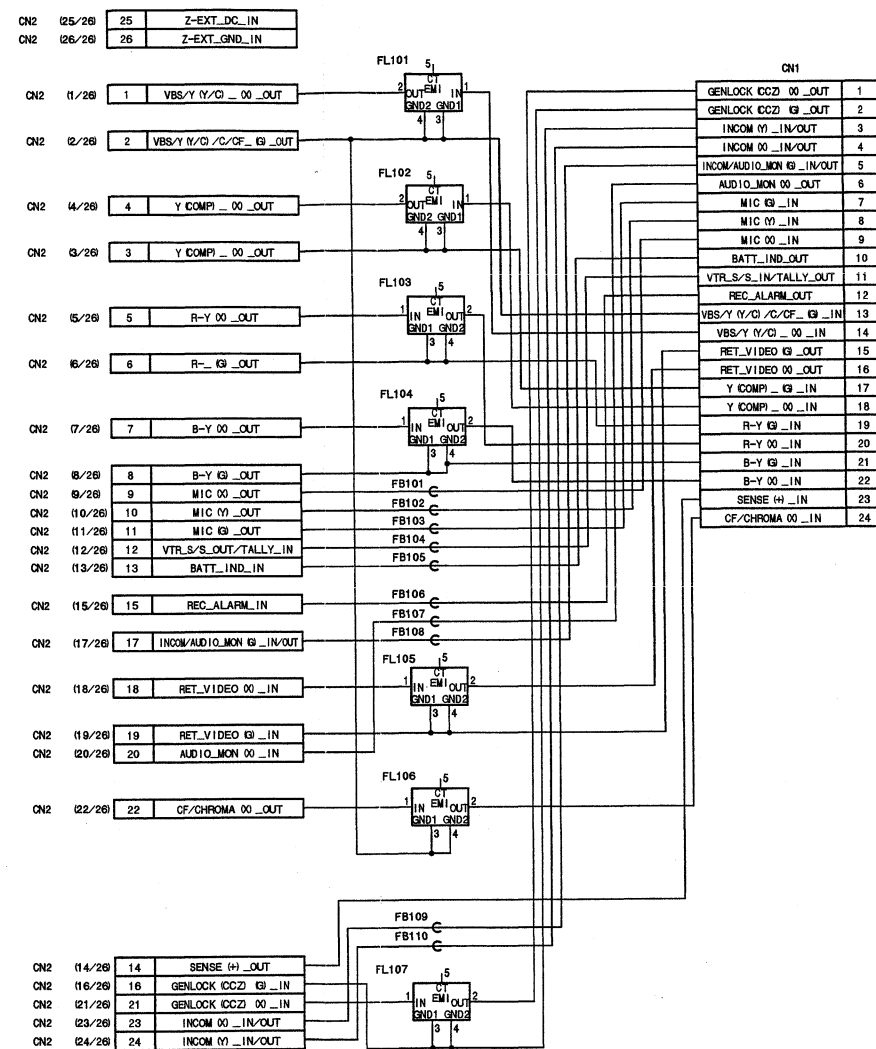


CN-2277
 BOARD NO. 1-683-383-11, 12
 FOR DSR-390/390P/370/370P
 DSR-370_CN-2277_003_1


DSR-390/390P/370/370P/300A/300AP V2

CH1
AUDIO IN


CH2
AUDIO IN

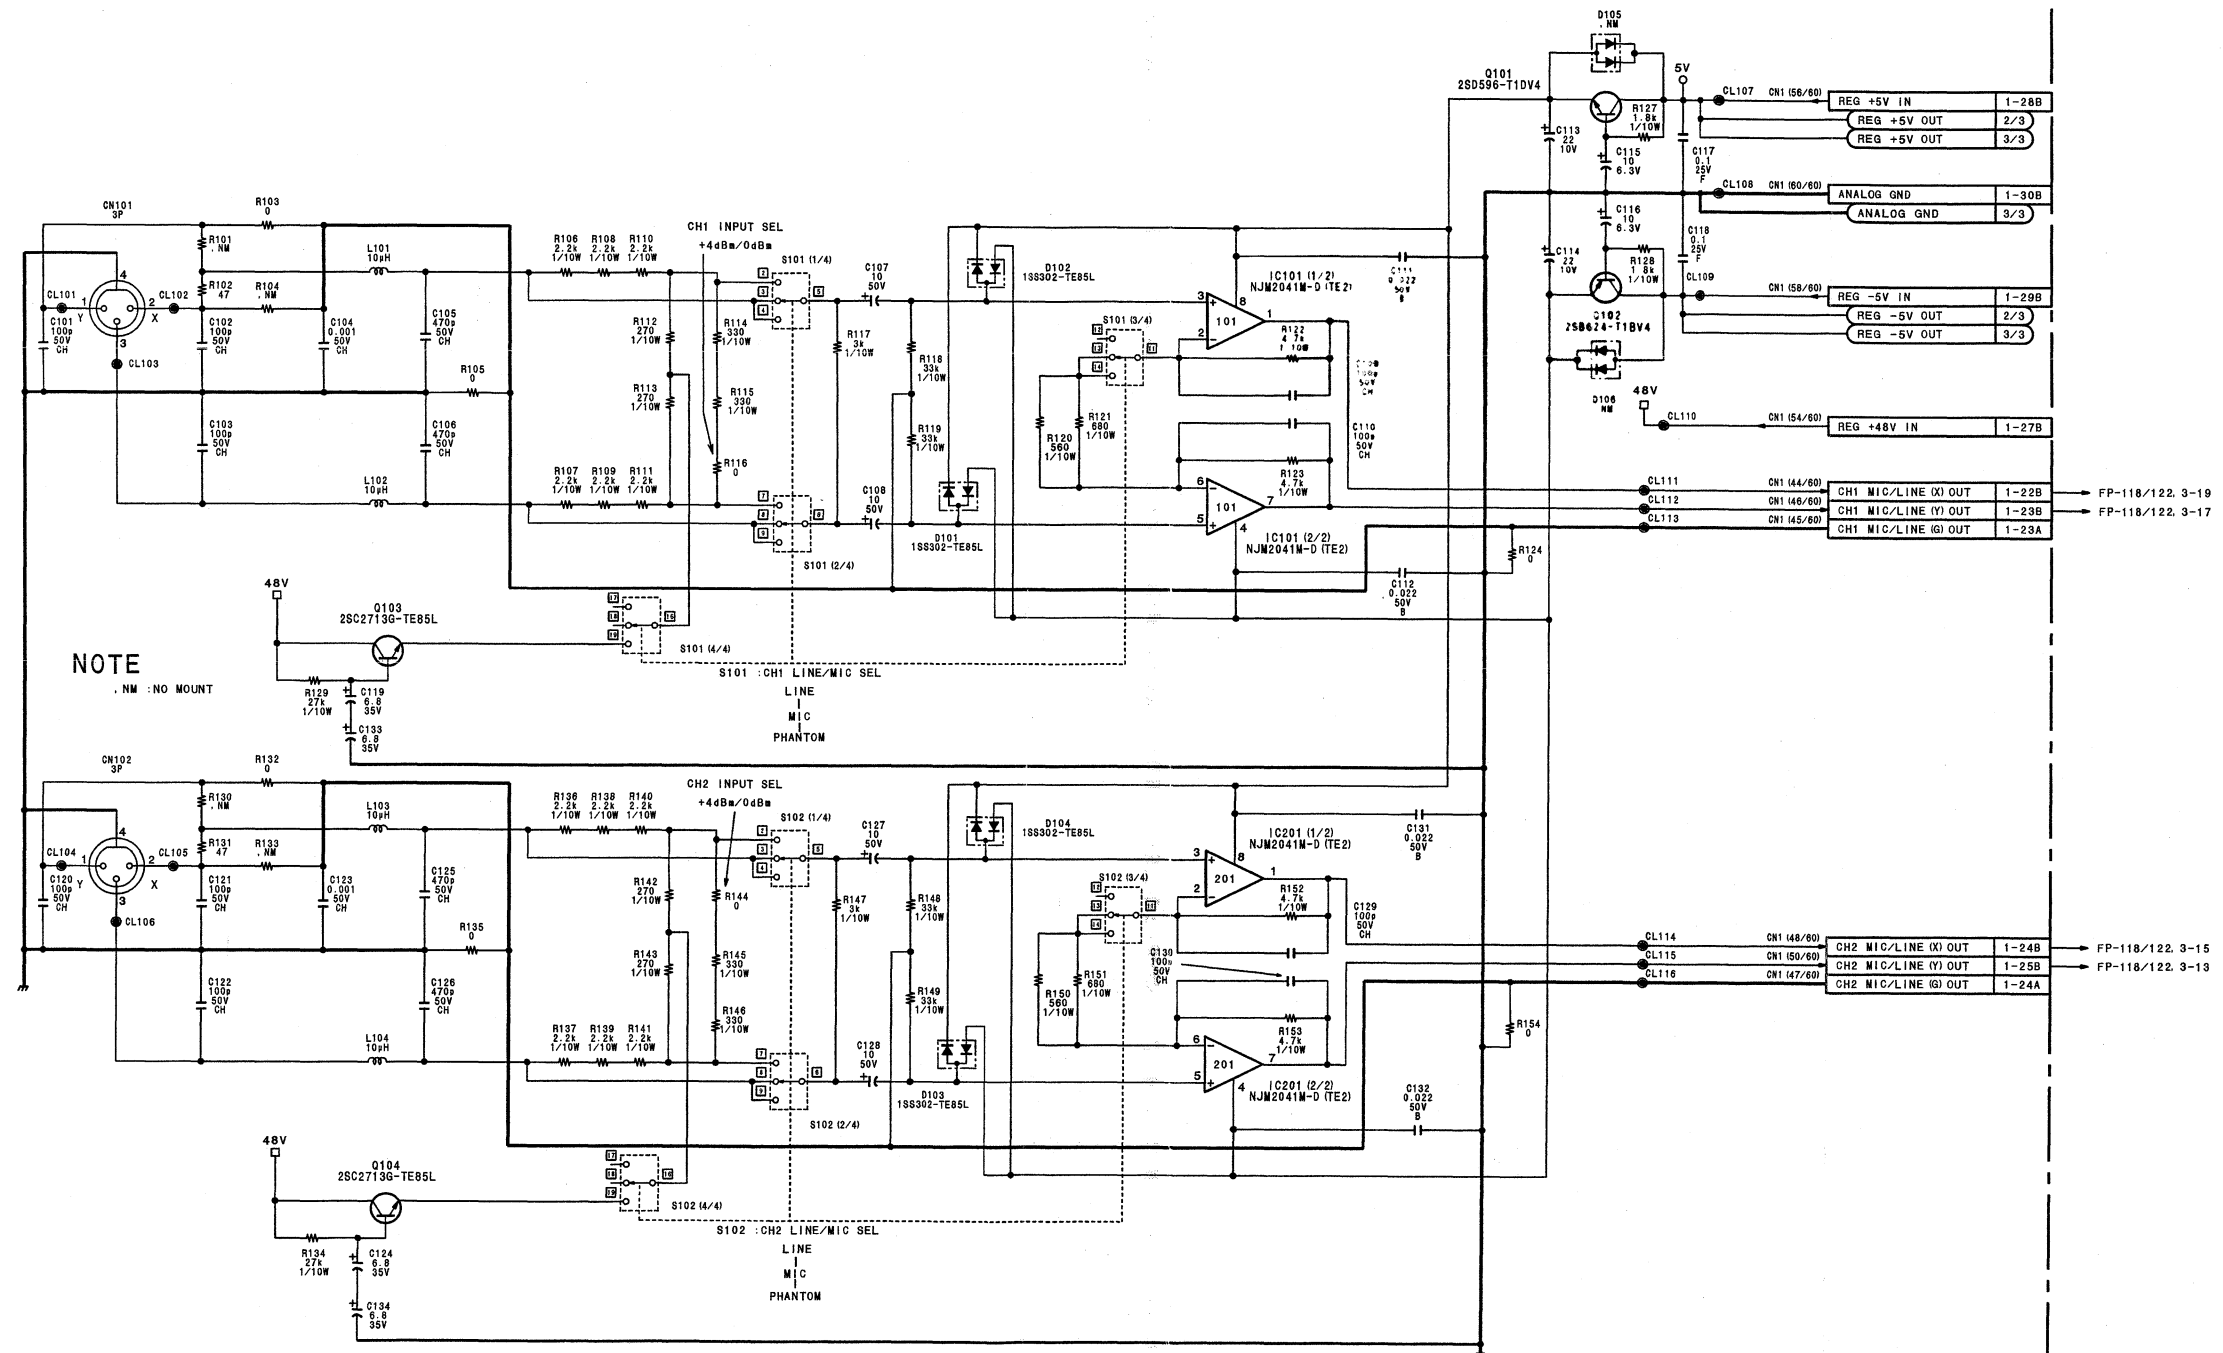


CP-315 (1/3)
BOARD NO. 1-668-841-13, 14
FOR DSR-300A/300AP
B-DSR500WS-CP315-SM

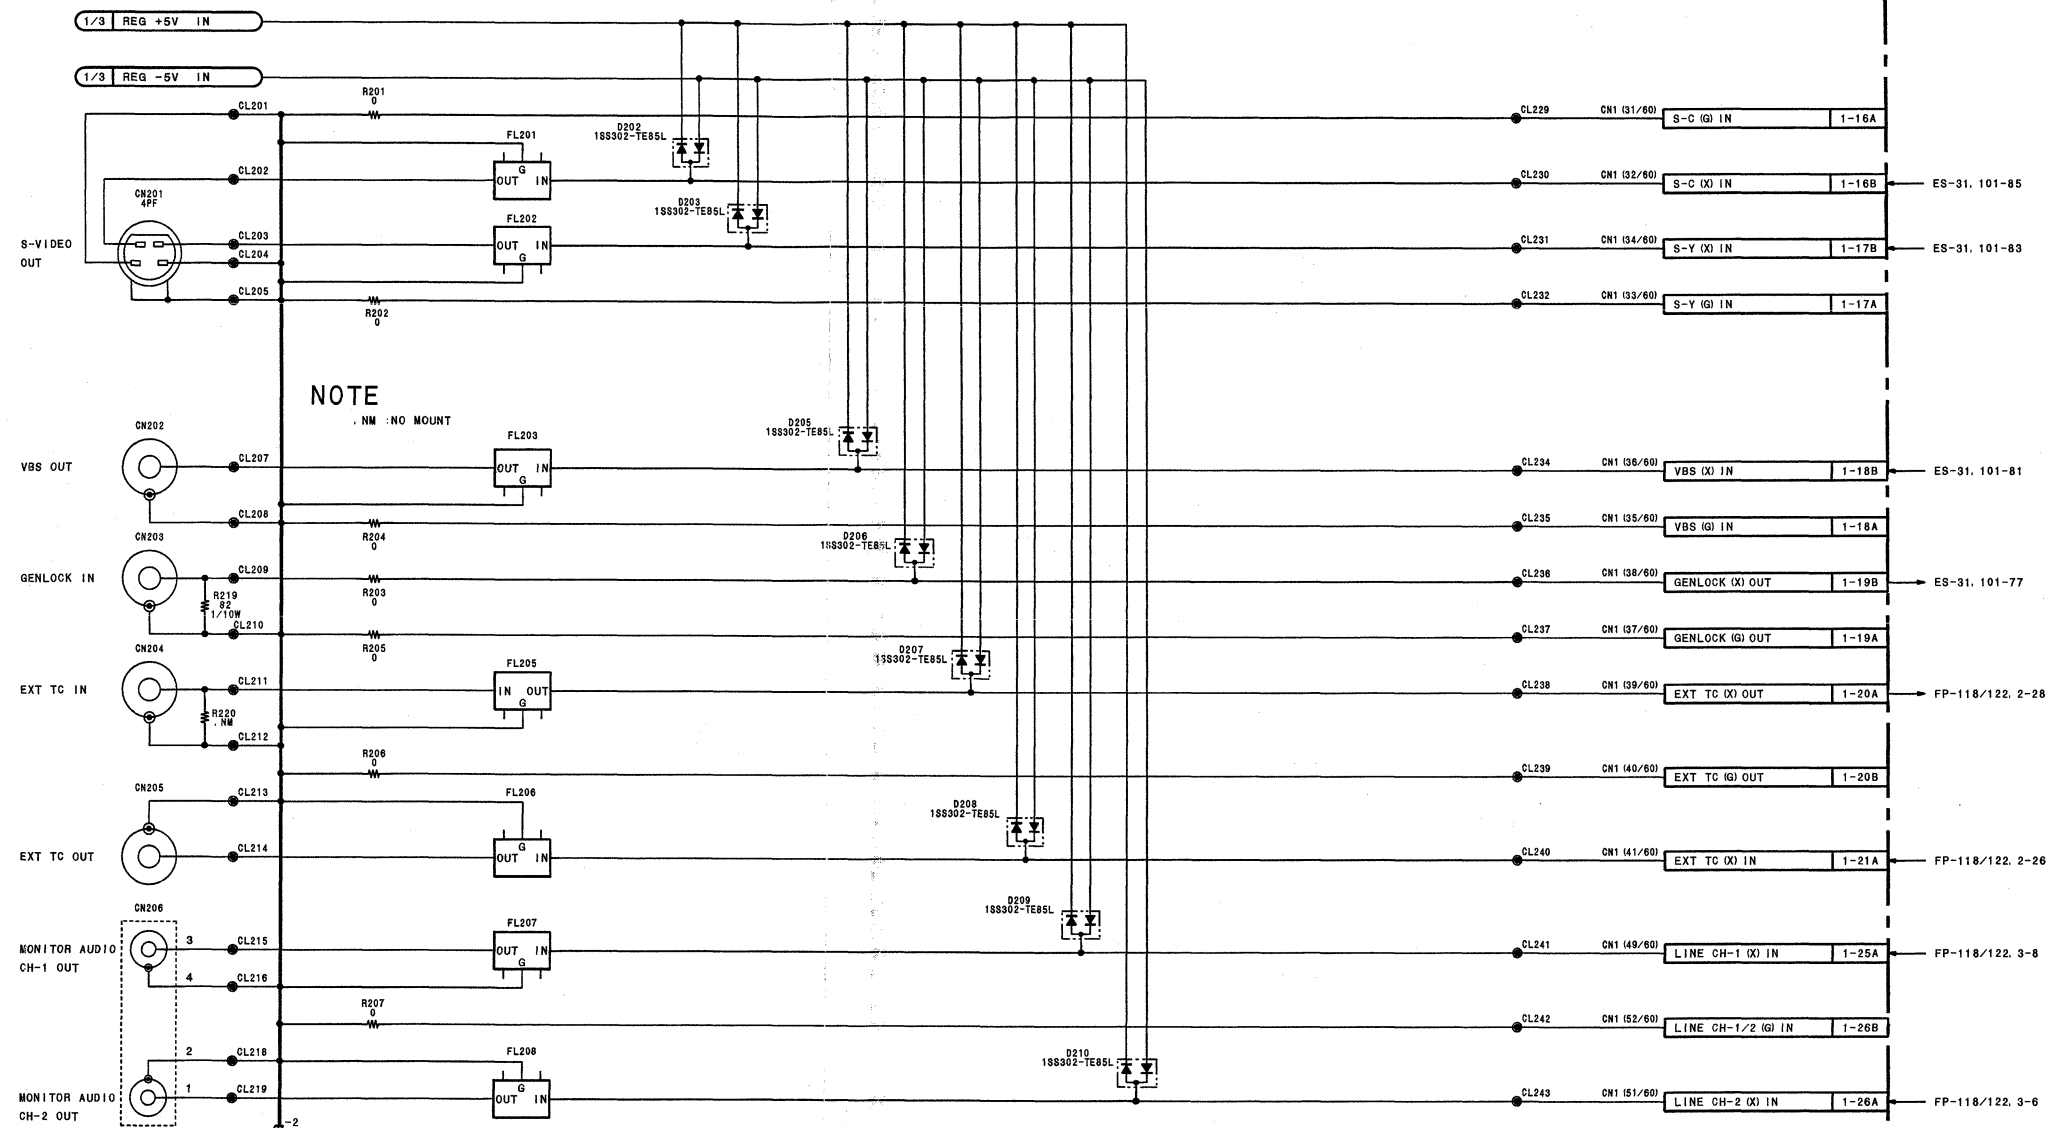

CP-315 (3/3), CN-1519, CN-1873, CN-1874, PS-570



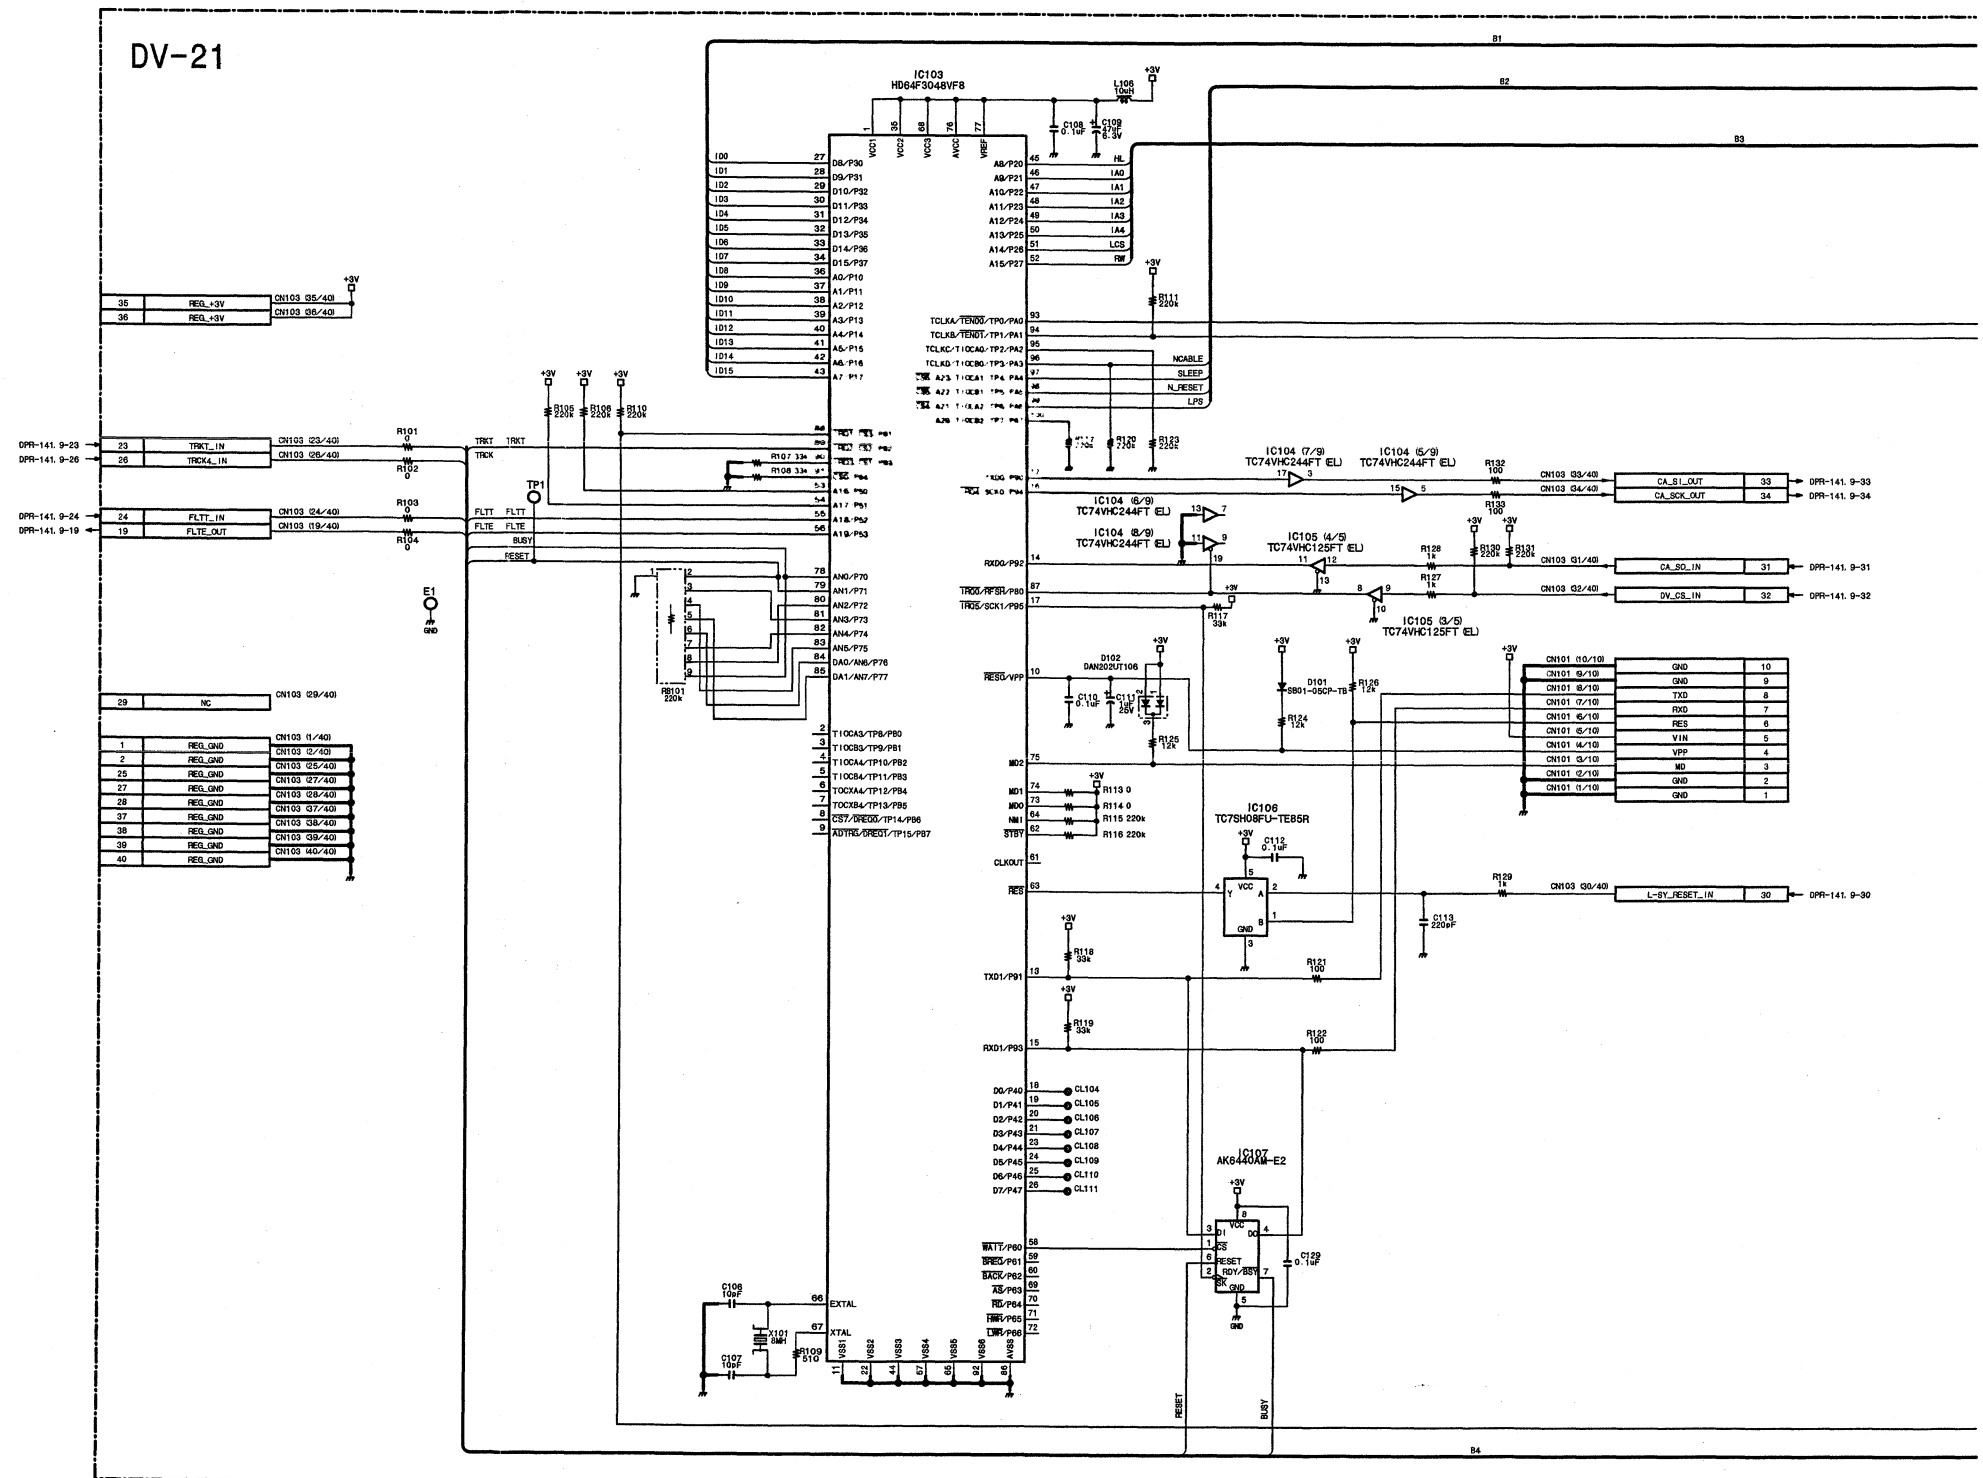

CN-1823, DV-21C/21A



FP-118A/122

FP-118A/122 BOARD SIDE (CN1) MB-833 BOARD SIDE

| CN1 | | | |
|-----|----|--------------------|-------------------------|
| 50 | 1 | REG GND | |
| 49 | 2 | REG GND | |
| 48 | 3 | REG +4.9V | |
| 47 | 4 | REG +4.9V | |
| 46 | 5 | VJ MIC (G) | OUT 16-49 |
| 45 | 6 | VJ MIC (G) | OUT 16-48 |
| 44 | 7 | AUDIO VOLUME | OUT 16-47 |
| 43 | 8 | VTR TRIG | OUT 16-46 |
| 42 | 9 | SDA (S-P) (PSW/FP) | OUT 16-45 |
| 41 | 10 | G | OUT 14-13, 16-15, 20-29 |
| 40 | 11 | SCLK (S/P) | OUT 14-12, 16-14, 20-30 |
| 39 | 12 | SHIFT/LOAD | OUT 14-11, 16-13, 20-31 |
| 38 | 13 | RCK | OUT 14-10, 16-12, 20-32 |
| 37 | 14 | LIGHT SW | OUT 14-32 |
| 36 | 15 | SDA (S-P) (FP/AA) | IN 14-31 |
| 35 | 16 | SDA (P-S) (FP/AA) | IN 14-30 |
| 34 | 17 | FAN ON | OUT 8-60 |
| 33 | 18 | N.C | |
| 32 | 19 | MIC1 (X) | OUT 14-28 |
| 31 | 20 | MIC1 (Y) | OUT 14-27 |
| 30 | 21 | MIC1 (G) | OUT 14-26 |
| 29 | 22 | EARPHONE SW (Y) | IN 14-25 |
| 28 | 23 | EARPHONE (X) | OUT 14-24 |
| 27 | 24 | EARPHONE (G) | OUT 14-23 |
| 26 | 25 | L:YC CS | IN 6-21 |
| 25 | 26 | L:VBI CS | IN 6-17 |
| 24 | 27 | BACK TALLY | IN 14-22 |
| 23 | 28 | BACK TALLY GND | 14-21 |
| 22 | 29 | BACK TALLY SW | OUT 14-20 |
| 21 | 30 | INT VTR TALLY | IN 20-17 |
| 20 | 31 | CS VTR | IN 20-16 |
| 19 | 32 | SDA (C/V) | OUT 20-15 |
| 18 | 33 | SDA (V/C) | OUT 20-14 |
| 17 | 34 | SCLK VTR | IN 20-13 |
| 16 | 35 | BATT ALARM | IN 20-12 |
| 15 | 36 | REG +9.0V | |
| 14 | 37 | REG +9.0V | |
| 13 | 38 | N.C | |
| 12 | 39 | L:DV CS | IN 7-78 |
| 11 | 40 | H:YC BUSY | OUT 6-22 |
| 10 | 41 | L:RESET | OUT 6-4, 10-46 |
| 9 | 42 | 1/2 VD | OUT 6-1, 9-7, 10-45 |
| 8 | 43 | SV TRKD | OUT 6-2, 10-43 |
| 7 | 44 | SV SCK | IN 7-99, 10-42 |
| 6 | 45 | SV SO | IN 7-100, 10-41 |
| 5 | 46 | SV S1 | OUT 7-97, 10-40 |
| 4 | 47 | L:FS CONT CS | IN 7-98 |
| 3 | 48 | CSVNC (VTR) | OUT 6-35, 8-65 |
| 2 | 49 | L:IP LI OFF | IN 7-96 |
| 1 | 50 | L:SV-SV CS | IN 10-26 |

FP-118A/122

FP-118A/122 BOARD SIDE (CN2) MB-833 BOARD SIDE

| CN2 | | | |
|-----|----|---------------------|-----------------|
| 50 | 1 | L:SV READY | OUT 10-25 |
| 49 | 2 | MIC GND | 10-24 |
| 48 | 3 | MIC VDD | 10-23 |
| 47 | 4 | MIC SCL | IN 10-22 |
| 46 | 5 | MIC SDA | I/O 10-21 |
| 45 | 6 | L:SP SV CS | IN 7-79 |
| 44 | 7 | L:SV CTLO CS | IN 7-80 |
| 43 | 8 | L:NFIL CS | IN 7-77 |
| 42 | 9 | H:DA LD | N.C |
| 41 | 10 | L:SV EEPROM BUSY | OUT 7-75 |
| 40 | 11 | L:SV EEPROM CS | IN 7-76 |
| 39 | 12 | L:SV EEPROM WE | IN 7-73 |
| 38 | 13 | H:BASE PWR ON | N.C |
| 37 | 14 | H:BASE MUTE | IN 8-75 |
| 36 | 15 | CA SCK | IN 7-71 |
| 35 | 16 | CA SO | IN 7-72 |
| 34 | 17 | CA S1 | OUT 7-69 |
| 33 | 18 | L:AUX CS | IN 7-70 |
| 32 | 19 | L:IP CS | IN 7-67 |
| 31 | 20 | L:IP CONNECT | OUT 7-68 |
| 30 | 21 | L:IP PWR ON | IN 7-65 |
| 29 | 22 | H:POWER SAVE | IN NC |
| 28 | 23 | EXT TO INPUT (X) | OUT 19-40 |
| 27 | 24 | EXT TO (G) | 19-39 |
| 26 | 25 | EXT TO OUTPUT (X) | IN 19-42 |
| 25 | 26 | H:MAIN SW ON | OUT 16-32 |
| 24 | 27 | DC INLET | OUT 19-41, 20-7 |
| 23 | 28 | L:POWER ON (FP-PSW) | IN 16-31 |
| 22 | 29 | LIGHT CONT | IN 19-26 |
| 21 | 30 | BATTERY ID | OUT 19-27, 20-6 |
| 20 | 31 | REG -5.0V | |
| 19 | 32 | REG +5.0V | |
| 18 | 33 | REG +5.0V | |
| 17 | 34 | REG +6.6V | |
| 16 | 35 | REG +6.6V | |
| 15 | 36 | REG GND | |
| 14 | 37 | REG GND | |
| 13 | 38 | REG GND | |
| 12 | 39 | REG +3.4V | |
| 11 | 40 | REG +3.4V | |
| 10 | 41 | REG GND | |
| 9 | 42 | REG GND | |
| 8 | 43 | REG GND | |
| 7 | 44 | LITHIUM | IN 7-87 |
| 6 | 45 | SWD EXT DC | |
| 5 | 46 | SWD EXT DC | |
| 4 | 47 | SWD EXT DC | |
| 3 | 48 | UNREG GND | |
| 2 | 49 | UNREG GND | |
| 1 | 50 | UNREG GND | |

SELF CHECK

| CN9 | | | |
|-----|----------------|--|------------------|
| 1 | SWD EXT DC | | |
| 2 | UNREG GND | | |
| 3 | JIG SCK | | 10-50 |
| 4 | JIG SO | | 10-49 |
| 5 | JIG SO | | 10-48 |
| 6 | L:SV-JIG READY | | 10-47 |
| 7 | 1/2 VD | | 1-42, 6-1, 10-45 |

FP-118A/122

FP-118A/122 BOARD SIDE (CN3) MB-833 BOARD SIDE

| CN3 | | | |
|-----|----|----------------------|-----------|
| 40 | 1 | CH-1 REC AUDIO (X) | IN 7-27 |
| 39 | 2 | CH-1/2 REC AUDIO (G) | IN 7-26 |
| 38 | 3 | CH-2 REC AUDIO (X) | IN 7-25 |
| 37 | 4 | H: AUDIO PS | OUT 7-24 |
| 36 | 5 | AUDIO CH-1 (X) | OUT 7-23 |
| 35 | 6 | AUDIO CH1/2 (G) | OUT 7-22 |
| 34 | 7 | AUDIO CH-2 (X) | OUT 7-21 |
| 33 | 8 | CCZ MIC (X) | IN 19-18 |
| 32 | 9 | CCZ MIC (Y) | IN 19-19 |
| 31 | 10 | CCZ MIC (G) | IN 19-20 |
| 30 | 11 | REG -5.0V | |
| 29 | 12 | REG -5.0V | |
| 28 | 13 | REG -5.0V | |
| 27 | 14 | REG GND | |
| 26 | 15 | REG GND | |
| 25 | 16 | REG GND | |
| 24 | 17 | REG +5.0V | |
| 23 | 18 | REG +5.0V | |
| 22 | 19 | REG +5.0V | |
| 21 | 20 | CCZ AUDIO MON1 (G) | OUT 19-22 |
| 20 | 21 | CCZ AUDIO MON1 (X) | OUT 19-21 |
| 19 | 22 | CH-1 MIC/LINE (X) | OUT 19-43 |
| 18 | 23 | CH-1 MIC/LINE (G) | OUT 19-46 |
| 17 | 24 | CH-1 MIC/LINE (Y) | OUT 19-45 |
| 16 | 25 | REG GND | |
| 15 | 26 | CH-2 MIC/LINE (X) | OUT 19-47 |
| 14 | 27 | CH-2 MIC/LINE (G) | OUT 19-48 |
| 13 | 28 | CH-2 MIC/LINE (Y) | OUT 19-49 |
| 12 | 29 | N.C | |
| 11 | 30 | REG +5.3V | |
| 10 | 31 | REG +5.3V | |
| 9 | 32 | M +8V | |
| 8 | 33 | LINE CH-1 (X) | IN 19-50 |
| 7 | 34 | LINE CH-1/2 (G) | IN 19-51 |
| 6 | 35 | LINE CH-2 (X) | IN 19-52 |
| 5 | 36 | AF OUTPUT (Y) | OUT 19-54 |
| 4 | 37 | AF OUTPUT (X) | OUT 19-56 |
| 3 | 38 | ANTON V | OUT 19-23 |
| 2 | 39 | REG GND | |
| 1 | 40 | ANTON AUTO | IN 19-25 |

SV-213

SV-213 BOARD SIDE (CN502) MB-833 BOARD SIDE

| CN10 | | | |
|------|----|----------------|---------------------|
| 50 | 1 | REG GND | |
| 49 | 2 | REG GND | |
| 48 | 3 | REG -5.0V | |
| 47 | 4 | REG +5.0V | |
| 46 | 5 | REG +5.0V | |
| 45 | 6 | REG GND | |
| 44 | 7 | REG GND | |
| 43 | 8 | REG +3.4V | |
| 42 | 9 | REG +3.4V | |
| 41 | 10 | M GND | |
| 40 | 11 | M GND | |
| 39 | 12 | M GND | |
| 38 | 13 | M GND | |
| 37 | 14 | M GND | |
| 36 | 15 | M +5V BACKUP | 23-1 |
| 35 | 16 | M +5V | |
| 34 | 17 | M +5V | |
| 33 | 18 | M +5V | |
| 32 | 19 | M +5V | |
| 31 | 20 | N.C | |
| 30 | 21 | MIC SDA | I/O 2-5 |
| 29 | 22 | MIC SCL | OUT 2-4 |
| 28 | 23 | MIC VDD | 2-3 |
| 27 | 24 | MIC GND | 2-2 |
| 26 | 25 | L:SV READY | IN 2-1 |
| 25 | 26 | L:SV-SV CS | OUT 1-50 |
| 24 | 27 | L:SP-SV CS | OUT 7-82 |
| 23 | 28 | SP S1 | IN 7-81 |
| 22 | 29 | SP SO | OUT 7-84 |
| 21 | 30 | SP SCK | OUT 7-83 |
| 20 | 31 | TRKD | IN 7-86 |
| 19 | 32 | FLTD | IN 7-85 |
| 18 | 33 | L:SV-SFY CS | IN 7-88 |
| 17 | 34 | SV SCK | IN 7-90 |
| 16 | 35 | SV SO | IN 7-89 |
| 15 | 36 | SV S1 | OUT 7-92 |
| 14 | 37 | TBC REN | IN 7-91 |
| 13 | 38 | ORUM BANK | IN 7-94 |
| 12 | 39 | J0WP | IN 7-93 |
| 11 | 40 | SV S1 | IN 1-46, 7-97 |
| 10 | 41 | SV SO | OUT 1-45, 7-100 |
| 9 | 42 | SV SCK | OUT 1-44, 7-99 |
| 8 | 43 | SV TRKD | IN 1-43, 6-2 |
| 7 | 44 | N.C | |
| 6 | 45 | 1/2 VD | IN 1-42, 6-1, 10-47 |
| 5 | 46 | L:RESET | IN 1-41, 6-4 |
| 4 | 47 | L:SV-JIG READY | 9-6 |
| 3 | 48 | JIG SO | 9-5 |
| 2 | 49 | JIG S1 | 9-4 |
| 1 | 50 | JIG SCK | 9-3 |

VA-199

VA-199 BOARD SIDE (CN4) MB-833 BOARD SIDE

| CN5 | | | |
|-----|----|--------------|------------------------------|
| 30 | 1 | R VA (G) | IN 6-80 |
| 29 | 2 | R VA (X) | IN 6-79 |
| 28 | 3 | G VA (G) | IN 6-78 |
| 27 | 4 | G VA (X) | IN 6-77 |
| 26 | 5 | B VA (G) | IN 6-76 |
| 25 | 6 | B VA (X) | IN 6-75 |
| 24 | 7 | FB CLP GND | IN 6-74 |
| 23 | 8 | R FB CLP | OUT 6-73 |
| 22 | 9 | G FB CLP | OUT 6-72 |
| 21 | 10 | B FB CLP | OUT 6-71 |
| 20 | 11 | CLP1 | OUT 16-24, 6-70 |
| 19 | 12 | P BLKG | OUT 16-27, 6-69 |
| 18 | 13 | VA ENABLE | OUT 20-67 |
| 17 | 14 | AVD | OUT 6-64, 15-33 |
| 16 | 15 | AHD | OUT 6-63, 15-34 |
| 15 | 16 | LSI RESET | OUT 6-5, 20-69 |
| 14 | 17 | SDA (D/A) | OUT 6-57, 8-43, 15-43, 20-29 |
| 13 | 18 | SCL (D/A) | OUT 6-58, 8-44, 15-42, 20-21 |
| 12 | 19 | LD (VA2) | OUT 20-27 |
| 11 | 20 | LD (VA1) | OUT 20-28 |
| 10 | 21 | +180B ON/OFF | OUT 20-68, 6-55 |
| 9 | 22 | DPR | OUT 16-50, 6-61 |
| 8 | 23 | REG -5.0V | |
| 7 | 24 | REG -5.0V | |
| 6 | 25 | REG +5.3V | |
| 5 | 26 | REG +5.3V | |
| 4 | 27 | REG +5.0V | |
| 3 | 28 | REG +5.0V | |
| 2 | 29 | REG GND | |
| 1 | 30 | REG GND | |

RP-91

RP-91 BOARD SIDE (CN773) MB-833 BOARD SIDE

| CN11 | | | |
|------|----|-----------|----------|
| 1 | 1 | CLK135 | OUT 7-31 |
| 2 | 2 | REG GND | |
| 3 | 3 | DRCK REF | OUT 7-33 |
| 4 | 4 | REG GND | |
| 5 | 5 | TRPCS | OUT 7-35 |
| 6 | 6 | FRPCS | OUT 7-38 |
| 7 | 7 | REG GND | |
| 8 | 8 | VRCCKS | IN 7-40 |
| 9 | 9 | REG GND | |
| 10 | 10 | DTSC0 | OUT 7-42 |
| 11 | 11 | DTSC1 | OUT 7-41 |
| 12 | 12 | DTSC2 | OUT 7-44 |
| 13 | 13 | DTSC3 | OUT 7-43 |
| 14 | 14 | DTSC4 | OUT 7-46 |
| 15 | 15 | DTSC5 | OUT 7-45 |
| 16 | 16 | DTSC6 | OUT 7-48 |
| 17 | 17 | DTSC7 | OUT 7-47 |
| 18 | 18 | REG GND | |
| 19 | 19 | AFREF | IN 7-49 |
| 20 | 20 | SVCS | IN 7-52 |
| 21 | 21 | SCDVCS | IN 7-51 |
| 22 | 22 | VADVCS | IN 7-54 |
| 23 | 23 | REG GND | |
| 24 | 24 | VPCCKS | IN 7-56 |
| 25 | 25 | REG GND | |
| 26 | 26 | DTCS0 | IN 7-58 |
| 27 | 27 | DTCS1 | IN 7-57 |
| 28 | 28 | DTCS2 | IN 7-60 |
| 29 | 29 | DTCS3 | IN 7-59 |
| 30 | 30 | DTCS4 | IN 7-62 |
| 31 | 31 | DTCS5 | IN 7-61 |
| 32 | 32 | DTCS6 | IN 7-64 |
| 33 | 33 | DTCS7 | IN 7-63 |
| 34 | 34 | N.C | |
| 35 | 35 | REG GND | |
| 36 | 36 | REG GND | |
| 37 | 37 | REG GND | |
| 38 | 38 | REG +3.1V | |
| 39 | 39 | REG +3.4V | |
| 40 | 40 | REG +3.1V | |
| 41 | 41 | REG +3.4V | |
| 42 | 42 | REG +5.0V | |
| 43 | 43 | REG +6.6V | |
| 44 | 44 | REG +5.0V | |
| 45 | 45 | REG +6.6V | |

MB-833 (1/2) MB-833 (1/2)

DPR-141C/141A

DPR-141C/141A BOARD SIDE (CN2) MB-833 BOARD SIDE

| 1-42, 9-7, 10-45 | OUT | 1/2 VD | 1 | 2 | SV TRKD | OUT | 1-43, 10-43 |
|--------------------------|-----|--------------|----|----|--------------|-----|--------------------------|
| 5-16, 20-69 | OUT | N.C | 3 | 4 | L:RESET | OUT | 1-41, 10-46 |
| 20-71 | OUT | LD (PP) | 7 | 8 | LD (PP) | OUT | 20-72 |
| 20-73 | OUT | LD (RC) | 9 | 10 | SCL (DSP) | OUT | 20-74 |
| 20-75 | OUT | SDA3 (DSP) | 11 | 12 | SDA2 (DSP) | OUT | 20-76 |
| 20-77 | OUT | SDA1 (DSP) | 13 | 14 | SDA2 (DSP) | OUT | 20-78 |
| 20-79 | OUT | TITLE | 15 | 16 | TITLE BACK | OUT | 20-80 |
| 1-26 | OUT | L:VBI CS | 17 | 18 | N.C | OUT | 8-77, 19-37 |
| 8-78, 19-38 | OUT | GENLOCK (X) | 19 | 20 | H:YC BUSY | IN | 1-40 |
| 1-25 | OUT | L:YC CS | 21 | 22 | H:YC BUSY | IN | 1-40 |
| | OUT | N.C | 23 | 24 | CAL | OUT | 16-40 |
| 8-73 | IN | H:EE | 25 | 26 | H:WIDE ID ON | IN | 8-76 |
| 20-55 | IN | L:YC CONNECT | 27 | 28 | H:WIDE MODE | IN | 8-74 |
| 8-69 | IN | BFG (VTR) | 29 | 30 | N.C | IN | 8-70 |
| | IN | N.C | 31 | 32 | CLP P (VTR) | IN | 8-68 |
| 1-48, 6-65 | IN | CSYNC (VTR) | 33 | 34 | LALT (VTR) | IN | 8-66 |
| 8-63 | IN | VDAC GND | 35 | 36 | VDAC CB | IN | 8-64 |
| 8-61 | IN | VDAC Y | 37 | 38 | VDAC CR | IN | 8-62 |
| 8-59 | IN | COMP GND | 39 | 40 | VDAC CR | IN | 8-60 |
| 8-57 | IN | R-Y | 41 | 42 | Y | IN | 8-58 |
| 8-55 | IN | BLKG | 43 | 44 | B-Y | IN | 8-56 |
| 8-53 | OUT | 27MHz (G) | 45 | 46 | CF | OUT | 8-54 |
| 8-51 | IN | VF-Y | 47 | 48 | 27MHz (X) | IN | 8-52 |
| 8-49, 20-57 | OUT | HD | 49 | 50 | MARKER | OUT | 8-50, 20-58 |
| 8-47 | IN | 14MHz (G) | 51 | 52 | VD | IN | 8-48 |
| 5-21, 20-68 | IN | +18DB ON/OFF | 53 | 54 | 14MHz (X) | IN | 8-46 |
| 5-17, 8-43, 15-43, 20-20 | OUT | SDA (D/A) | 55 | 56 | 16:9/4:3 | OUT | 20-54 |
| 8-41, 15-45, 20-18 | OUT | SDA (EEPROM) | 57 | 58 | SCL (D/A) | OUT | 5-18, 8-44, 15-42, 20-21 |
| 5-22, 16-50 | OUT | DPR | 59 | 60 | SCL (EEPROM) | OUT | 8-42, 15-44, 20-19 |
| 5-15, 15-34 | IN | AHD | 61 | 62 | HTSG | IN | 15-35 |
| 15-32 | OUT | 30MHz (G) | 63 | 64 | AVD | OUT | 5-14, 15-33 |
| 15-29 | OUT | 15MHz (G) | 65 | 66 | 30MHz (X) | OUT | 15-31 |
| 5-12, 15-27 | IN | P BLKG | 67 | 68 | 15MHz (X) | IN | 15-29 |
| 5-10 | IN | G FB CLP | 69 | 70 | CLP1 | IN | 5-11, 15-24 |
| 5-8 | IN | R FB CLP | 71 | 72 | G FB CLP | IN | 5-9 |
| 5-6 | OUT | B VA (X) | 73 | 74 | FB CLP GND | OUT | 5-7 |
| 5-4 | OUT | G VA (X) | 75 | 76 | B VA (G) | OUT | 5-5 |
| 5-2 | OUT | R VA (X) | 77 | 78 | G VA (G) | OUT | 5-3 |
| | OUT | R VA (X) | 79 | 80 | R VA (G) | OUT | 5-1 |

DPR-141C/141A

DPR-141C/141A BOARD SIDE (CN1) MB-833 BOARD SIDE

| 1 | 2 | REG GND | 1 | 2 | REG GND | 1 | 2 | REG GND |
|----|-----|-----------|----|-----|-----------|----|-----|-----------|
| 3 | 4 | REG GND | 3 | 4 | REG GND | 3 | 4 | REG GND |
| 5 | 6 | REG GND | 5 | 6 | REG GND | 5 | 6 | REG GND |
| 7 | 8 | REG GND | 7 | 8 | REG GND | 7 | 8 | REG GND |
| 9 | 10 | REG -5.0V | 9 | 10 | REG -5.0V | 9 | 10 | REG -5.0V |
| 11 | 12 | REG +5.0V | 11 | 12 | REG +5.0V | 11 | 12 | REG +5.0V |
| 13 | 14 | REG +5.3V | 13 | 14 | REG +5.3V | 13 | 14 | REG +5.3V |
| 15 | 16 | REG +6.0V | 15 | 16 | REG +6.0V | 15 | 16 | REG +6.0V |
| 17 | 18 | REG +3.4V | 17 | 18 | REG +3.4V | 17 | 18 | REG +3.4V |
| 19 | 20 | REG +3.1V | 19 | 20 | REG +3.1V | 19 | 20 | REG +3.1V |
| 21 | 22 | REG +3.1V | 21 | 22 | REG +3.1V | 21 | 22 | REG +3.1V |
| 23 | 24 | REG +3.1V | 23 | 24 | REG +3.1V | 23 | 24 | REG +3.1V |
| 25 | 26 | REG +3.1V | 25 | 26 | REG +3.1V | 25 | 26 | REG +3.1V |
| 27 | 28 | REG +3.1V | 27 | 28 | REG +3.1V | 27 | 28 | REG +3.1V |
| 29 | 30 | REG +3.1V | 29 | 30 | REG +3.1V | 29 | 30 | REG +3.1V |
| 31 | 32 | REG +3.1V | 31 | 32 | REG +3.1V | 31 | 32 | REG +3.1V |
| 33 | 34 | REG +3.1V | 33 | 34 | REG +3.1V | 33 | 34 | REG +3.1V |
| 35 | 36 | REG +3.1V | 35 | 36 | REG +3.1V | 35 | 36 | REG +3.1V |
| 37 | 38 | REG +3.1V | 37 | 38 | REG +3.1V | 37 | 38 | REG +3.1V |
| 39 | 40 | REG +3.1V | 39 | 40 | REG +3.1V | 39 | 40 | REG +3.1V |
| 41 | 42 | REG +3.1V | 41 | 42 | REG +3.1V | 41 | 42 | REG +3.1V |
| 43 | 44 | REG +3.1V | 43 | 44 | REG +3.1V | 43 | 44 | REG +3.1V |
| 45 | 46 | REG +3.1V | 45 | 46 | REG +3.1V | 45 | 46 | REG +3.1V |
| 47 | 48 | REG +3.1V | 47 | 48 | REG +3.1V | 47 | 48 | REG +3.1V |
| 49 | 50 | REG +3.1V | 49 | 50 | REG +3.1V | 49 | 50 | REG +3.1V |
| 51 | 52 | REG +3.1V | 51 | 52 | REG +3.1V | 51 | 52 | REG +3.1V |
| 53 | 54 | REG +3.1V | 53 | 54 | REG +3.1V | 53 | 54 | REG +3.1V |
| 55 | 56 | REG +3.1V | 55 | 56 | REG +3.1V | 55 | 56 | REG +3.1V |
| 57 | 58 | REG +3.1V | 57 | 58 | REG +3.1V | 57 | 58 | REG +3.1V |
| 59 | 60 | REG +3.1V | 59 | 60 | REG +3.1V | 59 | 60 | REG +3.1V |
| 61 | 62 | REG +3.1V | 61 | 62 | REG +3.1V | 61 | 62 | REG +3.1V |
| 63 | 64 | REG +3.1V | 63 | 64 | REG +3.1V | 63 | 64 | REG +3.1V |
| 65 | 66 | REG +3.1V | 65 | 66 | REG +3.1V | 65 | 66 | REG +3.1V |
| 67 | 68 | REG +3.1V | 67 | 68 | REG +3.1V | 67 | 68 | REG +3.1V |
| 69 | 70 | REG +3.1V | 69 | 70 | REG +3.1V | 69 | 70 | REG +3.1V |
| 71 | 72 | REG +3.1V | 71 | 72 | REG +3.1V | 71 | 72 | REG +3.1V |
| 73 | 74 | REG +3.1V | 73 | 74 | REG +3.1V | 73 | 74 | REG +3.1V |
| 75 | 76 | REG +3.1V | 75 | 76 | REG +3.1V | 75 | 76 | REG +3.1V |
| 77 | 78 | REG +3.1V | 77 | 78 | REG +3.1V | 77 | 78 | REG +3.1V |
| 79 | 80 | REG +3.1V | 79 | 80 | REG +3.1V | 79 | 80 | REG +3.1V |
| 81 | 82 | REG +3.1V | 81 | 82 | REG +3.1V | 81 | 82 | REG +3.1V |
| 83 | 84 | REG +3.1V | 83 | 84 | REG +3.1V | 83 | 84 | REG +3.1V |
| 85 | 86 | REG +3.1V | 85 | 86 | REG +3.1V | 85 | 86 | REG +3.1V |
| 87 | 88 | REG +3.1V | 87 | 88 | REG +3.1V | 87 | 88 | REG +3.1V |
| 89 | 90 | REG +3.1V | 89 | 90 | REG +3.1V | 89 | 90 | REG +3.1V |
| 91 | 92 | REG +3.1V | 91 | 92 | REG +3.1V | 91 | 92 | REG +3.1V |
| 93 | 94 | REG +3.1V | 93 | 94 | REG +3.1V | 93 | 94 | REG +3.1V |
| 95 | 96 | REG +3.1V | 95 | 96 | REG +3.1V | 95 | 96 | REG +3.1V |
| 97 | 98 | REG +3.1V | 97 | 98 | REG +3.1V | 97 | 98 | REG +3.1V |
| 99 | 100 | REG +3.1V | 99 | 100 | REG +3.1V | 99 | 100 | REG +3.1V |

ES-31

ES-31 BOARD SIDE (CN101) MB-833 BOARD SIDE

| 1 | 2 | REG GND | 1 | 2 | REG GND | 1 | 2 | REG GND |
|----|-----|-----------|----|-----|-----------|----|-----|-----------|
| 3 | 4 | REG GND | 3 | 4 | REG GND | 3 | 4 | REG GND |
| 5 | 6 | REG GND | 5 | 6 | REG GND | 5 | 6 | REG GND |
| 7 | 8 | REG GND | 7 | 8 | REG GND | 7 | 8 | REG GND |
| 9 | 10 | REG -5.0V | 9 | 10 | REG -5.0V | 9 | 10 | REG -5.0V |
| 11 | 12 | REG +5.0V | 11 | 12 | REG +5.0V | 11 | 12 | REG +5.0V |
| 13 | 14 | REG +5.3V | 13 | 14 | REG +5.3V | 13 | 14 | REG +5.3V |
| 15 | 16 | REG +6.0V | 15 | 16 | REG +6.0V | 15 | 16 | REG +6.0V |
| 17 | 18 | REG +3.4V | 17 | 18 | REG +3.4V | 17 | 18 | REG +3.4V |
| 19 | 20 | REG +3.1V | 19 | 20 | REG +3.1V | 19 | 20 | REG +3.1V |
| 21 | 22 | REG +3.1V | 21 | 22 | REG +3.1V | 21 | 22 | REG +3.1V |
| 23 | 24 | REG +3.1V | 23 | 24 | REG +3.1V | 23 | 24 | REG +3.1V |
| 25 | 26 | REG +3.1V | 25 | 26 | REG +3.1V | 25 | 26 | REG +3.1V |
| 27 | 28 | REG +3.1V | 27 | 28 | REG +3.1V | 27 | 28 | REG +3.1V |
| 29 | 30 | REG +3.1V | 29 | 30 | REG +3.1V | 29 | 30 | REG +3.1V |
| 31 | 32 | REG +3.1V | 31 | 32 | REG +3.1V | 31 | 32 | REG +3.1V |
| 33 | 34 | REG +3.1V | 33 | 34 | REG +3.1V | 33 | 34 | REG +3.1V |
| 35 | 36 | REG +3.1V | 35 | 36 | REG +3.1V | 35 | 36 | REG +3.1V |
| 37 | 38 | REG +3.1V | 37 | 38 | REG +3.1V | 37 | 38 | REG +3.1V |
| 39 | 40 | REG +3.1V | 39 | 40 | REG +3.1V | 39 | 40 | REG +3.1V |
| 41 | 42 | REG +3.1V | 41 | 42 | REG +3.1V | 41 | 42 | REG +3.1V |
| 43 | 44 | REG +3.1V | 43 | 44 | REG +3.1V | 43 | 44 | REG +3.1V |
| 45 | 46 | REG +3.1V | 45 | 46 | REG +3.1V | 45 | 46 | REG +3.1V |
| 47 | 48 | REG +3.1V | 47 | 48 | REG +3.1V | 47 | 48 | REG +3.1V |
| 49 | 50 | REG +3.1V | 49 | 50 | REG +3.1V | 49 | 50 | REG +3.1V |
| 51 | 52 | REG +3.1V | 51 | 52 | REG +3.1V | 51 | 52 | REG +3.1V |
| 53 | 54 | REG +3.1V | 53 | 54 | REG +3.1V | 53 | 54 | REG +3.1V |
| 55 | 56 | REG +3.1V | 55 | 56 | REG +3.1V | 55 | 56 | REG +3.1V |
| 57 | 58 | REG +3.1V | 57 | 58 | REG +3.1V | 57 | 58 | REG +3.1V |
| 59 | 60 | REG +3.1V | 59 | 60 | REG +3.1V | 59 | 60 | REG +3.1V |
| 61 | 62 | REG +3.1V | 61 | 62 | REG +3.1V | 61 | 62 | REG +3.1V |
| 63 | 64 | REG +3.1V | 63 | 64 | REG +3.1V | 63 | 64 | REG +3.1V |
| 65 | 66 | REG +3.1V | 65 | 66 | REG +3.1V | 65 | 66 | REG +3.1V |
| 67 | 68 | REG +3.1V | 67 | 68 | REG +3.1V | 67 | 68 | REG +3.1V |
| 69 | 70 | REG +3.1V | 69 | 70 | REG +3.1V | 69 | 70 | REG +3.1V |
| 71 | 72 | REG +3.1V | 71 | 72 | REG +3.1V | 71 | 72 | REG +3.1V |
| 73 | 74 | REG +3.1V | 73 | 74 | REG +3.1V | 73 | 74 | REG +3.1V |
| 75 | 76 | REG +3.1V | 75 | 76 | REG +3.1V | 75 | 76 | REG +3.1V |
| 77 | 78 | REG +3.1V | 77 | 78 | REG +3.1V | 77 | 78 | REG +3.1V |
| 79 | 80 | REG +3.1V | 79 | 80 | REG +3.1V | 79 | 80 | REG +3.1V |
| 81 | 82 | REG +3.1V | 81 | 82 | REG +3.1V | 81 | 82 | REG +3.1V |
| 83 | 84 | REG +3.1V | 83 | 84 | REG +3.1V | 83 | 84 | REG +3.1V |
| 85 | 86 | REG +3.1V | 85 | 86 | REG +3.1V | 85 | 86 | REG +3.1V |
| 87 | 88 | REG +3.1V | 87 | 88 | REG +3.1V | 87 | 88 | REG +3.1V |
| 89 | 90 | REG +3.1V | 89 | 90 | REG +3.1V | 89 | 90 | REG +3.1V |
| 91 | 92 | REG +3.1V | 91 | 92 | REG +3.1V | 91 | 92 | REG +3.1V |
| 93 | 94 | REG +3.1V | 93 | 94 | REG +3.1V | 93 | 94 | REG +3.1V |
| 95 | 96 | REG +3.1V | 95 | 96 | REG +3.1V | 95 | 96 | REG +3.1V |
| 97 | 98 | REG +3.1V | 97 | 98 | REG +3.1V | 97 | 98 | REG +3.1V |
| 99 | 100 | REG +3.1V | 99 | 100 | REG +3.1V | 99 | 100 | REG +3.1V |

DC-DC CONVERTER

MB-833 BOARD SIDE

| 1 | 2 | UNREG GND | 1 | 2 | UNREG GND | 1 | 2 | UNREG GND |
|----|----|------------|----|----|------------|----|----|------------|
| 3 | 4 | SWD EXT DC | 3 | 4 | SWD EXT DC | 3 | 4 | SWD EXT DC |
| 5 | 6 | REG GND | 5 | 6 | REG GND | 5 | 6 | REG GND |
| 7 | 8 | REG +3.4V | 7 | 8 | REG +3.4V | 7 | 8 | REG +3.4V |
| 9 | 10 | REG +3.1V | 9 | 10 | REG +3.1V | 9 | 10 | REG +3.1V |
| 11 | 12 | REG GND | 11 | 12 | REG GND | 11 | 12 | REG GND |
| 13 | 14 | REG -5.0V | 13 | 14 | REG -5.0V | 13 | 14 | REG -5.0V |
| 15 | 16 | REG +5.0V | 15 | 16 | REG +5.0V | 15 | 16 | REG +5.0V |
| 17 | 18 | REG +5.3V | 17 | 18 | REG +5.3V | 17 | 18 | REG +5.3V |
| 19 | 20 | REG +6.0V | 19 | 20 | REG +6.0V | 19 | 20 | REG +6.0V |
| 21 | 22 | REG +9.0V | 21 | 22 | REG +9.0V | 21 | 22 | REG +9.0V |
| 23 | 24 | M GND | 23 | 24 | M GND | 23 | 24 | M GND |
| 25 | 26 | M +6V | 25 | 26 | M +6V | 25 | 26 | M +6V |
| 27 | 28 | N.C | 27 | 28 | N.C | 27 | 28 | N.C |

DU-36, MB-833 (2/2)

DU-36, MB-833 (2/2)

AA-104

AA-104 BOARD SIDE (CN504) MB-833 BOARD SIDE

| | | | | |
|----|----|-----------------------|-----|--------------------|
| 56 | 1 | 1KHz | OUT | 20-41 |
| 49 | 2 | PEAKING CONT | IN | 20-40 |
| 48 | 3 | ZOOM CONT | IN | 20-46, 16-5 |
| 47 | 4 | REMOTE1 | IN | 20-38 |
| 46 | 5 | LD (VF) | OUT | 20-37 |
| 45 | 6 | FOCUS CONT | IN | 20-51, 16-41 |
| 44 | 7 | BATT IND | OUT | 20-35 |
| 43 | 8 | SDA (S-P) (AT/AA PSW) | OUT | 16-10, 20-34 |
| 42 | 9 | REC TALLY | OUT | 20-33 |
| 41 | 10 | RCK | OUT | 1-13, 16-12, 20-32 |
| 40 | 11 | SHIFT/LOAD | OUT | 1-12, 16-13, 20-31 |
| 39 | 12 | SCLK (S/P) | OUT | 1-11, 16-14, 20-30 |
| 38 | 13 | G | OUT | 1-10, 16-15, 20-29 |
| 37 | 14 | SDA (P-S) (AA/PSW) | IN | 16-16 |
| 36 | 15 | VF VIDEO (G) | OUT | 8-25 |
| 35 | 16 | VF VIDEO (G) | OUT | 8-26 |
| 34 | 17 | B-Y (VF) | OUT | 8-27 |
| 33 | 18 | R-Y (VF) | OUT | 8-28 |
| 32 | 19 | SYNC (VF) | OUT | 8-29 |
| 31 | 20 | BACK TALLY SW | IN | 1-29 |
| 30 | 21 | BACK TALLY GND | IN | 1-29 |
| 29 | 22 | BACK TALLY | OUT | 1-27 |
| 28 | 23 | EARPHONE (G) | OUT | 1-24 |
| 27 | 24 | EARPHONE (G) | OUT | 1-23 |
| 26 | 25 | EARPHONE SW (Y) | IN | 1-22 |
| 25 | 26 | MIC1 (G) | IN | 1-21 |
| 24 | 27 | MIC1 (Y) | IN | 1-20 |
| 23 | 28 | MIC1 (X) | IN | 1-19 |
| 22 | 29 | CONV LENS | IN | 16-39 |
| 21 | 30 | SDA (P-S) (FP/AA) | OUT | 1-15 |
| 20 | 31 | SDA (S-P) (FP/AA) | OUT | 1-15 |
| 19 | 32 | LIGHT SW | IN | 1-14 |
| 18 | 33 | REG GND | | |
| 17 | 34 | REG GND | | |
| 16 | 35 | REG +48.0V | | |
| 15 | 36 | REG +48.0V | | |
| 14 | 37 | REG -5.0V | | |
| 13 | 38 | REG -5.0V | | |
| 12 | 39 | REG +9.0V | | |
| 11 | 40 | REG +9.0V | | |
| 10 | 41 | REG +4.9V | | |
| 9 | 42 | REG +4.9V | | |
| 8 | 43 | SWD EXT DC | | |
| 7 | 44 | SWD EXT DC | | |
| 6 | 45 | SWD EXT DC | | |
| 5 | 46 | UNREG GND | | |
| 4 | 47 | UNREG GND | | |
| 3 | 48 | UNREG GND | | |
| 2 | 49 | REG GND | | |
| 1 | 50 | REG GND | | |

PSW-71

PSW-71 BOARD SIDE (CN306) MB-833 BOARD SIDE

| | | | | |
|----|----|-----------------------|------|--------------------|
| 56 | 1 | RS232C (G/RM) | OUT | 20-50 |
| 49 | 2 | RS232C (RM/C) | IN | 20-49 |
| 48 | 3 | S DATA (RM) | I/O | 20-48 |
| 47 | 4 | SDA (P-S) (PSW/AT) | IN | 20-47 |
| 46 | 5 | ZOOM CONT | OUT | 20-46, 14-3 |
| 45 | 6 | IRIS CONT | OUT | 20-45 |
| 44 | 7 | AUTO/MANU | OUT | 20-44 |
| 43 | 8 | IRIS POS1 | IN | 20-43 |
| 42 | 9 | VJ CONNECT | IN | 20-8 |
| 41 | 10 | SDA (S-P) (AT/AA PSW) | OUT | 14-8, 20-34 |
| 40 | 11 | REC TALLY 2 | OUT | 20-36 |
| 39 | 12 | RCK | OUT | 1-13, 14-16, 20-32 |
| 38 | 13 | SHIFT/LOAD | OUT | 1-12, 14-11, 20-31 |
| 37 | 14 | SCLK (S/P) | OUT | 1-11, 14-12, 20-30 |
| 36 | 15 | G | OUT | 1-10, 14-13, 20-29 |
| 35 | 16 | SDA (P-S) (AA/PSW) | OUT | 14-14 |
| 34 | 17 | REG -5.0V | | |
| 33 | 18 | REG +9.0V | | |
| 32 | 19 | REG +4.9V | | |
| 31 | 20 | REG +4.9V | | |
| 30 | 21 | SWD EXT DC | | |
| 29 | 22 | SWD EXT DC | | |
| 28 | 23 | SWD EXT DC | | |
| 27 | 24 | UNREG GND | | |
| 26 | 25 | UNREG GND | | |
| 25 | 26 | UNREG GND | | |
| 24 | 27 | REG GND | | |
| 23 | 28 | REG GND | | |
| 22 | 29 | EXT VTR TRG | IN | 19-18 |
| 21 | 30 | L POWER ON (PSW-CP) | IN | 19-30 |
| 20 | 31 | L POWER ON (FP-PSW) | OUT | 2-26 |
| 19 | 32 | H MAIN SW ON | IN | 2-26 |
| 18 | 33 | SDA (C/LENS) | OUT | 20-52 |
| 17 | 34 | SDA (LENS/G) | IN | 20-53 |
| 16 | 35 | VBS (RM) (G) | OUT | 8-24 |
| 15 | 36 | VBS (RM) (X) | OUT | 8-23 |
| 14 | 37 | VBS (BNC) (G) | OUT | 8-22 |
| 13 | 38 | VBS (BNC) (X) | OUT | 8-21 |
| 12 | 39 | CONV LENS | OUT | 14-19 |
| 11 | 40 | CAL | IN | 8-24 |
| 10 | 41 | FOCUS CONT | OUT | 20-51, 14-6 |
| 9 | 42 | FOCUS POS1 | N.C. | |
| 8 | 43 | ZOOM POS1 | N.C. | |
| 7 | 44 | EXTEND ON/OFF | N.C. | |
| 6 | 45 | SDA (S-P) (PSW/FP) | IN | 1-9 |
| 5 | 46 | VTR TRIG | IN | 1-8 |
| 4 | 47 | AUDIO VOLUME | IN | 1-7 |
| 3 | 48 | VJ MIC (G) | IN | 1-6 |
| 2 | 49 | VJ MIC (X) | IN | 1-5 |
| 1 | 50 | DPR | IN | 5-22, 6-61 |

AT-150/142


AT-150/142 BOARD SIDE (CN501) MB-833 BOARD SIDE

| | | | | | | | |
|-------------------------|-----|--------------------|----|-----|-----------------------|-----|-------------------------|
| | | REG GND N.C | 1 | 2 | REG GND N.C | | |
| | | REG GND N.C | 3 | 4 | REG GND N.C | | |
| | | REG GND N.C | 5 | 6 | BATTERY 1D | OUT | 2-30, 19-27 |
| 19-41, 2-27 | OUT | DC INLET | 7 | 8 | VJ CONNECT | OUT | 16-9 |
| 19-13, 8-87 | OUT | CCZ DC | 9 | 10 | REC ALARM | OUT | 19-15 |
| 19-17 | OUT | CCZ BATT IND | 11 | 12 | BATT ALARM | OUT | 1-35 |
| 1-34 | OUT | SCLK VTR | 13 | 14 | SDA (V/G) | OUT | 1-33 |
| 1-32 | IN | SDA (C/V) | 15 | 16 | CS VTR | OUT | 1-31 |
| 1-30 | OUT | INT VTR TALLY | 17 | 18 | SDA (EEPROM) | I/O | 15-45, 6-59, 8-41 |
| 15-44, 6-60, 8-42 | IN | SDA (C/A) | 19 | 20 | SDA (Q/A) | IN | 15-43, 6-57, 8-43, 5-17 |
| 15-42, 6-58, 8-44, 5-18 | IN | SCL (Q/A) | 21 | 22 | LD (TQ) | IN | 15-41 |
| 15-40 | IN | LD (SHUT) | 23 | 24 | SDA (SHUT) | IN | 15-39 |
| 15-38 | IN | SCL (SHUT) | 25 | 26 | TEMP DATA | OUT | 15-37 |
| 5-19 | IN | LD (VA2) | 27 | 28 | LD (VA1) | IN | 5-20 |
| 14-13, 18-15, 1-10 | IN | G | 29 | 30 | SCLK (S/P) | IN | 14-12, 16-14, 1-11 |
| 14-11, 16-13, 1-12 | IN | SHIFT/LOAD | 31 | 32 | RCK | IN | 14-10, 16-12, 1-13 |
| 14-9 | IN | REC TALLY | 33 | 34 | SDA (S-P) (AT/AA PSW) | IN | 14-8, 16-10 |
| 14-7 | OUT | BATT IND | 35 | 36 | RCK TALLY 2 | IN | 16-11 |
| 14-5 | IN | LD (VF) | 37 | 38 | HM:FF1 | OUT | 14-4 |
| 15-36 | OUT | SCL (G/F) | 39 | 40 | PSW:FF1 | OUT | 14-2 |
| 14-1 | IN | HM | 41 | 42 | W:FF1 | OUT | 8-30 |
| 12-6 | OUT | IRIS P:1 | 43 | 44 | W:FF2 | IN | 16-7 |
| 16-6 | IN | IRIS INT | 45 | 46 | W:FF2 | IN | 16-5, 14-3 |
| 16-4 | IN | SDA (P-S) (P/W AT) | 47 | 48 | S DATA RM | I/O | 16-3 |
| 16-2 | OUT | RS232C RM | 49 | 50 | RS232C C RM | IN | 16-1 |
| 16-41, 14-6 | IN | FOCUS CONT | 51 | 52 | SDA (C/LENS) | IN | 16-33 |
| 16-34 | OUT | SDA (LENS/C) | 53 | 54 | 16 9/4 3 | IN | 6-56 |
| 6-29 | OUT | LVC CONNECT | 55 | 56 | VD | OUT | 8-50, 6-52 |
| 8-49, 6-51 | OUT | HD | 57 | 58 | GENLOCK INT/EXT | OUT | 8-40 |
| 8-39 | OUT | NTSC/PAL | 59 | 60 | VF CHR | IN | 8-38 |
| 8-37 | IN | VF CHR BACK | 61 | 62 | LD (ES3) | IN | 8-36 |
| 8-35 | IN | LD (ES4) | 63 | 64 | LD (ES1) | IN | 8-34 |
| 8-33 | IN | LD (ES2) | 65 | 66 | N.C | | |
| 5-13 | IN | VA ENABLE | 67 | 68 | +18DB ON/OFF | IN | 5-21, 6-55 |
| 6-5, 5-18 | IN | LS1 RESET | 69 | 70 | LD (DPR) | IN | 6-6 |
| 6-7 | IN | LD (IPP) | 71 | 72 | LD (IPR) | IN | 6-8 |
| 6-9 | IN | LD (IRC) | 73 | 74 | SCL (DSP) | IN | 6-10 |
| 6-11 | I/O | SDA3 (DSP) | 75 | 76 | SDA2 (DSP) | I/O | 6-12 |
| 6-13 | I/O | SDA1 (DSP) | 77 | 78 | SDA0 (DSP) | I/O | 6-14 |
| 6-15 | IN | TITLE | 79 | 80 | TITLE BACK | IN | 6-16 |
| N.C | | TEST1 | 81 | 82 | TEST2 | | |
| | | SWD EXT DC | 83 | 84 | SWD EXT DC | | |
| | | UNREG GND | 85 | 86 | UNREG GND | | |
| | | REG GND NC | 87 | 88 | NC | | |
| | | REG +4.9V | 89 | 90 | REG +4.9V | | |
| | | REG +9.0V | 91 | 92 | REG +9.0V | | |
| | | REG +5.3V | 93 | 94 | REG +5.3V | | |
| | | REG +3.1V | 95 | 96 | REG +3.1V | | |
| | | REG -5.0V | 97 | 98 | REG -5.0V | | |
| | | REG GND | 99 | 100 | REG GND | | |

TG-187

TG-187 BOARD SIDE (CN1) MB-833 BOARD SIDE

| | | | | |
|----|----|--------------|-----|-------------------------|
| 45 | 1 | REG +48.0V | | |
| 44 | 2 | REG +48.0V | | |
| 43 | 3 | REG +6.6V | | |
| 42 | 4 | REG +6.6V | | |
| 41 | 5 | REG +6.6V | | |
| 40 | 6 | REG GND | | |
| 39 | 7 | REG GND | | |
| 38 | 8 | REG GND | | |
| 37 | 9 | REG GND | | |
| 36 | 10 | REG GND | | |
| 35 | 11 | REG -10.5V | | |
| 34 | 12 | REG -10.5V | | |
| 33 | 13 | REG -5.0V | | |
| 32 | 14 | REG -5.0V | | |
| 31 | 15 | REG +5.3V | | |
| 30 | 16 | REG +5.3V | | |
| 29 | 17 | REG +5.3V | | |
| 28 | 18 | REG +5.3V | | |
| 27 | 19 | REG +9.0V | | |
| 26 | 20 | REG +9.0V | | |
| 25 | 21 | REG +16.1V | | |
| 24 | 22 | REG +16.1V | | |
| 23 | 23 | VCO CTL | OUT | 8-31 |
| 22 | 24 | CLP1 | IN | 5-11, 6-70 |
| 21 | 25 | FLD | OUT | 8-32 |
| 20 | 26 | DOUBLE PIX | IN | N.C |
| 19 | 27 | P BLKG | OUT | 5-12, 6-69 |
| 18 | 28 | 16MHz (X) | IN | 6-68 |
| 17 | 29 | 16MHz (G) | IN | 6-67 |
| 16 | 30 | REG GND | | |
| 15 | 31 | 36MHz (X) | IN | 6-66 |
| 14 | 32 | 36MHz (G) | IN | 6-65 |
| 13 | 33 | AVD | OUT | 6-64, 5-14 |
| 12 | 34 | AHD | OUT | 6-63, 5-15 |
| 11 | 35 | HTSG | OUT | 6-62 |
| 10 | 36 | SCL (DEF) | OUT | 20-39 |
| 9 | 37 | TEMP DATA | IN | 20-26 |
| 8 | 38 | SCL (SHUT) | OUT | 20-25 |
| 7 | 39 | SDA (SHUT) | OUT | 20-24 |
| 6 | 40 | LD (SHUT) | OUT | 20-23 |
| 5 | 41 | LD (TQ) | OUT | 20-22 |
| 4 | 42 | SCL (Q/A) | OUT | 20-21, 6-58, 8-44, 5-18 |
| 3 | 43 | SDA (Q/A) | OUT | 20-20, 6-57, 8-43, 5-17 |
| 2 | 44 | SCL (EEPROM) | OUT | 20-19, 6-60, 8-42 |
| 1 | 45 | SDA (EEPROM) | I/O | 20-18, 6-59, 8-41 |

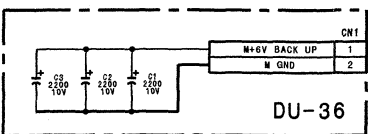

CP-373/315

| | | | |
|---|------------|---------------------------------|--|
| | | CN22 | |
| 1 | UNREG GND | 13-1, 13-2 | |
| 2 | SWD EXT DC | 13-3, 13-4, 21-28, 21-29, 19-60 | |
| | | 2-45, 2-46, 2-47 | |
| | | 14-43, 14-44, 14-45 | |
| | | 16-21, 16-22, 16-23 | |

BACKUP

| | | | |
|---|--------------|-------|--|
| | | CN23 | |
| 1 | M +6V BACKUP | 10-15 | |
| 2 | M GND | | |

MB-833

DU-36

BOARD NO. 1-673-954-11, 21

MB-833 (2/2)

BOARD NO. 1-673-965-11, 12

B-DSR500WS-MB833-SM


DSR-390/390P/370/370P/300A/300AP V2

Section 5
Board Layouts


Index

| Board | Page | Remarks |
|---------|------|-----------------------|
| AA-104 | 5-2 | |
| AT-142 | 5-4 | DSR-300A/300AP |
| AT-150 | 5-3 | DSR-390/390P/370/370P |
| CC-68 | 5-6 | |
| CN-1519 | 5-6 | DSR-300A/300AP |
| CN-1823 | 5-5 | |
| CN-1864 | 5-5 | |
| CN-1865 | 5-5 | |
| CN-1866 | 5-6 | |
| CN-1867 | 5-6 | |
| CN-1873 | 5-6 | |
| CN-1874 | 5-6 | |
| CN-2277 | 5-5 | DSR-390/390P/370/370P |
| CP-315 | 5-9 | DSR-300A/300AP |
| CP-373 | 5-8 | DSR-390/390P/370/370P |
| DPR-141 | 5-10 | |
| DU-36 | 5-7 | |
| DV-21 | 5-7 | |
| ES-31 | 5-12 | |
| FP-118 | 5-14 | DSR-390/390P/370/370P |
| FP-122 | 5-16 | DSR-300A/300AP |
| FP-99 | 5-7 | |
| GCN-16 | 5-7 | |
| HN-227 | 5-19 | |
| IR-33 | 5-18 | |
| KY-405 | 5-18 | |
| LE-221 | 5-18 | |
| MB-833 | 5-21 | |
| MT-114 | 5-19 | |
| PA-205 | 5-18 | |
| PA-206 | 5-18 | |
| PA-207 | 5-18 | |
| PS-570 | 5-20 | |
| PSW-71 | 5-20 | |
| RP-91 | 5-24 | |
| SE-295 | 5-19 | |
| SE-297 | 5-19 | |
| SE-298 | 5-19 | |
| SE-566 | 5-20 | |
| SV-213 | 5-22 | |


| Board | Page | Remarks |
|--------|------|---------|
| SW-18 | 5-24 | |
| SW-19 | 5-24 | |
| SW-929 | 5-24 | |
| TG-187 | 5-25 | |
| VA-199 | 5-26 | |

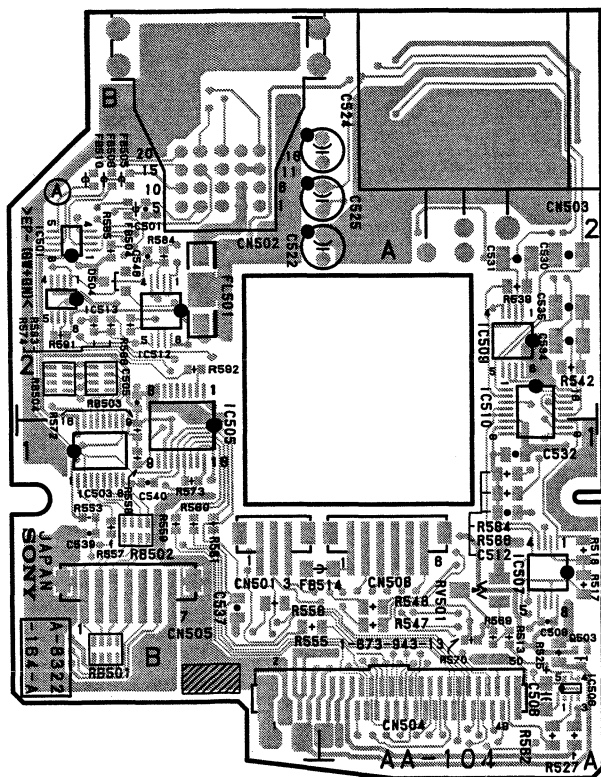


AA-104 -A SIDE-
SUFFIX: -13, 21

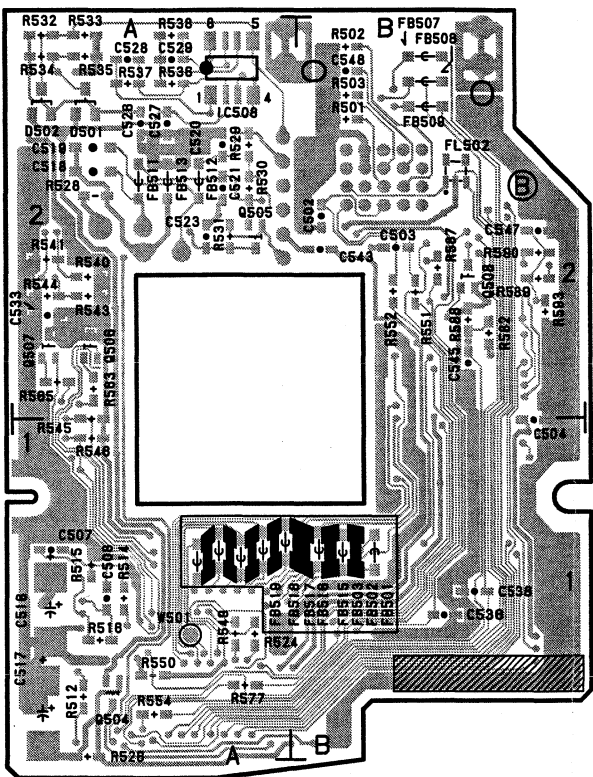

AA-104 -B SIDE-
SUFFIX: -13, 21

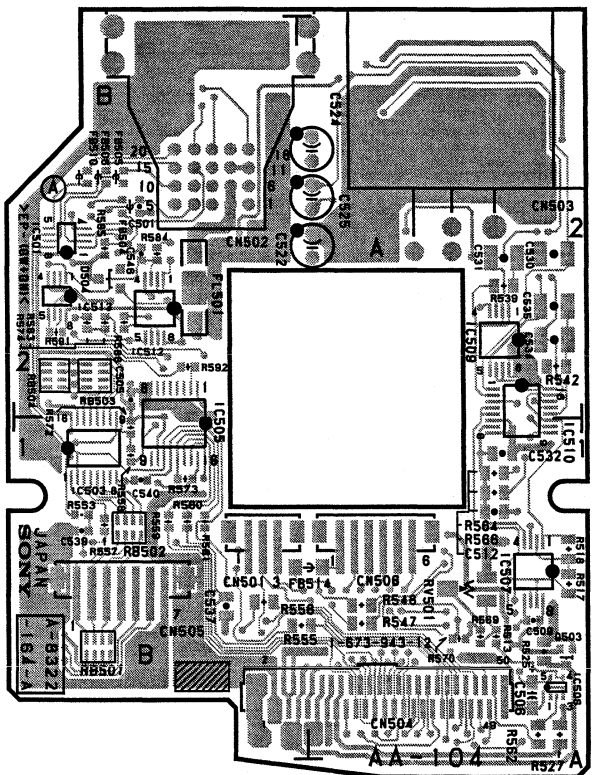

AA-104 -A SIDE-
SUFFIX: -12

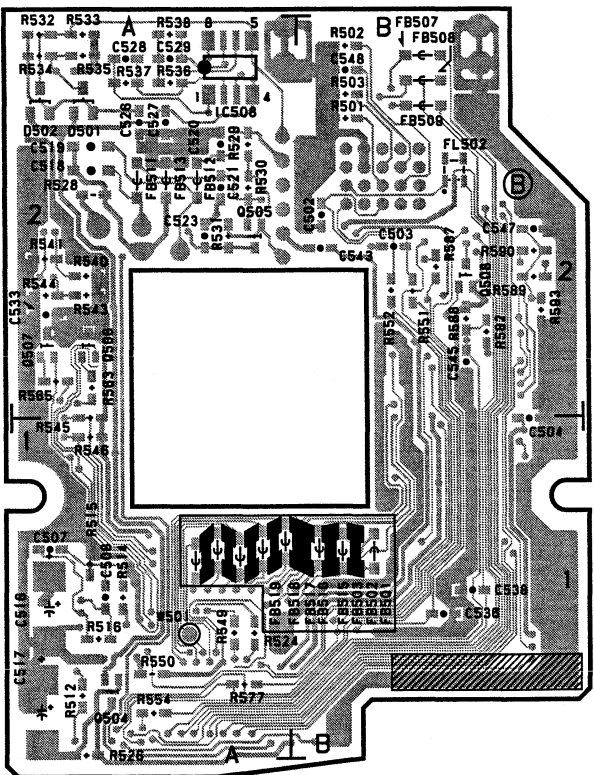

AA-104 -B SIDE-
SUFFIX: -12

AA-104 (1-673-943-13, 21)


| | | | | | | | | | |
|------|-----|-------|-----|-------|-----|------|-----|-------|-----|
| C501 | B2 | C547 | *A2 | IC503 | B1 | R535 | *A2 | R589 | *A2 |
| C502 | *A2 | | | IC505 | B1 | R536 | *A2 | R590 | *A2 |
| C503 | *A2 | CN501 | B1 | IC506 | A1 | R537 | *A2 | R591 | B2 |
| C504 | *A1 | CN502 | B2 | IC507 | A1 | R538 | *A2 | R592 | B2 |
| C505 | B2 | CN503 | A2 | IC508 | *A2 | R539 | A2 | R593 | *A2 |
| C506 | A1 | CN504 | A1 | IC509 | A2 | R540 | *A2 | RB501 | B1 |
| C507 | *A1 | CN505 | B1 | IC510 | A2 | R541 | *A2 | RB502 | B1 |
| C508 | *A1 | CN506 | A1 | IC512 | B2 | R542 | A2 | RB503 | B2 |
| C509 | A1 | | | IC513 | B2 | R544 | *A2 | RB504 | B2 |
| C512 | A1 | D501 | *A2 | | | R547 | A1 | RV501 | A1 |
| C516 | *A1 | D502 | *A2 | Q503 | A1 | R548 | A1 | | |
| C517 | *A1 | D504 | B2 | Q504 | *A1 | R549 | *A1 | | |
| C518 | *A2 | | | Q505 | *A2 | R550 | *A1 | | |
| C519 | *A2 | FB501 | *A1 | Q506 | *A2 | R551 | *A2 | | |
| C520 | *A2 | FB502 | *A1 | Q507 | *A2 | R552 | *A2 | | |
| C521 | *A2 | FB503 | *A1 | | | R553 | B1 | | |
| C522 | A2 | FB504 | B2 | R501 | *A2 | R554 | *A1 | | |
| C523 | *A2 | FB505 | B2 | R502 | *A2 | R555 | B1 | | |
| C524 | A2 | FB506 | B2 | R503 | *A2 | R556 | B1 | | |
| C525 | A2 | FB507 | *A2 | R504 | *A2 | R557 | B1 | | |
| C526 | *A2 | FB508 | *A2 | R512 | *A1 | R558 | B1 | | |
| C527 | *A2 | FB509 | *A2 | R513 | A1 | R559 | B1 | | |
| C528 | *A2 | FB510 | B2 | R514 | *A1 | R560 | B1 | | |
| C529 | *A2 | FB511 | *A2 | R515 | *A1 | R561 | B1 | | |
| C530 | A2 | FB512 | *A2 | R516 | *A1 | R562 | A1 | | |
| C531 | A2 | FB513 | *A2 | R517 | A1 | R563 | *A2 | | |
| C532 | A1 | FB514 | A1 | R518 | A1 | R564 | A1 | | |
| C533 | *A2 | FB515 | *A1 | R524 | *A1 | R565 | *A2 | | |
| C534 | A2 | FB516 | *A1 | R525 | A1 | R566 | A1 | | |
| C535 | A2 | FB517 | *A1 | R526 | *A1 | R572 | B1 | | |
| C536 | *A1 | FB518 | *A1 | R527 | A1 | R573 | B1 | | |
| C537 | B1 | FB519 | *A1 | R528 | *A2 | R582 | *B2 | | |
| C538 | *A1 | | | R529 | *A2 | R583 | B2 | | |
| C540 | B1 | FL501 | B2 | R530 | *A2 | R584 | B2 | | |
| C543 | *A2 | FL502 | *A2 | R531 | *A2 | R585 | B2 | | |
| C545 | *A2 | | | R533 | *A2 | R586 | B2 | | |
| C546 | B2 | IC501 | B2 | R534 | *A2 | R587 | *A2 | | |

AA-104 (1-673-943-12)


| | | | | | | | | | |
|------|-----|-------|-----|-------|-----|------|-----|-------|-----|
| C501 | B2 | C546 | B2 | IC501 | B2 | R533 | *A2 | R573 | B1 |
| C502 | *B2 | C547 | *B2 | IC503 | B1 | R534 | *A2 | R574 | B2 |
| C503 | *B2 | C548 | *B2 | IC505 | B1 | R535 | *A2 | R577 | *A1 |
| C504 | *B1 | | | IC506 | A1 | R536 | *A2 | R582 | *B2 |
| C505 | B2 | CN501 | B1 | IC507 | A1 | R537 | *A2 | R583 | B2 |
| C506 | A1 | CN502 | B2 | IC508 | *A2 | R538 | *A2 | R584 | B2 |
| C507 | *A1 | CN503 | A2 | IC509 | A2 | R539 | A2 | R585 | B2 |
| C508 | *A1 | CN504 | A1 | IC510 | A2 | R540 | *A2 | R586 | B2 |
| C509 | A1 | CN505 | B1 | IC512 | B2 | R541 | *A2 | R587 | *B2 |
| C512 | A1 | CN506 | A1 | IC513 | B2 | R542 | A2 | R588 | *B2 |
| C516 | *A1 | | | | | R543 | *A2 | R589 | *B2 |
| C517 | *A1 | D501 | *A2 | Q503 | A1 | R544 | *A2 | R590 | *B2 |
| C518 | *A2 | D502 | *A2 | Q504 | *A1 | R545 | *A2 | R591 | B2 |
| C519 | *A2 | D504 | B2 | Q505 | *A2 | R546 | *A1 | R592 | B2 |
| C520 | *A2 | | | Q506 | *A2 | R547 | A1 | R593 | *B2 |
| C521 | *A2 | FB501 | *B1 | Q507 | *A2 | R548 | A1 | | |
| C522 | A2 | FB502 | *B1 | Q508 | *B2 | R549 | *A1 | RB501 | B1 |
| C523 | *A2 | FB503 | *B1 | | | R550 | *A1 | RB502 | B1 |
| C524 | A2 | FB504 | B2 | R501 | *B2 | R551 | *B2 | RB503 | B2 |
| C525 | A2 | FB505 | B2 | R502 | *B2 | R552 | *B2 | RB504 | B2 |
| C526 | *A2 | FB506 | B2 | R503 | *B2 | R553 | B1 | | |
| C527 | *A2 | FB507 | *B2 | R512 | *A1 | R554 | *A1 | RV501 | A1 |
| C528 | *A2 | FB508 | *B2 | R513 | A1 | R555 | B1 | | |
| C529 | *A2 | FB509 | *B2 | R514 | *A1 | R556 | B1 | W501 | *A1 |
| C530 | A2 | FB510 | B2 | R515 | *A1 | R557 | B1 | | |
| C531 | A2 | FB511 | *A2 | R516 | *A1 | R558 | B1 | | |
| C532 | A1 | FB512 | *A2 | R517 | A1 | R559 | B1 | | |
| C533 | *A2 | FB513 | *A2 | R518 | A1 | R560 | B1 | | |
| C534 | A2 | FB514 | A1 | R524 | *A1 | R561 | B1 | | |
| C535 | A2 | FB515 | *A1 | R525 | A1 | R562 | A1 | | |
| C536 | *A1 | FB516 | *A1 | R526 | *A1 | R563 | *A2 | | |
| C537 | B1 | FB517 | *A1 | R527 | A1 | R564 | A1 | | |
| C538 | *A1 | FB518 | *A1 | R528 | *A2 | R565 | *A2 | | |
| C540 | B1 | FB519 | *A1 | R529 | *A2 | R566 | A1 | | |
| C543 | *A2 | | | R530 | *A2 | R569 | A1 | | |
| C545 | *A2 | FL501 | B2 | R531 | *A2 | R570 | A1 | | |
| C546 | B2 | FL502 | *B2 | R532 | *A2 | R572 | B1 | | |

AT-150 (1-683-381-12, 21)

| | | | | | |
|------|-----|-------|-----|------|-----|
| C501 | C4 | C740 | *A1 | L513 | C3 |
| C502 | *B4 | C741 | *A1 | L701 | C2 |
| C503 | *C4 | C742 | *A3 | L702 | *A2 |
| C504 | C4 | C743 | *A4 | L704 | *B2 |
| C505 | C4 | C744 | *A4 | L706 | *A2 |
| C506 | *C4 | C745 | *A1 | L707 | *A4 |
| C507 | *C4 | C746 | A4 | | |
| C508 | *C4 | C747 | B4 | Q501 | *B4 |
| C509 | B4 | C748 | B3 | Q502 | C4 |
| C510 | B4 | | | Q503 | C4 |
| C511 | *B3 | CN501 | B4 | Q504 | *A3 |
| C512 | B4 | CN503 | *C4 | Q505 | *C3 |
| C513 | C4 | | | Q506 | *C4 |
| C514 | *C4 | CV501 | C3 | Q508 | *C4 |
| C515 | C4 | CV502 | C3 | Q509 | *C4 |
| C516 | *A3 | CV701 | A1 | Q510 | C3 |
| C517 | *C3 | | | Q511 | C3 |
| C518 | *C3 | D501 | C4 | Q512 | *C4 |
| C519 | *C3 | D502 | B3 | Q513 | *B4 |
| C520 | *C3 | D503 | *C3 | Q517 | *C3 |
| C521 | *C3 | D504 | *C3 | Q701 | *A3 |
| C522 | B3 | D505 | A4 | | |
| C523 | *B2 | D506 | *A4 | R501 | C4 |
| C524 | *C3 | D507 | A4 | R502 | *C4 |
| C525 | *C3 | D508 | *C4 | R503 | *C4 |
| C526 | *C3 | D509 | *C4 | R504 | *C4 |
| C527 | C3 | D511 | *B4 | R505 | *C4 |
| C528 | *C3 | D512 | *C4 | R506 | *C4 |
| C529 | *A4 | D702 | *A1 | R507 | C3 |
| C530 | *A3 | D703 | *A1 | R508 | B3 |
| C531 | A4 | D704 | *A2 | R509 | *B3 |
| C532 | *A4 | D705 | *B3 | R510 | C4 |
| C533 | A4 | | | R511 | B4 |
| C534 | *A4 | E1 | A3 | R512 | C4 |
| C536 | *A4 | | | R513 | C4 |
| C537 | *A4 | IC501 | C4 | R514 | C4 |
| C538 | *A3 | IC502 | *C4 | R515 | C4 |
| C539 | *A3 | IC504 | *B3 | R516 | C4 |
| C540 | C3 | IC506 | B3 | R517 | C4 |
| C541 | *C4 | IC507 | *C4 | R518 | C4 |
| C542 | *C3 | IC508 | A3 | R519 | C4 |
| C543 | C3 | IC509 | *C3 | R520 | *B3 |
| C544 | *C4 | IC510 | C3 | R521 | *A3 |
| C545 | C4 | IC511 | *C2 | R522 | *A3 |
| C546 | C4 | IC512 | B3 | R523 | *A3 |
| C547 | *C3 | IC513 | B4 | R524 | A3 |
| C548 | *A4 | IC514 | *C3 | R525 | A3 |
| C549 | *A4 | IC515 | C3 | R526 | *A3 |
| C550 | *C3 | IC516 | C3 | R527 | *A3 |
| C551 | C3 | IC517 | *C3 | R528 | *C3 |
| C552 | *C3 | IC518 | A4 | R529 | *C3 |
| C553 | *C3 | IC519 | A4 | R530 | *C3 |
| C554 | *C3 | IC520 | *A4 | R531 | B3 |
| C555 | C4 | IC521 | C4 | R532 | C3 |
| C556 | *C4 | IC522 | C4 | R533 | *B3 |
| C557 | C4 | IC524 | C4 | R534 | *B3 |
| C558 | *B4 | IC525 | B3 | R535 | C3 |
| C559 | B3 | IC526 | *C3 | R536 | B4 |
| C560 | *B3 | IC527 | *C3 | R537 | *B3 |
| C576 | C3 | IC528 | C4 | R538 | *C3 |
| C577 | C3 | IC529 | *C4 | R539 | *C3 |
| C578 | *A4 | IC530 | B4 | R540 | *C3 |
| C579 | *B4 | IC531 | C3 | R541 | *C3 |
| C580 | *A4 | IC550 | *B4 | R542 | *C3 |
| C701 | C2 | IC551 | *B4 | R543 | *A4 |
| C702 | C2 | IC701 | *C2 | R544 | *A4 |
| C703 | *B2 | IC702 | *C2 | R545 | *A4 |
| C704 | *A2 | IC703 | B2 | R546 | *A4 |
| C705 | A2 | IC708 | A2 | R547 | A4 |
| C706 | A3 | IC709 | *A1 | R548 | *A4 |
| C707 | *B3 | IC710 | A1 | R549 | A4 |
| C710 | *A2 | IC711 | *B2 | R550 | *A4 |
| C711 | *A2 | IC712 | B2 | R551 | *A4 |
| C712 | *A1 | IC718 | *A1 | R552 | *A4 |
| C713 | *A1 | IC719 | *A1 | R553 | *A4 |
| C714 | *A2 | IC720 | *A3 | R554 | A4 |
| C715 | *A2 | IC721 | *A4 | R555 | *A3 |
| C716 | A1 | IC722 | *A1 | R556 | A3 |
| C717 | A1 | IC723 | *A2 | R557 | *C3 |
| C718 | A1 | IC724 | B2 | R558 | *C4 |
| C720 | B2 | | | R559 | *C3 |
| C721 | B2 | L501 | B4 | R560 | *C3 |
| C729 | *A2 | L502 | *B4 | R561 | *C3 |
| C730 | *A2 | L503 | B4 | R562 | *C3 |
| C731 | *A2 | L504 | *C4 | R563 | *C4 |
| C732 | *A2 | L505 | *A3 | R564 | *C4 |
| C733 | *A2 | L506 | C3 | R565 | C4 |
| C734 | *A2 | L507 | *C3 | R566 | C4 |
| C735 | *A2 | L508 | *C3 | R567 | C4 |
| C736 | *A3 | L509 | *A4 | R568 | C4 |
| C737 | *B2 | L510 | C3 | R569 | *C4 |
| C738 | *B2 | L511 | C4 | R570 | *C4 |
| C739 | *B2 | L512 | C4 | R571 | *C4 |

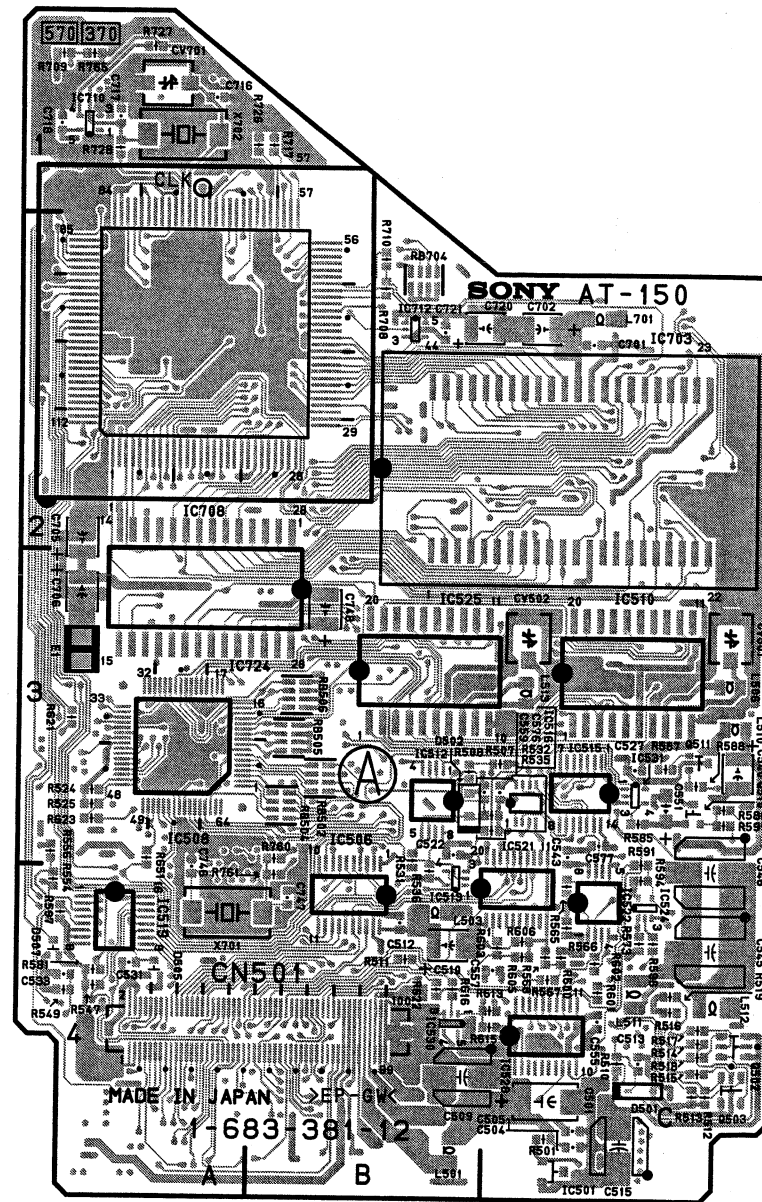

AT-150 -A SIDE-
SUFFIX: -12, 21
FOR DSR-390/390P/370/370P

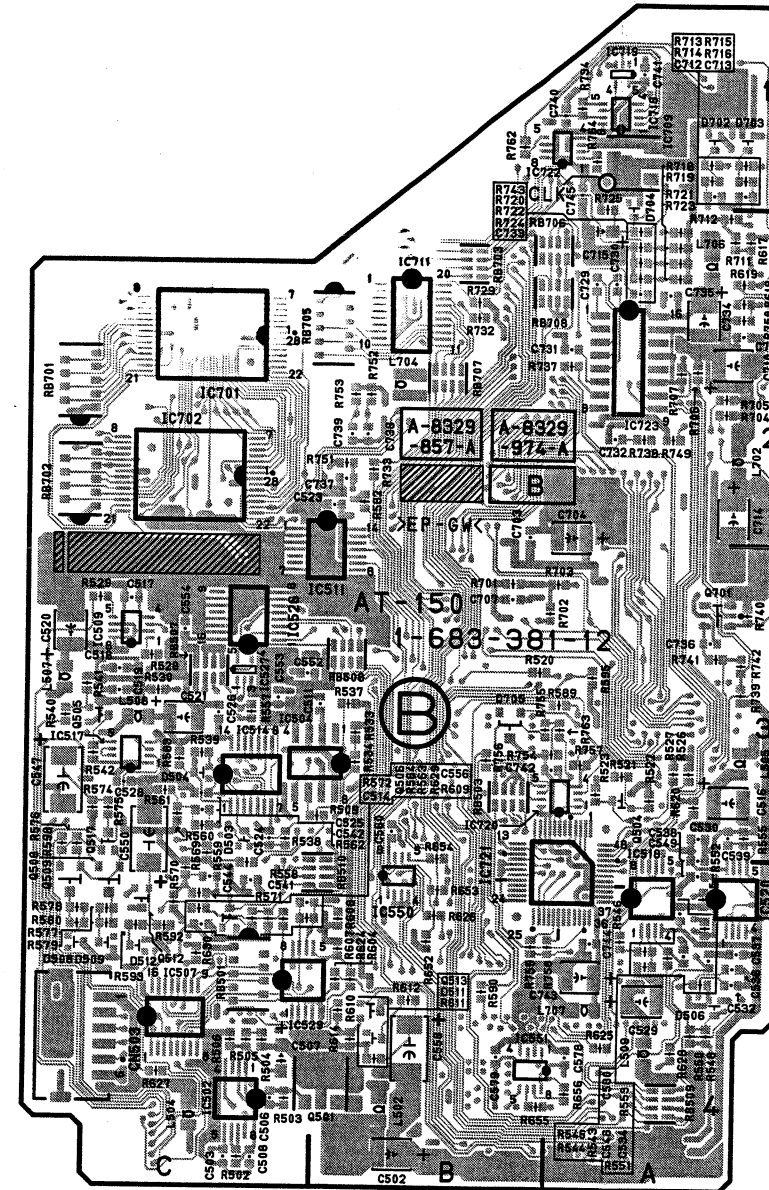


AT-150 -B SIDE-
SUFFIX: -12, 21
FOR DSR-390/390P/370/370P

| | | | |
|------|-----|-------|-----|
| R572 | *C4 | R732 | *B2 |
| R573 | C4 | R733 | *B2 |
| R574 | *C3 | R734 | *A1 |
| R575 | *C3 | R737 | *A2 |
| R576 | *C3 | R738 | *A2 |
| R577 | *C4 | R739 | *A3 |
| R578 | *C4 | R740 | *A3 |
| R579 | *C4 | R741 | *A3 |
| R580 | *C4 | R742 | *A3 |
| R581 | A4 | R743 | *A2 |
| R582 | *B2 | R749 | *A2 |
| R583 | *C3 | R750 | *A2 |
| R585 | C3 | R751 | *B2 |
| R586 | C3 | R752 | *B2 |
| R587 | C3 | R753 | *B2 |
| R588 | C3 | R754 | *A3 |
| R589 | *A3 | R755 | *B3 |
| R590 | *B4 | R756 | *B3 |
| R591 | C3 | R757 | *A3 |
| R592 | *C4 | R758 | *A4 |
| R593 | *C4 | R759 | *B4 |
| R594 | C4 | R760 | B3 |
| R595 | *A3 | R761 | B4 |
| R596 | C4 | R762 | *B1 |
| R597 | A4 | R763 | *A3 |
| R598 | *C3 | R764 | *A1 |
| R599 | C3 | R765 | A1 |
| R600 | C4 | | |
| R601 | C4 | RB501 | *C4 |
| R602 | C4 | RB502 | *B3 |
| R603 | C4 | RB503 | *B3 |
| R604 | *B4 | RB504 | B3 |
| R605 | C4 | RB505 | B3 |
| R606 | C4 | RB506 | B3 |
| R607 | *B4 | RB507 | *C3 |
| R608 | *B4 | RB508 | *B3 |
| R609 | *C4 | RB509 | *A4 |
| R610 | *B4 | RB510 | *A4 |
| R611 | *B4 | RB701 | *C2 |
| R612 | *B4 | RB702 | *C2 |
| R613 | C4 | RB703 | *B2 |
| R614 | *B4 | RB704 | B2 |
| R615 | C4 | RB705 | *A2 |
| R616 | B4 | RB706 | *A2 |
| R617 | *A2 | RB707 | *B2 |
| R618 | *A2 | RB708 | *A2 |
| R619 | A2 | | |
| R620 | *A3 | X701 | A4 |
| R621 | A3 | X702 | A1 |
| R622 | B4 | | |
| R623 | A3 | | |
| R624 | *B4 | | |
| R625 | *A4 | | |
| R626 | *B4 | | |
| R627 | *C4 | | |
| R628 | *A4 | | |
| R629 | *C4 | | |
| R630 | *C4 | | |
| R651 | A3 | | |
| R652 | *B4 | | |
| R653 | *B4 | | |
| R654 | *B4 | | |
| R655 | *B4 | | |
| R656 | *A4 | | |
| R701 | *B3 | | |
| R702 | *A3 | | |
| R703 | *A3 | | |
| R704 | *A2 | | |
| R705 | *A2 | | |
| R706 | *A2 | | |
| R707 | *A2 | | |
| R708 | B2 | | |
| R709 | A1 | | |
| R710 | B2 | | |
| R711 | *A2 | | |
| R712 | *A2 | | |
| R713 | *A1 | | |
| R714 | *A1 | | |
| R715 | *A1 | | |
| R716 | *A1 | | |
| R717 | B1 | | |
| R718 | *A2 | | |
| R719 | *A2 | | |
| R720 | *A2 | | |
| R721 | *A2 | | |
| R722 | *A2 | | |
| R723 | *A2 | | |
| R724 | *A2 | | |
| R725 | *A2 | | |
| R726 | B1 | | |
| R727 | A1 | | |
| R728 | A1 | | |
| R729 | *B2 | | |

*: B SIDE


AT-142 (1-677-374-11,12)

| | | | | | |
|------|-----|-------|-----|------|-----|
| C501 | C4 | C745 | *B1 | Q503 | C4 |
| C502 | *B4 | C746 | A3 | Q504 | *A3 |
| C503 | *C4 | C747 | B3 | Q505 | *C3 |
| C504 | C4 | | | Q506 | *C3 |
| C505 | C4 | CN501 | B4 | Q506 | *C4 |
| C506 | *C4 | CN503 | *C4 | Q507 | *C3 |
| C507 | *C4 | CV501 | C2 | Q508 | *C3 |
| C508 | *C4 | CV502 | C2 | Q509 | *C3 |
| C509 | C4 | CV701 | A1 | Q510 | C3 |
| C510 | B3 | | | Q511 | C3 |
| C511 | *C3 | D501 | C4 | Q512 | *C3 |
| C512 | B3 | D502 | C3 | Q513 | *B4 |
| C513 | C4 | D503 | *C3 | Q701 | *A2 |
| C514 | *C4 | D504 | *C3 | | |
| C515 | C4 | D505 | A4 | R501 | C4 |
| C516 | *A3 | D506 | *A4 | R502 | *C4 |
| C517 | *C2 | D507 | A4 | R503 | *C4 |
| C518 | *C3 | D508 | *C4 | R504 | *C4 |
| C519 | *C3 | D509 | *C4 | R505 | *C4 |
| C520 | *C3 | D510 | *C4 | R506 | *C4 |
| C521 | *C3 | D511 | *B4 | R507 | C3 |
| C522 | C3 | D701 | *A2 | R508 | C3 |
| C523 | *C2 | D702 | *A1 | R509 | *C3 |
| C524 | *C3 | D703 | *A1 | R510 | C4 |
| C525 | *C3 | D704 | *A1 | R511 | B4 |
| C526 | C3 | D705 | *B3 | R512 | C4 |
| C527 | C3 | | | R513 | C4 |
| C528 | *C3 | IC501 | C4 | R514 | C4 |
| C529 | *A4 | IC502 | *C4 | R515 | C4 |
| C530 | *A3 | IC504 | *C3 | R516 | C4 |
| C531 | A4 | IC506 | B3 | R517 | C4 |
| C532 | *A4 | IC507 | *C4 | R518 | C4 |
| C533 | A4 | IC508 | A3 | R519 | C4 |
| C534 | *A4 | IC509 | *C3 | R520 | B3 |
| C536 | *A4 | IC510 | C3 | R521 | *A3 |
| C537 | *A4 | IC511 | *C2 | R522 | *A3 |
| C538 | *A3 | IC512 | C3 | R523 | *A3 |
| C539 | *A3 | IC513 | C3 | R524 | A3 |
| C540 | C3 | IC514 | *C3 | R525 | A3 |
| C541 | *C3 | IC515 | C3 | R526 | *A3 |
| C542 | *C3 | IC516 | C3 | R527 | *A3 |
| C543 | C3 | IC517 | *C3 | R528 | *C3 |
| C544 | *C3 | IC518 | *A3 | R529 | *C2 |
| C545 | C4 | IC519 | A3 | R530 | *C3 |
| C546 | C3 | IC520 | *A3 | R531 | B3 |
| C547 | *C3 | IC521 | C3 | R532 | C3 |
| C548 | *A4 | IC522 | C3 | R533 | *C3 |
| C549 | *A3 | IC524 | C3 | R534 | *C3 |
| C550 | *C3 | IC525 | B3 | R535 | C3 |
| C551 | C3 | IC526 | *C2 | R536 | C3 |
| C552 | *C3 | IC527 | *C3 | R537 | *C3 |
| C553 | *C3 | IC528 | C4 | R538 | *C3 |
| C554 | *C3 | IC529 | *C4 | R539 | *C3 |
| C555 | C4 | IC530 | C4 | R540 | *C3 |
| C556 | *C3 | IC701 | *C2 | R541 | *C3 |
| C557 | C4 | IC702 | *C2 | R542 | *C3 |
| C558 | *B4 | IC703 | C2 | R543 | *A4 |
| C559 | B3 | IC704 | *B2 | R544 | *A4 |
| C701 | C2 | IC705 | A2 | R545 | *A4 |
| C702 | C2 | IC708 | A2 | R546 | *A4 |
| C703 | *A2 | IC709 | *A1 | R547 | A4 |
| C704 | *A2 | IC710 | A1 | R548 | *A4 |
| C705 | A2 | IC711 | *B2 | R549 | A4 |
| C706 | A2 | IC712 | B2 | R550 | *A4 |
| C707 | *B2 | IC717 | *A2 | R551 | *A4 |
| C710 | *A2 | IC718 | *A1 | R552 | *A3 |
| C711 | *A2 | IC719 | *A1 | R553 | *A4 |
| C712 | *A1 | IC720 | *B3 | R554 | A3 |
| C713 | *A1 | IC721 | *B3 | R555 | *A3 |
| C714 | *A2 | IC722 | *B1 | R556 | A3 |
| C715 | *A1 | | | R557 | *C3 |
| C716 | B1 | L501 | C4 | R558 | *C3 |
| C717 | A1 | L502 | *B4 | R559 | *C3 |
| C718 | A1 | L503 | C4 | R560 | *C3 |
| C719 | C2 | L504 | *C4 | R561 | *C3 |
| C720 | C2 | L505 | *A3 | R562 | *C3 |
| C721 | B2 | L506 | C3 | R563 | *C4 |
| C729 | *A2 | L507 | *C3 | R564 | *C3 |
| C730 | *A2 | L508 | *C3 | R565 | C3 |
| C731 | *B2 | L509 | *A4 | R566 | C3 |
| C732 | *A2 | L510 | C3 | R567 | C4 |
| C733 | *A2 | L511 | C4 | R568 | C4 |
| C734 | *A2 | L512 | C4 | R569 | *C3 |
| C735 | *A2 | L513 | C3 | R570 | *C3 |
| C736 | *A3 | L701 | C2 | R571 | *C3 |
| C737 | *C2 | L702 | *A2 | R572 | *C3 |
| C738 | *C2 | L703 | C2 | R573 | C3 |
| C739 | *C2 | L704 | *B2 | R574 | *C3 |
| C740 | *B1 | L706 | *A1 | R575 | *C3 |
| C741 | *A1 | L707 | *A4 | R576 | *C3 |
| C742 | *B3 | | | R577 | *C3 |
| C743 | *B4 | Q501 | *C4 | R578 | *C3 |
| C744 | *A4 | Q502 | C4 | R579 | *C4 |

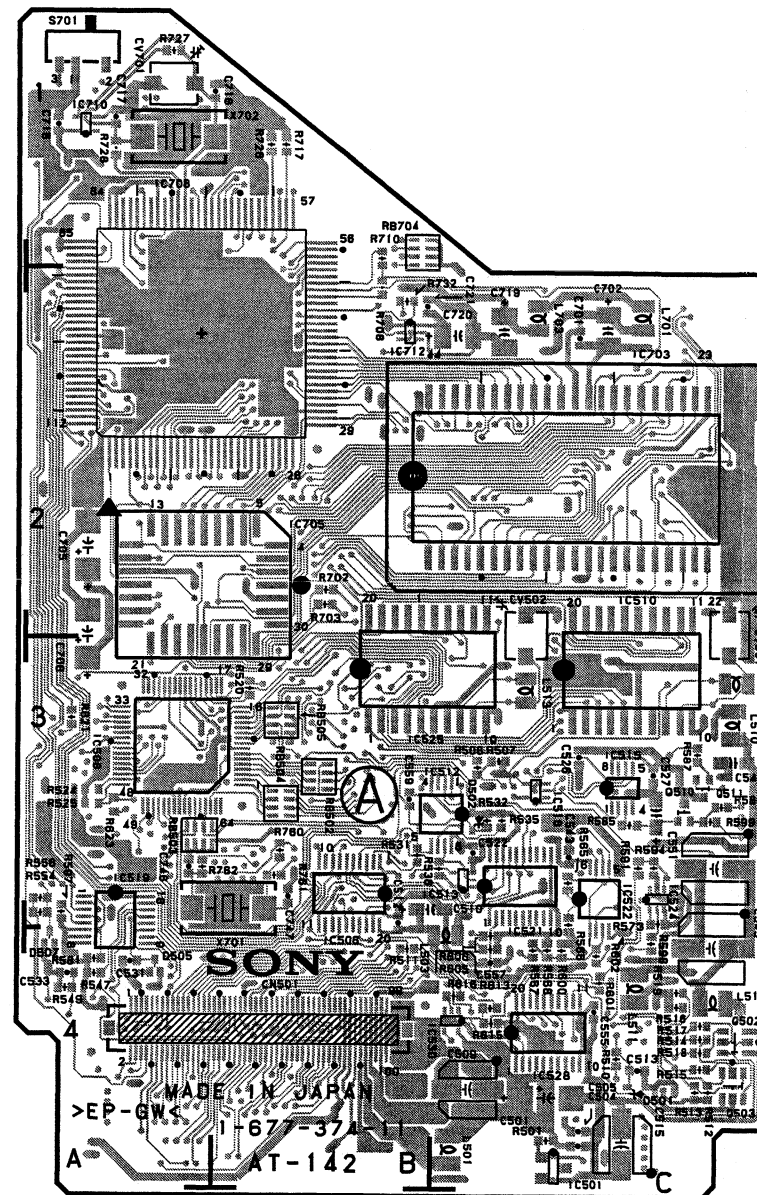


CN-2277, CN-1823, CN-1864, CN-1865


CN-2277, CN-1823, CN-1864, CN-1865

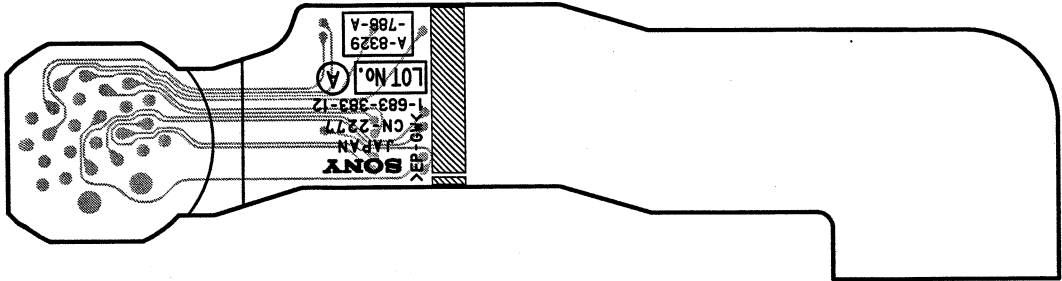


CN-2277 -A SIDE-
SUFFIX: -11, 12
FOR DSR-390/390P/370/370P

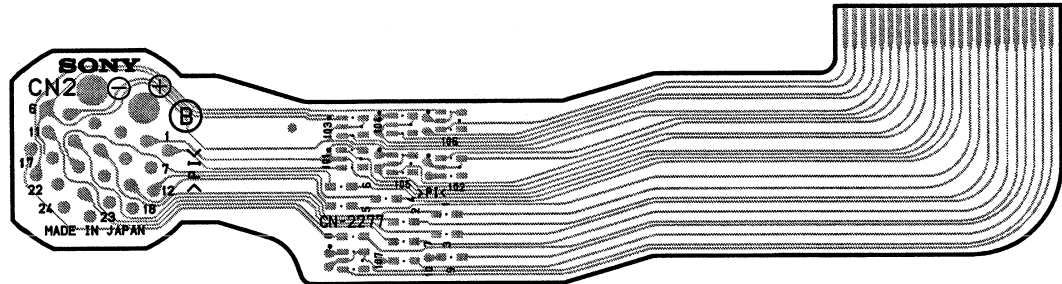


CN-2277 -B SIDE-
SUFFIX: -11, 12
FOR DSR-390/390P/370/370P

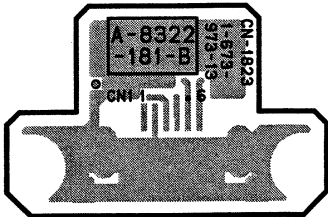


CN-1823 -A SIDE-
SUFFIX: -13

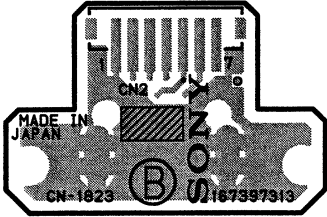


CN-1823 -B SIDE-
SUFFIX: -13

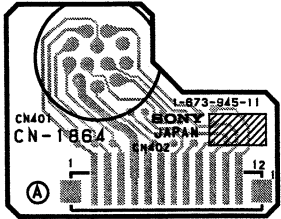


CN-1864 -A SIDE-
SUFFIX: -11, 21

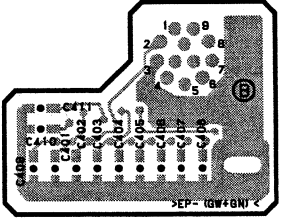

CN-1864 -B SIDE-
SUFFIX: -11, 21

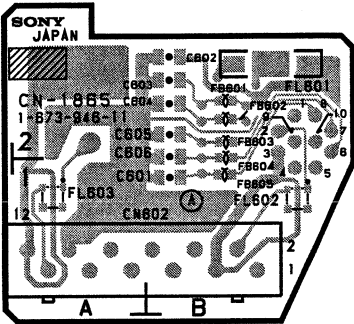

CN-1865 -A SIDE-
SUFFIX: -11, 21

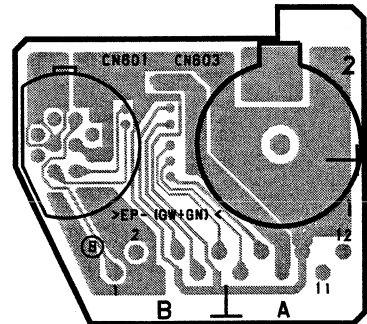

CN-1865 -B SIDE-
SUFFIX: -11, 21

CN-1865 (1-673-946-11, 21)


C601 B1
C602 B2
C603 B2
C604 B2
C605 B2
C606 B2

CN601 *B2
CN602 B1
CN603 *A2


FB601 B2
FB602 B2
FB603 B2
FB604 B1
FB605 B1

FL601 B2
FL602 B1
FL603 A1


*: B SIDE

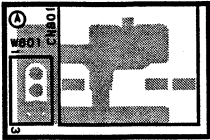


CN-1866 -A SIDE-
SUFFIX: -12, 21

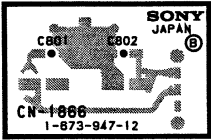


CN-1866 -B SIDE-
SUFFIX: -12, 21

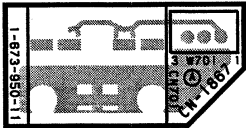

CN-1867 -A SIDE-
SUFFIX: -11, 21

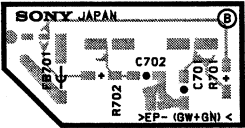


CN-1867 -B SIDE-
SUFFIX: -11, 21

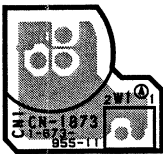


CN-1873 -A SIDE-
SUFFIX: -11, 21




CN-1873 -B SIDE-
SUFFIX: -11, 21




CN-1874 -A SIDE-
SUFFIX: -11, 21




CN-1874 -B SIDE-
SUFFIX: -11, 21

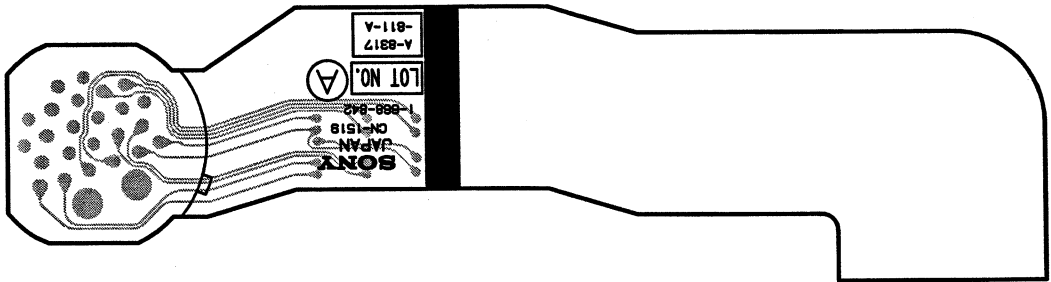

CN-1519 -A SIDE-
SUFFIX: -12, 13
FOR DSR-300A/300AP

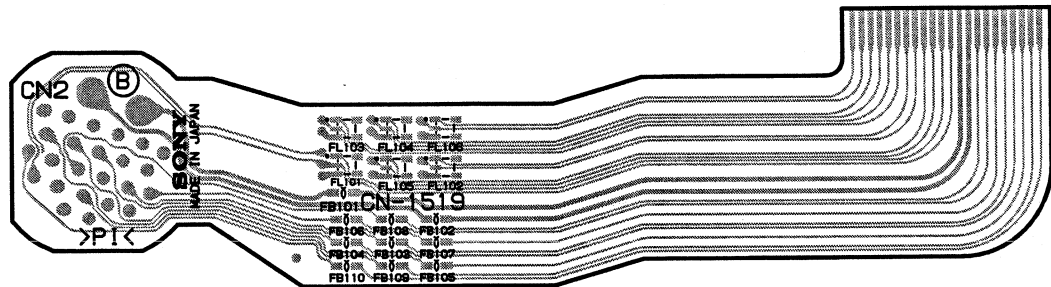


CN-1519 -B SIDE-
SUFFIX: -12, 13
FOR DSR-300A/300AP

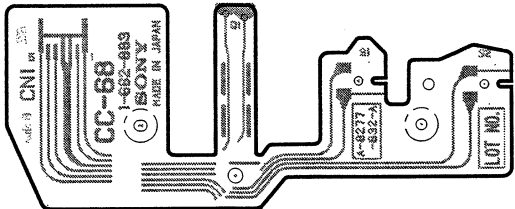


CC-68 -A SIDE-
SUFFIX: -12

DU-36, DV-21, FP-99, GCN-16


DU-36, DV-21, FP-99, GCN-16

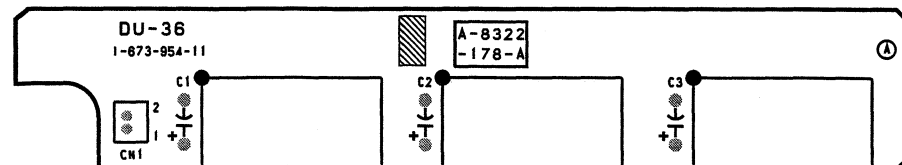


DU-36 -A SIDE-
SUFFIX: -11, 21

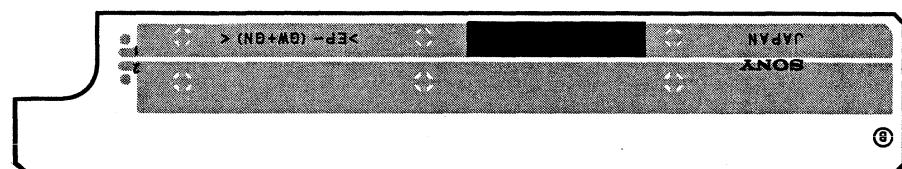


DU-36 -B SIDE-
SUFFIX: -11, 21

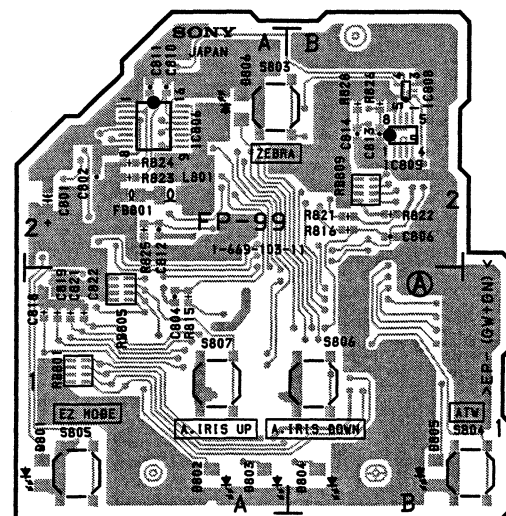


FP-99 -A SIDE-
SUFFIX: -11, 21

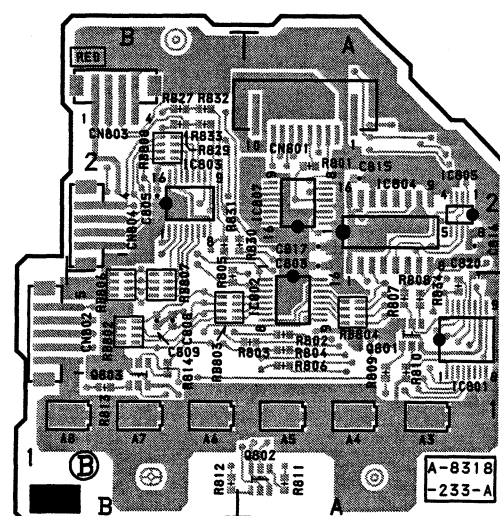


FP-99 -B SIDE-
SUFFIX: -11, 21

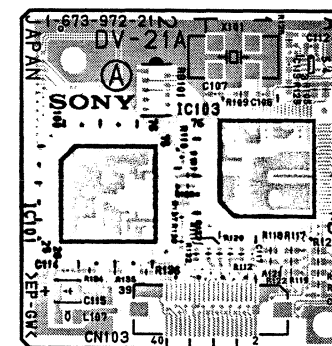


DV-21 -A SIDE-
SUFFIX: -21

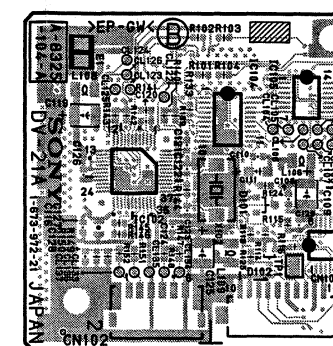

DV-21 -B SIDE-
SUFFIX: -21

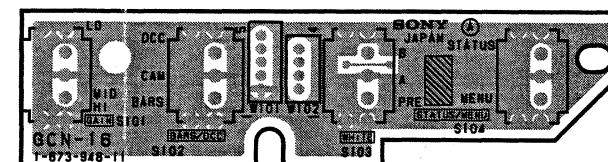


GCN-16 -A SIDE-
SUFFIX: -11, 21

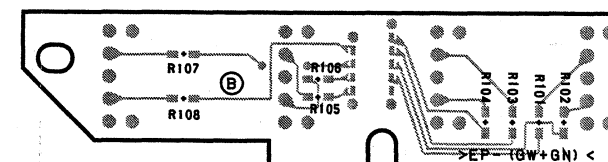


GCN-16 -B SIDE-
SUFFIX: -11, 21

CP-373 (1-638-382-11,12)

| | | | |
|-------|-----|-------|-----|
| C101 | *B1 | CL236 | *D2 |
| C102 | *B1 | CL238 | *D2 |
| C103 | *B1 | CL240 | *D2 |
| C104 | *B1 | CL241 | *D2 |
| C105 | *B1 | CL242 | *D2 |
| C106 | *A1 | CL243 | *D2 |
| C107 | A2 | CL301 | *C2 |
| C108 | A1 | CL302 | *C2 |
| C109 | *A1 | CL303 | *C2 |
| C110 | *A1 | CL304 | *C2 |
| C111 | *A1 | CL312 | *D1 |
| C112 | *A1 | CL313 | *D1 |
| C113 | *D1 | CL314 | *D2 |
| C114 | *C1 | CL316 | *C2 |
| C115 | *D1 | CL317 | *C2 |
| C116 | *C1 | CL318 | *C2 |
| C117 | *D1 | CL319 | *C2 |
| C118 | *C1 | CL328 | *E2 |
| C119 | *C1 | CL329 | *E2 |
| C120 | *B2 | CL330 | *E2 |
| C121 | *B2 | | |
| C122 | *B2 | CN1 | D2 |
| C123 | *B2 | CN2 | B2 |
| C124 | *C2 | CN3 | F1 |
| C125 | *B2 | CN5 | E2 |
| C126 | *A2 | CN6 | E2 |
| C127 | A2 | CN7 | E2 |
| C128 | A2 | CN8 | F2 |
| C129 | *A2 | CN9 | E1 |
| C130 | *A2 | CN10 | E1 |
| C131 | *A2 | CN101 | B1 |
| C132 | *A2 | CN102 | B2 |
| C133 | *C1 | CN201 | D3 |
| C134 | *C2 | CN202 | C3 |
| C301 | *C2 | CN203 | C3 |
| C302 | *C2 | CN204 | C3 |
| C303 | *C2 | CN205 | D3 |
| C304 | *C2 | CN206 | B3 |
| C305 | *C2 | | |
| C306 | *C2 | D101 | *A1 |
| C406 | *F2 | D102 | *A1 |
| C413 | *F2 | D103 | *A2 |
| C414 | F2 | D104 | *A2 |
| C415 | *E2 | D201 | *D2 |
| C416 | *D2 | D202 | *D2 |
| C417 | *E2 | D203 | *D2 |
| C501 | *C3 | D204 | *D2 |
| C502 | *C3 | D205 | *D2 |
| C503 | *D2 | D206 | *D2 |
| C504 | *D2 | D207 | *C2 |
| C505 | *C3 | D208 | *D2 |
| C506 | *C3 | D301 | *D2 |
| | | D401 | *E2 |
| CB401 | F1 | D402 | F1 |
| | | D403 | *E2 |
| | | D404 | *E2 |
| CL101 | *B1 | D501 | *E2 |
| CL102 | *B1 | D502 | *D2 |
| CL103 | *B1 | D503 | *B3 |
| CL104 | *B2 | | |
| CL105 | *B2 | FL201 | *C3 |
| CL106 | *B2 | FL202 | *D3 |
| CL107 | *C2 | FL203 | *C3 |
| CL108 | *C2 | FL204 | *B3 |
| CL109 | *C2 | FL205 | *C3 |
| CL110 | *C2 | FL206 | *D3 |
| CL111 | *D2 | FL207 | *B3 |
| CL112 | *D2 | FL208 | *B3 |
| CL113 | *D2 | | |
| CL114 | *C2 | | |
| CL115 | *C2 | IC101 | *A1 |
| CL116 | *D2 | IC201 | *A2 |
| CL201 | *C3 | IC301 | *C2 |
| CL202 | *C3 | IC501 | *D2 |
| CL203 | *D3 | IC502 | *C3 |
| CL204 | *D3 | IC503 | *C3 |
| CL205 | *D3 | IC504 | *D2 |
| CL207 | *B3 | | |
| CL208 | *B3 | L101 | *B1 |
| CL209 | *B3 | L102 | *A1 |
| CL210 | *B2 | L103 | *B2 |
| CL211 | *C3 | L104 | *A2 |
| CL212 | *C2 | | |
| CL213 | *D3 | PS301 | *C2 |
| CL214 | *D3 | PS401 | *F2 |
| CL215 | *B3 | | |
| CL216 | *B3 | Q101 | *D1 |
| CL218 | *B3 | Q102 | *C1 |
| CL219 | *B3 | Q103 | *C1 |
| CL229 | *D2 | Q104 | *C2 |
| CL230 | *D2 | Q401 | *E2 |
| CL231 | *D2 | Q402 | *F2 |
| CL232 | *D2 | Q403 | *F2 |
| CL234 | *D2 | Q404 | *E2 |

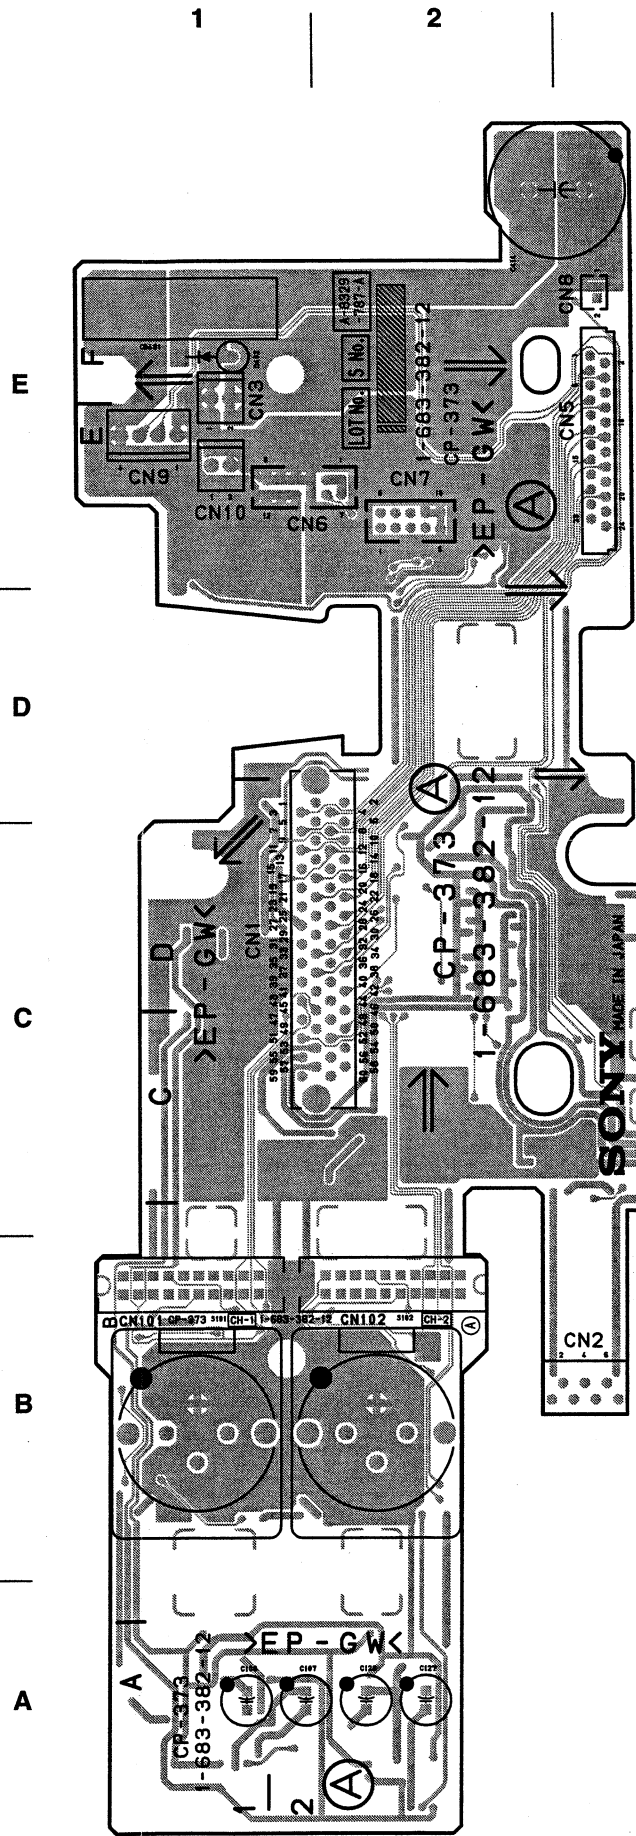

CP-373 -A SIDE-
SUFFIX: -11, 12
FOR DSR-390/390P/370/370P


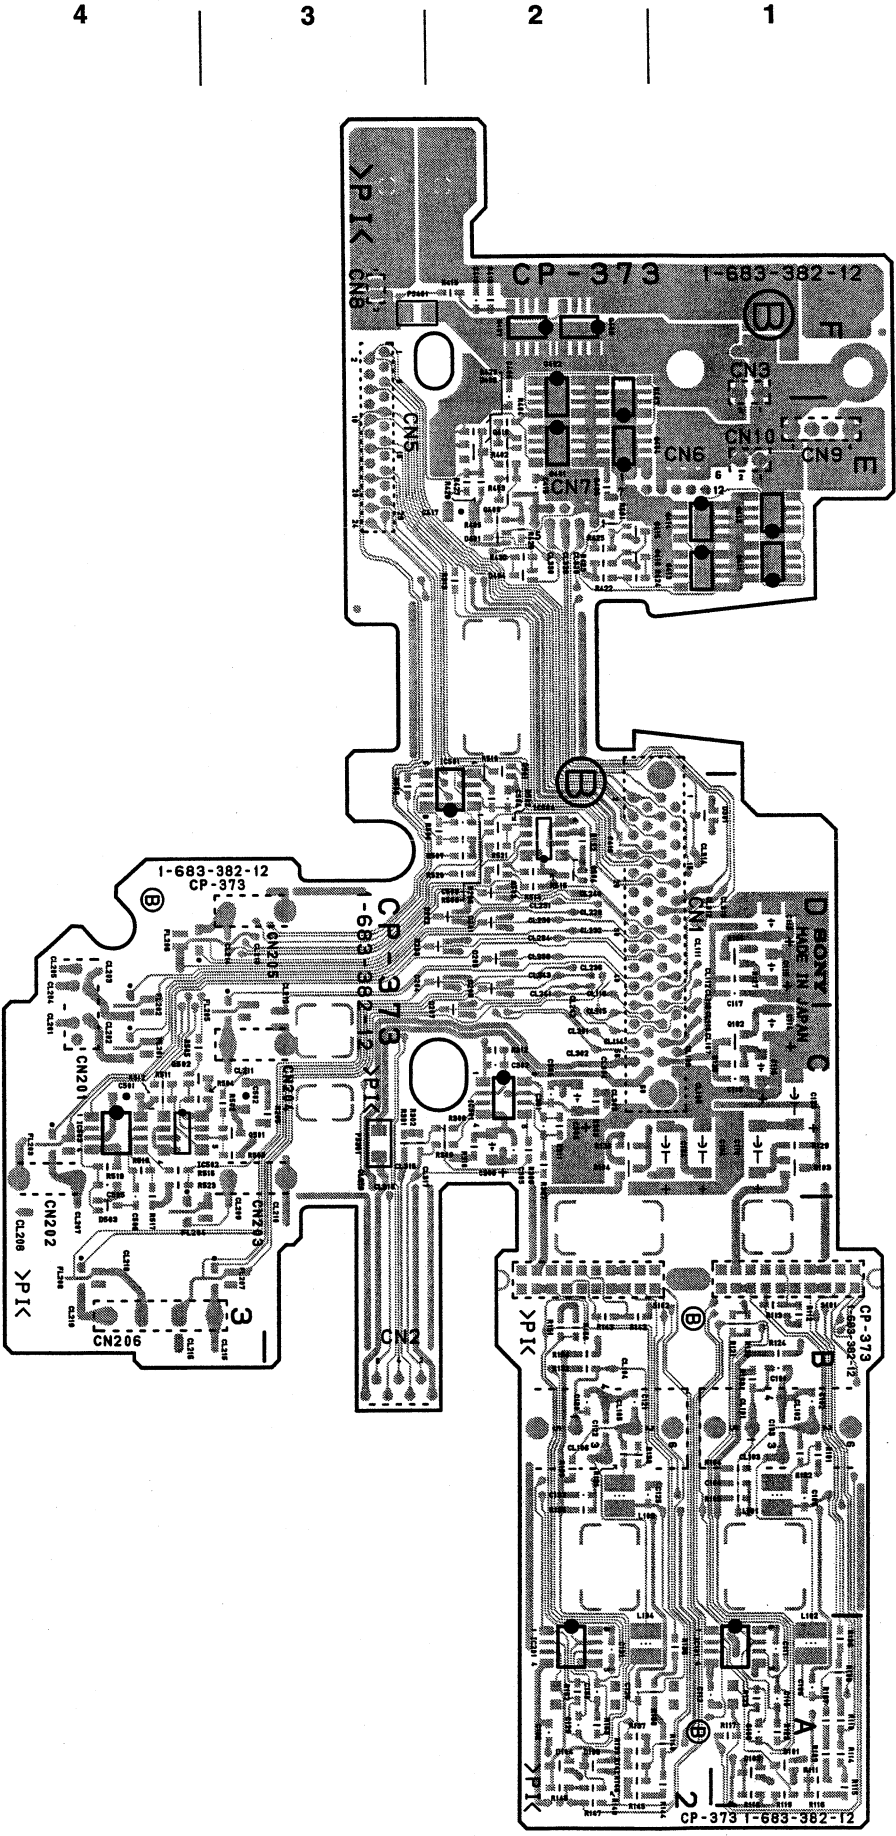


CP-373 -B SIDE-
SUFFIX: -11, 12
FOR DSR-390/390P/370/370P

| | | | |
|------|-----|------|-----|
| Q407 | *F2 | R415 | *F2 |
| Q408 | *F2 | R418 | *F2 |
| Q409 | *E2 | R422 | *E2 |
| Q410 | *E2 | R423 | *E2 |
| Q411 | *E1 | R424 | *E2 |
| Q412 | *E1 | R425 | *E2 |
| Q413 | *E2 | R426 | *E2 |
| Q414 | *E2 | R427 | *E2 |
| Q415 | *E2 | R428 | *E2 |
| Q416 | *E2 | R429 | *E2 |
| Q501 | *C3 | R430 | *E2 |
| Q502 | *C3 | R502 | *C3 |
| Q503 | *D2 | R503 | *C3 |
| Q504 | *D2 | R504 | *C3 |
| | | R505 | *C3 |
| R101 | *B1 | R506 | *D2 |
| R102 | *B1 | R507 | *D2 |
| R103 | *B1 | R508 | *D2 |
| R104 | *B1 | R509 | *D2 |
| R105 | *B1 | R510 | *D2 |
| R106 | *A1 | R511 | *C3 |
| R107 | *A1 | R512 | *C3 |
| R108 | *A1 | R514 | *D2 |
| R109 | *A1 | R515 | *D2 |
| R110 | *A1 | R516 | *C3 |
| R111 | *A1 | R517 | *C3 |
| R112 | *B1 | R518 | *C3 |
| R113 | *B1 | R519 | *C3 |
| R114 | *A1 | R520 | *D2 |
| R115 | *A1 | R521 | *D2 |
| R116 | *A1 | R522 | *D2 |
| R117 | *A1 | R523 | *C3 |
| R118 | *A1 | | |
| R119 | *A1 | S101 | B1 |
| R120 | *B1 | S102 | B2 |
| R121 | *B1 | | |
| R122 | *A1 | | |
| R123 | *A1 | | |
| R124 | *B1 | | |
| R127 | *D1 | | |
| R128 | *C1 | | |
| R129 | *C1 | | |
| R130 | *B2 | | |
| R131 | *B2 | | |
| R132 | *B2 | | |
| R133 | *B2 | | |
| R134 | *C2 | | |
| R135 | *B2 | | |
| R136 | *A2 | | |
| R137 | *A2 | | |
| R138 | *A2 | | |
| R139 | *A2 | | |
| R140 | *A2 | | |
| R141 | *A2 | | |
| R142 | *B2 | | |
| R143 | *B2 | | |
| R144 | *A2 | | |
| R145 | *A2 | | |
| R146 | *A2 | | |
| R147 | *A2 | | |
| R148 | *A2 | | |
| R149 | *A2 | | |
| R150 | *B2 | | |
| R151 | *B2 | | |
| R152 | *A2 | | |
| R153 | *A2 | | |
| R154 | *B2 | | |
| R205 | *C2 | | |
| R301 | *C2 | | |
| R302 | *C2 | | |
| R303 | *C2 | | |
| R306 | *C2 | | |
| R307 | *C2 | | |
| R308 | *C2 | | |
| R309 | *C2 | | |
| R310 | *C2 | | |
| R311 | *C2 | | |
| R312 | *C2 | | |
| R313 | *E2 | | |
| R401 | *E2 | | |
| R402 | *E2 | | |
| R403 | *E2 | | |
| R404 | *E2 | | |
| R405 | *E2 | | |
| R406 | *E2 | | |

CP-315 (1-668-841-13,14)

| | |
|-------|-----|
| C101 | *B1 |
| C102 | *B1 |
| C103 | *B1 |
| C104 | *B1 |
| C105 | *B1 |
| C106 | *A1 |
| C107 | A1 |
| C108 | A1 |
| C109 | *A1 |
| C110 | *A1 |
| C111 | *A1 |
| C112 | *A1 |
| C113 | *C1 |
| C114 | *C1 |
| C115 | *C1 |
| C116 | *C1 |
| C117 | *C1 |
| C118 | *C1 |
| C119 | *C1 |
| C120 | *B2 |
| C121 | *B2 |
| C122 | *B2 |
| C123 | *B2 |
| C124 | *C1 |
| C125 | *B2 |
| C126 | *A2 |
| C127 | A2 |
| C128 | A2 |
| C129 | *A2 |
| C130 | *A2 |
| C131 | *A2 |
| C132 | *A2 |
| C133 | *C1 |
| C134 | *C1 |
| C301 | *C2 |
| C302 | *C2 |
| C303 | *C2 |
| C304 | *C2 |
| C305 | *C2 |
| C306 | *C2 |
| C406 | *E2 |
| C413 | *E2 |
| C414 | E3 |
| C415 | *E2 |
| CB401 | E1 |
| CN1 | C1 |
| CN2 | B3 |
| CN3 | E1 |
| CN5 | E3 |
| CN6 | E1 |
| CN7 | E2 |
| CN8 | E3 |
| CN9 | E1 |
| CN101 | B1 |
| CN102 | B2 |
| D101 | *A1 |
| D102 | *A1 |
| D103 | *A2 |
| D104 | *A2 |
| D202 | *C2 |
| D203 | *C3 |
| D205 | *C2 |
| D206 | *C3 |
| D207 | *C3 |
| D208 | *C2 |
| D209 | *C3 |
| D210 | *C2 |
| D402 | E1 |
| FL201 | *C4 |
| FL202 | *C4 |
| FL203 | *C4 |
| FL205 | *C3 |
| FL206 | *C3 |
| FL207 | *B3 |
| FL208 | *B4 |
| IC101 | *A1 |
| IC201 | *A2 |
| IC301 | *C2 |
| L101 | *B1 |
| L102 | *A1 |
| L103 | *B2 |
| L104 | *A2 |
| PS301 | *C3 |
| PS401 | *E3 |

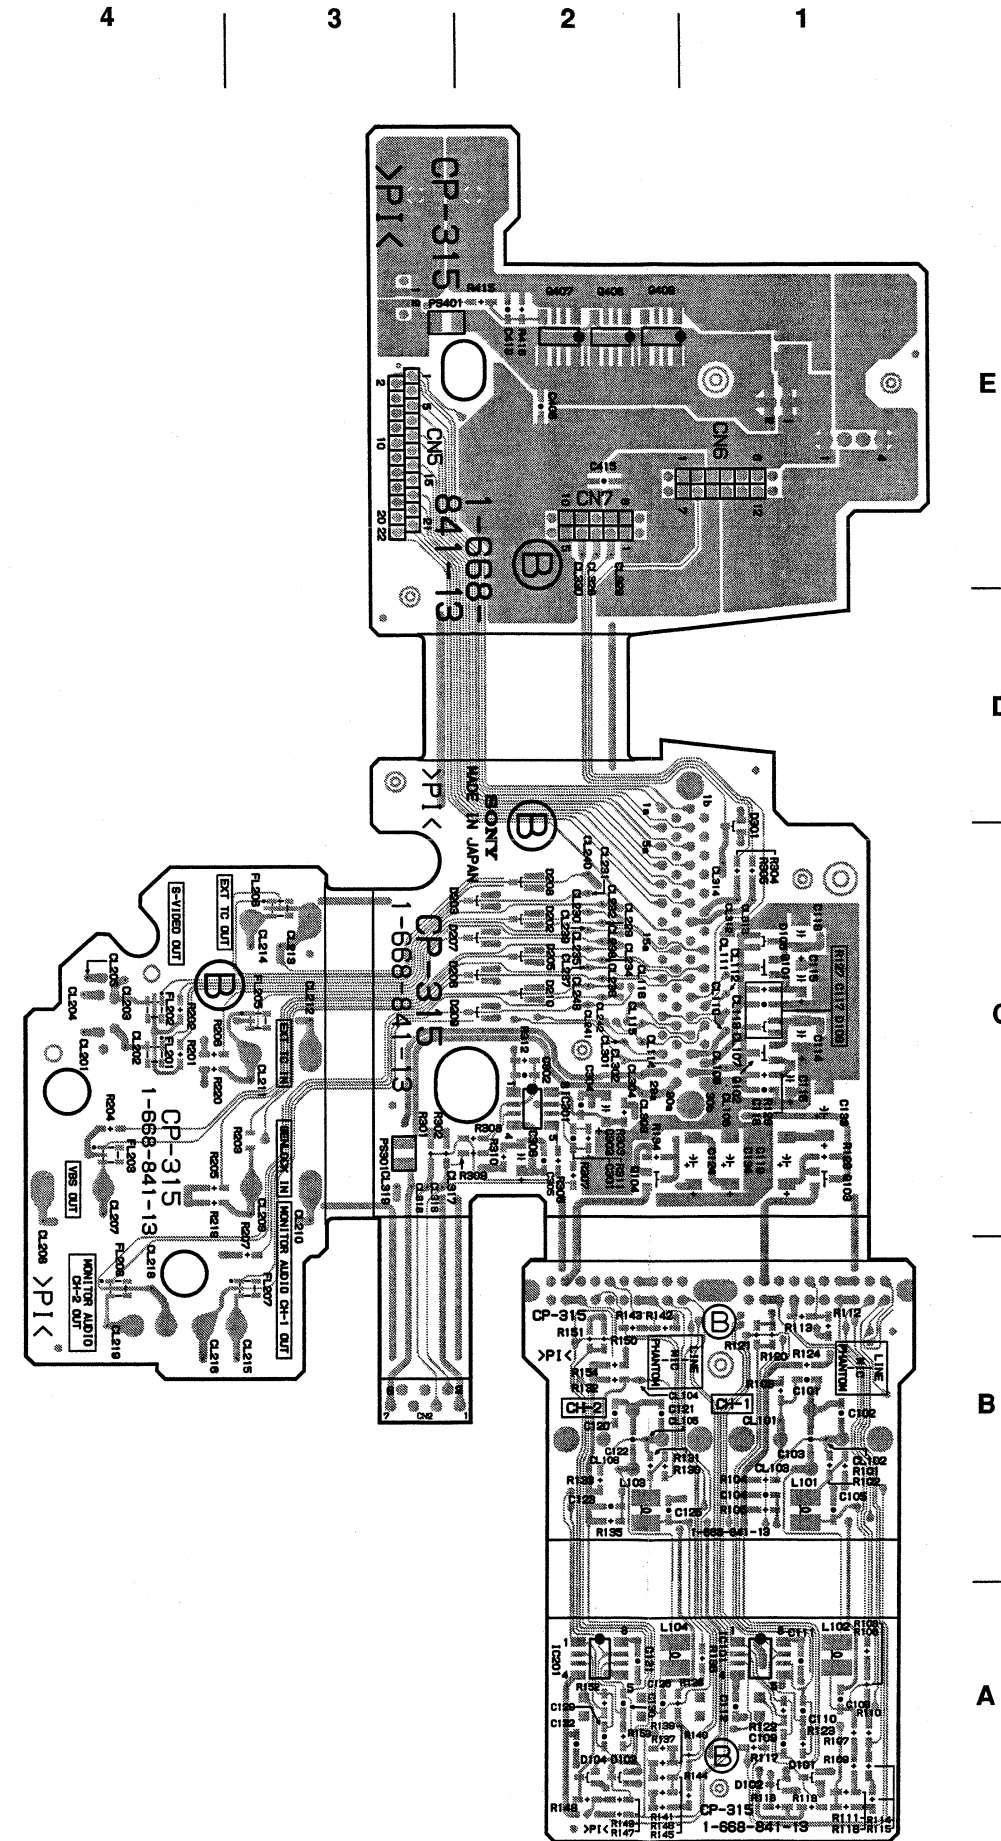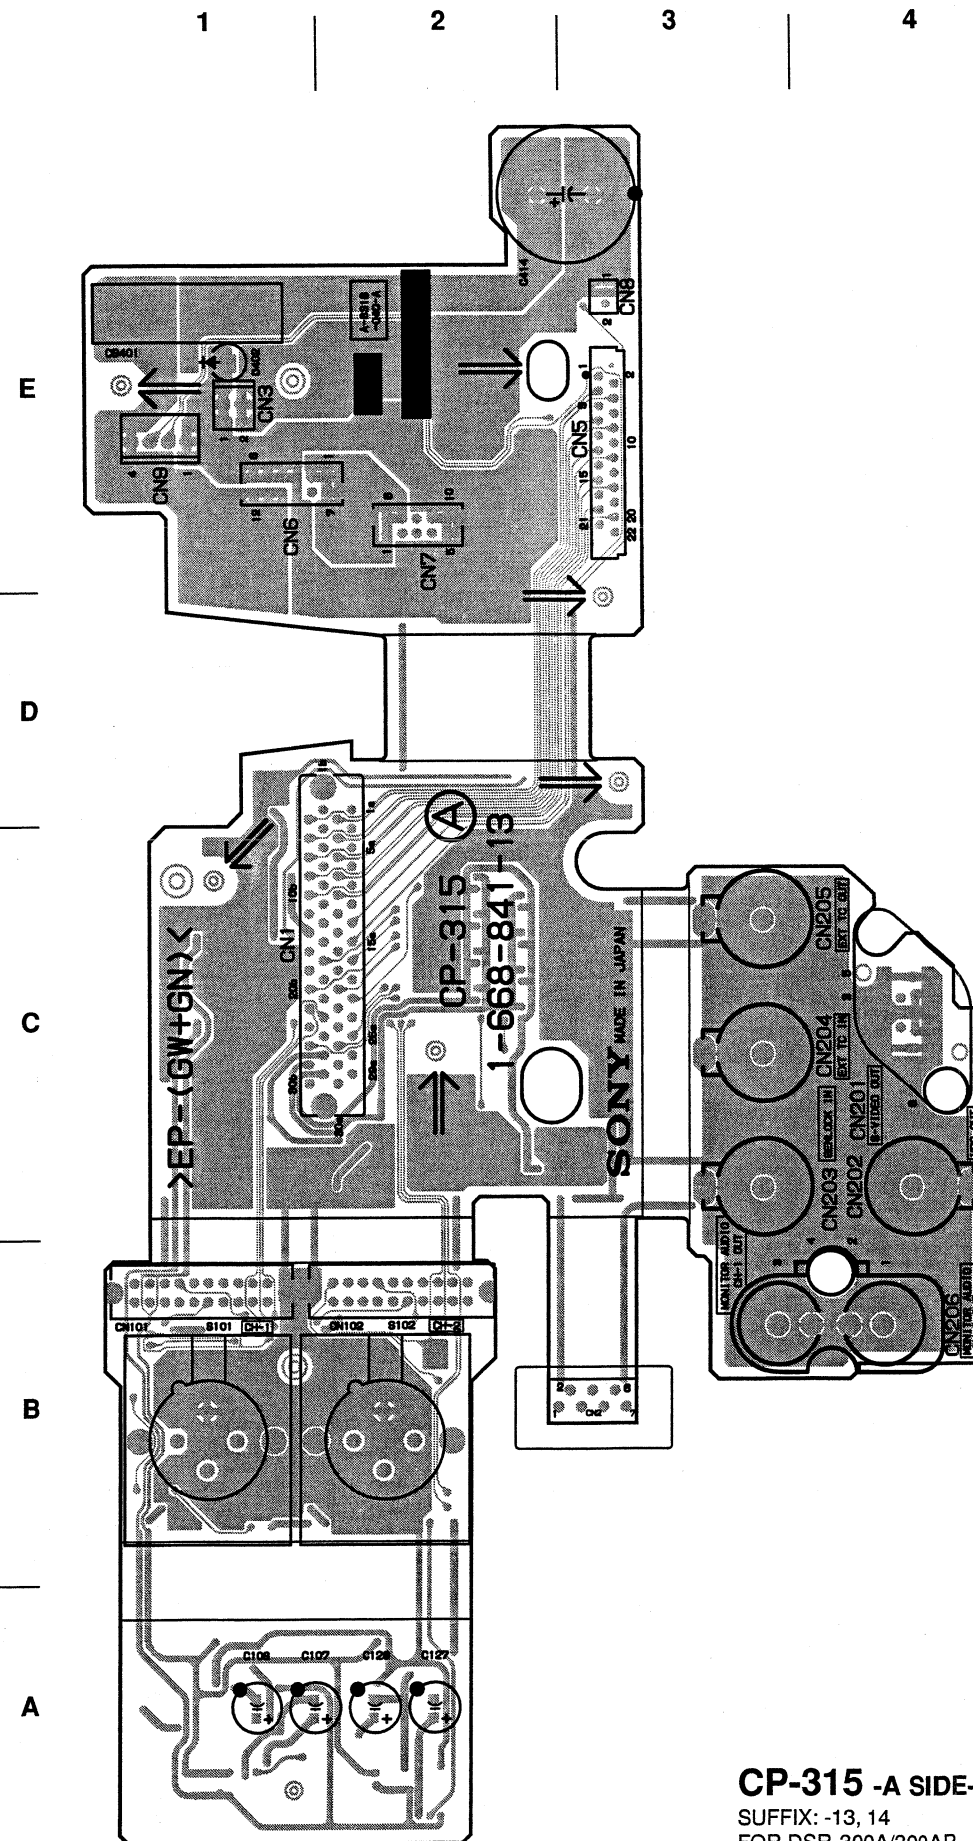

| | |
|------|-----|
| Q101 | *C1 |
| Q102 | *C1 |
| Q103 | *C1 |
| Q104 | *C2 |
| Q407 | *E2 |
| Q408 | *E2 |
| Q409 | *E2 |
| R102 | *B1 |
| R103 | *B1 |
| R105 | *B1 |
| R106 | *A1 |
| R107 | *A1 |
| R108 | *A1 |
| R109 | *A1 |
| R110 | *A1 |
| R111 | *A1 |
| R112 | *B1 |
| R113 | *B1 |
| R114 | *A1 |
| R115 | *A1 |
| R116 | *A1 |
| R117 | *A1 |
| R118 | *A1 |
| R119 | *A1 |
| R120 | *B1 |
| R121 | *B1 |
| R122 | *A1 |
| R123 | *A1 |
| R124 | *B1 |
| R127 | *C1 |
| R128 | *C1 |
| R129 | *C1 |
| R131 | *B2 |
| R132 | *B2 |
| R134 | *C2 |
| R135 | *B2 |
| R136 | *A1 |
| R137 | *A2 |
| R138 | *A2 |
| R139 | *A2 |
| R140 | *A2 |
| R141 | *A2 |
| R142 | *B2 |
| R143 | *B2 |
| R144 | *A2 |
| R145 | *A2 |
| R146 | *A2 |
| R147 | *A2 |
| R148 | *A2 |
| R149 | *A2 |
| R150 | *B2 |
| R151 | *B2 |
| R152 | *A2 |
| R153 | *A2 |
| R154 | *B2 |
| R201 | *C4 |
| R202 | *C4 |
| R203 | *C4 |
| R204 | *C4 |
| R205 | *C4 |
| R206 | *C4 |
| R207 | *C4 |
| R219 | *C4 |
| R301 | *C3 |
| R302 | *C3 |
| R303 | *C2 |
| R304 | *C1 |
| R305 | *C1 |
| R306 | *C2 |
| R307 | *C2 |
| R308 | *C2 |
| R309 | *C3 |
| R310 | *C2 |
| R311 | *C2 |
| R312 | *C2 |
| R415 | *E2 |
| R418 | *E2 |
| S101 | B1 |
| S102 | B2 |

*: B SIDE

CP-315 -B SIDE-
SUFFIX: -13, 14
FOR DSR-300A/300AP

DPR-141

SUFFIX: -14

DPR-141


SUFFIX: -14

DPR-141 (1-673-975-14)


| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|------|------|------|------|------|------|------|------|------|------|-------|------|-------|------|------|------|------|------|------|------|------|------|------|------|------|------|-------|------|-------|------|
| C101 | * C7 | C227 | * A4 | C365 | * D2 | C623 | * F2 | C837 | * G2 | CL127 | * D1 | IC206 | A4 | L101 | * C4 | R102 | * C7 | R243 | * B7 | R379 | * C6 | R532 | C6 | R818 | * G3 | R1010 | * F6 | RB755 | * E7 |
| C102 | * A7 | C228 | A4 | C366 | * D3 | C631 | F1 | C901 | * F6 | CL128 | * D1 | IC207 | * A4 | L102 | * A6 | R103 | * B7 | R244 | C4 | R380 | * C5 | R533 | D6 | R819 | G4 | R1011 | * F6 | RB756 | * F4 |
| C103 | * A7 | C229 | * A4 | C367 | * D3 | C632 | E1 | C902 | F6 | CL129 | * D1 | IC208 | * A4 | L103 | A6 | R104 | * B7 | R245 | A4 | R381 | * C5 | R534 | D6 | R820 | G4 | R1012 | * F6 | RB771 | * D7 |
| C104 | * C7 | C231 | A6 | C368 | * C3 | C633 | F1 | C903 | F6 | CL130 | * D1 | IC209 | * C3 | L104 | * A6 | R105 | * B7 | R246 | A4 | R382 | C6 | R535 | D6 | R821 | G3 | R1014 | F4 | RB772 | E5 |
| C105 | * A7 | C232 | B4 | C369 | * C3 | C651 | * E2 | C904 | F6 | CL131 | * D1 | IC210 | A5 | L105 | A6 | R106 | * C7 | R247 | * B7 | R383 | C6 | R536 | C6 | R822 | G4 | R1015 | * G6 | RB774 | E5 |
| C106 | * A7 | C233 | * A5 | C370 | * C3 | C652 | F3 | C923 | * F4 | CL132 | * D1 | IC211 | * A2 | L106 | * B6 | R107 | * C7 | R248 | * B7 | R384 | C6 | R537 | D6 | R823 | * G3 | R1016 | * G6 | RB775 | * E7 |
| C107 | * C7 | C234 | A4 | C371 | * C3 | C653 | E3 | C924 | * F4 | CL133 | * D1 | IC212 | * A2 | L107 | A6 | R108 | * C7 | R249 | * B7 | R385 | * B6 | R538 | D6 | R824 | * G3 | R1017 | * F4 | RB802 | * G3 |
| C108 | A7 | C235 | * A6 | C372 | * C2 | C654 | F3 | C925 | * G5 | CL135 | * D1 | IC213 | * A3 | L201 | A7 | R109 | * B7 | R250 | * A4 | R386 | * B6 | R539 | D6 | R825 | G4 | R1018 | * F4 | | |
| C109 | * C7 | C236 | B4 | C373 | * C2 | C655 | E3 | C926 | * G5 | CL136 | * D1 | IC214 | * A3 | L301 | * C5 | R110 | * C7 | R251 | * C4 | R387 | A6 | R540 | * C5 | R826 | F4 | R1019 | * G6 | TP201 | A3 |
| C110 | * C7 | C237 | * A5 | C374 | D2 | C656 | * E2 | C927 | * G5 | CL137 | * D1 | IC215 | * A2 | L302 | * C5 | R111 | * C7 | R252 | * C4 | R388 | A6 | R541 | * C5 | R827 | G3 | R1020 | * G6 | TP501 | C6 |
| C111 | * C7 | C238 | * A2 | C375 | * D3 | C657 | * F2 | C928 | * G5 | CL139 | * D1 | IC216 | A2 | L303 | * B5 | R112 | * C7 | R253 | * C4 | R389 | B6 | R542 | * C5 | R828 | G4 | | | TP502 | C6 |
| C112 | * C7 | C239 | * A3 | C376 | D2 | C658 | * F2 | C929 | * G5 | CL140 | * D1 | IC217 | C4 | L305 | B6 | R113 | * B7 | R254 | A4 | R390 | * D2 | R543 | * C6 | R829 | * G3 | RB101 | * A5 | TP503 | D6 |
| C113 | * A7 | C240 | A4 | C377 | * D3 | C701 | * E4 | C930 | * G5 | CL141 | * D1 | IC218 | * A4 | L306 | C3 | R114 | * B7 | R255 | * B7 | R391 | * D2 | R544 | C5 | R830 | * G2 | RB102 | * A5 | | |
| C114 | * C7 | C241 | * A3 | C378 | * D3 | C702 | * E4 | C931 | * G5 | CL142 | * D1 | IC219 | * A2 | L307 | * D3 | R115 | * B7 | R256 | * A4 | R392 | * C1 | R545 | C5 | R901 | * F6 | RB103 | * A5 | X401 | D3 |
| C115 | * B7 | C242 | * B2 | C379 | * D3 | C703 | * E4 | C932 | * G5 | CL143 | * D1 | IC301 | C4 | L308 | D2 | R116 | * A7 | R257 | * A4 | R393 | * C1 | R548 | D2 | R902 | * F6 | RB104 | * A5 | | |
| C116 | * C7 | C243 | * A3 | C380 | * D3 | C704 | * E4 | C933 | * G6 | CL144 | * D1 | IC302 | * C4 | L309 | D3 | R117 | * A7 | R258 | * A3 | R394 | D3 | R551 | C1 | R903 | * F6 | RB105 | * A5 | X711 | D4 |
| C117 | * A7 | C244 | * A3 | C381 | * E2 | C705 | * E4 | C934 | * G6 | CL145 | * D1 | IC303 | C4 | L310 | * E3 | R118 | * A7 | R259 | * A4 | R395 | * D2 | R552 | D1 | R904 | * F6 | RB106 | * A5 | X751 | * F5 |
| C118 | * C7 | C245 | * A2 | C382 | * D3 | C711 | D4 | C935 | * G6 | CL146 | * D1 | IC304 | * C3 | L501 | * D5 | R119 | * A7 | R301 | D5 | R396 | * D2 | R553 | D1 | R905 | * F6 | RB107 | * B5 | | |
| C119 | A7 | C246 | A4 | C383 | * D2 | C712 | D4 | C936 | * G6 | CL147 | * D1 | IC305 | * C4 | L502 | * D5 | R120 | * A7 | R302 | D4 | R397 | * D2 | R559 | * D5 | R906 | * F6 | RB108 | * A5 | | |
| C120 | * A7 | C247 | * B1 | C384 | * D2 | C714 | D4 | C937 | * G6 | CL148 | * D1 | IC306 | C3 | L503 | B1 | R121 | * C7 | R303 | D4 | R398 | * D2 | R560 | C6 | R913 | * G5 | RB109 | * A5 | | |
| C121 | * A7 | C248 | * A3 | C385 | E3 | C715 | E5 | C938 | * G6 | CL149 | * D1 | IC307 | C5 | L601 | * E1 | R122 | * C7 | R304 | D4 | R399 | * D2 | R561 | * F7 | R914 | * F5 | RB201 | * A6 | | |
| C122 | A7 | C249 | A2 | C386 | E3 | C716 | * E4 | C939 | * G6 | CL150 | * D1 | IC308 | B6 | L611 | E1 | R123 | C4 | R305 | * D4 | R401 | * D3 | R563 | * C1 | R916 | * G5 | RB202 | * C6 | | |
| C123 | * C4 | C250 | * A2 | C387 | D3 | C717 | * F4 | C940 | * G6 | CL151 | * D1 | IC309 | * D2 | L651 | F3 | R124 | B4 | R306 | * D4 | R402 | * D2 | R564 | * D1 | R917 | * G5 | RB203 | * D6 | | |
| C124 | C4 | C251 | B4 | C388 | D3 | C727 | F4 | C941 | * G6 | CL152 | * D1 | IC310 | * C2 | L701 | * E4 | R125 | * B4 | R307 | * D4 | R403 | * D3 | R565 | * D1 | R918 | * G5 | RB204 | A5 | | |
| C125 | B4 | C252 | * A1 | C389 | * D3 | C728 | F5 | C942 | * G6 | CL153 | * C1 | IC311 | * D2 | L711 | E5 | R126 | B4 | R308 | * D4 | R404 | * D2 | R568 | * E7 | R919 | * G6 | RB205 | A5 | | |
| C126 | * C7 | C253 | * A2 | C390 | D3 | C729 | F4 | C943 | G6 | CL154 | * C1 | IC312 | * D3 | L713 | * E4 | R127 | * B4 | R309 | * D4 | R405 | * D2 | R569 | * F7 | R920 | * G6 | RB206 | A5 | | |
| C127 | * B4 | C255 | * C4 | C391 | D3 | C730 | F4 | C944 | G6 | CL155 | * C1 | IC313 | * D3 | L751 | F5 | R128 | * B4 | R310 | * D3 | R406 | * D2 | R571 | C3 | R921 | * G6 | RB207 | A5 | | |
| C128 | * B4 | C256 | * C4 | C392 | D4 | C731 | F4 | C945 | * G6 | CL156 | * C1 | IC314 | D3 | L771 | D5 | R129 | * C4 | R311 | * C4 | R407 | * E2 | R572 | * C6 | R922 | * G6 | RB208 | A4 | | |
| C129 | * B4 | C257 | * C4 | C393 | * C4 | C732 | * E4 | C946 | * G6 | CL501 | * C3 | IC315 | * D3 | L772 | F6 | R130 | * B4 | R312 | * D3 | R408 | * B7 | R573 | * D6 | R923 | * G6 | RB209 | * C6 | | |
| C130 | * A4 | C258 | * A4 | C394 | * C4 | C733 | * E4 | C947 | * G6 | CL712 | * D4 | IC316 | E4 | L781 | * D7 | R131 | B4 | R313 | * D3 | R409 | * B7 | R574 | B1 | R924 | * G6 | RB210 | A4 | | |
| C131 | * B4 | C301 | D4 | C395 | * C4 | C734 | * E4 | C948 | * G6 | CL771 | * E7 | IC317 | * D3 | L801 | F2 | R132 | * B4 | R314 | * C3 | R410 | * B7 | R602 | D1 | R925 | * G6 | RB211 | A4 | | |
| C132 | * C4 | C302 | C4 | C396 | * C5 | C735 | * E4 | C949 | * G7 | CL801 | * G2 | IC318 | C4 | L811 | F3 | R133 | * B4 | R315 | * C4 | R411 | D3 | R616 | E3 | R926 | * G6 | RB212 | * D6 | | |
| C133 | * C4 | C303 | C4 | C397 | * C4 | C736 | * E4 | C950 | * G7 | CL802 | * G2 | IC319 | * C5 | L821 | G4 | R134 | * A4 | R317 | * C4 | R412 | D3 | R651 | * E2 | R927 | * G6 | RB213 | A4 | | |
| C134 | * A6 | C304 | D4 | C398 | * C4 | C751 | F5 | C951 | G6 | CL811 | * G3 | IC320 | C4 | L823 | F4 | R135 | * B4 | R318 | * C4 | R413 | * C3 | R658 | * D1 | R928 | * G6 | RB214 | * A2 | | |
| C135 | * A6 | C305 | * D3 | C399 | C4 | C752 | * D5 | C952 | * G7 | CL812 | * G4 | IC321 | * D2 | L824 | G4 | R136 | * B4 | R319 | * C3 | R414 | * C3 | R701 | * D4 | R929 | * G6 | RB215 | * A2 | | |
| C136 | * A6 | C306 | * D4 | C400 | C4 | C753 | * F5 | C954 | * G2 | CL821 | * G3 | IC322 | C4 | L826 | G2 | R137 | * A6 | R320 | * C3 | R415 | * D3 | R702 | * D7 | R930 | * G6 | RB216 | * A1 | | |
| C137 | * A6 | C307 | * C4 | C401 | C4 | C754 | * F5 | C955 | * G2 | CL980 | * F7 | IC323 | C3 | L827 | G2 | R138 | * A6 | R321 | B4 | R416 | * D4 | R703 | * D7 | R931 | * G6 | RB217 | * B2 | | |
| C138 | * A6 | C308 | * D3 | C402 | C4 | C755 | * F5 | C956 | * G2 | CL981 | * F7 | IC324 | D4 | L901 | F6 | R139 | * A6 | R322 | * B5 | R417 | * B3 | R704 | * E4 | R932 | * G6 | RB218 | * B2 | | |
| C139 | * A6 | C309 | * C4 | C403 | * C4 | C756 | * F6 | C957 | G6 | CL982 | * E1 | IC325 | * B4 | L902 | F6 | R140 | * A6 | R323 | * C5 | R418 | * B3 | R705 | * E4 | R933 | * G6 | RB219 | * A2 | | |
| C140 | * A6 | C310 | * C4 | C404 | * D2 | C757 | * F6 | C958 | G6 | | | IC501 | * F7 | L903 | * F4 | R141 | * A6 | R324 | * C5 | R419 | * D4 | R706 | * E4 | R934 | G6 | RB220 | * A2 | | |
| C141 | * A6 | C311 | * C4 | C405 | D3 | C758 | * F7 | C959 | * F5 | CN1 | F7 | IC502 | * C6 | L904 | * G5 | R142 | * A6 | R325 | * B5 | R420 | D3 | R707 | * E4 | R935 | G6 | RB221 | B4 | | |
| C142 | * A6 | C312 | * C3 | C406 | C4 | C759 | * F7 | C960 | G2 | CN2 | B7 | IC503 | * D6 | L905 | * G6 | R143 | * A6 | R326 | * B5 | R421 | * D4 | R708 | * E4 | R936 | G6 | RB222 | B4 | | |
| C143 | * A5 | C313 | * C3 | C408 | D4 | C771 | D5 | C961 | * G5 | CN3 | A1 | IC504 | D3 | L906 | * G6 | R144 | * A6 | R327 | * B5 | R422 | D3 | R709 | * D7 | R937 | G6 | RB223 | * A2 | | |
| C144 | * A5 | C314 | * B5 | C409 | * E4 | C772 | D5 | C962 | F3 | CN4 | D1 | IC505 | C2 | L907 | * G7 | R145 | * A6 | R328 | * B5 | R424 | * D4 | R711 | D4 | R938 | G6 | RB224 | * A3 | | |
| C145 | A6 | C315 | B5 | C410 | * C4 | C773 | E5 | C965 | * F5 | CN5 | C1 | IC506 | C3 | L908 | * G7 | R146 | * A6 | R329 | * C6 | R425 | * D3 | R712 | * D4 | R939 | * G6 | RB225 | * A3 | | |
| C146 | * A6 | C316 | B5 | C411 | * B5 | C774 | D6 | C966 | * F5 | CN6 | C6 | IC509 | C1 | L909 | * G2 | R147 | * A6 | R330 | * C6 | R426 | D3 | R713 | * E3 | R940 | G6 | RB226 | * A3 | | |
| C147 | * A6 | C317 | B5 | C501 | * C6 | C775 | F6 | C971 | * F4 | CN7 | B2 | IC510 | C1 | L980 | * F7 | R148 | * A6 | R331 | * C6 | R427 | * D4 | R715 | D4 | R941 | G6 | RB227 | * B4 | | |
| C148 | * A6 | C318 | * C5 | C502 | * D6 | C776 | * E6 | C972 | F4 | CN9 | F6 | IC511 | D3 | L981 | * F7 | R149 | * A6 | R332 | * C6 | R429 | * C4 | R720 | * D7 | R942 | G6 | RB228 | * B4 | | |
| C149 | * A6 | C319 | * C5 | C503 | * C6 | C777 | * E6 | C973 | F5 | | | IC512 | * C1 | L982 | * G7 | R150 | * A6 | R333 | * C6 | R430 | C4 | R723 | F4 | R943 | G6 | RB229 | * B3 | | |
| C150 | * A6 | C320 | * C3 | C504 | * D6 | C778 | * E6 | C980 | * F7 | D101 | * A7 | IC513 | C3 | L983 | * G7 | R151 | * A6 | R334 | * C6 | R431 | * C4 | R724 | F4 | R944 | G2 | RB230 | * B3 | | |
| C151 | * A6 | C321 | * C5 | C507 | * F7 | C779 | F6 | C981 | * F7 | D102 | * A7 | IC514 | D5 | L984 | * G7 | R152 | * A6 | R335 | * C6 | R432 | * C4 | R725 | * E4 | R945 | G2 | RB231 | * B3 | | |
| C152 | * A6 | C322 | * D4 | C508 | C5 | C780 | * F6 | C982 | * G7 | D301 | * D4 | IC517 | * C1 | | | R153 | * B5 | R336 | * C6 | R433 | * C4 | R726 | * D7 | R946 | G2 | RB232 | * B3 | | |
| C153 | * A6 | C323 | * D4 | C509 | C6 | C781 | * E6 | C983 | * G7 | D302 | * C4 | IC518 | B1 | | | R154 | * B6 | R337 | * C6 | R434 | C4 | R727 | F4 | R947 | G2 | RB233 | * B3 | | |
| C154 | * A6 | C324 | * D3 | C510 | C5 | C782 | D6 | C984 | * G7 | D303 | * C3 | IC521 | C2 | | | R201 | * A4 | R338 | * C6 | R435 | C4 | R728 | * E4 | R950 | F2 | RB234 | * B3 | | |
| C155 | * A5 | C325 | * C6 | C511 | * D5 | C783 | * D7 | C985 | F6 | D304 | * E3 | IC522 | B1 | | | R202 | * A4 | R339 | * B6 | R436 | C5 | R729 | * E4 | R951 | G2 | RB235 | * B2 | | </ |

DPR-141
SUFFIX: -14

DPR-141
SUFFIX: -14

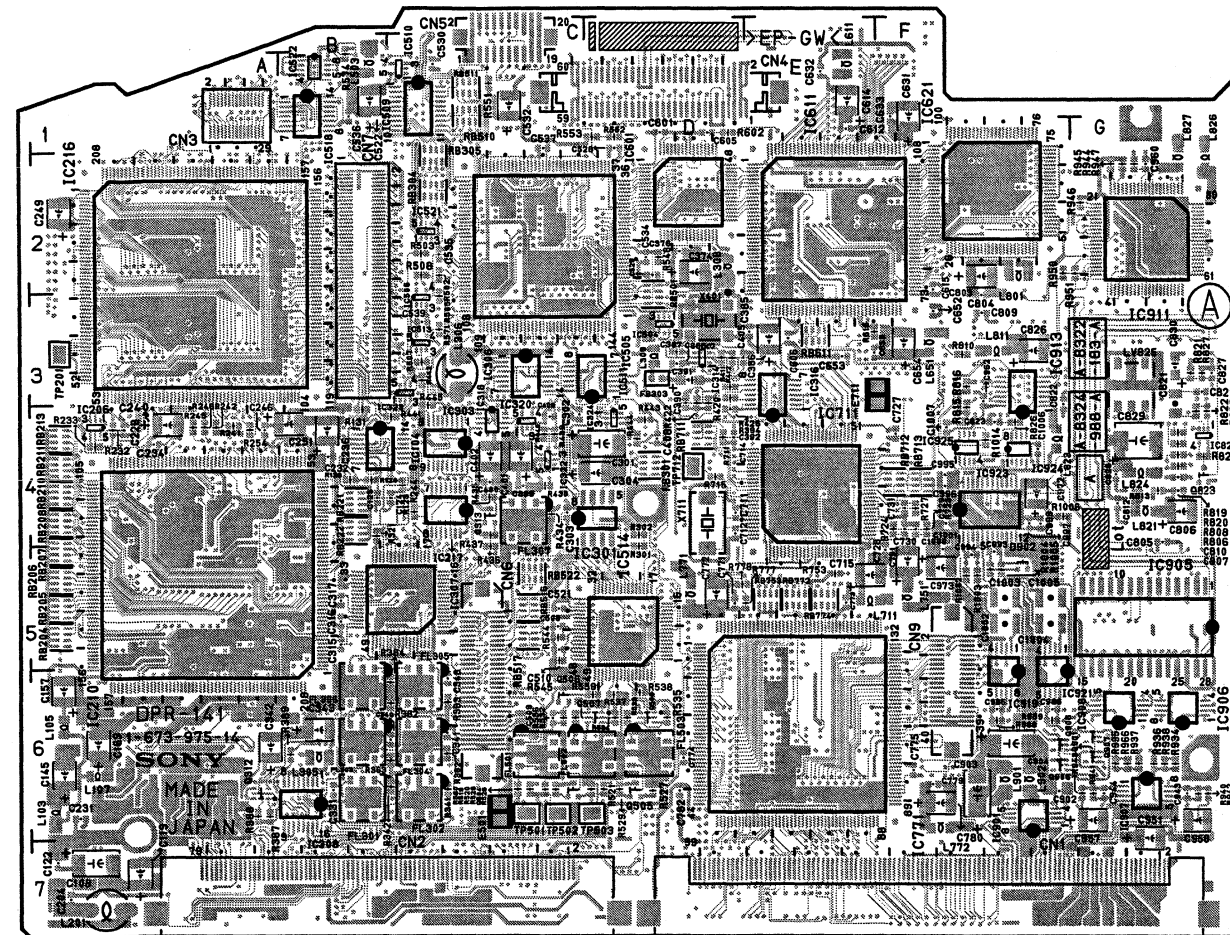

DPR-141 -A SIDE-
SUFFIX: -14

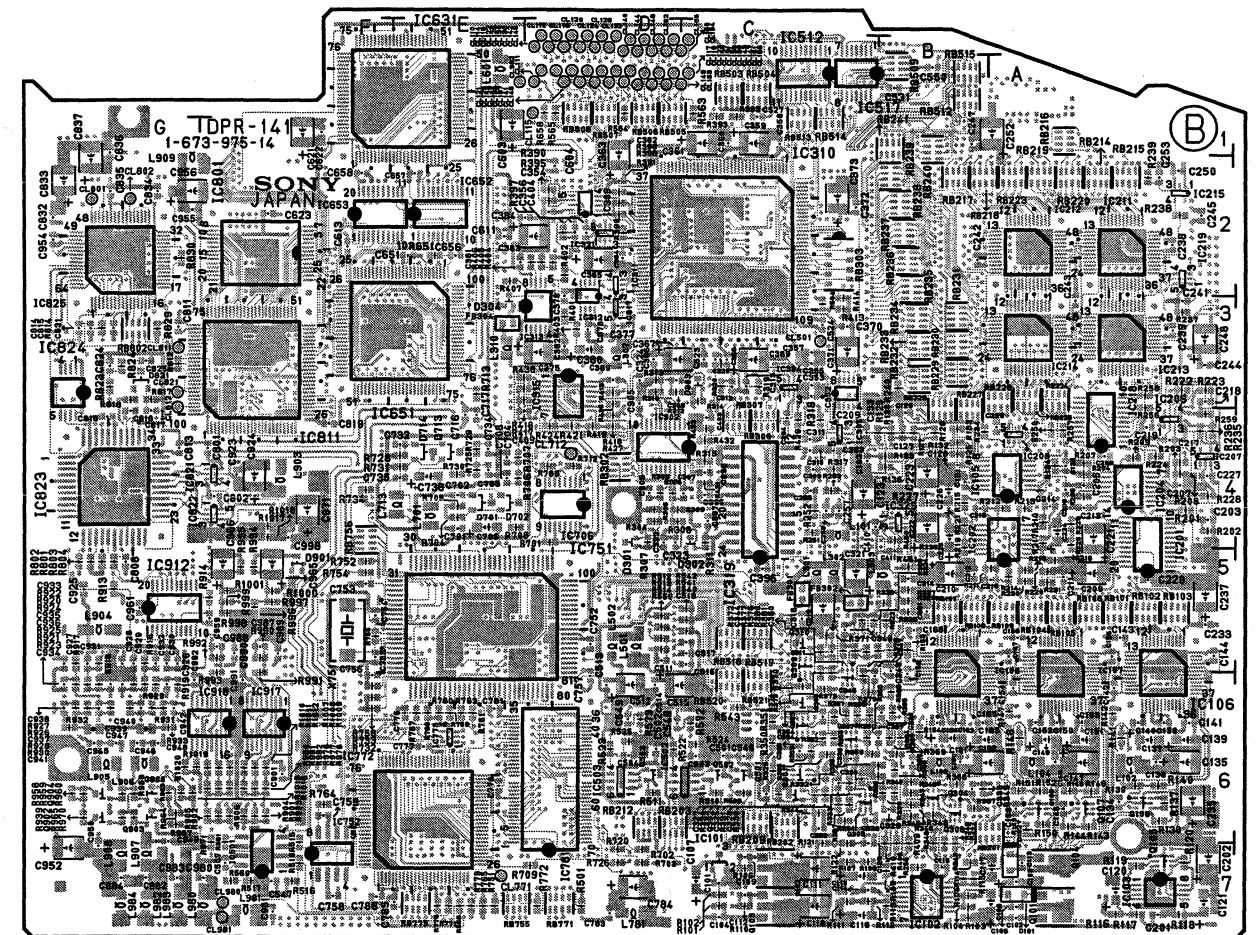

DPR-141 -B SIDE-
SUFFIX: -14

DPR-141

SUFFIX: -11

DPR-141


SUFFIX: -11

DPR-141 (1-673-975-11)


| | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|------|------|------|------|------|------|------|------|------|------|---------|------|-------|------|------|------|------|------|------|------|------|------|------|------|------|------|-------|------|
| C101 | * C7 | C227 | * A4 | C364 | * D2 | C631 | F1 | C901 | * F6 | CL137 | * D1 | IC215 | * A2 | L303 | * B5 | R114 | * B7 | R254 | A4 | R390 | * D2 | R542 | * C5 | R822 | G4 | RB204 | A5 |
| C102 | * A7 | C228 | A4 | C365 | * D2 | C632 | E1 | C902 | * G6 | CL139 | * D1 | IC216 | A2 | L305 | B6 | R115 | * B7 | R255 | * B7 | R391 | * D2 | R543 | * C6 | R823 | * G3 | RB205 | A5 |
| C103 | * A7 | C229 | * A4 | C366 | * D3 | C633 | F1 | C903 | * F6 | CL140 | * D1 | IC217 | C4 | L306 | C3 | R116 | * A7 | R256 | * A4 | R392 | * C1 | R544 | C5 | R824 | * G3 | RB206 | A5 |
| C104 | * C7 | C230 | * A4 | C367 | * D3 | C651 | * E2 | C904 | * F6 | CL141 | * D1 | IC218 | * A4 | L307 | * D3 | R117 | * A7 | R257 | * A4 | R393 | * C1 | R545 | C5 | R825 | G4 | RB207 | A5 |
| C105 | * A7 | C231 | A6 | C368 | * C3 | C652 | F3 | C905 | * F6 | CL142 | * D1 | IC219 | * A2 | L308 | D2 | R118 | * A7 | R258 | * A3 | R394 | D3 | R548 | D2 | R826 | F4 | RB208 | A4 |
| C106 | * A7 | C232 | B4 | C369 | * C3 | C653 | E3 | C906 | * F6 | CL143 | * D1 | IC301 | C4 | L309 | D3 | R119 | * A7 | R301 | D4 | R395 | * D2 | R550 | * B1 | R827 | G3 | RB209 | * C6 |
| C107 | * C7 | C233 | * A5 | C370 | * C3 | C654 | F3 | C907 | F6 | CL144 | * D1 | IC302 | * C4 | L310 | * E3 | R120 | * A7 | R302 | D4 | R396 | * D2 | R551 | C1 | R828 | G4 | RB210 | A4 |
| C108 | A7 | C234 | A4 | C371 | * C3 | C655 | E3 | C908 | F6 | CL145 | * D1 | IC303 | C4 | L501 | * D5 | R121 | * C7 | R303 | * D4 | R397 | * D2 | R552 | D1 | R829 | * G3 | RB211 | A4 |
| C109 | * C7 | C235 | * A6 | C372 | * C2 | C656 | * E2 | C909 | * G6 | CL146 | * D1 | IC304 | * C3 | L502 | * D5 | R122 | * C7 | R304 | * D4 | R398 | * D2 | R553 | D1 | R830 | * G2 | RB212 | * D6 |
| C110 | * C7 | C236 | B4 | C373 | * C2 | C657 | * E2 | C910 | * F6 | CL147 | * D1 | IC305 | * C4 | L503 | B1 | R123 | C4 | R305 | * D4 | R399 | * D2 | R559 | * D5 | R901 | * F6 | RB213 | A4 |
| C111 | * C7 | C237 | * A5 | C374 | D2 | C658 | * F2 | C911 | G6 | CL148 | * D1 | IC306 | C3 | L601 | * E1 | R124 | B4 | R306 | * D4 | R400 | * D3 | R560 | C6 | R902 | * F6 | RB214 | * A2 |
| C112 | * C7 | C238 | * A2 | C375 | * D3 | C701 | * E4 | C912 | * F6 | CL149 | * D1 | IC307 | C5 | L611 | E1 | R125 | * B4 | R307 | * D4 | R401 | * D3 | R561 | * F7 | R903 | * F6 | RB215 | * A2 |
| C113 | * A7 | C239 | * A3 | C376 | D2 | C702 | * E4 | C913 | * F6 | CL150 | * D1 | IC308 | B6 | L651 | F3 | R126 | B4 | R308 | * D4 | R402 | * D2 | R563 | * C1 | R904 | * F6 | RB216 | * A1 |
| C114 | * C7 | C240 | A4 | C377 | * D3 | C703 | * E4 | C914 | G6 | CL151 | * D1 | IC309 | * D2 | L701 | * E4 | R127 | * B4 | R309 | * D4 | R403 | * D3 | R564 | * D1 | R905 | * F6 | RB217 | * B2 |
| C115 | * B7 | C241 | * A3 | C378 | * D3 | C704 | * E4 | C915 | F5 | CL152 | * D1 | IC310 | * C2 | L711 | E5 | R128 | * B4 | R310 | * D3 | R404 | * D2 | R565 | * D1 | R906 | * F6 | RB218 | * B2 |
| C116 | * C7 | C242 | * B2 | C379 | * D3 | C705 | * E4 | C916 | * F5 | CL153 | * D1 | IC311 | * D2 | L713 | * E4 | R129 | * C4 | R311 | * C4 | R405 | * D2 | R568 | * F7 | R907 | F6 | RB219 | * A2 |
| C117 | * A7 | C243 | * A3 | C380 | * D3 | C711 | D4 | C917 | * F5 | CL154 | * D1 | IC312 | * D3 | L751 | F5 | R130 | * B4 | R312 | * D3 | R406 | * D2 | R569 | * F7 | R908 | * F6 | RB220 | * A2 |
| C118 | * C7 | C244 | * A3 | C381 | * E2 | C712 | D4 | C918 | * F4 | CL155 | * C1 | IC313 | * D3 | L771 | D5 | R131 | B4 | R313 | * D3 | R407 | * E2 | R571 | C3 | R909 | * F5 | RB221 | B4 |
| C119 | A7 | C245 | * A2 | C382 | * D3 | C714 | D4 | C919 | * F5 | CL156 | * C1 | IC314 | D3 | L772 | F6 | R132 | * B4 | R314 | * C3 | R408 | * B7 | R572 | * C6 | R910 | * F4 | RB222 | B4 |
| C120 | * A7 | C246 | A4 | C383 | * D2 | C715 | E5 | C920 | * F5 | CL501 | * C3 | IC315 | * D3 | L781 | * D7 | R133 | * B4 | R315 | * C4 | R409 | * B7 | R573 | * D6 | R911 | * F6 | RB223 | * A2 |
| C121 | * A7 | C247 | * B1 | C384 | * E2 | C716 | * E4 | C921 | * F4 | CL712 | * D4 | IC316 | E4 | L801 | F2 | R134 | * A4 | R316 | D4 | R410 | * B7 | R574 | B1 | R912 | F6 | RB224 | * A3 |
| C122 | A7 | C248 | * A3 | C385 | E3 | C717 | * E4 | C922 | * F4 | CL771 | * E7 | IC317 | * D3 | L811 | F3 | R135 | * B4 | R317 | * C4 | R411 | D3 | R575 | D3 | R913 | * G5 | RB225 | * A3 |
| C123 | * C4 | C249 | A2 | C386 | E3 | C727 | F4 | C923 | * F4 | CL801 | * G2 | IC318 | C4 | L821 | F4 | R136 | * B4 | R318 | * C4 | R412 | D3 | R602 | D1 | R914 | * F5 | RB226 | * A3 |
| C124 | C4 | C250 | * A2 | C387 | D3 | C728 | F5 | C924 | * F4 | CL802 | * G2 | IC319 | * C5 | L823 | F4 | R137 | * A6 | R319 | * C3 | R413 | * C3 | R616 | E3 | R915 | * F5 | RB227 | * B4 |
| C125 | B4 | C251 | B4 | C388 | D3 | C729 | F4 | C925 | * G5 | CL811 | * G3 | IC320 | C4 | L824 | G4 | R138 | * A6 | R320 | * C3 | R414 | * C3 | R617 | E3 | R916 | * G5 | RB228 | * B4 |
| C126 | * C7 | C252 | * A1 | C389 | * D3 | C730 | F4 | C926 | * G5 | CL812 | * G4 | IC321 | * D2 | L826 | G2 | R139 | * A6 | R321 | B4 | R415 | * D3 | R651 | * E2 | R917 | * G5 | RB229 | * B3 |
| C127 | * B4 | C253 | * A2 | C390 | D3 | C731 | F4 | C927 | * G5 | CL827 | G2 | IC322 | C4 | L827 | G2 | R140 | * A6 | R322 | * B5 | R416 | * D4 | R658 | * D1 | R918 | * G5 | RB230 | * B3 |
| C128 | * B4 | C255 | * C4 | C391 | D3 | C732 | * E4 | C928 | * G5 | CL901 | * F4 | IC323 | C3 | L901 | * F6 | R141 | * A6 | R323 | * C5 | R417 | * E3 | R701 | * D4 | R919 | * G6 | RB231 | * B3 |
| C129 | * B4 | C256 | * C4 | C392 | D4 | C733 | * E4 | C929 | * G5 | CL902 | * F4 | IC324 | D4 | L902 | * F6 | R142 | * A6 | R324 | * C5 | R418 | * E3 | R702 | * D7 | R920 | * G6 | RB232 | * B3 |
| C130 | * A4 | C257 | * C4 | C393 | * C4 | C734 | * E4 | C930 | * G5 | CL980 | * F7 | IC501 | * F7 | L903 | * F4 | R143 | * A6 | R325 | * B5 | R419 | * D4 | R703 | * D7 | R921 | * G6 | RB233 | * B3 |
| C131 | * B4 | C258 | * A4 | C394 | * C4 | C735 | * E4 | C931 | * G5 | CL981 | * F7 | IC502 | * C6 | L904 | * G5 | R144 | * A6 | R326 | * B5 | R420 | D3 | R704 | * E4 | R922 | * G6 | RB234 | * B2 |
| C132 | * C4 | C301 | D4 | C395 | * C4 | C736 | * E4 | C932 | * G5 | CN1 | F7 | IC503 | * D6 | L905 | * G6 | R145 | * A6 | R327 | * B5 | R421 | * D4 | R705 | * E4 | R923 | * G6 | RB235 | * B2 |
| C133 | * C4 | C302 | C4 | C396 | * C5 | C751 | F5 | C933 | * G6 | CN2 | C7 | IC504 | D3 | L906 | * G6 | R146 | * A6 | R328 | * B5 | R422 | D3 | R706 | * E4 | R924 | * G6 | RB236 | * B2 |
| C134 | * A6 | C303 | C4 | C397 | * C4 | C752 | * D5 | C934 | * G6 | CN3 | A1 | IC505 | C2 | L907 | * G7 | R147 | * A6 | R329 | * C6 | R423 | * E4 | R707 | * E4 | R925 | * G6 | RB237 | * B2 |
| C135 | * A6 | C304 | D4 | C398 | * C4 | C753 | * F5 | C935 | * G6 | CN4 | D1 | IC506 | C3 | L908 | * G7 | R148 | * A6 | R330 | * C6 | R424 | * D4 | R708 | * E4 | R926 | * G6 | RB238 | * B2 |
| C136 | * A6 | C305 | * D3 | C399 | C4 | C754 | * F5 | C936 | * G6 | CN5 | C1 | IC509 | C1 | L909 | * G2 | R149 | * A6 | R331 | * C6 | R425 | * D3 | R709 | * D7 | R927 | * G6 | RB239 | * B2 |
| C137 | * A6 | C306 | * D4 | C400 | C4 | C755 | * F5 | C937 | * G6 | CN6 | C6 | IC510 | C1 | L980 | * F7 | R150 | * A6 | R332 | * C6 | R426 | D3 | R711 | D4 | R928 | * G6 | RB240 | * B1 |
| C138 | * A6 | C307 | * C4 | C401 | C4 | C756 | * F6 | C938 | * G6 | CN7 | B2 | IC511 | D3 | L981 | * F7 | R151 | * A6 | R333 | * C6 | R427 | * D4 | R712 | * D4 | R929 | * G6 | RB241 | * B1 |
| C139 | * A6 | C308 | * D3 | C402 | C4 | C757 | * D6 | C939 | * G6 | CN9 | F6 | IC512 | * C1 | L982 | * G7 | R152 | * A6 | R334 | * C6 | R428 | * C4 | R713 | * E3 | R930 | * G6 | RB242 | D4 |
| C140 | * A6 | C309 | * C4 | C403 | * C4 | C758 | * F7 | C940 | * G6 | | | IC513 | C3 | L983 | * G7 | R153 | * B5 | R335 | * C6 | R429 | * C4 | R715 | D4 | R931 | * G6 | RB302 | * D4 |
| C141 | * A6 | C310 | * C4 | C404 | * D2 | C759 | * F6 | C941 | * G6 | | | IC514 | D5 | L984 | * G7 | R154 | * B6 | R336 | * C6 | R430 | C4 | R720 | * D7 | R932 | * G6 | RB303 | * C2 |
| C142 | * A6 | C311 | * C4 | C405 | D3 | C771 | D5 | C942 | * G6 | D101 | * A7 | IC517 | * C1 | | | R155 | * B6 | R337 | * C6 | R431 | * C4 | R723 | F4 | R933 | * G6 | RB304 | * C2 |
| C143 | * A5 | C312 | * C3 | C406 | C4 | C772 | D5 | C943 | G6 | D102 | * A7 | IC518 | B1 | Q101 | * A7 | R201 | * A4 | R338 | * C6 | R432 | * C4 | R724 | F4 | R934 | G6 | RB305 | C2 |
| C144 | * A5 | C313 | * C3 | C407 | C3 | C773 | E5 | C944 | G6 | D301 | * D4 | IC521 | C2 | Q102 | * C7 | R202 | * A4 | R339 | * B6 | R433 | * C4 | R725 | * E4 | R935 | G6 | RB306 | * C4 |
| C145 | A6 | C314 | * B5 | C408 | D4 | C774 | D6 | C945 | * G6 | D302 | * C4 | IC522 | B1 | Q103 | * C7 | R203 | * A4 | R340 | * B6 | R434 | C4 | R726 | * D7 | R936 | G6 | RB307 | * C4 |
| C146 | * A6 | C315 | B5 | C501 | * C6 | C775 | F6 | C946 | * G6 | D303 | * C3 | IC601 | D2 | Q104 | * A7 | R204 | * A4 | R341 | C6 | R435 | C4 | R727 | F4 | R937 | G6 | RB308 | D3 |
| C147 | * A6 | C316 | B5 | C502 | * D6 | C776 | * E6 | C947 | * G6 | D304 | * E3 | IC611 | E2 | Q105 | * A7 | R206 | * A4 | R342 | C6 | R436 | C5 | R728 | * E4 | R938 | G6 | RB309 | * C1 |
| C148 | * A6 | C317 | B5 | C503 | * C6 | C777 | * E6 | C948 | * G6 | D701 | * E4 | IC621 | F2 | Q106 | * A6 | R207 | * A4 | R343 | * B6 | R437 | C4 | R729 | * E4 | R939 | * G6 | RB309 | * C1 |
| C149 | * A6 | C318 | * C5 | C504 | * D6 | C778 | * E6 | C949 | * G7 | D702 | * E4 | IC631 | * E1 | Q107 | * A6 | R208 | * A4 | R344 | * C6 | R438 | * E3 | R730 | * E4 | R940 | G6 | RB309 | * C1 |
| C150 | * A6 | C319 | * C5 | C507 | * F7 | C779 | F6 | C950 | * G7 | D713 | * E4 | IC651 | * E3 | Q108 | * A6 | R209 | * A4 | R345 | * B6 | R439 | C4 | R731 | * E4 | R941 | G6 | RB309 | * C1 |
| C151 | * A6 | C320 | * C3 | C508 | C5 | C780 | F6 | C951 | G6 | D714 | * E4 | IC652 | * E2 | Q109 | * A6 | R210 | * A4 | R346 | * B6 | R440 | C4 | R732 | * F6 | R942 | G6 | RB309 | * C1 |
| C152 | * A6 | C321 | * C5 | C509 | C6 | C781 | * E6 | C952 | * G7 | D821 | * G3 | IC653 | * F2 | Q108 | * A6 | R211 | * A5 | R347 | * B6 | R441 | C4 | R733 | * F6 | R943 | G6 | RB309 | * C1 |
| C153 | * A6 | C322 | * D4 | C510 | C5 | C782 | D6 | C954 | * G2 | | | IC706 | * D4 | Q301 | * C6 | R212 | * A4 | R348 | * B6 | R442 | C3 | R734 | * F4 | R944 | G2 | RB309 | * C1 |
| C154 | * A6 | C323 | * D4 | C511 | * D5 | C783 | * D7 | C955 | * G2 | | | IC707 | * D4 | Q302 | * C6 | R213 | * A4 | R349 | * B6 | R443 | D4 | R751 | * E7 | R945 | G2 | RB309 | * C1 |
| C155 | * A5 | C324 | * D3 | C512 | * D6 | C784 | * D7 | C956 | * G2 | E501 | C6 | IC711 | E4 | Q303 | * C6 | R214 | * A5 | R350 | * C6 | R444 | D4 | R752 | * F5 | R946 | G2 | RB309 | * C1 |
| C156 | * A5 | C325 | * C6 | C513 | * D6 | C785 | * E7 | C957 | G6 | E711 | F3 | IC751 | * E5 | Q304 | * B6 | R215 | * B4 | R351 | * C6 | R501 | * D7 | R753 | E5 | R947 | G2 | RB309 | * C1 |
| C157 | A6 | C326 | * C6 | C514 | * D6 | C786 | * F7 | C958 | G6 | | | IC752 | * F7 | Q305 | * C6 | R216 | * A5 | R352 | * C6 | R502 | C2 | R754 | * F5 | R948 | F4 | RB309 | * C1 |
| C158 | * A6 | C327 | * C6 | C515 | * D6 | C801 | * F4 | C959 | * F5 | FB301</ | | | | | | | | | | | | | | | | | |

DPR-141
SUFFIX: -11

DPR-141
SUFFIX: -11

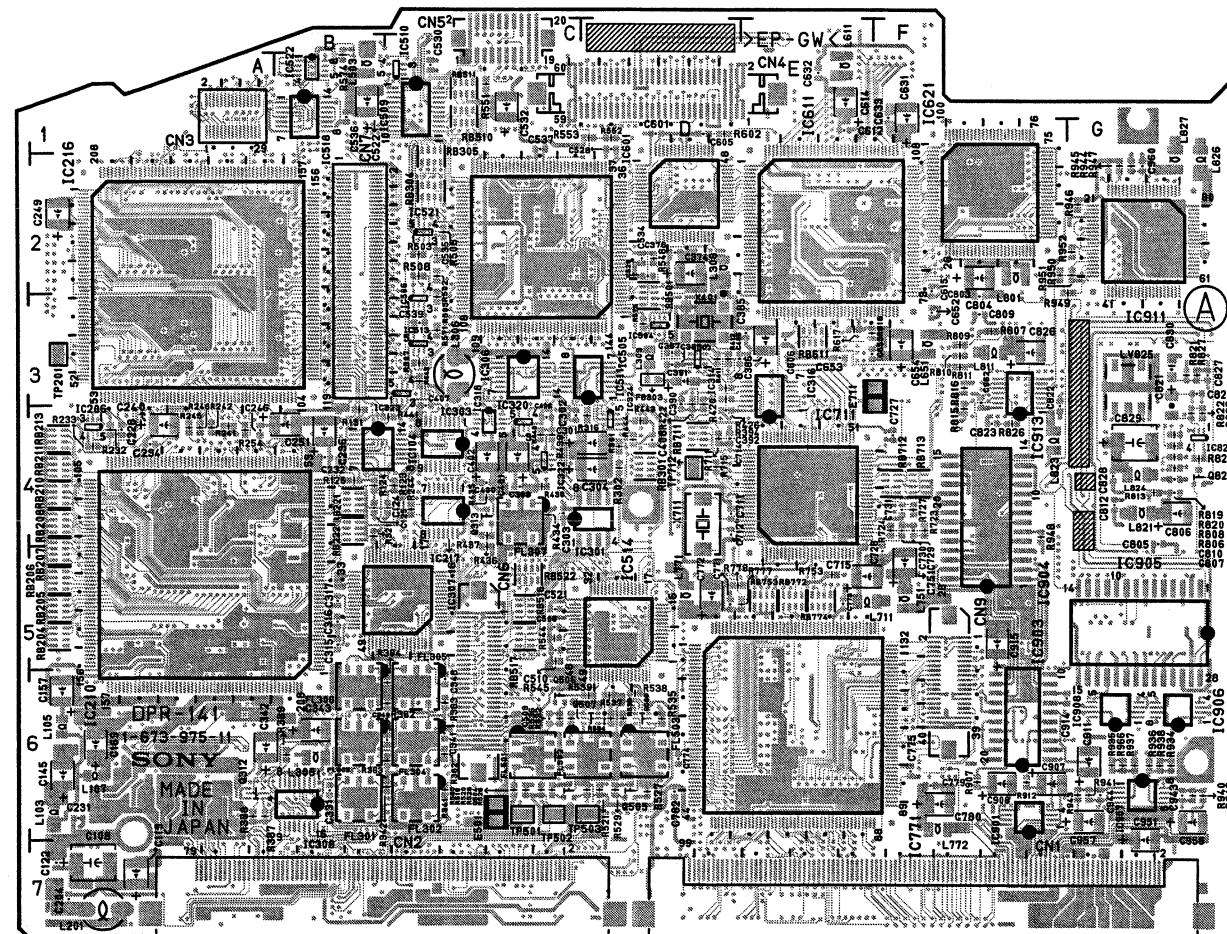


DPR-141 -A SIDE-
SUFFIX: -11

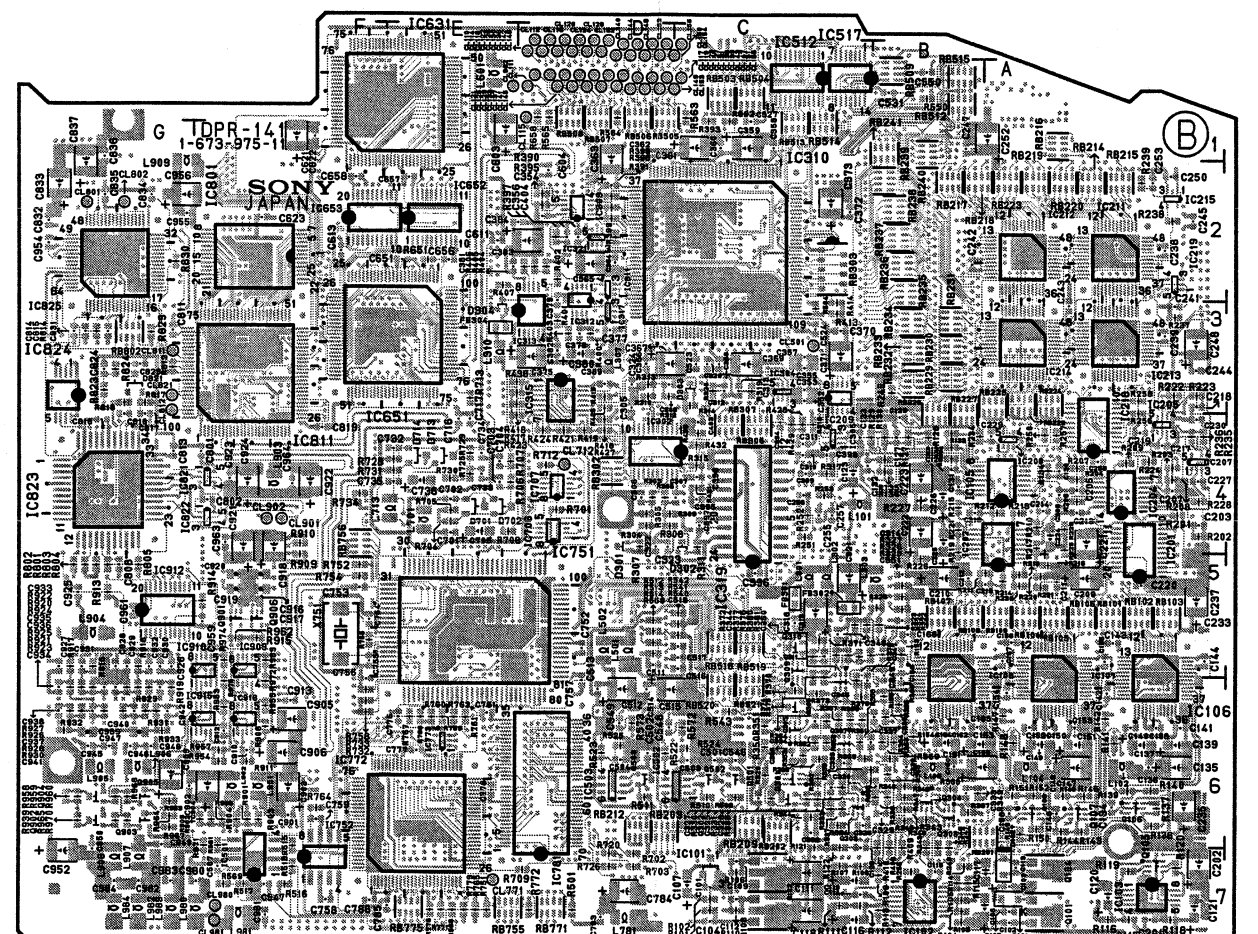


DPR-141 -B SIDE-
SUFFIX: -11

ES-31 (1-677-371-11)

| | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|------|-----|------|-----|------|-----|-------|-----|-------|-----|------|-----|------|-----|------|-----|------|-----|------|-----|------|-----|------|-----|------|-----|-------|-----|
| C101 | *G5 | C193 | *E2 | C650 | C5 | C850 | B3 | IC405 | B4 | Q110 | *C3 | Q808 | A1 | R187 | *D1 | R280 | F2 | R407 | *F4 | R501 | *A5 | R636 | *D5 | R819 | B1 | R913 | *B2 |
| C102 | *F5 | C194 | *E2 | C651 | C4 | C851 | *B3 | IC406 | B4 | Q111 | *B2 | Q809 | *A2 | R188 | *D1 | R281 | *F2 | R408 | *F4 | R502 | *A5 | R637 | *E5 | R820 | B1 | R914 | *B4 |
| C103 | *F5 | C195 | *E2 | C652 | *C5 | C852 | *B3 | IC407 | B4 | Q112 | *C1 | Q810 | *A3 | R189 | *D1 | R282 | *F2 | R409 | *F4 | R503 | *A4 | R638 | *E5 | R821 | *B1 | R915 | *A4 |
| C104 | *G5 | C196 | D1 | C653 | *C4 | C853 | *B3 | IC408 | B4 | Q113 | *C2 | Q811 | *B2 | R190 | *D1 | R283 | *F2 | R410 | *F4 | R504 | *A5 | R639 | *E5 | R822 | *A2 | R916 | *A2 |
| C105 | *G5 | C197 | *E1 | C654 | *C5 | C854 | *B3 | IC409 | F4 | Q114 | *C1 | | | R191 | *D1 | R284 | *F2 | R411 | *F4 | R505 | *A5 | R640 | D5 | R823 | *A2 | R917 | *A3 |
| C106 | *G5 | C198 | *D1 | C655 | D5 | C855 | B3 | IC410 | A5 | Q115 | *C1 | R101 | *G5 | R192 | *D2 | R285 | *E2 | R412 | *F3 | R506 | *A5 | R641 | D5 | R824 | *A2 | R918 | *A3 |
| C107 | F5 | C199 | *D1 | C656 | D5 | C856 | *B3 | IC411 | B5 | Q116 | *D1 | R102 | *G5 | R193 | *D2 | R286 | *E2 | R413 | *F3 | R507 | *A5 | R642 | *D4 | R825 | *A1 | R919 | *B3 |
| C108 | *F4 | C200 | *D1 | C657 | D5 | C857 | *B2 | IC412 | B5 | Q117 | *D1 | R103 | *G5 | R194 | *D2 | R287 | E2 | R414 | F3 | R508 | *A5 | R643 | *D4 | R826 | *A2 | R920 | *B3 |
| C109 | *G4 | C201 | *D1 | C658 | D5 | C858 | *B2 | IC413 | B5 | Q118 | *D2 | R104 | *G5 | R195 | *D2 | R288 | *E2 | R415 | F3 | R509 | *A5 | R644 | *D4 | R827 | *A2 | R921 | B4 |
| C110 | *F4 | C202 | *D1 | C659 | C5 | C859 | B2 | IC414 | F3 | Q119 | *D2 | R105 | *G5 | R196 | *D2 | R289 | *E2 | R416 | *F3 | R510 | *A4 | R645 | *D4 | R828 | *A2 | R922 | *A3 |
| C111 | *G4 | C203 | *E1 | C660 | C5 | C860 | *B2 | IC415 | F3 | Q120 | *C2 | R106 | *D3 | R197 | *D2 | R290 | *E2 | R417 | *F3 | R511 | *A5 | R650 | *C4 | R829 | A1 | R923 | *B4 |
| C112 | *F4 | C204 | D1 | C661 | *C5 | C861 | *B2 | IC601 | C4 | Q121 | *C2 | R107 | *G4 | R198 | C2 | R291 | *E2 | R418 | F3 | R512 | *A5 | R651 | *C4 | R830 | A1 | R924 | *A3 |
| C113 | *G4 | C205 | E1 | C662 | *D5 | C862 | *B2 | IC602 | C4 | Q122 | *C2 | R108 | *G4 | R199 | C2 | R292 | *E2 | R419 | F3 | R513 | *A5 | R652 | *C4 | R831 | *A1 | R925 | A4 |
| C114 | *D3 | C206 | D1 | C663 | D5 | C863 | *B2 | IC603 | C4 | Q123 | *C2 | R109 | *G4 | R200 | C2 | R293 | *E2 | R420 | F3 | R514 | *A5 | R653 | C4 | R832 | *B1 | R926 | *A4 |
| C115 | D2 | C207 | *E2 | C664 | *D5 | C864 | *B2 | IC604 | D4 | Q124 | *B1 | R110 | *G4 | R201 | C2 | R294 | *D1 | R421 | F3 | R515 | *A5 | R654 | *C4 | R833 | *A2 | R927 | *A2 |
| C116 | E2 | C208 | *E1 | C665 | *D5 | C865 | *B2 | IC605 | D3 | Q125 | *C1 | R111 | *G4 | R202 | *C2 | R295 | *D1 | R422 | *F3 | R516 | *A5 | R655 | C4 | R834 | *B2 | R928 | *A2 |
| C117 | E2 | C209 | *E2 | C680 | C5 | C866 | B3 | IC606 | C5 | Q126 | *C1 | R112 | *E3 | R203 | *C2 | R296 | *D1 | R423 | F3 | R517 | *A4 | R656 | C4 | R835 | *B2 | R929 | *A2 |
| C118 | *E2 | C210 | *E1 | C681 | C5 | C867 | *B2 | IC607 | D5 | Q127 | F3 | R113 | D2 | R204 | *C2 | R297 | *E1 | R424 | F3 | R518 | *A5 | R657 | *C5 | R836 | *A2 | R930 | A4 |
| C119 | *D2 | C211 | *D2 | C682 | C5 | C868 | *B3 | IC608 | C5 | Q128 | F3 | R114 | *D2 | R205 | *C2 | R298 | *D1 | R425 | *F3 | R519 | *A5 | R658 | *C5 | R837 | *A2 | R931 | *A2 |
| C120 | *E2 | C212 | E5 | C683 | *C5 | C869 | A4 | IC609 | C4 | Q129 | *G2 | R115 | D2 | R206 | *C2 | R299 | *D1 | R426 | *E3 | R520 | *A5 | R659 | *C5 | R838 | *A2 | R932 | B4 |
| C121 | *D3 | C213 | E5 | C684 | C5 | C870 | *A4 | IC610 | D4 | Q130 | *F2 | R116 | *D2 | R207 | *C2 | R300 | *D1 | R427 | *E3 | R521 | *A4 | R660 | *C5 | R839 | *A2 | R933 | B4 |
| C122 | *D3 | C214 | *D4 | C685 | D4 | C871 | A4 | IC701 | C4 | Q131 | F2 | R117 | *E2 | R208 | *C2 | R301 | *E1 | R428 | F3 | R522 | *A4 | R661 | *C5 | R840 | *A2 | R934 | *B4 |
| C123 | *E3 | C215 | *D3 | C686 | D4 | | | IC702 | C4 | Q132 | *F2 | R118 | *E2 | R209 | *C2 | R302 | *E1 | R429 | F3 | R523 | *A5 | R662 | *C5 | R841 | *A2 | R935 | B4 |
| C124 | *F3 | C216 | D3 | C687 | C4 | CL001 | *E5 | IC801 | *B1 | Q133 | F2 | R119 | *D2 | R210 | *C2 | R303 | *F2 | R430 | F3 | R524 | *A4 | R663 | *C5 | R842 | *A2 | R936 | A2 |
| C125 | *D3 | C217 | *E2 | C688 | C5 | | | IC802 | B2 | Q134 | *F2 | R120 | *E3 | R211 | *C2 | R304 | *F1 | R431 | F3 | R525 | *A5 | R664 | *C5 | R843 | A2 | | |
| C126 | D3 | C218 | *D1 | C689 | D4 | CN101 | E5 | IC803 | B4 | Q135 | *F2 | R121 | *E3 | R212 | *C2 | R305 | *F1 | R432 | F3 | R526 | *A5 | R665 | C5 | R844 | *A2 | RB101 | *D3 |
| C127 | D2 | C219 | *G4 | C690 | *D4 | CP801 | A3 | IC804 | A2 | Q136 | *F2 | R122 | *D3 | R213 | *C2 | R306 | *F1 | R433 | *E3 | R527 | *A5 | R666 | *C5 | R845 | *A2 | RB102 | *E3 |
| C128 | *D3 | C220 | F4 | C691 | *C4 | | | IC805 | A2 | Q137 | *F2 | R123 | *D3 | R214 | *C2 | R307 | *F1 | R434 | *E3 | R528 | *B5 | R667 | *D5 | R846 | *A2 | RB103 | *E3 |
| C129 | D3 | C221 | F4 | C692 | C4 | | | IC806 | A2 | Q138 | *F2 | R124 | *E3 | R215 | *C2 | R308 | *E1 | R435 | *E3 | R529 | *B5 | R668 | *D5 | R847 | *A2 | RB104 | *D3 |
| C130 | *D3 | C401 | F4 | C693 | *D4 | D101 | *F5 | IC807 | A3 | Q139 | *E2 | R125 | *E3 | R216 | *C2 | R309 | *E1 | R436 | *E3 | R530 | *B5 | R669 | *D5 | R848 | *A2 | RB601 | D4 |
| C131 | *D2 | C402 | F4 | C694 | *D4 | D102 | *G4 | IC808 | A4 | Q140 | *E2 | R126 | *D3 | R217 | *B1 | R310 | *E1 | R437 | F3 | R531 | *B5 | R670 | *D5 | R849 | *A2 | | |
| C132 | C2 | C403 | *F4 | C695 | *D4 | D103 | *G4 | IC809 | A4 | Q141 | E2 | R127 | *D3 | R218 | *B1 | R311 | *E1 | R438 | F3 | R532 | *B5 | R671 | *D5 | R850 | *A3 | RV101 | D1 |
| C133 | C3 | C404 | F4 | C696 | *D4 | D104 | *G3 | IC810 | A4 | Q142 | E2 | R128 | *D3 | R219 | *B1 | R312 | *E1 | R439 | *F3 | R533 | *B5 | R672 | *D5 | R851 | *A3 | RV102 | D1 |
| C134 | *C2 | C405 | F4 | C697 | *D4 | D105 | *D1 | IC811 | A4 | Q143 | *D1 | R129 | *D2 | R220 | *C1 | R313 | *D1 | R440 | *F3 | R534 | *B5 | R673 | *C5 | R852 | *A3 | RV103 | C1 |
| C135 | *C3 | C406 | *F3 | C698 | *D4 | D106 | *E1 | IC812 | A4 | Q144 | D1 | R130 | *D3 | R221 | *C1 | R314 | E1 | R441 | *F3 | R535 | *B4 | R674 | *D5 | R853 | *A3 | RV104 | D1 |
| C136 | *C3 | C407 | F3 | C701 | C3 | D401 | *C3 | IC813 | B3 | Q145 | *E1 | R131 | *D3 | R222 | *C1 | R315 | E1 | R442 | *E3 | R536 | *B5 | R675 | *D5 | R854 | *A3 | RV105 | E1 |
| C137 | *C3 | C408 | F3 | C702 | D4 | D402 | *E4 | IC814 | B3 | Q146 | *F1 | R132 | C3 | R223 | *C1 | R316 | E1 | R443 | E3 | R537 | *B5 | R680 | *B5 | R855 | *A3 | | |
| C138 | *C3 | C409 | *E3 | C703 | *C3 | D403 | *E4 | IC815 | B3 | Q147 | *E1 | R133 | C3 | R224 | *C1 | R317 | *E2 | R444 | E3 | R538 | B5 | R681 | *B5 | R856 | *A3 | | |
| C139 | *C3 | C410 | *E3 | C704 | *C4 | D404 | *E4 | IC816 | B3 | Q148 | E1 | R134 | C3 | R225 | *C1 | R318 | *E1 | R445 | *E3 | R539 | *B5 | R682 | C5 | R857 | *A3 | | |
| C140 | *B1 | C411 | *E3 | C705 | *C4 | D405 | *A5 | IC817 | B2 | Q149 | *E1 | R135 | C3 | R226 | *C1 | R319 | *E2 | R446 | *E3 | R540 | *B5 | R683 | *B5 | R858 | *A3 | TP801 | B3 |
| C141 | *B1 | C412 | *E4 | C706 | *C4 | D406 | *A5 | IC818 | B2 | Q150 | *E2 | R136 | *C3 | R227 | *C1 | R320 | *E2 | R447 | E3 | R541 | *B5 | R684 | *B5 | R859 | *A3 | | |
| C142 | *C2 | C413 | *E4 | C707 | *C5 | D407 | *F3 | IC819 | B2 | Q151 | *E2 | R137 | *C3 | R228 | *G3 | R321 | *E1 | R448 | *E3 | R542 | *B5 | R685 | C5 | R860 | *A3 | | |
| C143 | *C2 | C414 | *E4 | C708 | *B5 | D701 | *D4 | IC820 | B2 | Q152 | *D1 | R138 | *C3 | R229 | *G3 | R322 | *E2 | R449 | *E3 | R543 | *B5 | R686 | *D4 | R861 | *A3 | | |
| C144 | C2 | C415 | *E4 | C708 | *C5 | D702 | *C3 | IC821 | *B3 | Q153 | *D2 | R139 | *C3 | R230 | *G3 | R323 | *E2 | R450 | *E3 | R544 | *B5 | R687 | *D4 | R862 | *A3 | | |
| C145 | C1 | C416 | *E4 | C709 | *D5 | D703 | *C4 | IC822 | B3 | Q154 | *E2 | R140 | *C3 | R231 | *G3 | R324 | *E2 | R451 | *E4 | R545 | *B5 | R688 | *D4 | R863 | *A3 | | |
| C146 | *C1 | C417 | E4 | C710 | *D4 | D801 | *A1 | IC823 | B3 | Q155 | *E2 | R141 | *C3 | R232 | *F3 | R325 | *E1 | R452 | *E3 | R546 | *B5 | R689 | *D4 | R864 | *A3 | | |
| C147 | *C2 | C418 | *E4 | C801 | B1 | D802 | *A2 | IC824 | B4 | Q156 | *D1 | R142 | *C3 | R233 | *G3 | R326 | *E1 | R453 | E3 | R547 | *B5 | R690 | *D4 | R865 | *A4 | | |
| C148 | C2 | C419 | *E4 | C802 | B1 | D803 | *A3 | IC825 | A4 | Q401 | *F4 | R143 | *C3 | R234 | *G3 | R327 | D2 | R454 | *E4 | R548 | E3 | R691 | *D5 | R866 | *A3 | | |
| C149 | C1 | C420 | *E4 | C803 | *A1 | D804 | *B4 | IC826 | A4 | Q402 | *F4 | R144 | *C3 | R235 | *G4 | R328 | D2 | R455 | *E3 | R549 | E3 | R692 | *D5 | R867 | *A3 | | |
| C150 | *C1 | C421 | *F5 | C804 | A1 | | | IC827 | A2 | Q403 | *F4 | R145 | *C3 | R236 | *G4 | R329 | *E2 | R456 | *E4 | R550 | *E3 | R701 | *D4 | R868 | *A4 | | |
| C151 | *C1 | C422 | *F4 | C805 | A1 | DL101 | E1 | | | Q404 | *F4 | R146 | *C3 | R237 | *G4 | R330 | D2 | R457 | E4 | R551 | *E3 | R702 | *D3 | R869 | *A3 | | |
| C152 | *C1 | C423 | *A5 | C806 | *A1 | DL102 | F1 | L101 | B1 | Q405 | *F4 | R147 | *C2 | R238 | *G4 | R331 | D2 | R458 | *E4 | R552 | E2 | R703 | *D3 | R870 | A3 | | |
| C153 | C1 | C424 | A5 | C807 | *A1 | DL401 | E3 | L102 | C1 | Q406 | *F3 | R148 | *C3 | R239 | *F3 | R332 | D2 | R459 | *E4 | R553 | *F2 | R704 | *D4 | R871 | *A4 | | |
| C154 | *D1 | C425 | A5 | C808 | B1 | DL402 | E4 | L103 | C2 | Q407 | *F3 | R149 | *C3 | R240 | *G3 | R333 | D2 | R460 | *E4 | R554 | *F3 | R705 | *D3 | R872 | A4 | | |
| C155 | D1 | C426 | *A5 | C809 | B1 | | | L104 | C1 | Q408 | *F3 | R150 | *C3 | R241 | *G4 | R334 | D2 | R461 | *E4 | R555 | *F3 | R706 | *D4 | R873 | *A4 | | |
| C156 | *C1 | C427 | *A4 | C810 | *B1 | E601 | C3 | L105 | B1 | Q410 | *F3 | R151 | B2 | R242 | *F4 | R335 | *D2 | R462 | *E4 | R556 | F3 | R707 | *C3 | R874 | *A4 | | |
| C156 | *D1 | C428 | *B5 | C811 | *A1 | E801 | B3 | L106 | E2 | Q411 | *F3 | R152 | B2 | R243 | *G2 | R336 | *D2 | R463 | *E4 | R557 | *F3 | R708 | *C4 | R875 | *A4 | | |
| C157 | *D1 | C429 | *B5 | C812 | A2 | | | L107 | E1 | Q412 | *E3 | R153 | *B1 | R244 | *G2 | R337 | *D2 | R464 | *E4 | R558 | *F3 | R709 | *C4 | R876 | *A4 | | |
| C158 | D2 | C430 | B5 | C813 | A1 | FL101 | D1 | L108 | D1 | Q413 | *B3 | R154 | *C1 | R245 | *G2 | R338 | *D2 | R465 | *E4 | R559 | *F4 | R | | | | | |

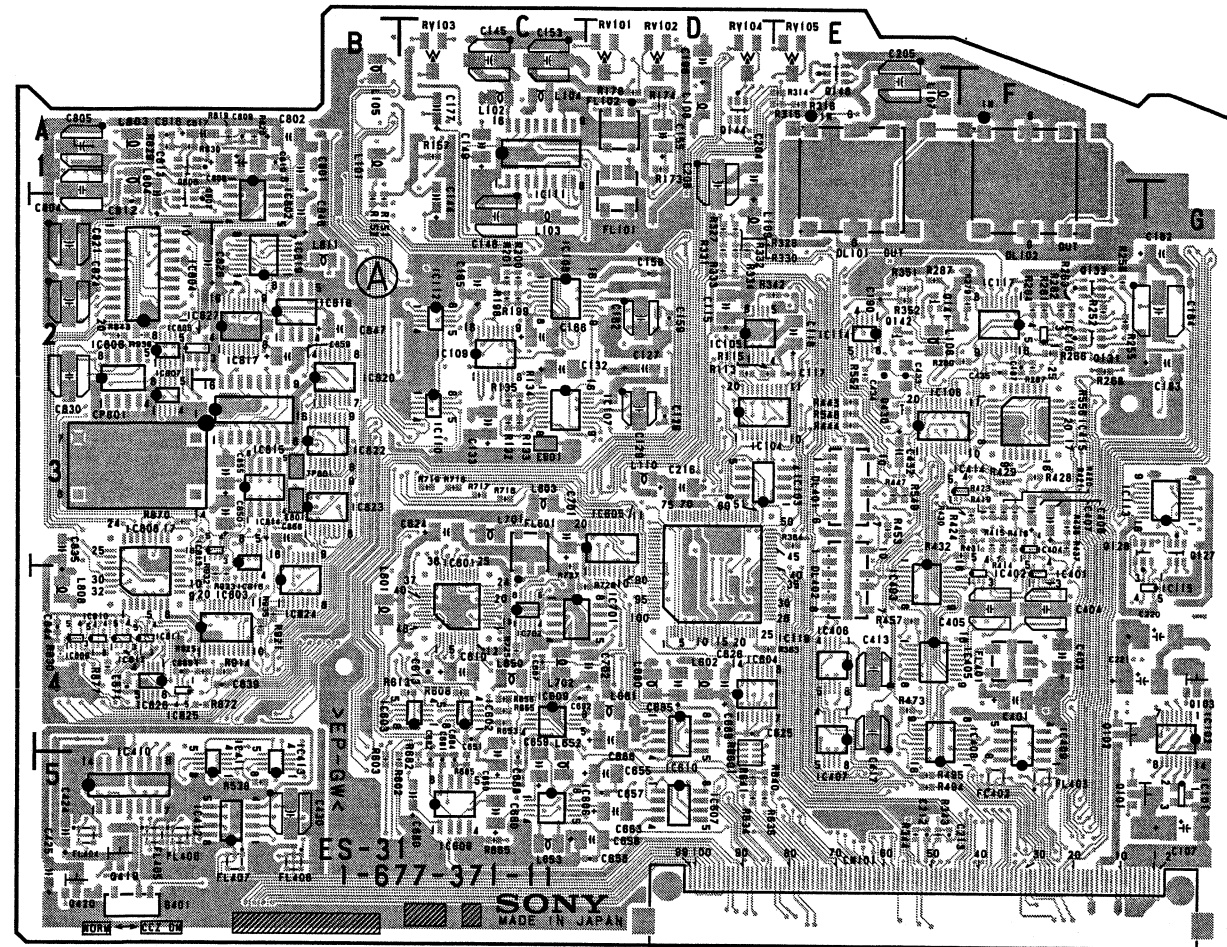

ES-31 -A SIDE-
SUFFIX: -11

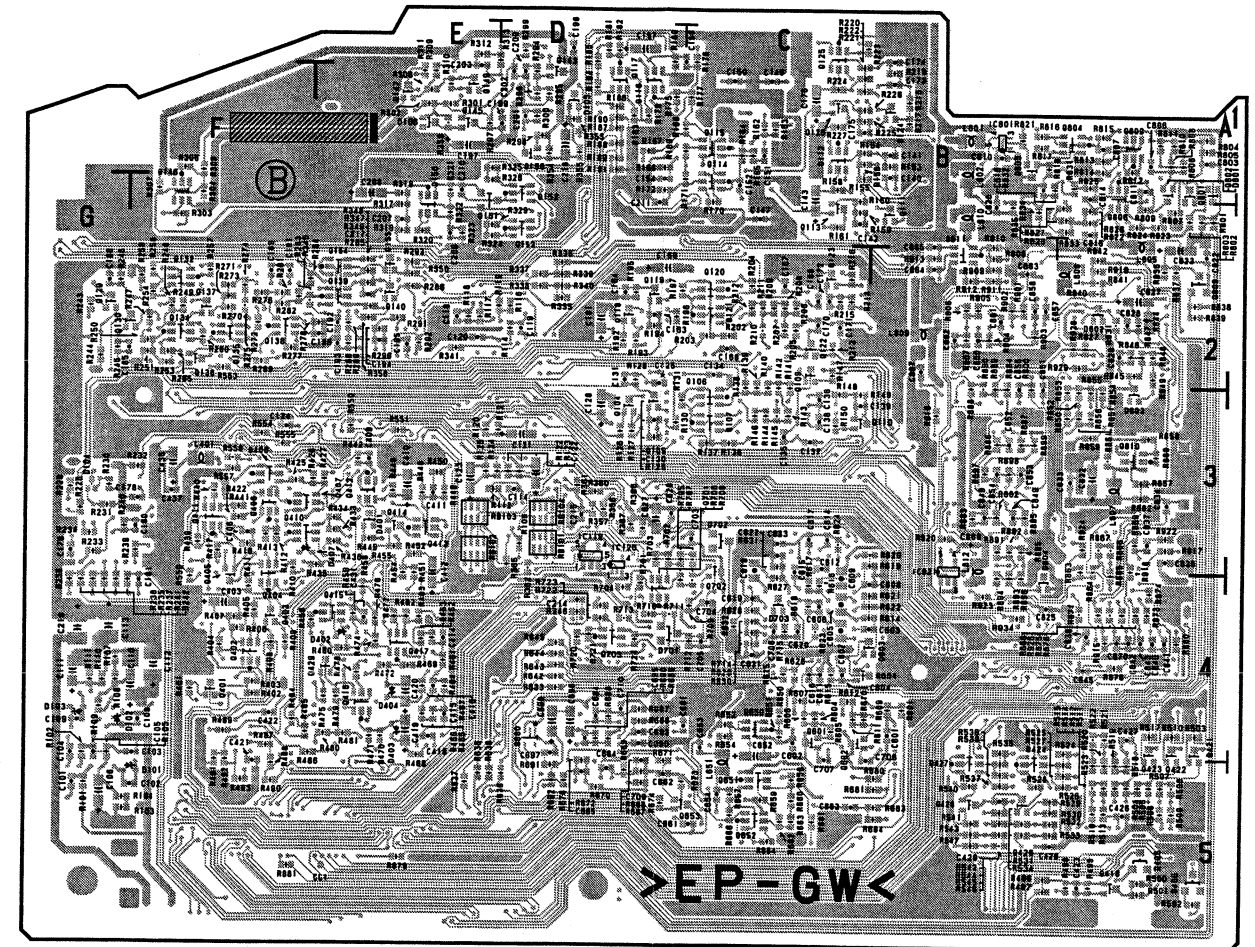


ES-31 -B SIDE-
SUFFIX: -11

FP-118(1-673-967-13)


| | | | | | | | | | | | | | | | | | |
|------|-----|-------|-----|-------|-----|------|-----|------|-----|------|-----|------|-----|-------|-----|-------|-----|
| C001 | C4 | C425 | *E3 | D301 | *A1 | Q008 | *C2 | R037 | B4 | R235 | *D2 | R415 | *E4 | R524 | *E4 | RB007 | B3 |
| C002 | *C4 | C426 | *E3 | D302 | *B2 | Q009 | *A3 | R038 | B4 | R236 | *D1 | R416 | *B4 | R601 | *B2 | RB008 | B3 |
| C003 | *C3 | C427 | *E3 | D303 | B1 | Q010 | B3 | R039 | *B3 | R237 | *E2 | R417 | *B4 | R602 | *B2 | RB009 | B3 |
| C004 | C4 | C428 | E4 | D401 | *E3 | Q011 | B3 | R040 | *B3 | R238 | *E2 | R420 | *B4 | R603 | *B2 | RB010 | *C3 |
| C005 | C4 | C429 | E4 | D402 | *E3 | Q012 | *B3 | R041 | *B3 | R239 | *E2 | R421 | *B4 | R604 | *B2 | RB011 | *C3 |
| C007 | C4 | C430 | *E3 | D403 | *B4 | Q013 | *A3 | R042 | *B3 | R240 | B1 | R423 | *B4 | R605 | *B2 | RB012 | *A3 |
| C008 | C4 | C431 | *E3 | D501 | *B2 | Q201 | C2 | R043 | *B3 | R241 | B1 | R425 | *E4 | R608 | *D3 | RB202 | D2 |
| C009 | *B3 | C434 | E3 | D502 | *D4 | Q202 | D2 | R044 | *B3 | R242 | B1 | R426 | *E4 | R609 | *D3 | RB203 | *C1 |
| C010 | *B4 | C435 | E3 | D503 | *D4 | Q203 | *E1 | R045 | *A3 | R243 | B1 | R427 | *E4 | R610 | *B2 | RB204 | *B1 |
| C011 | *B4 | C436 | *E3 | D504 | *A2 | Q204 | *E1 | R047 | *B3 | R244 | B1 | R428 | *E4 | R611 | B2 | RB207 | *B1 |
| C012 | B3 | C437 | *E3 | D605 | *B2 | Q205 | *C1 | R048 | *B3 | R245 | B1 | R429 | *B4 | R612 | B2 | RB208 | C1 |
| C013 | *B4 | C438 | *E3 | D703 | D3 | Q300 | *B1 | R049 | *B3 | R246 | B1 | R430 | *E3 | R613 | B2 | RB209 | C1 |
| C014 | *B3 | C439 | *E3 | D704 | D3 | Q301 | *B2 | R050 | *B3 | R247 | *B1 | R431 | *B4 | R614 | B2 | RB210 | B1 |
| C015 | B4 | C440 | E3 | D801 | E1 | Q302 | B2 | R051 | B3 | R248 | *B1 | R432 | *B4 | R615 | *B2 | RB211 | B1 |
| C016 | B3 | C441 | E3 | | | Q303 | *B2 | R052 | *B3 | R249 | D2 | R433 | *B4 | R616 | *C4 | RB212 | B1 |
| C017 | *B3 | C442 | E3 | E001 | *C4 | Q304 | *B2 | R053 | B3 | R250 | D2 | R434 | *B4 | R617 | *D4 | RB801 | B4 |
| C018 | B4 | C443 | E4 | E002 | *C4 | Q305 | *C2 | R054 | *B3 | R251 | *D2 | R435 | *E4 | R618 | *A2 | RB802 | *A3 |
| C019 | B3 | C444 | E4 | E401 | *E3 | Q306 | *B2 | R055 | *A3 | R252 | *D3 | R436 | *E2 | R619 | *C4 | RB803 | A3 |
| C020 | *C3 | C445 | B4 | E501 | *D4 | Q307 | *B2 | R056 | B3 | R253 | *D3 | R437 | *E4 | R620 | *D4 | RB804 | *A3 |
| C021 | C3 | C446 | B4 | | | Q308 | *C2 | R057 | *B3 | R254 | *D3 | R438 | *E2 | R621 | *D4 | RB805 | *A3 |
| C200 | *C2 | C447 | *E2 | F801 | *E1 | Q401 | *E3 | R058 | *A3 | R255 | D3 | R439 | *E2 | R622 | *D4 | RB806 | *A4 |
| C201 | C2 | C448 | *E4 | | | Q402 | *E3 | R059 | *A3 | R256 | *D3 | R440 | E3 | R623 | *A2 | RB807 | A4 |
| C202 | *B1 | C449 | *E3 | FB801 | B4 | Q403 | *E3 | R060 | *C1 | R257 | C2 | R441 | E3 | R624 | *D3 | RB808 | A3 |
| C203 | B1 | C451 | E4 | | | Q404 | *E3 | R061 | *C3 | R258 | D2 | R442 | B4 | R625 | *D3 | RB809 | *A3 |
| C204 | *D2 | C453 | *E4 | IC002 | *B3 | Q405 | *E3 | R062 | *C3 | R259 | D2 | R443 | B4 | R626 | *D4 | | |
| C205 | *D2 | C454 | *E4 | IC003 | *B3 | Q406 | *E3 | R063 | *C3 | R260 | *D2 | R444 | E4 | R627 | *D3 | RV401 | E3 |
| C206 | *C2 | C455 | *E4 | IC004 | *C3 | Q407 | *E3 | R064 | *C3 | R261 | *D2 | R445 | E3 | R628 | *D3 | RV402 | E3 |
| C207 | *D2 | C456 | *E4 | IC006 | *C3 | Q408 | *E3 | R065 | *C4 | R262 | *E1 | R446 | E3 | R629 | *D3 | RV403 | *E3 |
| C208 | D2 | C457 | E4 | IC200 | *C1 | Q409 | *E3 | R066 | B3 | R263 | *E1 | R447 | E3 | R630 | A2 | RV601 | *D4 |
| C209 | C1 | C601 | *D3 | IC201 | *B1 | Q410 | *E3 | R067 | *C2 | R264 | *E1 | R448 | E3 | R631 | A2 | RV602 | *D4 |
| C210 | B1 | C602 | *D3 | IC202 | *E1 | Q411 | *E3 | R068 | *C3 | R265 | *E1 | R451 | *E3 | R632 | *A2 | RV603 | A2 |
| C211 | *D1 | C603 | *D4 | IC203 | B2 | Q412 | *E3 | R069 | *C2 | R266 | *E1 | R452 | *E3 | R633 | A2 | RV604 | B2 |
| C212 | *E2 | C604 | *D4 | IC204 | *D1 | Q413 | *E3 | R070 | *B3 | R267 | *E1 | R453 | E3 | R635 | *D4 | | |
| C213 | *E2 | C605 | *A2 | IC205 | B1 | Q414 | *E3 | R071 | *A3 | R268 | *C2 | R454 | E3 | R636 | *D4 | S001 | B2 |
| C214 | *B1 | C606 | *D4 | IC206 | D2 | Q415 | *E3 | R072 | B3 | R269 | C2 | R455 | *E4 | R637 | *A2 | S002 | B3 |
| C215 | B1 | C607 | *D4 | IC207 | D3 | Q501 | *B2 | R073 | B3 | R270 | C2 | R456 | *E4 | R638 | *A2 | S003 | C3 |
| C216 | B1 | C608 | A2 | IC208 | D2 | Q502 | *B2 | R074 | *A3 | R271 | *E2 | R457 | *E4 | R639 | B2 | S004 | C3 |
| C217 | B1 | C609 | *D4 | IC209 | C2 | Q504 | *D3 | R075 | *B3 | R272 | *E2 | R458 | *E4 | R640 | *D3 | S005 | C3 |
| C218 | *B1 | C610 | *D3 | IC210 | *D2 | Q505 | *D3 | R076 | *B3 | R273 | *E2 | R459 | *E4 | R641 | B2 | S006 | C3 |
| C219 | *B1 | C611 | B2 | IC300 | A1 | Q506 | *D3 | R077 | *B3 | R274 | *D1 | R460 | *E4 | R642 | *D3 | S200 | E2 |
| C220 | D2 | C613 | B2 | IC301 | B1 | Q507 | *D3 | R078 | *C3 | R275 | *D1 | R461 | *E3 | R643 | B2 | S201 | B4 |
| C221 | D2 | C614 | A1 | IC302 | B1 | Q508 | *A2 | R079 | *C3 | R276 | *D1 | R462 | *E3 | R644 | *A2 | S203 | E1 |
| C222 | *D3 | C615 | *A1 | IC303 | A1 | Q509 | *D3 | R080 | *C3 | R277 | *D1 | R463 | *E3 | R645 | *D3 | S401 | E4 |
| C223 | *D3 | C616 | *A1 | IC401 | *E4 | Q510 | *D4 | R081 | *C3 | R278 | *D1 | R464 | *E3 | R646 | *A2 | S402 | E4 |
| C224 | C2 | C617 | *A1 | IC403 | *E4 | Q511 | *D3 | R082 | *B3 | R279 | *D1 | R467 | E3 | R647 | *A1 | S403 | E3 |
| C225 | C2 | C618 | A2 | IC404 | *E4 | Q512 | *A2 | R083 | B3 | R280 | *D1 | R468 | E3 | R649 | A2 | S404 | E3 |
| C226 | D2 | C619 | A2 | IC405 | *B4 | Q513 | *D4 | R084 | *C4 | R281 | *D1 | R469 | E3 | R650 | *A2 | S501 | B3 |
| C227 | *D2 | C620 | *A1 | IC406 | *E4 | Q514 | *A2 | R085 | *C3 | R282 | *D1 | R470 | E3 | R651 | *D4 | S801 | A3 |
| C228 | D2 | C621 | *D4 | IC407 | *E4 | Q515 | *D4 | R086 | *C3 | R283 | *D1 | R471 | *E3 | R652 | *E3 | S802 | A3 |
| C229 | *C2 | C622 | D4 | IC408 | *E2 | Q516 | *D4 | R087 | *C3 | R300 | *B1 | R472 | *E3 | R653 | *A2 | S803 | C4 |
| C300 | *B2 | C623 | B2 | IC409 | *E4 | Q701 | D3 | R088 | B3 | R301 | *B2 | R474 | E3 | R654 | A2 | S804 | B4 |
| C301 | B2 | C624 | D4 | IC410 | *E4 | Q702 | D3 | R089 | B4 | R302 | B2 | R475 | *E3 | R656 | *A3 | S805 | B4 |
| C302 | *B1 | C625 | B4 | IC411 | *E3 | Q801 | E2 | R090 | B4 | R303 | B2 | R476 | E3 | R657 | D4 | S806 | A4 |
| C303 | *A1 | C706 | D3 | IC412 | *E3 | Q802 | E2 | R091 | *C3 | R304 | *B2 | R477 | *E3 | R658 | *E4 | S807 | B3 |
| C304 | A1 | C707 | D3 | IC413 | *E3 | Q803 | *E2 | R092 | B4 | R305 | *B2 | R478 | *E3 | R659 | D4 | S808 | B3 |
| C305 | B1 | C718 | D3 | IC414 | *E3 | Q804 | *E2 | R093 | *B4 | R306 | *B2 | R479 | *E3 | R660 | *D3 | S809 | B3 |
| C306 | B2 | C719 | D3 | IC415 | *E3 | | | R094 | *B4 | R307 | *B2 | R480 | *E3 | R661 | *B2 | S810 | B3 |
| C307 | B2 | C801 | B4 | IC416 | *E4 | R001 | *B3 | R095 | *B4 | R308 | *B1 | R481 | *E3 | R702 | *D3 | S811 | *A4 |
| C308 | *B2 | C802 | A3 | IC601 | *D3 | R002 | *B3 | R200 | C2 | R309 | *B2 | R482 | *E3 | R703 | *D3 | | |
| C309 | B2 | C804 | A3 | IC602 | *D3 | R003 | *B3 | R201 | C2 | R310 | *B2 | R483 | *E3 | R705 | *D3 | TP001 | *B3 |
| C310 | *B2 | C806 | E1 | IC605 | *B2 | R004 | *C3 | R202 | C2 | R311 | *C2 | R484 | *E3 | R707 | *D3 | TP002 | *A3 |
| C311 | B2 | C807 | *E2 | IC606 | *A2 | R005 | D3 | R203 | *C2 | R312 | B1 | R485 | *E3 | R708 | *D3 | TP200 | *C1 |
| C312 | B2 | | | IC607 | *A2 | R006 | *A3 | R204 | *C2 | R313 | B1 | R486 | *E3 | R715 | *C3 | TP201 | *D1 |
| C313 | *B2 | CN001 | *B4 | IC701 | *D3 | R007 | *B3 | R205 | *C2 | R314 | *B2 | R487 | *E3 | R717 | *D3 | TP401 | *E3 |
| C314 | *C1 | CN002 | *C4 | IC705 | *D3 | R008 | *B3 | R206 | *C2 | R315 | *C1 | R488 | *E3 | R718 | *D3 | TP402 | *E3 |
| C315 | *A1 | CN003 | *D4 | IC801 | B4 | R009 | *B3 | R207 | *C2 | R316 | *B2 | R489 | *E3 | R719 | *C3 | TP601 | *D3 |
| C316 | *B1 | CN004 | *C2 | IC802 | B4 | R010 | *B3 | R208 | *C2 | R317 | *B2 | R490 | *E3 | R720 | D3 | TP602 | *D3 |
| C317 | *A1 | CN005 | *A3 | IC803 | A3 | R011 | *B3 | R209 | *C2 | R318 | *B2 | R491 | *E3 | R721 | *D3 | TP603 | *A1 |
| C318 | *C1 | CN006 | *E1 | IC804 | A4 | R012 | *B3 | R210 | *C2 | R319 | *B2 | R492 | *E3 | R722 | D3 | | |
| C401 | *E4 | CN008 | *A3 | | | R013 | *B3 | R211 | *C1 | R320 | *B2 | R493 | *E3 | R728 | D3 | X001 | *B4 |
| C402 | *E4 | | | L001 | *C3 | R014 | *B3 | R212 | *C2 | R321 | *B2 | R494 | *E3 | R729 | D3 | X002 | *B3 |
| C403 | *E4 | CV200 | *C2 | L002 | *B3 | R015 | *B3 | R213 | C2 | R322 | *B2 | R497 | *E3 | R730 | D3 | X200 | *D2 |
| C404 | *E4 | | | L003 | *B4 | R016 | *B3 | R214 | *D1 | R323 | *B2 | R498 | *E3 | R731 | *D3 | X201 | *C2 |
| C405 | *E4 | D001 | B1 | L200 | B2 | R017 | *B3 | R215 | *D1 | R324 | *C1 | R499 | *E3 | R733 | D3 | X202 | *B1 |
| C406 | *E4 | D200 | *C2 | L300 | *B2 | R018 | C3 | R216 | *D3 | R325 | *C1 | R500 | *E3 | R736 | D3 | | |
| C407 | *E4 | D201 | C1 | L301 | B2 | R019 | *B3 | R217 | *D3 | R326 | *C1 | R501 | *E3 | R738 | D3 | | |
| C408 | *E4 | D202 | *C1 | L501 | A2 | R020 | *B3 | R218 | *D2 | R327 | D4 | R502 | *E3 | R801 | A3 | | |
| C409 | *E4 | D203 | B1 | L601 | *D4 | R021 | *B3 | R219 | *C1 | R328 | C2 | R503 | *E3 | R802 | A3 | | |
| C410 | *E4 | D204 | *B1 | L701 | B4 | R022 | *B3 | R220 | *B1 | R329 | *C1 | R504 | *E3 | R803 | A3 | | |
| C411 | *B4 | D205 | *D2 | | | R023 | *A3 | R221 | *B1 | R330 | *D2 | R505 | E3 | R804 | *E2 | | |
| C412 | *B4 | D206 | D3 | LI300 | D4 | R024 | *C3 | R222 | *C1 | R331 | *D2 | R506 | *E4 | R805 | E2 | | |
| C413 | *B4 | D207 | C2 | | | R025 | *B3 | R223 | *B1 | R332 | *D2 | R507 | *E2 | R806 | E2 | | |
| C414 | *B4 | D208 | C2 | ND200 | C1 | R026 | *B3 | R224 | *B1 | R333 | B2 | R508 | E4 | R807 | E2 | | |
| C415 | *B4 | D209 | C1 | | | R027 | *B3 | R225 | *B1 | R401 | *E4 | R510 | *E4 | R808 | *E2 | | |
| C416 | *B4 | D210 | D1 | PH401 | *E2 | R028 | *B3 | R226 | *C1 | R402 | *E4 | R512 | *E4 | R809 | E1 | | |
| C417 | *B4 | D211 | D1 | | | R029 | *B3 | R227 | *C1 | R404 | *E4 | R513 | *E4 | R812 | E1 | | |
| C418 | *B4 | D212 | E1 | | | R030 | *B3 | R228 | *C1 | R405 | *E4 | R514 | *E4 | | | | |
| C419 | *E4 | D213 | C2 | | | R031 | *B3 | R229 | *C1 | R406 | *E4 | R515 | E4 | RB001 | C3 | | |
| C420 | *E4 | D214 | D2 | | | R032 | *B3 | R230 | C2 | R407 | *E4 | R516 | *E4 | RB002 | *C3 | | |
| C421 | *E2 | D215 | D2 | | | R033 | B3 | R231 | *E2 | R408 | *E4 | R517 | E4 | RB003 | B3 | | |
| C422 | E4 | D216 | E2 | | | R034 | *B4 | R232 | * | | | | | | | | |

FP-118
SUFFIX: -13

FP-118
SUFFIX: -13

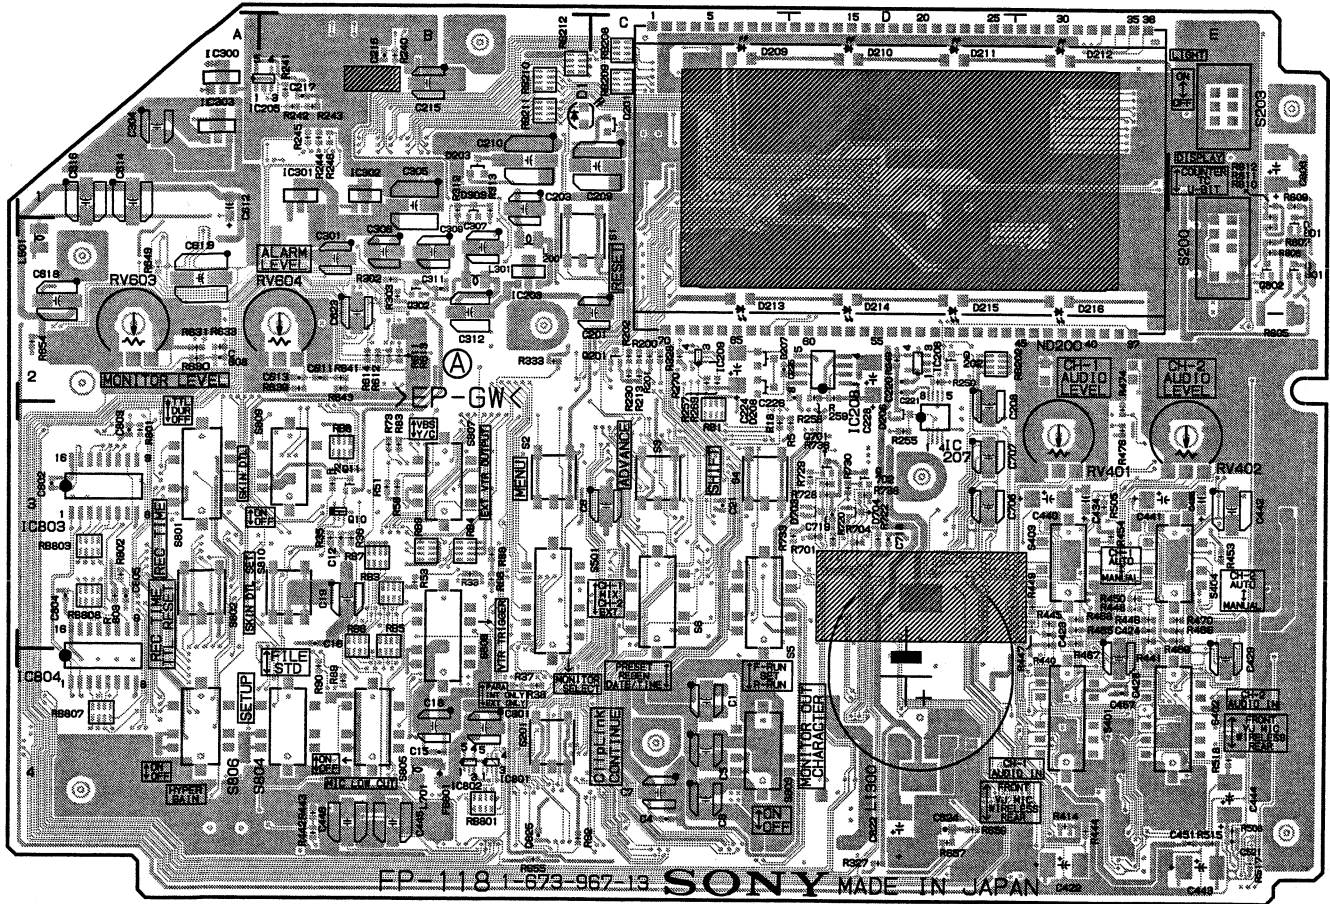

FP-118 -A SIDE-
SUFFIX: -13
FOR DSR-390/390P/370/370P

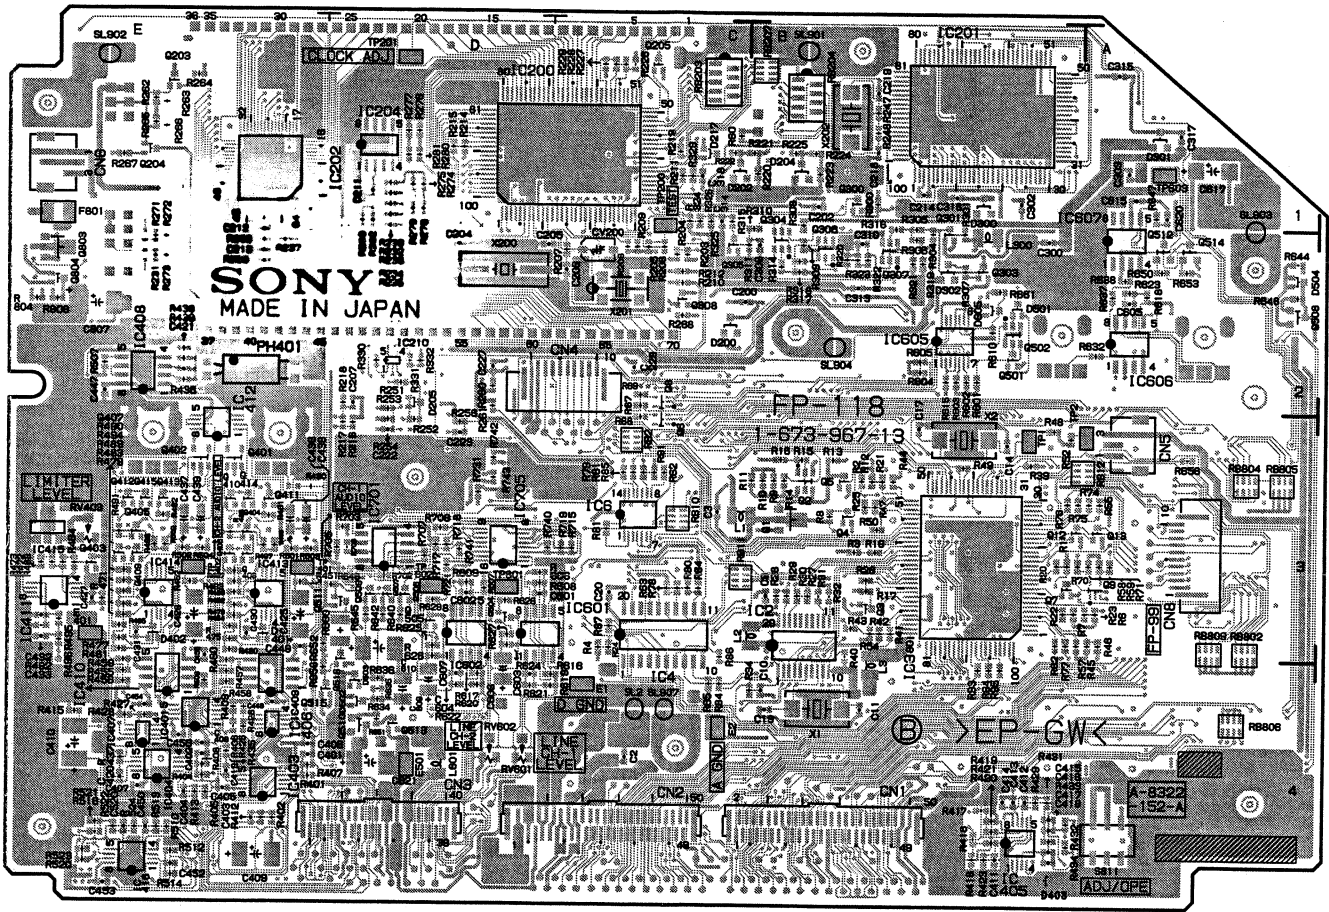

FP-118 -B SIDE-
SUFFIX: -13
FOR DSR-390/390P/370/370P

FP-118
SUFFIX: -11, -12


FP-118
SUFFIX: -11, -12

FP-118 (1-673-967-11,12)


| | | | | | | | | | | | | | | | | | | | | | |
|------|-----|------|-----|-------|-----|-------|-----|-------|-----|------|-----|------|-----|------|-----|------|-----|------|-----|-------|-----|
| C1 | C4 | C424 | E3 | CL21 | *C4 | CL709 | *D4 | IC302 | B1 | Q508 | *A2 | R78 | *C3 | R275 | *D1 | R456 | *E4 | R628 | *D3 | RB212 | B1 |
| C2 | *C4 | C425 | *E3 | CL22 | *C4 | CL710 | *D4 | IC303 | A1 | Q509 | *D3 | R79 | *C3 | R276 | *D1 | R457 | *E4 | R629 | *D3 | RB801 | B4 |
| C3 | *C3 | C426 | *E3 | CL23 | *D4 | CL801 | *B4 | IC401 | *E4 | Q510 | *D4 | R80 | *C3 | R277 | *D1 | R458 | *E4 | R630 | A2 | RB802 | *A3 |
| C4 | C4 | C427 | *E3 | CL24 | *C4 | CL802 | *B4 | IC403 | *E4 | Q511 | *D3 | R81 | *C3 | R278 | *D1 | R459 | *E4 | R631 | A2 | RB803 | A3 |
| C5 | C4 | C428 | E4 | CL25 | *C4 | CL803 | *B4 | IC404 | *E4 | Q512 | *A2 | R82 | *B3 | R279 | *D1 | R460 | *E4 | R632 | *A2 | RB804 | *A3 |
| C6 | C3 | C429 | E4 | CL26 | *D4 | CL804 | *B4 | IC405 | *B4 | Q513 | *D4 | R83 | B3 | R280 | *D1 | R461 | *E3 | R633 | A2 | RB805 | *A3 |
| C7 | C4 | C430 | *E3 | CL27 | *B4 | CL805 | *B4 | IC406 | *E4 | Q514 | *A2 | R84 | *C4 | R281 | *D1 | R462 | *E3 | R634 | *D4 | RB806 | *A4 |
| C8 | C4 | C431 | *E3 | CL28 | *B4 | CL806 | *A3 | IC407 | *E4 | Q515 | *D4 | R85 | *C3 | R282 | *D1 | R463 | *E3 | R635 | *D4 | RB807 | A4 |
| C9 | *B3 | C432 | *E3 | CL29 | *C3 | CL807 | *A3 | IC408 | *E2 | Q516 | *D4 | R86 | *C3 | R283 | *D1 | R464 | *E3 | R636 | *D4 | RB808 | A3 |
| C10 | *B4 | C433 | *E3 | CL30 | *C3 | CL808 | *A3 | IC409 | *E4 | Q701 | D3 | R87 | *C3 | R300 | *B1 | R465 | E3 | R637 | *A2 | RB809 | *A3 |
| C11 | *B4 | C434 | E3 | CL31 | *C3 | CL809 | *B4 | IC410 | *E4 | Q702 | D3 | R88 | B3 | R301 | *B2 | R466 | E3 | R638 | *A2 | | |
| C12 | B3 | C435 | E3 | CL34 | *B4 | CL810 | *B4 | IC411 | *E3 | Q801 | E2 | R89 | B4 | R302 | B2 | R467 | E3 | R639 | B2 | RV401 | E3 |
| C13 | *B4 | C436 | *E3 | CL35 | *B4 | CL811 | *B4 | IC412 | *E3 | Q802 | E2 | R90 | B4 | R303 | B2 | R468 | E3 | R640 | *D3 | RV402 | E3 |
| C14 | *B3 | C437 | *E3 | CL36 | *B4 | CL812 | *B4 | IC413 | *E3 | Q803 | *E2 | R91 | *C3 | R304 | *B2 | R469 | E3 | R641 | B2 | RV403 | *E3 |
| C15 | B4 | C438 | *E3 | CL37 | *C4 | CL813 | *A3 | IC414 | *E3 | Q804 | *E2 | R92 | B4 | R305 | *B2 | R470 | E3 | R642 | *D3 | RV601 | *D4 |
| C16 | B3 | C439 | *E3 | CL38 | *C4 | CL814 | *A3 | IC415 | *E3 | | | R93 | *B4 | R306 | *B2 | R471 | *E3 | R643 | B2 | RV602 | *D4 |
| C17 | *B3 | C440 | E3 | CL39 | *C4 | CL815 | *A3 | IC416 | *E4 | R1 | *B3 | R94 | *B4 | R307 | *B2 | R472 | *E3 | R644 | *A2 | RV603 | A2 |
| C18 | B4 | C441 | E3 | CL40 | *C4 | CL816 | *A3 | IC601 | *D3 | R2 | *B3 | R95 | *B4 | R308 | *B1 | R473 | *E3 | R645 | *D3 | RV604 | B2 |
| C19 | B3 | C442 | E3 | CL41 | *C4 | CL817 | *D4 | IC602 | *D3 | R3 | *B3 | R200 | C2 | R309 | *B2 | R474 | E3 | R646 | *A2 | | |
| C20 | *C3 | C443 | E4 | CL42 | *C4 | CL818 | *E1 | IC605 | *B2 | R4 | *C3 | R201 | C2 | R310 | *B2 | R475 | *E3 | R647 | *A1 | S1 | B2 |
| C21 | C3 | C444 | E4 | CL43 | *C4 | CL819 | *D4 | IC606 | *A2 | R5 | D3 | R202 | C2 | R311 | *C2 | R476 | E3 | R648 | *D3 | S2 | B3 |
| C200 | *C2 | C445 | B4 | CL44 | *C4 | CL820 | *D4 | IC607 | *A2 | R6 | *A3 | R203 | *C2 | R312 | B1 | R477 | *E3 | R649 | A2 | S3 | C3 |
| C201 | C2 | C446 | B4 | CL45 | *C4 | | | IC701 | *D3 | R7 | *B3 | R204 | *C2 | R313 | B1 | R478 | *E3 | R650 | *A2 | S4 | C3 |
| C202 | *B1 | C447 | *E2 | CL46 | *B4 | CN1 | *B4 | IC705 | *D3 | R8 | *B3 | R205 | *C2 | R314 | *B2 | R479 | *E3 | R651 | *D4 | S5 | C3 |
| C203 | B1 | C448 | *E4 | CL47 | *B4 | CN2 | *C4 | IC801 | B4 | R9 | *B3 | R206 | *C2 | R315 | *C1 | R480 | *E3 | R652 | *E3 | S6 | C3 |
| C204 | *D2 | C449 | *E3 | CL48 | *B4 | CN3 | *D4 | IC802 | B4 | R10 | *B3 | R207 | *C2 | R316 | *B2 | R481 | *E3 | R653 | *A2 | S200 | E2 |
| C205 | *D2 | C450 | *E4 | CL49 | *B4 | CN4 | *C2 | IC803 | A3 | R11 | *B3 | R208 | *C2 | R317 | *B2 | R482 | *E3 | R654 | A2 | S201 | B4 |
| C206 | *C2 | C451 | E4 | CL50 | *C4 | CN5 | *A3 | IC804 | A4 | R12 | *B3 | R209 | *C2 | R318 | *B2 | R483 | *E3 | R655 | B4 | S203 | E1 |
| C207 | *D2 | C452 | *E4 | CL51 | *C4 | CN6 | *E1 | | | R13 | *B3 | R210 | *C2 | R319 | *B2 | R484 | *E3 | R656 | *A3 | S401 | E4 |
| C208 | D2 | C453 | *E4 | CL52 | *B4 | CN8 | *A3 | L1 | *C3 | R14 | *B3 | R211 | *C1 | R320 | *B2 | R485 | *E3 | R657 | D4 | S402 | E4 |
| C209 | C1 | C454 | *E4 | CL53 | *B4 | | | L2 | *B3 | R15 | *B3 | R212 | *C2 | R321 | *B2 | R486 | *E3 | R658 | *E4 | S403 | E3 |
| C210 | B1 | C455 | *E4 | CL54 | *C4 | CV200 | *C2 | L3 | *B4 | R16 | *B3 | R213 | C2 | R322 | *B2 | R487 | *E3 | R659 | D4 | S404 | E3 |
| C211 | *D1 | C456 | *E4 | CL55 | *B4 | | | L200 | B2 | R17 | *B3 | R214 | *D1 | R323 | *B2 | R488 | *E3 | R660 | *D3 | S501 | B3 |
| C212 | *E2 | C457 | E4 | CL56 | *C4 | D1 | B1 | L300 | *B2 | R18 | C3 | R215 | *D1 | R324 | *C1 | R489 | *E3 | R661 | *B2 | S801 | A3 |
| C213 | *E2 | C520 | *E4 | CL57 | *B4 | D200 | *C2 | L301 | B2 | R19 | *B3 | R216 | *D3 | R325 | *C1 | R490 | *E3 | R701 | D3 | S802 | A3 |
| C214 | *B1 | C521 | E4 | CL58 | *C4 | D201 | C1 | L501 | A2 | R20 | *B3 | R217 | *D3 | R326 | *C1 | R491 | *E3 | R702 | *D3 | S803 | C4 |
| C215 | B1 | C601 | *D3 | CL59 | *C4 | D202 | *C1 | L601 | *D4 | R21 | *B3 | R218 | *D2 | R327 | D4 | R492 | *E3 | R703 | *D3 | S804 | B4 |
| C216 | B1 | C602 | *D3 | CL60 | *C4 | D203 | B1 | L701 | B4 | R22 | *B3 | R219 | *C1 | R328 | C2 | R493 | *E3 | R704 | D3 | S805 | B4 |
| C217 | B1 | C603 | *D4 | CL61 | *C4 | D204 | *B1 | | | R23 | *A3 | R220 | *B1 | R329 | *C1 | R494 | *E3 | R705 | *D3 | S806 | A4 |
| C218 | *B1 | C604 | *D4 | CL62 | *B4 | D205 | *D2 | LI300 | D4 | R24 | *C3 | R221 | *B1 | R330 | *D2 | R495 | *E3 | R706 | *D3 | S807 | B3 |
| C219 | *B1 | C605 | *A2 | CL63 | *B4 | D206 | D3 | | | R25 | *B3 | R222 | *C1 | R331 | *D2 | R496 | *E3 | R707 | *D3 | S808 | B3 |
| C220 | D2 | C606 | *D4 | CL64 | *B4 | D207 | C2 | ND200 | C1 | R26 | *B3 | R223 | *B1 | R332 | *D2 | R497 | *E3 | R708 | *D3 | S809 | B3 |
| C221 | D2 | C607 | *B4 | CL65 | *B4 | D208 | C2 | | | R27 | *B3 | R224 | *B1 | R333 | B2 | R498 | *E3 | R715 | *C3 | S810 | B3 |
| C222 | *D3 | C608 | A2 | CL201 | *C4 | D209 | C1 | PH401 | *E2 | R28 | *B3 | R225 | *B1 | R401 | *E4 | R499 | *E3 | R717 | *D3 | S811 | *A4 |
| C223 | *D3 | C609 | *D4 | CL202 | *D4 | D210 | D1 | | | R29 | *B3 | R226 | *C1 | R402 | *E4 | R500 | *E3 | R718 | *D3 | | |
| C224 | C2 | C610 | *D3 | CL203 | *E4 | D211 | D1 | Q1 | *B3 | R30 | *B3 | R227 | *C1 | R404 | *E4 | R501 | *E3 | R719 | *C3 | SL2 | *C4 |
| C225 | C2 | C611 | B2 | CL204 | *E4 | D212 | E1 | Q2 | *B3 | R31 | *B3 | R228 | *C1 | R405 | *E4 | R502 | *E3 | R720 | D3 | SL901 | *B1 |
| C226 | D2 | C612 | A1 | CL205 | *E4 | D213 | C2 | Q3 | *B3 | R32 | *B3 | R229 | *C1 | R406 | *E4 | R503 | *E3 | R721 | *D3 | SL902 | *E1 |
| C227 | *D2 | C613 | B2 | CL206 | *D4 | D214 | D2 | Q4 | *B3 | R33 | B3 | R230 | C2 | R407 | *E4 | R504 | *E3 | R722 | D3 | SL903 | A1 |
| C228 | D2 | C614 | A1 | CL207 | *D4 | D215 | D2 | Q5 | *B3 | R34 | *B4 | R231 | *E2 | R408 | *E4 | R505 | E3 | R728 | D3 | SL904 | *B2 |
| C229 | *C2 | C615 | *A1 | CL208 | *D1 | D216 | E2 | Q6 | *C3 | R35 | B3 | R232 | *D1 | R409 | *E4 | R506 | *E4 | R729 | D3 | SL907 | *C4 |
| C300 | *B2 | C616 | A1 | CL209 | *C4 | D217 | *C1 | Q7 | *B3 | R36 | B3 | R233 | *D1 | R412 | *E4 | R507 | *E2 | R730 | D3 | | |
| C301 | E2 | C617 | *A1 | CL210 | *C4 | D300 | *B1 | Q8 | *C2 | R37 | B4 | R234 | *D1 | R413 | *E4 | R508 | E4 | R731 | *D3 | TP1 | *B3 |
| C302 | *B1 | C618 | A2 | CL211 | *C4 | D301 | *A1 | Q9 | *A3 | R38 | B4 | R235 | *D2 | R414 | E4 | R510 | *E4 | R733 | D3 | TP2 | *A3 |
| C303 | *A1 | C619 | A2 | CL212 | *C4 | D302 | *B2 | Q10 | B3 | R39 | *B3 | R236 | *D1 | R415 | *E4 | R512 | *E4 | R736 | D3 | TP200 | *C1 |
| C304 | A1 | C620 | *A1 | CL213 | *C4 | D303 | B1 | Q11 | B3 | R40 | *B3 | R237 | *E2 | R416 | *B4 | R513 | *E4 | R738 | D3 | TP201 | *D1 |
| C305 | B1 | C621 | *D4 | CL214 | *B4 | D401 | *E3 | Q12 | *B3 | R41 | *B3 | R238 | *E2 | R417 | *B4 | R514 | *E4 | R740 | *D3 | TP401 | *E3 |
| C306 | B2 | C622 | D4 | CL215 | *C4 | D402 | *E3 | Q13 | *A3 | R42 | *B3 | R239 | *E2 | R418 | *B4 | R515 | *E4 | R741 | *D3 | TP402 | *E3 |
| C307 | B2 | C623 | B2 | CL401 | *B4 | D501 | *B2 | Q201 | C2 | R43 | *B3 | R240 | B1 | R419 | *B4 | R516 | *E4 | R742 | *D3 | TP601 | *D3 |
| C308 | *B2 | C624 | D4 | CL402 | *B4 | D502 | *D4 | Q202 | D2 | R44 | *B3 | R241 | B1 | R420 | *B4 | R517 | E4 | R743 | *D3 | TP602 | *D3 |
| C309 | B2 | C625 | B4 | CL403 | *B4 | D503 | *D4 | Q203 | *E1 | R45 | *A3 | R242 | B1 | R421 | *B4 | R518 | E4 | R801 | A3 | TP603 | *A1 |
| C310 | *B2 | C706 | D3 | CL404 | *B4 | D504 | *A2 | Q204 | *E1 | R46 | *A3 | R243 | B1 | R423 | *B4 | R520 | *E4 | R802 | A3 | | |
| C311 | B2 | C707 | D3 | CL405 | *D4 | D605 | *B2 | Q205 | *C1 | R47 | *B3 | R244 | B1 | R425 | *E4 | R521 | *E4 | R803 | A3 | X1 | *B4 |
| C312 | B2 | C718 | D3 | CL406 | *D4 | D703 | D3 | Q300 | *B1 | R48 | *B3 | R245 | B1 | R426 | *E4 | R522 | *E4 | R804 | *E2 | X2 | *B3 |
| C313 | *B2 | C719 | D3 | CL407 | *D4 | D704 | D3 | Q301 | *B2 | R49 | *B3 | R246 | B1 | R427 | *E4 | R523 | *E4 | R805 | E2 | X200 | *D2 |
| C314 | *C1 | C801 | B4 | CL408 | *D4 | D801 | E1 | Q302 | B2 | R50 | *B3 | R247 | *B1 | R428 | *E4 | R524 | *E4 | R806 | E2 | X201 | *C2 |
| C315 | *A1 | C802 | A3 | CL409 | *D4 | | | Q303 | *B2 | R51 | B3 | R248 | *B1 | R429 | *B4 | R601 | *B2 | R807 | E2 | X202 | *B1 |
| C316 | *B1 | C803 | A3 | CL410 | *D4 | E1 | *C4 | Q304 | *B2 | R52 | *B3 | R249 | D2 | R430 | *E3 | R602 | *B2 | R808 | *E2 | | |
| C317 | *A1 | C804 | A3 | CL411 | *E4 | E2 | *C4 | Q305 | *C2 | R53 | B3 | R250 | D2 | R431 | *B4 | R603 | *B2 | R809 | E1 | | |
| C318 | *C1 | C805 | A3 | CL412 | *D4 | E401 | *E3 | Q306 | *B2 | R54 | *B3 | R251 | *D2 | R432 | *B4 | R604 | *B2 | R810 | E2 | | |
| C401 | *E4 | C806 | E1 | CL413 | *D4 | E501 | *D4 | Q307 | *B2 | R55 | *A3 | R252 | *D3 | R433 | *B4 | R605 | *B2 | R811 | E1 | | |
| C402 | *E4 | C807 | *E2 | CL414 | *D4 | | | Q308 | *C2 | R56 | B3 | R253 | *D3 | R434 | *B4 | R606 | *D3 | R812 | E1 | | |
| C403 | *E4 | | | CL415 | *E4 | F801 | *E1 | Q401 | *E3 | R57 | *B3 | R254 | *D3 | R435 | *E4 | R607 | *D3 | | | | |
| C404 | *E4 | CL1 | *D3 | CL416 | *E4 | | | Q402 | *E3 | R58 | *A3 | R255 | D3 | R436 | *E2 | R608 | *D3 | RB1 | C3 | | |
| C405 | *E4 | CL2 | *D3 | CL417 | *B4 | FB801 | B4 | Q403 | *E3 | R59 | *A3 | R256 | *D3 | R437 | *E4 | | | | | | |

FP-118
SUFFIX: -11, -12

FP-118
SUFFIX: -11, -12

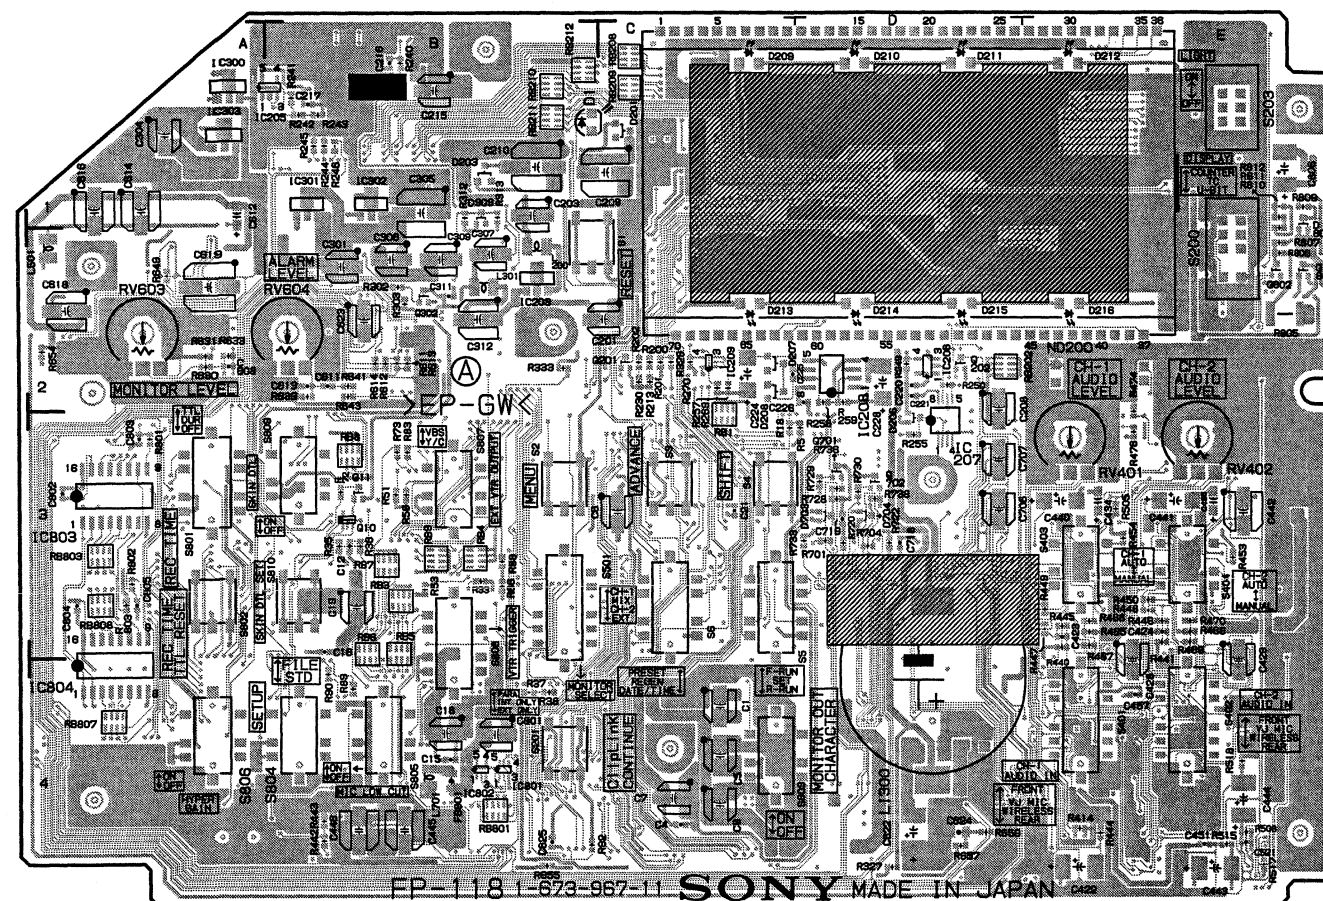


FP-118 -A SIDE-
SUFFIX: -11, 12
FOR DSR-370/370P

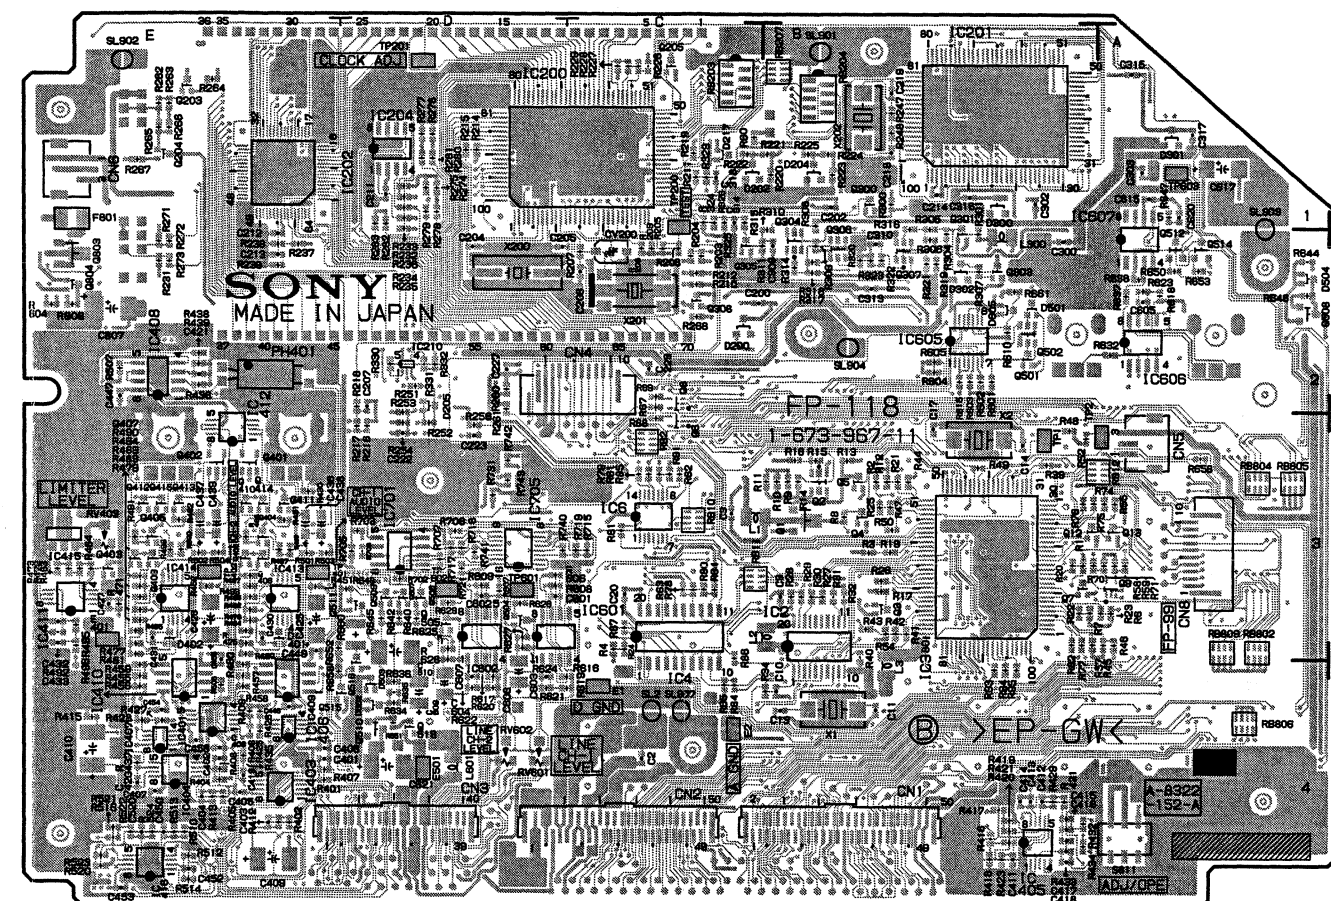


FP-118 -B SIDE-
SUFFIX: -11, 12
FOR DSR-370/370P

FP-122 (1-677-372-11)

| | | | | | | | | | | | | | | | | | | | |
|------|-----|-------|-----|-------|-----|-------|-----|------|-----|------|-----|------|-----|------|-----|-------|-----|-------|-----|
| C001 | C4 | C423 | E3 | D208 | C2 | PH401 | *E2 | R028 | *B3 | R225 | *B1 | R401 | *E4 | R499 | *E3 | R717 | *D3 | S811 | *A4 |
| C002 | *C4 | C424 | E3 | D209 | C1 | | | R029 | *B3 | R226 | *C1 | R402 | *E4 | R500 | *E3 | R718 | *D3 | | |
| C003 | *C3 | C425 | *E3 | D210 | D1 | Q001 | *B3 | R030 | *B3 | R227 | *C1 | R404 | *E4 | R501 | *E3 | R719 | *C3 | SL002 | *C4 |
| C004 | C4 | C426 | *E3 | D211 | D1 | Q002 | *B3 | R031 | *B3 | R228 | *C1 | R405 | *E4 | R502 | *E3 | R720 | D3 | SL901 | *B1 |
| C005 | C4 | C427 | *E3 | D212 | E1 | Q003 | *B3 | R032 | *B3 | R229 | *C1 | R406 | *E4 | R503 | *E3 | R721 | *D3 | SL902 | *E1 |
| C006 | C3 | C428 | E4 | D213 | C2 | Q004 | *B3 | R033 | B3 | R230 | C2 | R407 | *E4 | R504 | *E3 | R722 | D3 | SL903 | *A1 |
| C007 | C4 | C429 | E4 | D214 | D2 | Q005 | *B3 | R034 | *B4 | R231 | *E2 | R408 | *E4 | R505 | E3 | R728 | D3 | SL903 | *A2 |
| C008 | C4 | C430 | *E3 | D215 | D2 | Q006 | *C3 | R035 | B3 | R232 | *D1 | R409 | *E4 | R506 | *E4 | R729 | D3 | SL904 | *B2 |
| C009 | *B3 | C431 | *E3 | D216 | E2 | Q007 | *B3 | R036 | B3 | R233 | *D1 | R412 | *E4 | R507 | *E2 | R730 | D3 | SL907 | *C4 |
| C010 | *B4 | C432 | *E3 | D217 | *C1 | Q008 | *C2 | R037 | B4 | R234 | *D1 | R413 | *E4 | R508 | E4 | R731 | *D3 | | |
| C011 | *B4 | C433 | *E3 | D300 | *B1 | Q009 | *A3 | R038 | B4 | R235 | *D2 | R414 | E4 | R510 | *E4 | R733 | D3 | TP001 | *B3 |
| C012 | B3 | C434 | E3 | D301 | *A1 | Q010 | B3 | R039 | *B3 | R236 | *D1 | R415 | *E4 | R512 | *E4 | R736 | D3 | TP002 | *A3 |
| C013 | *B4 | C435 | E3 | D302 | *B2 | Q011 | B3 | R040 | *B3 | R237 | *E2 | R416 | *E4 | R513 | *E4 | R738 | D3 | TP200 | *C1 |
| C014 | *B3 | C436 | *E3 | D303 | B1 | Q012 | *B3 | R041 | *B3 | R238 | *E2 | R417 | *B4 | R514 | *E4 | R740 | *D3 | TP200 | *C2 |
| C015 | B4 | C437 | *E3 | D401 | *E3 | Q013 | *A3 | R042 | *B3 | R239 | *E2 | R418 | *B4 | R515 | E4 | R741 | *D3 | TP201 | *D1 |
| C016 | B3 | C438 | *E3 | D402 | *E3 | Q201 | C2 | R043 | *B3 | R240 | B1 | R419 | *B4 | R516 | *E4 | R742 | *D3 | TP401 | *E3 |
| C017 | *B3 | C439 | *E3 | D501 | *B2 | Q202 | D2 | R044 | *B3 | R241 | B1 | R420 | *B4 | R517 | E4 | R743 | *D3 | TP402 | *E3 |
| C018 | B4 | C440 | E3 | D502 | *D4 | Q203 | *E1 | R045 | *A3 | R242 | B1 | R421 | *B4 | R518 | E4 | R801 | A3 | TP601 | *D3 |
| C019 | B3 | C441 | E3 | D503 | *D4 | Q204 | *A3 | R046 | *A3 | R243 | B1 | R423 | *B4 | R520 | *E4 | R802 | A3 | TP602 | *D3 |
| C020 | *C3 | C442 | E3 | D504 | *A2 | Q205 | *C1 | R047 | *B3 | R244 | B1 | R425 | *E4 | R521 | *E4 | R803 | A3 | TP603 | *A1 |
| C021 | C3 | C443 | E4 | D605 | *B2 | Q300 | *B1 | R048 | *B3 | R245 | B1 | R426 | *E4 | R522 | *E4 | R804 | *E2 | | |
| C200 | *C2 | C444 | E4 | D703 | D3 | Q301 | *B2 | R049 | *B3 | R246 | B1 | R427 | *E4 | R523 | *E4 | R805 | E2 | X001 | *B4 |
| C201 | C2 | C445 | B4 | D704 | D3 | Q302 | B2 | R050 | *B3 | R247 | *B1 | R428 | *E4 | R524 | *E4 | R806 | E2 | X002 | *B3 |
| C202 | *B1 | C446 | B4 | D801 | E1 | Q303 | *B2 | R051 | B3 | R248 | *B1 | R429 | *B4 | R601 | *B2 | R807 | E2 | X200 | *D2 |
| C203 | B1 | C447 | *E2 | | | Q304 | *B2 | R052 | *B3 | R249 | D2 | R430 | *E3 | R602 | *B2 | R808 | *E2 | X201 | *C2 |
| C204 | *D2 | C448 | *E4 | B001 | *C4 | Q305 | *C2 | R053 | B3 | R250 | D2 | R431 | *B4 | R603 | *B2 | R809 | E1 | X202 | *B1 |
| C205 | *D2 | C449 | *E3 | B002 | *C4 | Q306 | *B2 | R054 | *B3 | R251 | *D2 | R432 | *B4 | R604 | *B2 | | | | |
| C206 | *C2 | C450 | *E4 | B401 | *E3 | Q307 | *B2 | R055 | *A3 | R252 | *D3 | R433 | *B4 | R605 | *B2 | | | | |
| C207 | *D2 | C451 | E4 | B501 | *D4 | Q308 | *C2 | R056 | B3 | R253 | *D3 | R434 | *B4 | R606 | *D3 | | | | |
| C208 | D2 | C452 | *E4 | | | Q401 | *E3 | R057 | *B3 | R254 | *D3 | R435 | *E4 | R607 | *D3 | | | | |
| C208 | D3 | C453 | *E4 | F801 | *E1 | Q402 | *E3 | R058 | *A3 | R255 | D3 | R436 | *E2 | R608 | *D3 | RB001 | C3 | | |
| C209 | C1 | C454 | *E4 | FB801 | B4 | Q403 | *E3 | R059 | *A3 | R256 | *D3 | R437 | *E4 | R609 | *D3 | RB002 | *C3 | | |
| C210 | B1 | C455 | *E4 | | | Q404 | *E3 | R060 | *C1 | R257 | C2 | R438 | *E2 | R610 | *B2 | RB003 | B3 | | |
| C211 | *D1 | C456 | *E4 | IC002 | *B3 | Q405 | *E3 | R061 | *C3 | R258 | D2 | R439 | *E2 | R611 | B2 | RB004 | B3 | | |
| C212 | *E2 | C457 | E4 | IC003 | *B3 | Q406 | *E3 | R062 | *C3 | R259 | D2 | R440 | E3 | R612 | B2 | RB005 | B3 | | |
| C213 | *E2 | C520 | *E4 | IC004 | *C3 | Q407 | *E3 | R063 | *C3 | R260 | *D2 | R441 | E3 | R613 | B2 | RB006 | B3 | | |
| C214 | *B1 | C521 | E4 | IC006 | *C3 | Q408 | *E3 | R064 | *C3 | R261 | *D2 | R442 | B4 | R614 | B2 | RB007 | B3 | | |
| C215 | B1 | C601 | *D3 | IC200 | *C1 | Q409 | *E3 | R065 | *C4 | R262 | *E1 | R443 | B4 | R615 | *B2 | RB008 | B3 | | |
| C216 | B1 | C602 | *D3 | IC201 | *B1 | Q410 | *E3 | R066 | B3 | R263 | *E1 | R444 | E4 | R616 | *C4 | RB009 | B3 | | |
| C217 | B1 | C603 | *D4 | IC202 | *E1 | Q411 | *E3 | R067 | *C2 | R264 | *E1 | R445 | E3 | R617 | *D4 | RB010 | *C3 | | |
| C218 | *B1 | C604 | *D4 | IC203 | B2 | Q412 | *E3 | R068 | *C3 | R265 | *E1 | R446 | E3 | R618 | *A2 | RB011 | *C3 | | |
| C219 | *B1 | C605 | *A2 | IC204 | *D1 | Q413 | *E3 | R069 | *C2 | R266 | *E1 | R447 | E3 | R619 | *C4 | RB012 | *A3 | | |
| C220 | D2 | C606 | *D4 | IC205 | B1 | Q414 | *E3 | R070 | *B3 | R267 | *E1 | R448 | E3 | R620 | *D4 | RB202 | D2 | | |
| C221 | D2 | C607 | *D4 | IC206 | D2 | Q415 | *E3 | R071 | *A3 | R268 | *C2 | R449 | E3 | R621 | *D4 | RB203 | *C1 | | |
| C222 | *D3 | C608 | A2 | IC207 | D3 | Q501 | *B2 | R072 | B3 | R269 | C2 | R450 | E3 | R622 | *D4 | RB204 | *B1 | | |
| C223 | *D3 | C609 | *D4 | IC208 | D2 | Q502 | *B2 | R073 | B3 | R270 | C2 | R451 | *E3 | R623 | *A2 | RB207 | *B1 | | |
| C224 | C2 | C610 | *D3 | IC209 | C2 | Q504 | *D3 | R074 | *A3 | R271 | *E2 | R452 | *E3 | R624 | *D3 | RB208 | C1 | | |
| C225 | C2 | C611 | B2 | IC210 | *D2 | Q505 | *D3 | R075 | *B3 | R272 | *E2 | R453 | E3 | R625 | *D3 | RB209 | C1 | | |
| C226 | D2 | C612 | A1 | IC300 | A1 | Q506 | *D3 | R076 | *B3 | R273 | *E2 | R454 | E3 | R626 | *D4 | RB210 | B1 | | |
| C227 | *D2 | C613 | B2 | IC301 | B1 | Q507 | *D3 | R077 | *B3 | R274 | *D1 | R455 | *E4 | R627 | *D3 | RB211 | B1 | | |
| C228 | D2 | C614 | A1 | IC302 | B1 | Q508 | *A2 | R078 | *C3 | R275 | *D1 | R456 | *E4 | R628 | *D3 | RB212 | B1 | | |
| C229 | *C2 | C615 | *A1 | IC303 | A1 | Q509 | *D3 | R079 | *C3 | R276 | *D1 | R457 | *E4 | R629 | *D3 | RB801 | B4 | | |
| C300 | *B2 | C616 | A1 | IC401 | *E4 | Q510 | *D4 | R080 | *C3 | R277 | *D1 | R458 | *E4 | R630 | A2 | RB802 | *A3 | | |
| C301 | B2 | C617 | *A1 | IC403 | *E4 | Q511 | *D3 | R081 | *C3 | R278 | *D1 | R459 | *E4 | R631 | A2 | RB803 | A3 | | |
| C302 | *B1 | C618 | A2 | IC404 | *E4 | Q512 | *A2 | R082 | *B3 | R279 | *D1 | R460 | *E4 | R632 | *A2 | RB804 | *A3 | | |
| C303 | *A1 | C619 | A2 | IC405 | *B4 | Q513 | *D4 | R083 | B3 | R280 | *D1 | R461 | *E3 | R633 | A2 | RB805 | *A3 | | |
| C304 | A1 | C620 | *A1 | IC406 | *E4 | Q514 | *A2 | R084 | *C4 | R281 | *D1 | R462 | *E3 | R634 | *D4 | RB806 | *A4 | | |
| C305 | B1 | C621 | *D4 | IC407 | *E4 | Q515 | *D4 | R085 | *C3 | R282 | *D1 | R463 | *E3 | R635 | *D4 | RB807 | A4 | | |
| C306 | B2 | C622 | D4 | IC408 | *E2 | Q516 | *D4 | R086 | *C4 | R283 | *D1 | R464 | *E3 | R636 | *D4 | RB808 | A3 | | |
| C307 | B2 | C623 | B2 | IC409 | *E4 | Q701 | D3 | R087 | *C3 | R300 | *B1 | R465 | E3 | R637 | *A2 | RB809 | *A3 | | |
| C308 | *B2 | C624 | D4 | IC410 | *E4 | Q702 | D3 | R088 | B3 | R301 | *B2 | R466 | E3 | R638 | *A2 | | | | |
| C309 | B2 | C625 | B4 | IC411 | *E3 | Q801 | E2 | R089 | B4 | R302 | B2 | R467 | E3 | R639 | B2 | RV401 | E3 | | |
| C310 | *B2 | C706 | D3 | IC412 | *E3 | Q802 | E2 | R090 | B4 | R303 | B2 | R468 | E3 | R640 | *D3 | RV402 | E3 | | |
| C311 | B2 | C707 | D3 | IC413 | *E3 | Q803 | *E2 | R091 | *C3 | R304 | *B2 | R469 | E3 | R641 | B2 | RV403 | *E3 | | |
| C312 | B2 | C718 | D3 | IC414 | *E3 | Q804 | *E2 | R092 | B4 | R305 | *B2 | R470 | E3 | R642 | *D3 | RV601 | *D4 | | |
| C313 | *B2 | C719 | D3 | IC415 | *E3 | | | R093 | *B4 | R306 | *B2 | R471 | *E3 | R643 | B2 | RV602 | *D4 | | |
| C314 | *C1 | C801 | B4 | IC416 | *E4 | R001 | *B3 | R094 | *B4 | R307 | *B2 | R472 | *E3 | R644 | *A2 | RV603 | A2 | | |
| C315 | *A1 | C802 | A3 | IC601 | *D3 | R002 | *B3 | R095 | *B4 | R308 | *B1 | R473 | *E3 | R645 | *D3 | RV604 | B2 | | |
| C316 | *B1 | C803 | A3 | IC602 | *D3 | R003 | *B3 | R200 | C2 | R309 | *B2 | R474 | E3 | R646 | *A2 | | | | |
| C317 | *A1 | C804 | A3 | IC605 | *B2 | R004 | *C3 | R201 | C2 | R310 | *B2 | R475 | *E3 | R647 | *A1 | S001 | B2 | | |
| C318 | *C1 | C805 | A3 | IC606 | *A2 | R005 | D3 | R202 | C2 | R311 | *C2 | R476 | E3 | R648 | *D3 | S002 | B3 | | |
| C401 | *E4 | C806 | E1 | IC607 | *A2 | R006 | *A3 | R203 | *C2 | R312 | B1 | R477 | *E3 | R649 | A2 | S003 | C3 | | |
| C402 | *E4 | C807 | *E2 | IC701 | *D3 | R007 | *B3 | R204 | *C2 | R313 | B1 | R478 | *E3 | R650 | *A2 | S004 | C3 | | |
| C403 | *E4 | | | IC705 | *D3 | R008 | *B3 | R205 | *C2 | R314 | *B2 | R479 | *E3 | R651 | *D4 | S005 | C3 | | |
| C404 | *E4 | CN001 | *B4 | IC801 | B4 | R009 | *B3 | R206 | *C1 | R315 | *C1 | R480 | *E3 | R652 | *E3 | S006 | C3 | | |
| C405 | *E4 | CN002 | *C4 | IC802 | B4 | R010 | *B3 | R207 | *C2 | R316 | *B2 | R481 | *E3 | R653 | *A2 | S200 | E2 | | |
| C406 | *E4 | CN003 | *D4 | IC803 | A3 | R011 | *B3 | R208 | *C2 | R317 | *B2 | R482 | *E3 | R654 | A2 | S201 | B4 | | |
| C407 | *E4 | CN004 | *C2 | IC804 | A4 | R012 | *B3 | R209 | *C2 | R318 | *B2 | R483 | *E3 | R655 | B4 | S203 | E1 | | |
| C408 | *E4 | CN005 | *A3 | | | R013 | *B3 | R210 | *C2 | R319 | *B2 | R484 | *E3 | R656 | *A3 | S401 | E4 | | |
| C409 | *E4 | CN006 | *E1 | L001 | *C3 | R014 | *B3 | R211 | *C1 | R320 | *B2 | R485 | *E3 | R657 | D4 | S402 | E4 | | |
| C410 | *E4 | CN008 | *A3 | L002 | *B3 | R015 | *B3 | R212 | *C2 | R321 | *B2 | R486 | *E3 | R658 | *E4 | S403 | E3 | | |
| C411 | *B4 | | | L003 | *B4 | R016 | *B3 | R213 | C2 | R322 | *B2 | R487 | *E3 | R659 | D4 | S404 | E3 | | |
| C412 | *B4 | CV200 | *C2 | L200 | B2 | R017 | *B3 | R214 | *D1 | R323 | *B2 | R488 | *E3 | R660 | *D3 | S501 | B3 | | |
| C413 | *B4 | | | L300 | *B2 | | | | | | | | | | | | | | |

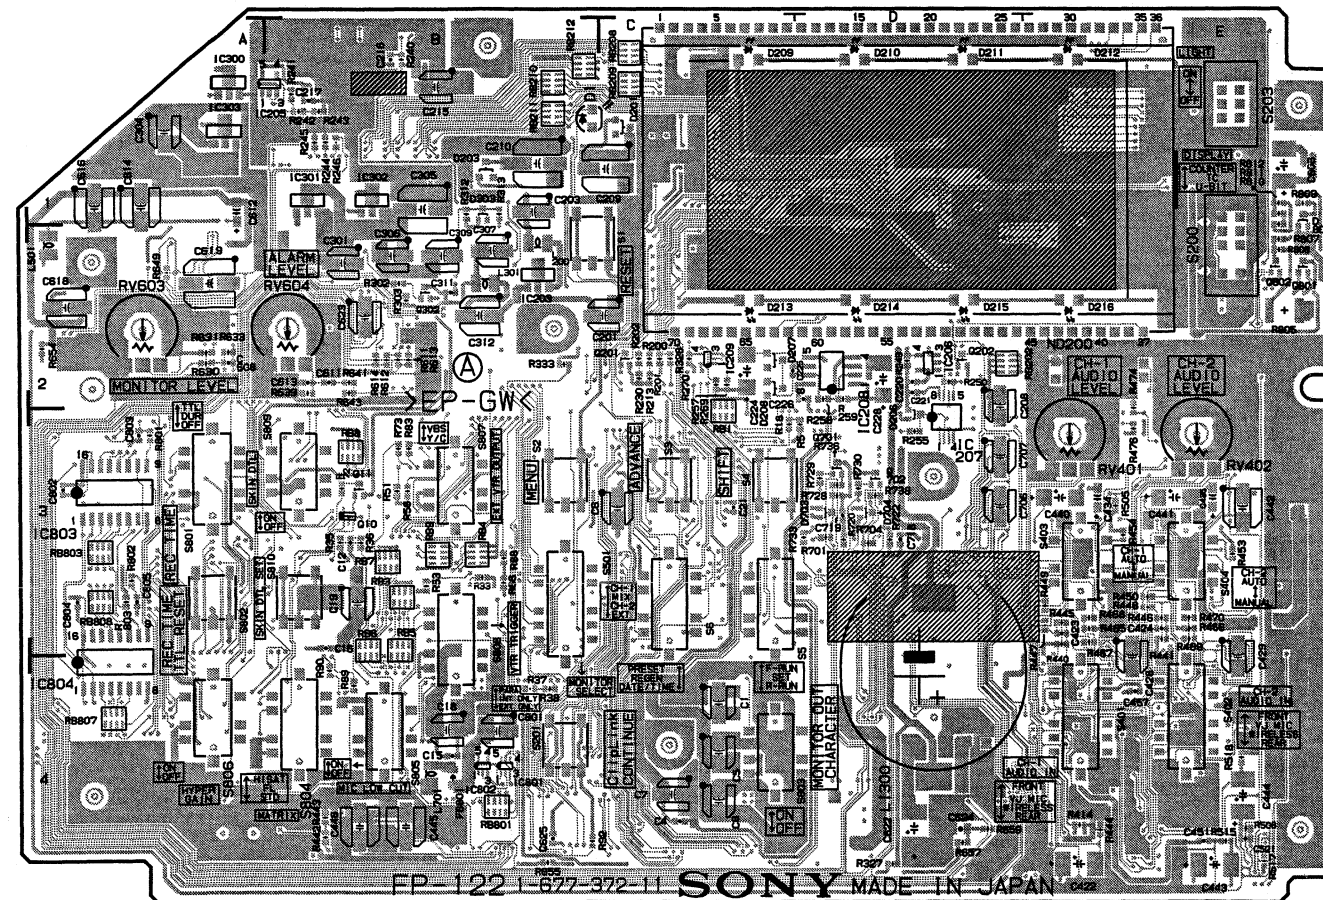


FP-122 -A SIDE-
SUFFIX: -11
FOR DSR-300A/300AP

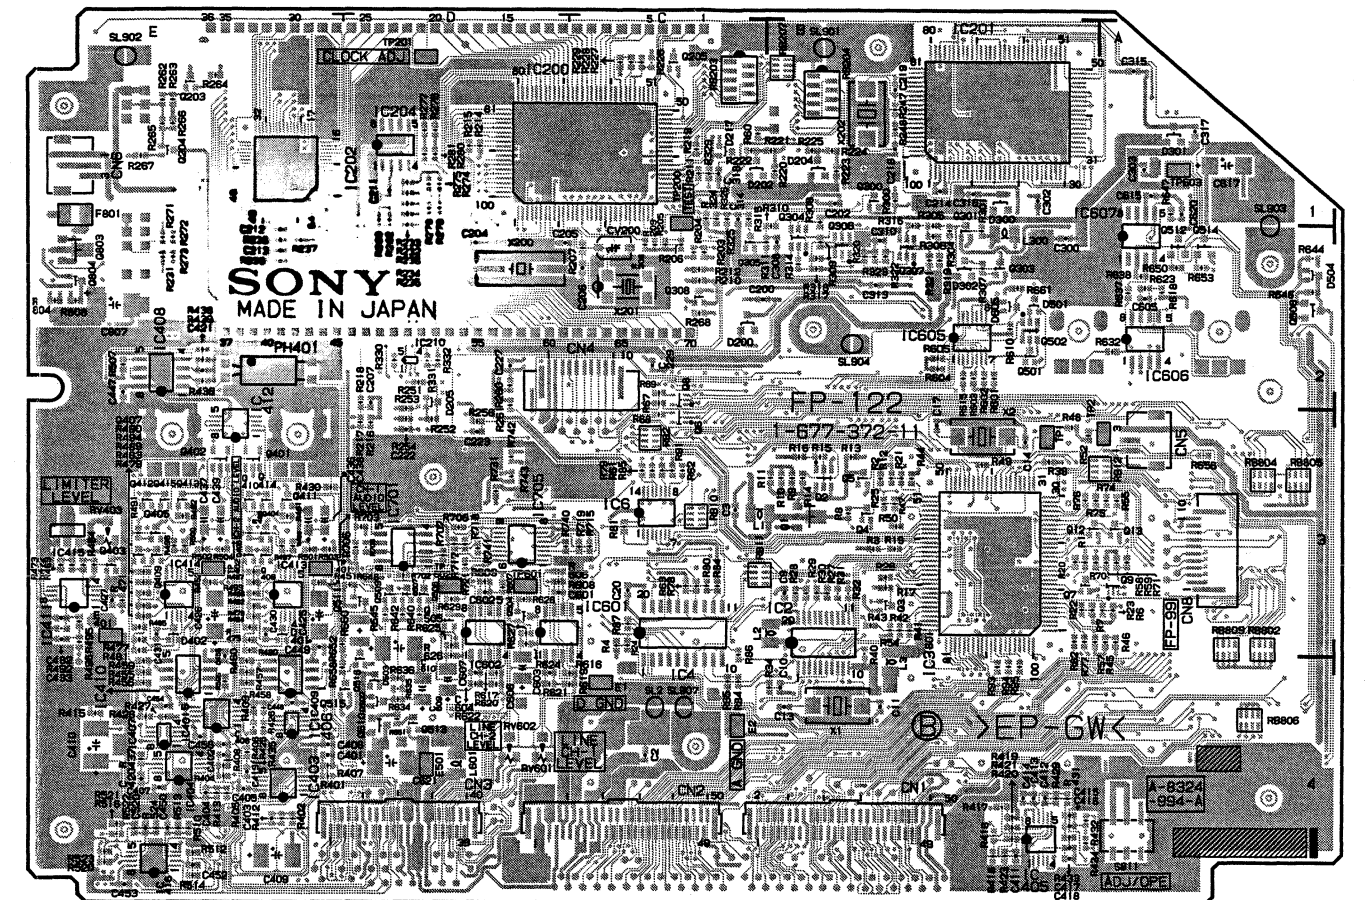


FP-122 -B SIDE-
SUFFIX: -11
FOR DSR-300A/300AP


KY-405, LE-221, IR-33, PA-205, PA-206, PA-207




KY-405 -A SIDE-
SUFFIX : -11, 21




KY-405 -B SIDE-
SUFFIX : -11, 21

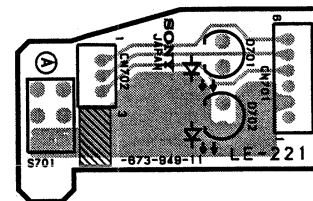


LE-221 -A SIDE-
SUFFIX: -11, 21

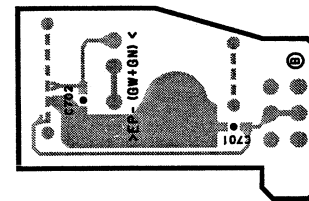


LE-221 -B SIDE-
SUFFIX: -11, 21

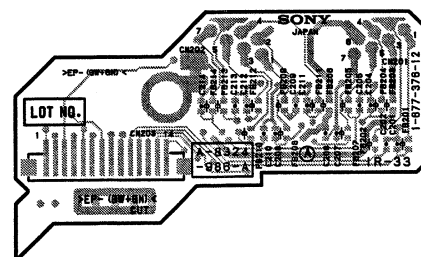


IR-33 -A SIDE-
SUFFIX: -12, 21

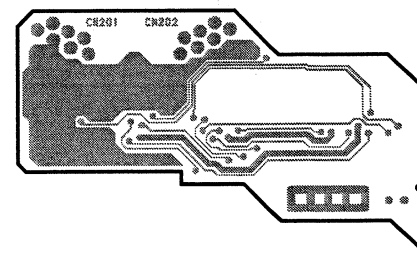

IR-33 -B SIDE-
SUFFIX: -12, 21

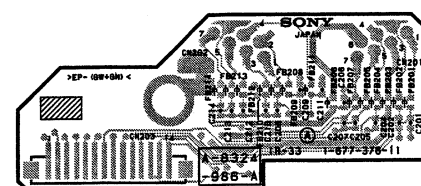


IR-33 -A SIDE-
SUFFIX: -11

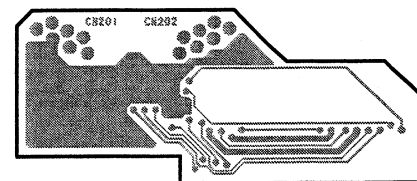


IR-33 -B SIDE-
SUFFIX: -11


KY-405, LE-221, IR-33, PA-205, PA-206, PA-207

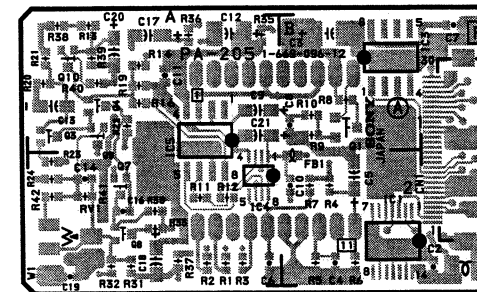


PA-205 -A SIDE-
SUFFIX : -12

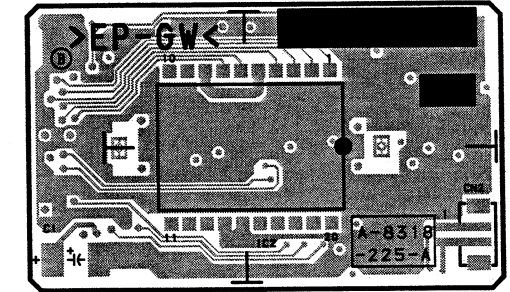


PA-205 -B SIDE-
SUFFIX : -12

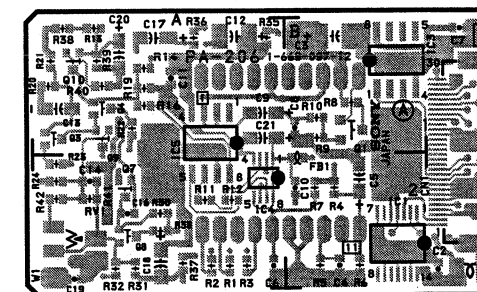


PA-206 -A SIDE-
SUFFIX : -12

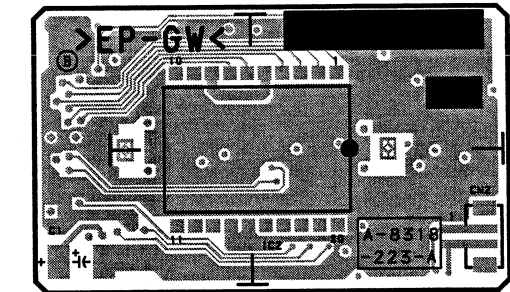


PA-206 -B SIDE-
SUFFIX : -12

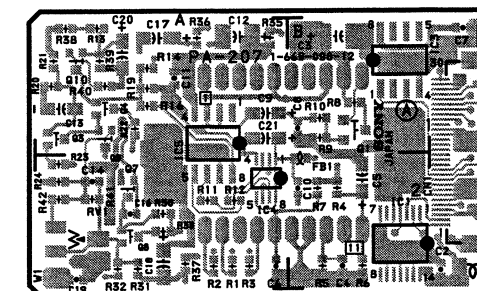

PA-207 -A SIDE-
SUFFIX : -12

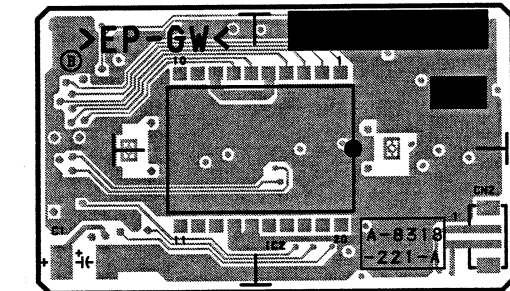


PA-207 -B SIDE-
SUFFIX : -12

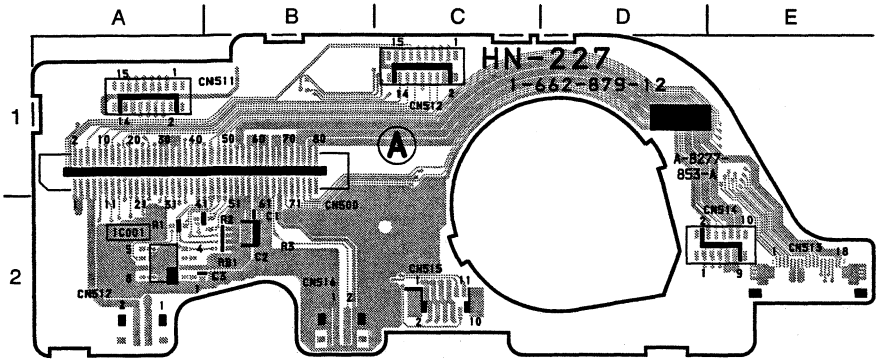


HN-227 -A SIDE-
SUFFIX : -12

HN-227 (1-662-879-12)


| | |
|-------|----|
| CN500 | B1 |
| CN511 | A1 |
| CN512 | C1 |
| CN513 | E2 |
| CN514 | D2 |
| CN515 | C2 |
| CN516 | B2 |
| CN517 | A2 |
| IC1 | A2 |
| RB1 | B2 |

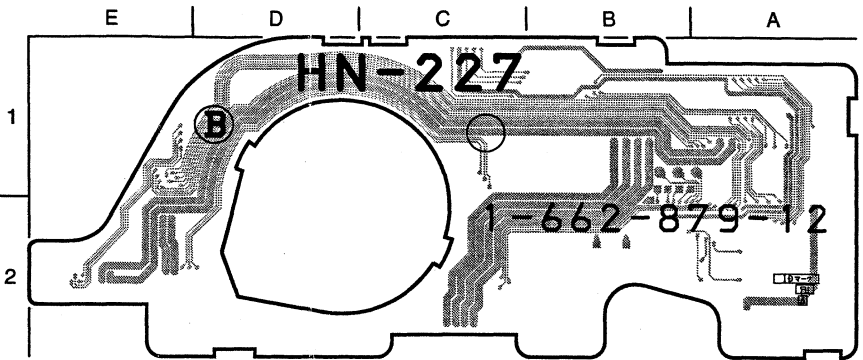


HN-227 -B SIDE-
SUFFIX : -12

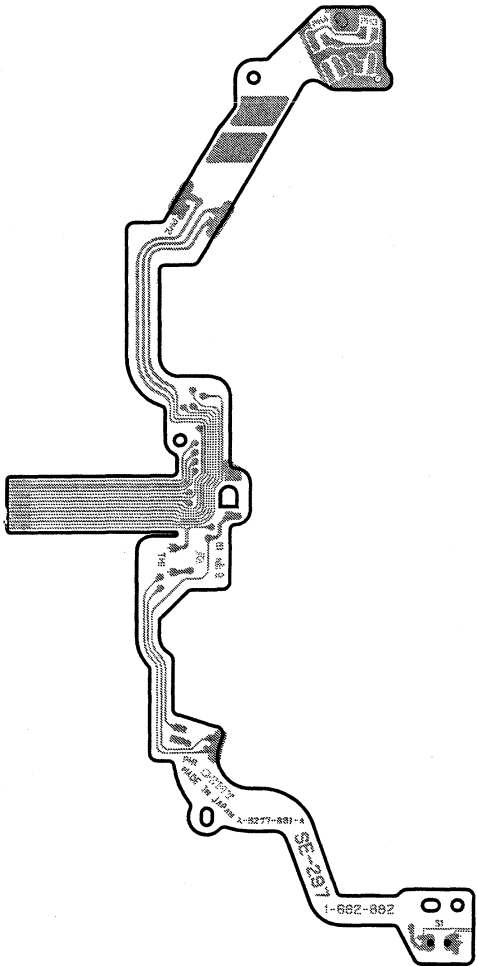


SE-297 -A SIDE-
SUFFIX : -13

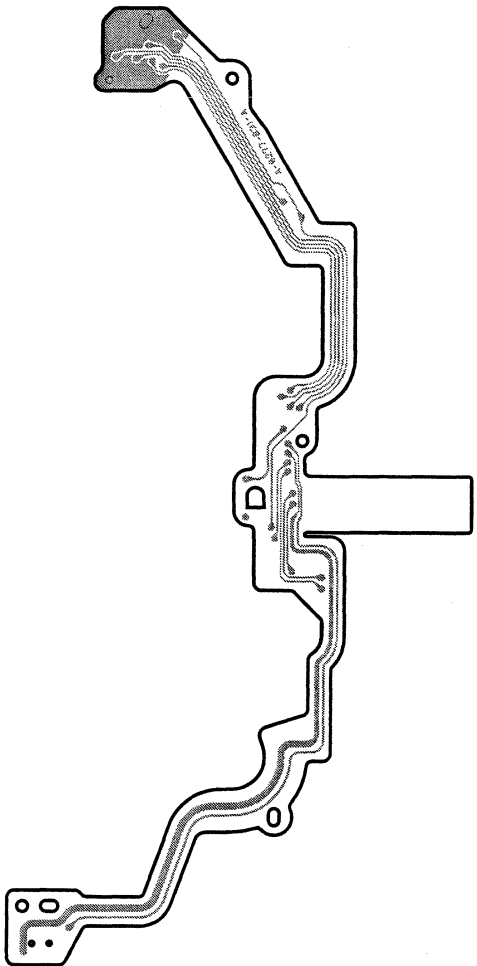


SE-297 -B SIDE-
SUFFIX : -13

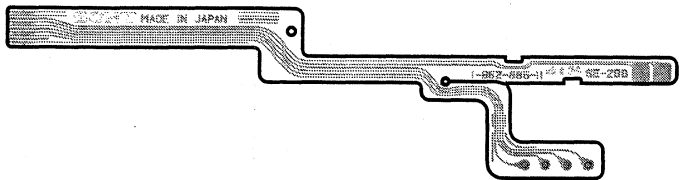


SE-298 -A SIDE-
SUFFIX : -11

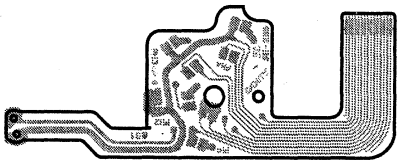


SE-295 -A SIDE-
SUFFIX : -13, 14

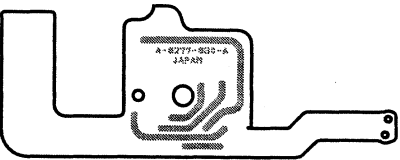


SE-295 -B SIDE-
SUFFIX : -13, 14

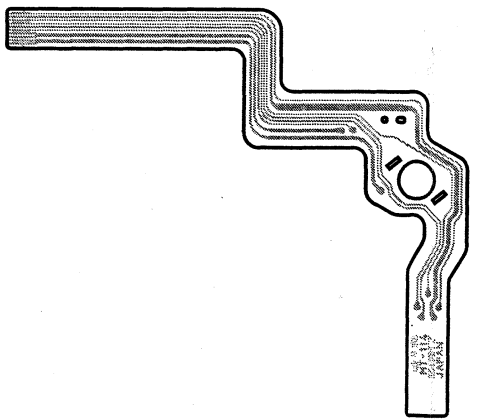


MT-114 -A SIDE-
SUFFIX : -12

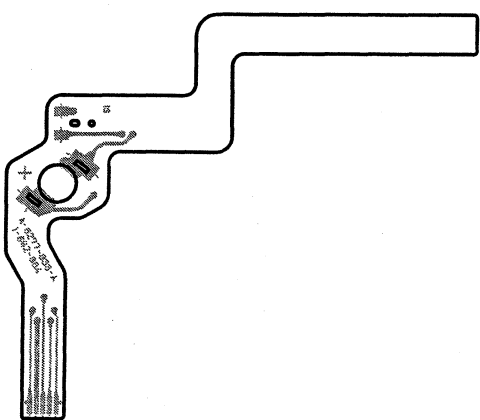

MT-114 -B SIDE-
SUFFIX : -12

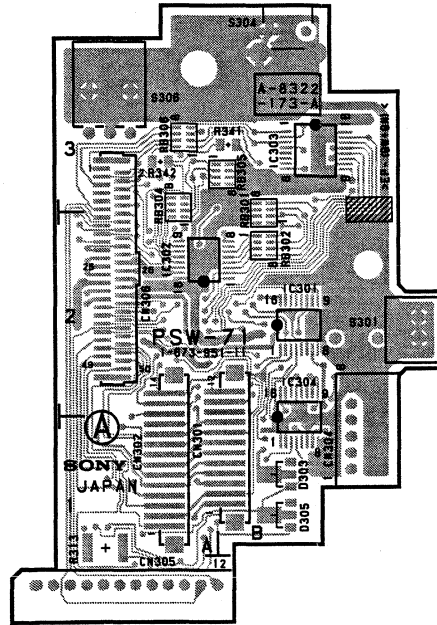

PSW-71 -A SIDE-
SUFFIX: -11, 21

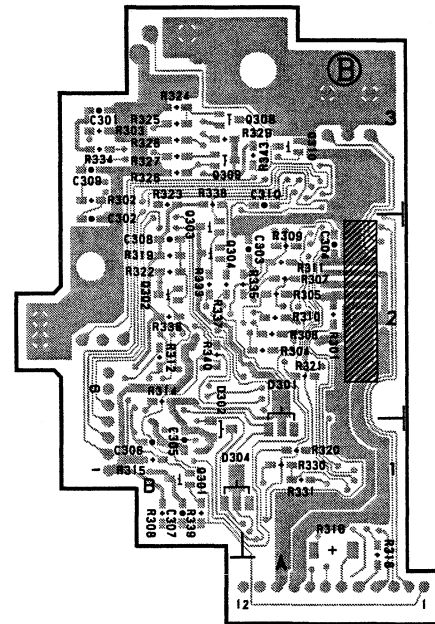


PSW-71 -B SIDE-
SUFFIX: -11, 21


PSW-71 (1-673-951-11, 21)

| | | | | | |
|-------|-----|------|-----|-------|-----------|
| C301 | *B3 | Q308 | *B3 | R329 | *B3 |
| C302 | *B2 | Q309 | *B3 | R330 | *A1 |
| C303 | *A2 | Q310 | *A3 | R331 | *A1 |
| C304 | *A2 | | | R333 | *B2 |
| C305 | *B1 | R301 | *A2 | R334 | *B3 |
| C306 | *B1 | R302 | *B3 | R335 | *A2 |
| C307 | *B1 | R303 | *B3 | R336 | *A2 |
| C308 | *B2 | R304 | *A2 | R337 | *B2 |
| C309 | *B3 | R305 | *A2 | R338 | *B3 |
| C310 | *A3 | R306 | *A2 | R339 | *B1 |
| | | R307 | *A2 | R340 | *B2 |
| CN301 | B1 | R308 | *B1 | R341 | B3 |
| CN302 | A1 | R309 | *A2 | R342 | A3 |
| CN304 | B1 | R310 | *A2 | R343 | *A3 |
| CN305 | A1 | R311 | *A2 | | |
| CN306 | A2 | R312 | *B2 | RB301 | B2 |
| | | R313 | A1 | RB302 | B2 |
| D301 | *A2 | R314 | *B2 | RB304 | A3 |
| D302 | *B1 | R315 | *B1 | RB305 | B3 |
| D303 | B1 | R316 | *A1 | RB306 | A3 |
| D304 | *B1 | R318 | *A1 | | |
| D305 | B1 | R319 | *B2 | S301 | B2 |
| | | R320 | *A1 | S304 | B3 |
| IC301 | B2 | R321 | *A2 | S306 | A3 |
| IC302 | A2 | R322 | *B2 | | |
| IC303 | B3 | R323 | *B3 | | *: B SIDE |
| IC304 | B1 | R324 | *B3 | | |
| | | R325 | *B3 | | |
| Q301 | *B1 | R326 | *B3 | | |
| Q302 | *B2 | R327 | *B3 | | |
| Q303 | *B2 | R328 | *B3 | | |
| Q304 | *B2 | | | | |

*: B SIDE

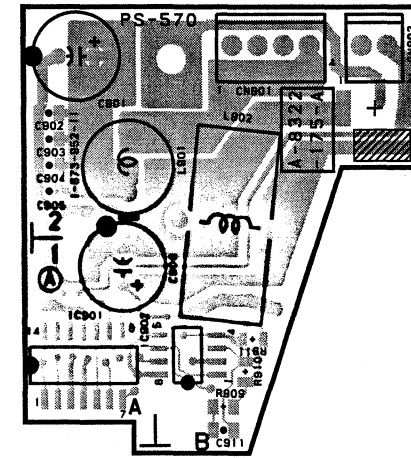

PS-570 -A SIDE-
SUFFIX: -11, 21

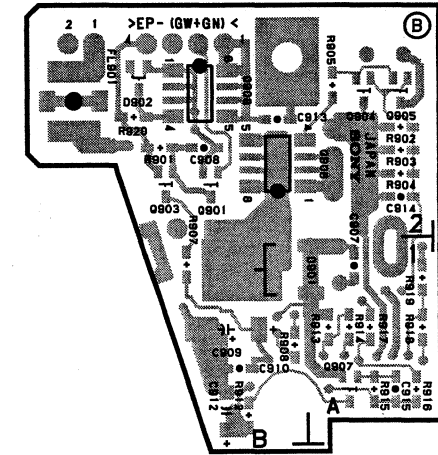


PS-570 -B SIDE-
SUFFIX: -11, 21


PS-570 (1-673-952-11, 21)

| | | | | | | | |
|-------|-----|-------|-----|------|-----|------|-----------|
| C901 | A2 | CN902 | B2 | Q906 | *B2 | R914 | *A1 |
| C902 | A2 | | | Q907 | *A1 | R915 | *A1 |
| C903 | A2 | D901 | *B1 | Q908 | *B2 | R916 | *A1 |
| C904 | A2 | D902 | *B2 | | | R917 | *A1 |
| C905 | A2 | | | R901 | *B2 | R918 | *A1 |
| C906 | A1 | FL901 | *B2 | R902 | *A2 | R919 | *A1 |
| C907 | *A1 | | | R903 | *A2 | R920 | *B2 |
| C908 | *B2 | IC901 | A1 | R904 | *A2 | | |
| C909 | *B1 | IC902 | B1 | R905 | *A2 | | *: B SIDE |
| C910 | *B1 | | | R906 | B2 | | |
| C911 | B1 | L901 | A2 | R907 | *B1 | | |
| C912 | *B1 | L902 | B2 | R908 | *B1 | | |
| C913 | *B2 | | | R909 | B1 | | |
| C914 | *A2 | Q901 | *B2 | R910 | B1 | | |
| C915 | *A1 | Q903 | *B2 | R911 | B1 | | |
| | | Q904 | *A2 | R912 | *B1 | | |
| CN901 | B2 | Q905 | *A2 | R913 | *A1 | | |

*: B SIDE

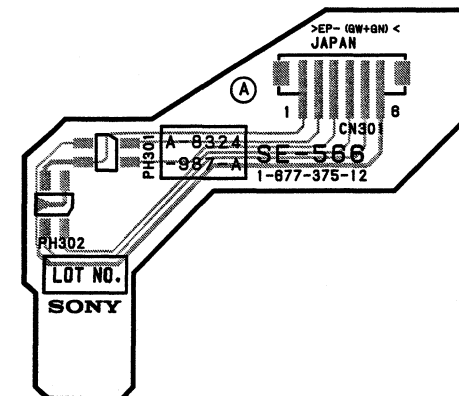


SE-566 -A SIDE-
SUFFIX: -12, 21

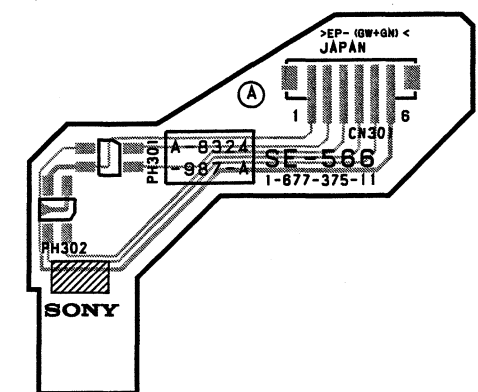


SE-566 -A SIDE-
SUFFIX: -11

MB-833
SUFFIX: -12

MB-833
SUFFIX: -12

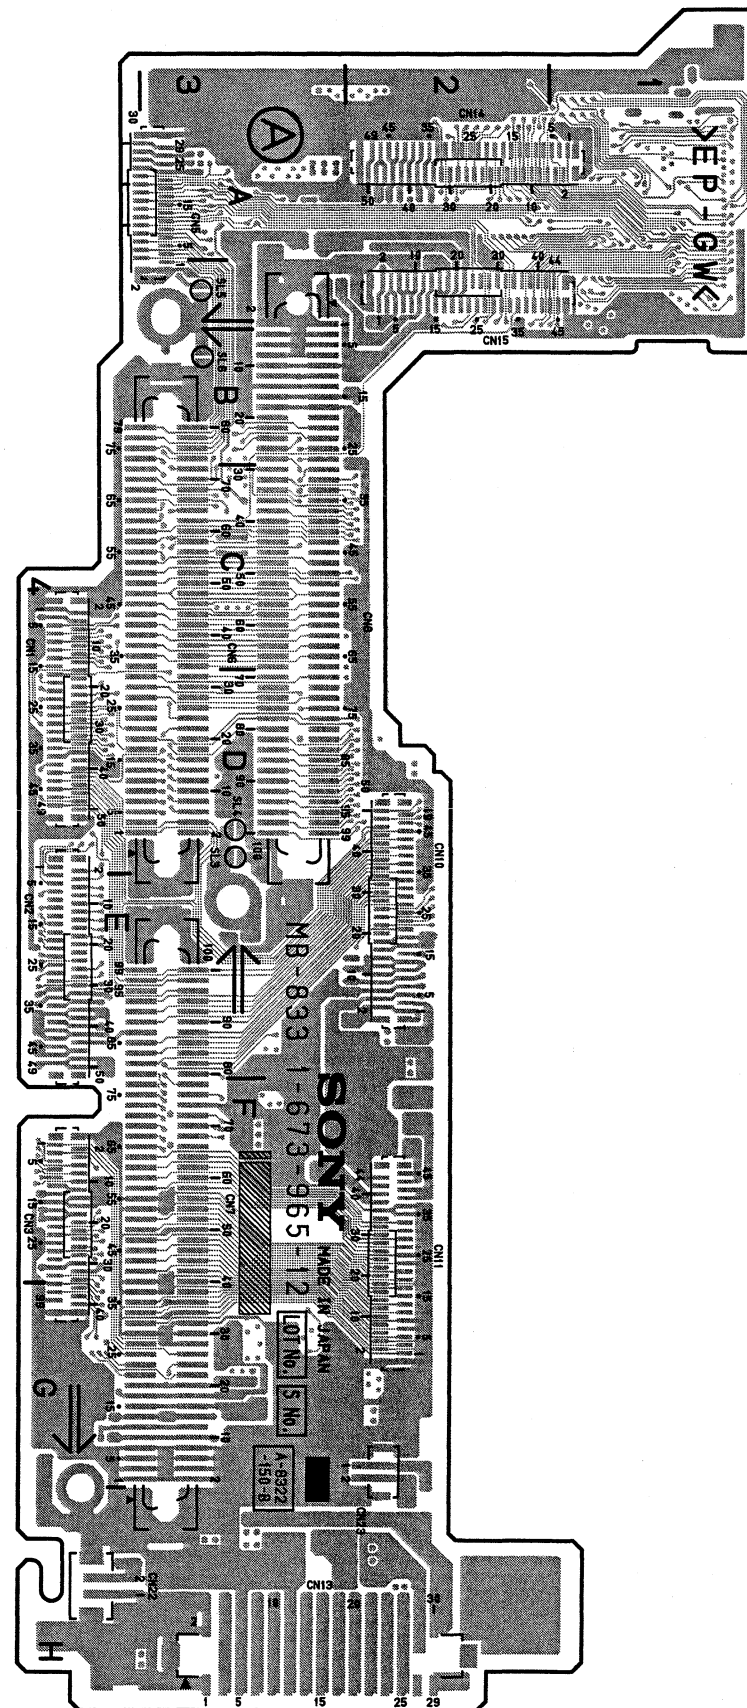

MB-833 -A SIDE-
SUFFIX: -12

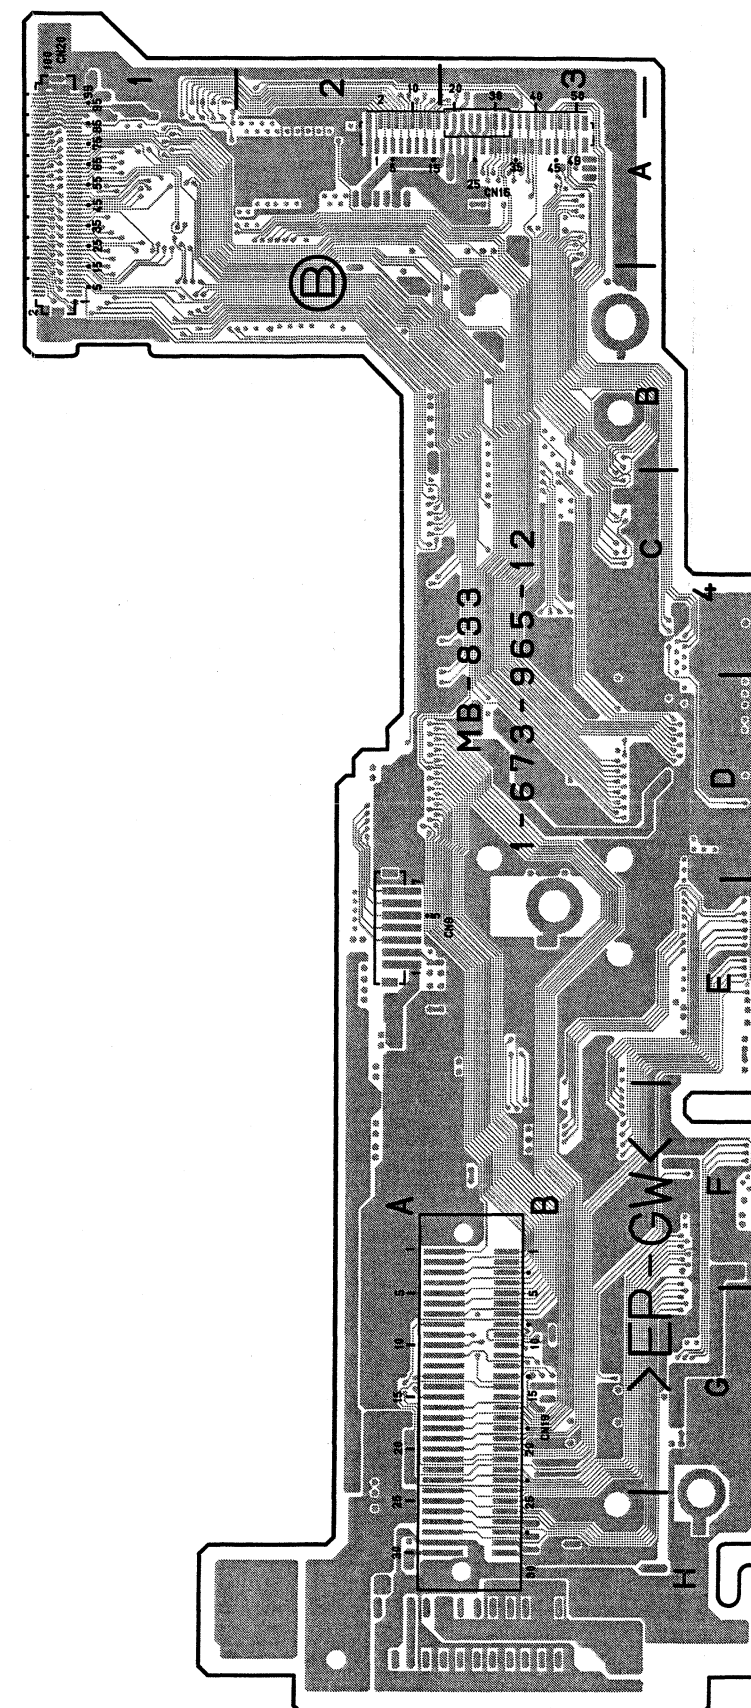

MB-833 -B SIDE-
SUFFIX: -12


MB-833 (1-673-965-12)

| | |
|------|------|
| CN1 | D4 |
| CN2 | E4 |
| CN3 | F4 |
| CN5 | A3 |
| CN6 | C3 |
| CN7 | F3 |
| CN8 | C3 |
| CN9 | * E2 |
| CN10 | E2 |
| CN11 | F2 |
| CN13 | H3 |
| CN14 | A2 |
| CN15 | B2 |
| CN16 | * A3 |
| CN19 | * G3 |
| CN20 | * A1 |
| CN22 | H4 |
| CN23 | G2 |
| SL3 | D3 |
| SL4 | D3 |
| SL5 | B3 |
| SL6 | B3 |


*: B SIDE

MB-833
SUFFIX: -11

MB-833
SUFFIX: -11

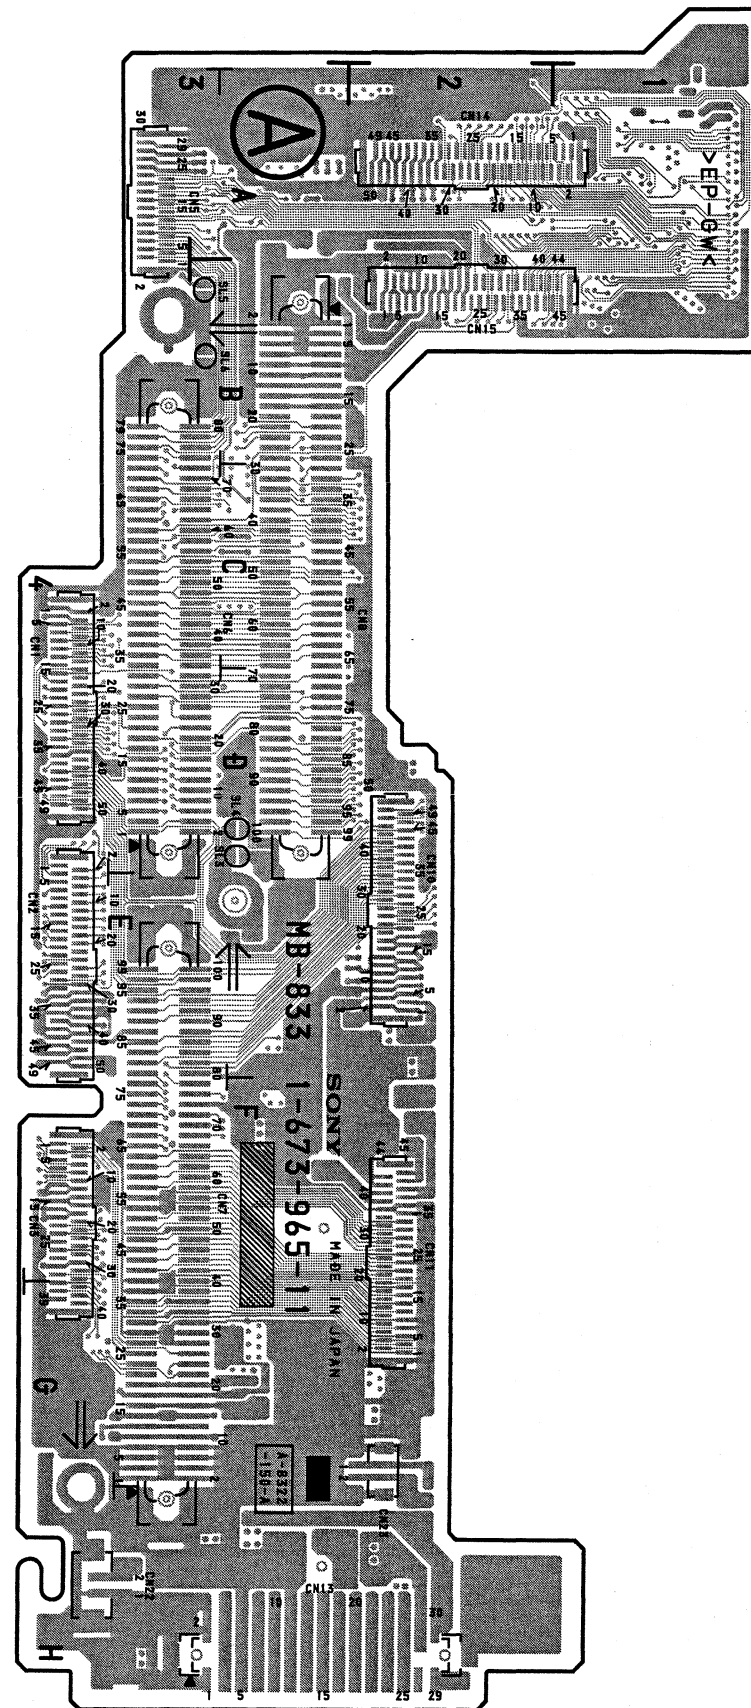

MB-833 -A SIDE-
SUFFIX: -11

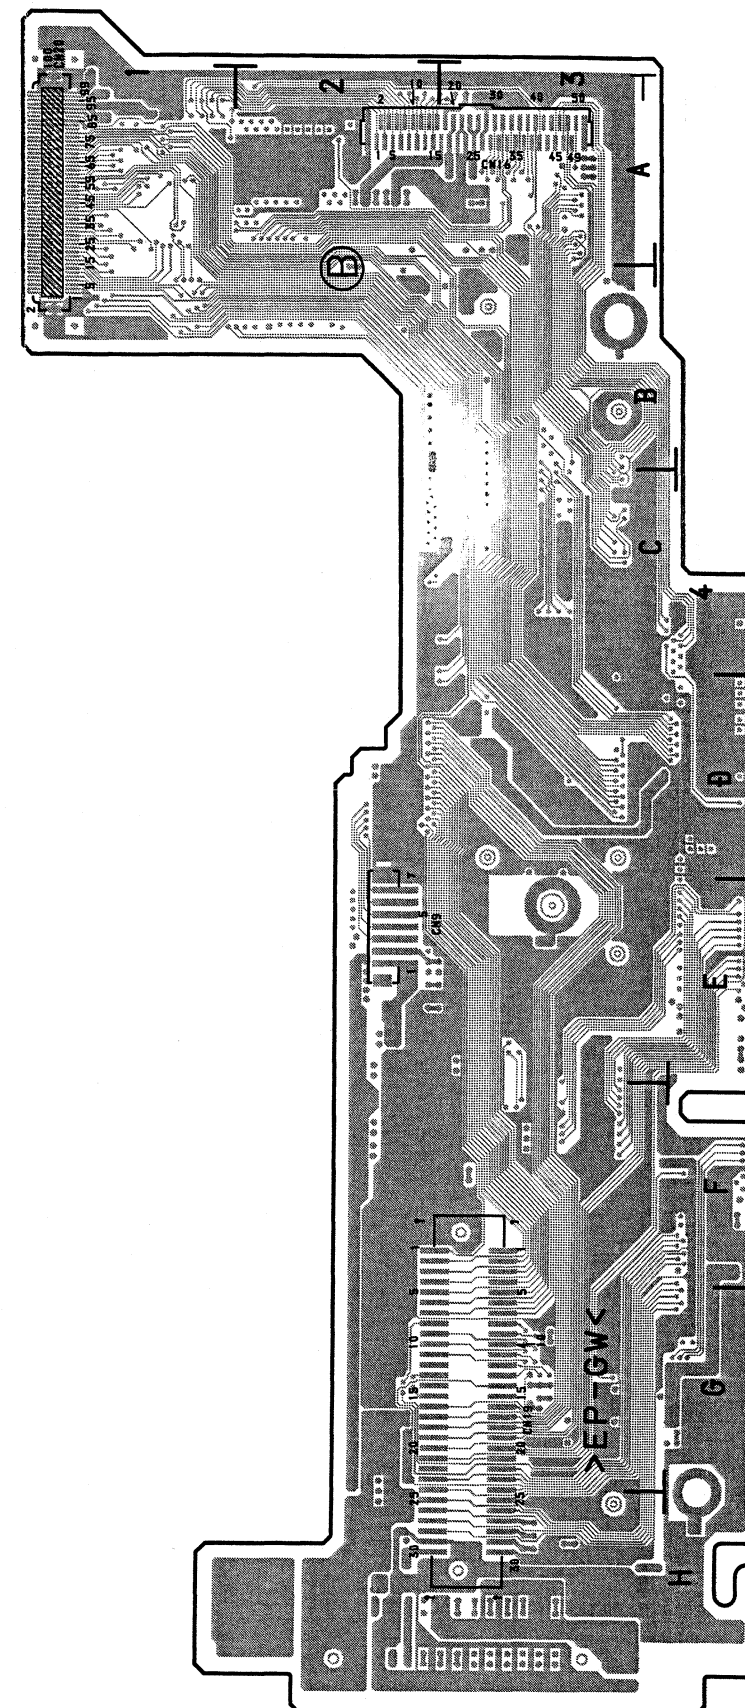

MB-833 -B SIDE-
SUFFIX: -11

MB-833 (1-673-965-11)

| | |
|------|-----|
| CN1 | D4 |
| CN2 | E4 |
| CN3 | F4 |
| CN5 | A4 |
| CN6 | C4 |
| CN7 | F4 |
| CN8 | C3 |
| CN9 | *E2 |
| CN10 | E2 |
| CN11 | F2 |
| CN13 | H3 |
| CN14 | A2 |
| CN15 | B2 |
| CN16 | *A3 |
| CN19 | *G3 |
| CN20 | *A1 |
| CN22 | H4 |
| CN23 | G2 |


| | |
|-----|----|
| SL3 | D3 |
| SL4 | D3 |
| SL5 | B4 |
| SL6 | B4 |

*: B SIDE


SV-213 (1-673-983-12)

| | | | | | | | | | | | | | | | | | |
|------|----|------|-----|-------|-----|--------|-----|-------|----|------|----|------|----|-------|----|-------|----|
| C1 | C1 | C504 | D2 | CL36 | *B4 | CL504 | *D1 | IC500 | C2 | R222 | C2 | R421 | B3 | R750 | A2 | TP302 | A4 |
| C2 | A1 | C505 | D2 | CL37 | *B4 | CL505 | *D1 | IC501 | D3 | R223 | C2 | R422 | B2 | R751 | A2 | TP304 | A3 |
| C3 | A1 | C506 | D2 | CL38 | *B4 | CL506 | *D1 | IC502 | D3 | R225 | A2 | R423 | B3 | R752 | A1 | TP400 | C2 |
| C4 | A2 | C507 | D2 | CL40 | *B4 | CL507 | *D1 | IC505 | C1 | R226 | A2 | R424 | B3 | R753 | A1 | TP401 | C3 |
| C5 | C1 | C508 | D2 | CL41 | *B4 | CL508 | *D1 | IC507 | D3 | R227 | A2 | R425 | B3 | R754 | B1 | TP501 | D2 |
| C6 | B1 | C509 | D2 | CL42 | *B4 | CL1001 | *D1 | IC508 | D3 | R228 | A2 | R426 | C2 | R759 | B1 | TP502 | D2 |
| C7 | C1 | C510 | D2 | CL43 | *B4 | CL1002 | *D3 | IC509 | D3 | R229 | B2 | R427 | B3 | R760 | B1 | TP503 | C3 |
| C8 | C1 | C512 | D2 | CL44 | *B4 | CL1003 | *D3 | IC510 | D3 | R230 | B2 | R428 | B3 | R761 | B1 | TP504 | D2 |
| C9 | C1 | C516 | C4 | CL45 | *B4 | CL1300 | *A3 | IC512 | C4 | R231 | B2 | R429 | B2 | R762 | A2 | TP505 | D2 |
| C10 | C1 | C517 | C3 | CL46 | *B4 | CL1301 | *A3 | IC702 | B3 | R232 | B2 | R430 | B2 | R763 | A2 | TP506 | D2 |
| C11 | C1 | C518 | C4 | CL47 | *B4 | CL1302 | *A3 | IC740 | A1 | R233 | B2 | R431 | B3 | R764 | A2 | TP507 | A4 |
| C13 | D1 | C520 | C4 | CL48 | *B4 | CL1304 | *A3 | IC741 | A2 | R234 | B2 | R432 | B3 | R765 | A2 | TP508 | A4 |
| C16 | D1 | C522 | C4 | CL49 | *B4 | CL1400 | *C2 | IC801 | D4 | R235 | B2 | R433 | B3 | R766 | A2 | TP509 | C3 |
| C17 | D4 | C524 | D1 | CL50 | *B4 | CL1401 | *C3 | IC802 | D4 | R236 | B2 | R434 | B3 | R767 | A2 | TP510 | C3 |
| C18 | B1 | C525 | D1 | CL51 | *B4 | CL1502 | *D2 | IC901 | A2 | R238 | A3 | R436 | B3 | R768 | A2 | TP701 | B1 |
| C200 | D4 | C526 | C1 | CL52 | *B4 | CL1503 | *C4 | IC902 | A2 | R239 | A3 | R437 | B3 | R769 | A1 | TP704 | B1 |
| C201 | D4 | C527 | C2 | CL56 | *B4 | CL1504 | *D2 | IC903 | A1 | R241 | A3 | R438 | B3 | R770 | A1 | | |
| C202 | D4 | C528 | C2 | CL57 | *B4 | CL1505 | *D2 | IC904 | A2 | R242 | A3 | R439 | B3 | R771 | B2 | X500 | C2 |
| C203 | C2 | C529 | C2 | CL60 | *B4 | CL1506 | *C2 | | | R244 | A2 | R440 | B3 | R772 | B2 | | |
| C204 | B2 | C530 | C2 | CL64 | *B4 | CL1507 | *A4 | L500 | C4 | R245 | A2 | R441 | B3 | R773 | B2 | | |
| C205 | A2 | C531 | C2 | CL65 | *B4 | CL1508 | *A4 | L501 | C4 | R246 | A2 | R442 | B1 | R774 | B2 | | |
| C206 | A2 | C533 | D3 | CL67 | *B4 | CL1509 | *C3 | L502 | C4 | R247 | A2 | R443 | C1 | R775 | B2 | | |
| C207 | A3 | C534 | D3 | CL68 | *B4 | CL1510 | *C3 | L700 | B1 | R248 | A3 | R444 | C1 | R776 | B2 | | |
| C208 | A2 | C535 | C3 | CL69 | *B4 | CL1901 | *C1 | L740 | B1 | R249 | A3 | R445 | C1 | R777 | B2 | | |
| C209 | A2 | C537 | C4 | CL71 | *B4 | CL1902 | *D4 | L741 | B2 | R250 | A3 | R501 | C1 | R778 | B2 | | |
| C210 | D1 | C538 | D3 | CL72 | *B4 | CL1903 | *D4 | | | R251 | A3 | R502 | C2 | R801 | D4 | | |
| C211 | A2 | C539 | D3 | CL73 | *B4 | | | LND1 | D1 | R252 | A3 | R503 | C2 | R802 | C4 | | |
| C212 | A3 | C700 | A2 | CL74 | *B4 | CN500 | *B4 | | | R253 | A3 | R504 | D2 | R805 | D2 | | |
| C300 | A4 | C701 | A1 | CL75 | *B4 | CN501 | C4 | Q700 | A1 | R254 | A3 | R505 | C2 | R806 | D3 | | |
| C301 | A4 | C702 | A1 | CL77 | *B4 | CN502 | C4 | Q701 | B3 | R255 | A3 | R513 | C1 | R810 | D3 | | |
| C302 | A4 | C705 | B1 | CL80 | *B4 | CN504 | C1 | Q740 | B1 | R300 | A4 | R514 | C2 | R811 | C3 | | |
| C303 | A4 | C706 | B1 | CL104 | *C4 | CN505 | D1 | Q745 | B2 | R301 | A4 | R515 | C1 | R812 | C3 | | |
| C304 | A4 | C707 | B1 | CL105 | *C4 | | | Q748 | B2 | R302 | A4 | R516 | C1 | R813 | D3 | | |
| C305 | A4 | C740 | A1 | CL107 | *C4 | D1 | B1 | Q749 | C2 | R303 | A4 | R517 | C4 | R814 | D4 | | |
| C306 | A4 | C741 | A2 | CL108 | *C4 | D2 | B1 | Q802 | D3 | R304 | A4 | R518 | C3 | R818 | C3 | | |
| C309 | A4 | C742 | A2 | CL109 | *C4 | D300 | A3 | Q803 | C3 | R305 | A4 | R519 | C1 | R820 | C3 | | |
| C310 | B4 | C746 | B1 | CL110 | *C4 | D302 | B2 | Q804 | C3 | R306 | A3 | R520 | C1 | R822 | C3 | | |
| C311 | B4 | C747 | B1 | CL111 | *C4 | D303 | B2 | Q805 | C3 | R307 | A3 | R521 | C2 | R824 | C3 | | |
| C312 | C4 | C748 | B3 | CL112 | *C4 | D400 | A4 | Q806 | C4 | R308 | A3 | R522 | C2 | R901 | A1 | | |
| C313 | C4 | C749 | A2 | CL113 | *C4 | D401 | B2 | Q901 | A1 | R309 | A4 | R523 | C2 | R902 | A2 | | |
| C314 | B2 | C750 | A2 | CL114 | *C4 | D402 | B2 | | | R310 | A4 | R524 | C2 | R903 | A2 | | |
| C315 | B2 | C754 | B2 | CL115 | *C4 | D500 | C3 | R1 | C1 | R311 | A3 | R525 | C2 | R904 | A2 | | |
| C317 | B2 | C755 | B2 | CL116 | *C4 | D501 | C3 | R3 | C1 | R312 | A3 | R526 | C2 | R905 | A2 | | |
| C318 | B2 | C756 | B2 | CL117 | *C4 | D502 | D2 | R4 | C1 | R313 | A3 | R529 | D2 | R906 | A2 | | |
| C319 | B3 | C757 | A1 | CL118 | *C4 | D503 | D2 | R5 | C1 | R314 | A4 | R533 | B4 | R907 | A2 | | |
| C320 | B3 | C758 | A2 | CL119 | *C4 | D506 | C1 | R6 | D1 | R315 | A4 | R534 | B4 | R908 | A2 | | |
| C321 | B3 | C759 | B1 | CL120 | *C4 | D507 | D1 | R7 | D1 | R316 | A4 | R535 | B4 | R909 | B2 | | |
| C322 | B3 | C760 | B2 | CL201 | *B4 | D508 | D1 | R8 | D1 | R317 | A4 | R536 | D4 | R910 | B2 | | |
| C323 | B3 | C761 | A2 | CL202 | *B4 | D701 | C3 | R10 | D4 | R318 | D1 | R537 | D4 | R911 | B2 | | |
| C324 | A4 | C801 | D3 | CL203 | *B4 | D702 | C3 | R11 | D4 | R323 | A4 | R540 | D4 | R912 | B2 | | |
| C325 | A3 | C802 | D3 | CL204 | *B4 | D801 | D4 | R12 | D4 | R324 | A4 | R541 | B4 | R913 | B1 | | |
| C326 | D1 | C901 | A2 | CL205 | *B4 | D802 | D4 | R13 | D4 | R325 | A3 | R542 | B4 | R914 | B1 | | |
| C327 | D1 | C902 | A2 | CL206 | *B4 | D803 | D4 | R14 | D4 | R326 | A3 | R543 | B4 | R915 | B1 | | |
| C328 | B4 | C903 | A2 | CL207 | *B4 | D804 | D4 | R16 | D4 | R327 | A3 | R544 | C4 | R916 | B2 | | |
| C329 | A2 | C904 | A1 | CL208 | *B4 | D805 | D4 | R17 | D4 | R328 | B4 | R545 | C4 | R917 | A1 | | |
| C331 | A4 | C905 | A2 | CL209 | *B4 | D806 | D4 | R18 | D4 | R329 | B4 | R546 | D3 | R918 | B2 | | |
| C332 | A4 | C906 | A2 | CL210 | *B4 | D807 | D4 | R19 | D4 | R330 | A2 | R547 | D3 | R919 | A1 | | |
| C333 | A3 | C907 | A2 | CL211 | *B4 | D808 | D4 | R20 | D4 | R331 | C3 | R548 | D3 | R921 | A1 | | |
| C334 | A4 | C908 | B1 | CL212 | *B4 | D809 | D4 | R21 | D1 | R332 | C2 | R549 | D3 | R922 | A1 | | |
| C400 | B4 | C909 | A1 | CL213 | *B4 | D810 | D4 | R27 | C1 | R333 | B2 | R550 | D3 | R923 | B2 | | |
| C401 | A4 | C910 | A2 | CL214 | *B4 | D811 | D4 | R28 | C1 | R337 | B2 | R551 | D3 | | | | |
| C402 | A4 | C911 | A1 | CL218 | *B4 | D812 | D4 | R29 | C2 | R339 | B2 | R552 | D3 | RB500 | C3 | | |
| C403 | A4 | C912 | A2 | CL219 | *B4 | D813 | D4 | R30 | A1 | R340 | B2 | R553 | C2 | RB501 | D2 | | |
| C404 | B4 | | | CL220 | *C4 | D814 | D4 | R31 | A2 | R341 | B2 | R555 | C2 | RB502 | D3 | | |
| C405 | A4 | CL2 | *A4 | CL221 | *C4 | D815 | D4 | R32 | B1 | R342 | B2 | R556 | C2 | RB503 | D3 | | |
| C406 | A4 | CL3 | *A4 | CL222 | *C4 | D816 | D4 | R33 | B1 | R343 | B2 | R557 | D3 | RB504 | D3 | | |
| C407 | B2 | CL4 | *A4 | CL223 | *C4 | D901 | A1 | R34 | B1 | R344 | B3 | R558 | C2 | RB506 | C2 | | |
| C408 | B3 | CL5 | *A4 | CL224 | *C4 | | | R35 | B1 | R345 | B3 | R559 | C2 | RB507 | C2 | | |
| C409 | B3 | CL6 | *A4 | CL225 | *C4 | E1 | B4 | R36 | B1 | R346 | B3 | R700 | A1 | RB508 | C2 | | |
| C410 | B3 | CL8 | *A4 | CL233 | *C4 | E2 | B4 | R37 | C1 | R347 | B3 | R701 | A1 | RB510 | D4 | | |
| C411 | B3 | CL9 | *A4 | CL236 | *C3 | E3 | B1 | R38 | B1 | R348 | C3 | R702 | A2 | RB511 | D3 | | |
| C412 | B3 | CL10 | *A4 | CL238 | *C4 | | | R39 | C1 | R349 | C2 | R703 | A2 | RB512 | D3 | | |
| C413 | B3 | CL11 | *A4 | CL243 | *C4 | IC1 | C1 | R40 | C1 | R400 | B4 | R704 | A1 | RB513 | C3 | | |
| C414 | B3 | CL12 | *A4 | CL244 | *C4 | IC2 | C1 | R41 | C1 | R401 | B4 | R705 | A1 | RB514 | C3 | | |
| C415 | B3 | CL13 | *A4 | CL246 | *C4 | IC3 | D1 | R42 | C1 | R402 | A4 | R706 | A1 | RB515 | D2 | | |
| C416 | B3 | CL14 | *A4 | CL248 | *C4 | IC5 | B1 | R43 | C1 | R403 | A4 | R707 | A1 | RB516 | D2 | | |
| C417 | B3 | CL15 | *A4 | CL250 | *C4 | IC6 | D1 | R44 | C1 | R404 | A4 | R708 | A1 | RB801 | C4 | | |
| C418 | B3 | CL16 | *A4 | CL401 | *C1 | IC200 | B2 | R45 | C1 | R405 | A4 | R709 | B1 | RB802 | D4 | | |
| C419 | B3 | CL17 | *A4 | CL402 | *C1 | IC201 | A3 | R46 | D1 | R406 | A4 | R710 | C3 | RB803 | D3 | | |
| C420 | B3 | CL18 | *B4 | CL403 | *C1 | IC204 | A2 | R47 | D4 | R407 | A4 | R711 | C3 | RB804 | D4 | | |
| C421 | B3 | CL19 | *B4 | CL405 | *C1 | IC300 | B3 | R48 | D4 | R408 | A4 | R714 | B1 | RB805 | D3 | | |
| C422 | B3 | CL20 | *B4 | CL406 | *C1 | IC301 | A4 | R49 | C2 | R409 | C2 | R715 | B1 | RB806 | D4 | | |
| C423 | B3 | CL21 | *B4 | CL407 | *C1 | IC302 | A3 | R203 | D4 | R410 | B4 | R716 | B1 | RB808 | D4 | | |
| C424 | B3 | CL22 | *D2 | CL409 | *C1 | IC303 | D1 | R204 | D4 | R411 | B4 | R740 | A1 | RB810 | C3 | | |
| C425 | B3 | CL23 | *B4 | CL410 | *C1 | IC304 | D1 | R205 | D4 | R412 | B4 | R741 | A1 | RB811 | C3 | | |
| C426 | B4 | CL24 | *B4 | CL411 | *C1 | IC305 | A4 | R206 | D4 | R413 | B4 | R742 | A1 | | | | |
| C427 | A4 | CL25 | *B4 | CL412 | *C1 | IC306 | B4 | R207 | D4 | R414 | B4 | R743 | A1 | S500 | D2 | | |
| C428 | B2 | CL26 | *B4 | CL413 | *C1 | IC307 | A2 | R208 | D4 | R415 | A4 | R744 | A1 | | | | |
| C429 | B4 | CL29 | *B4 | CL415 | *C1 | IC309 | A4 | R209 | D4 | R416 | A4 | R745 | A2 | TP1 | C1 | | |
| C500 | D2 | CL31 | *B4 | CL416 | *C1 | IC400 | B3 | R210 | D4 | R417 | A4 | R746 | A2 | TP2 | D2 | | |
| C501 | D2 | CL32 | *B4 | CL417 | *C1 | IC401 | B4 | R211 | D4 | R418 | C3 | R747 | A2 | TP3 | D2 | | |
| C502 | D2 | CL33 | *B4 | CL418 | *C1 | IC402 | A4 | R219 | B2 | R419 | B2 | R748 | A2 | TP300 | A3 | | |
| C503 | D2 | CL35 | *B4 | CL503 | *D1 | IC403 | B2 | R220 | B2 | R420 | B3 | R749 | A2 | TP301 | A3 | | |

*: B SIDE

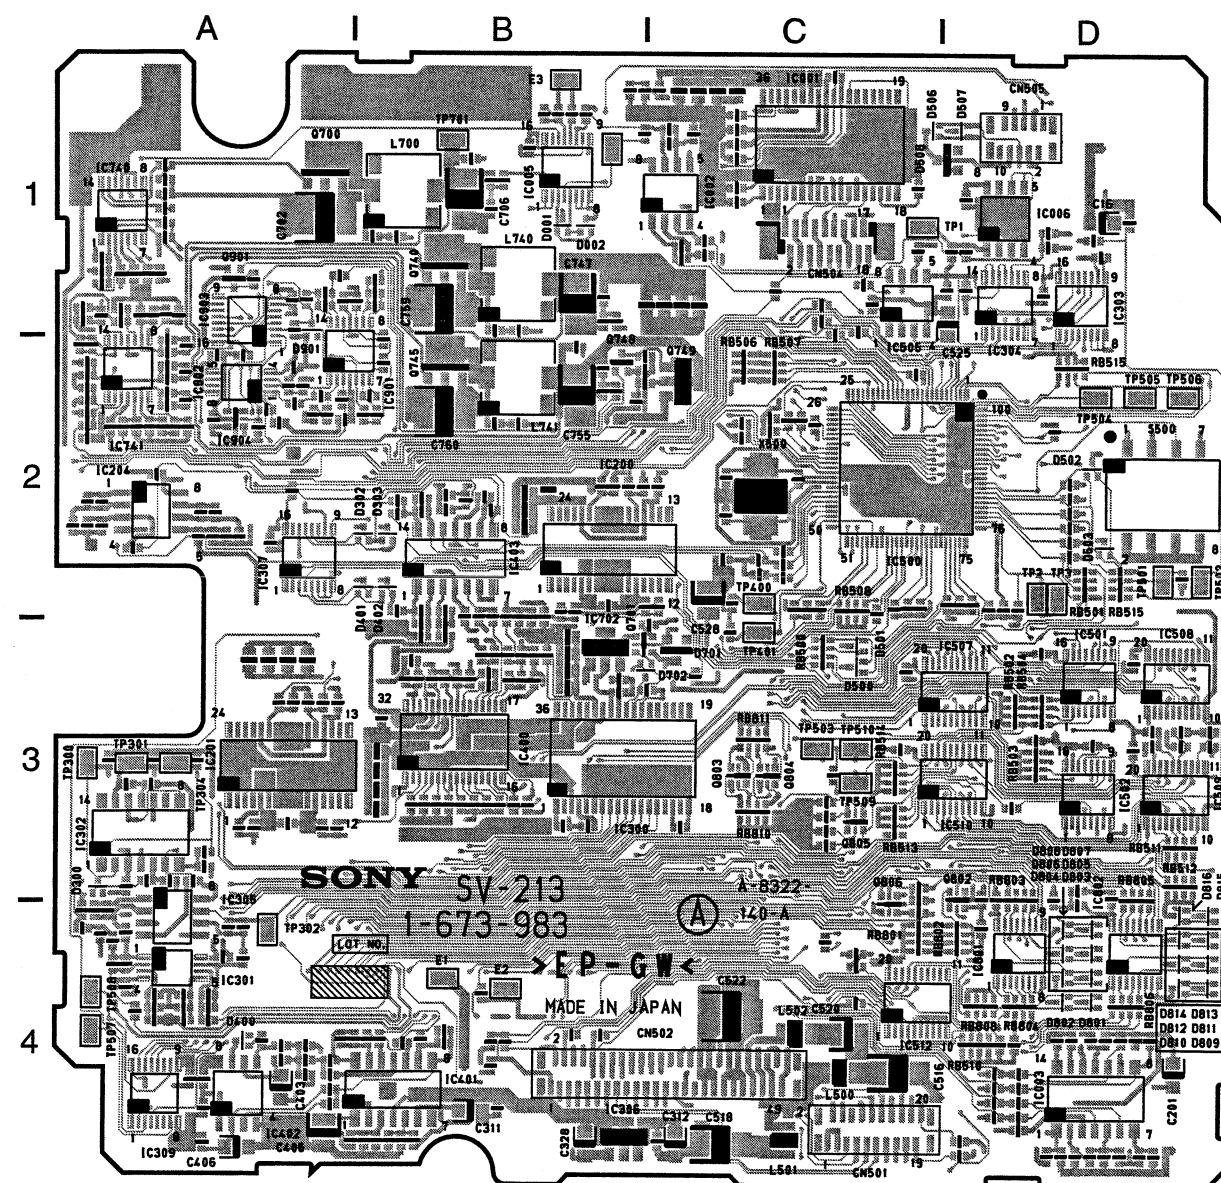

SV-213 -A SIDE-
SUFFIX: -12

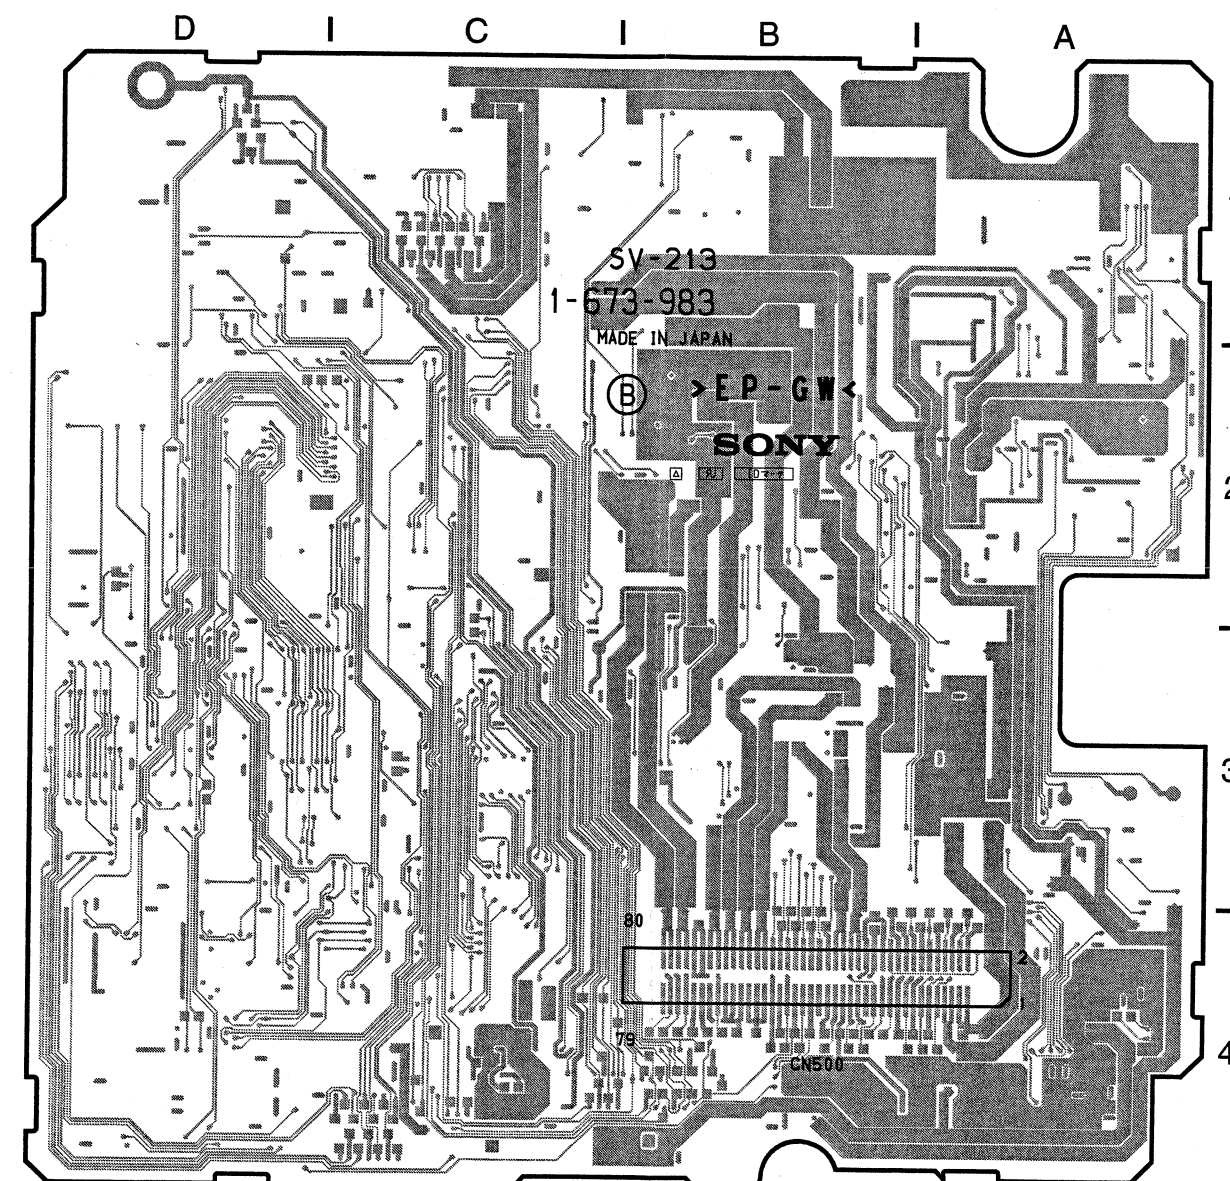

SV-213 -B SIDE-
SUFFIX: -12

VA-199
SUFFIX: -11


VA-199
SUFFIX: -11

VA-199 (1-677-373-11)


| | | | | | | | | | | | | | | | | | |
|------|-----|------|-----|-------|-----|-------|-----|------|-----|------|-----|------|-------|------|-----|-------|-----|
| C001 | D5 | C150 | *C5 | C316 | *A2 | IC201 | B2 | Q320 | A4 | R116 | *C2 | R223 | B3 | R330 | *A3 | R804 | *B4 |
| C002 | D5 | C151 | *C5 | C317 | *A3 | IC202 | B3 | Q321 | A4 | R117 | C2 | R223 | C3 | R331 | *A3 | R807 | *B4 |
| C003 | D5 | C152 | C5 | C318 | A2 | IC203 | B3 | Q322 | A2 | R118 | *C2 | R225 | *B2 | R332 | *A3 | R900 | A2 |
| C004 | *D2 | C166 | *C2 | C319 | *A2 | IC205 | B3 | Q323 | B3 | R119 | *C2 | R226 | *B2 | R333 | A3 | R901 | A3 |
| C005 | D3 | C168 | C4 | C320 | *A3 | IC206 | *B5 | Q324 | A4 | R120 | *C2 | R227 | *B3 | R334 | *A3 | R902 | *A3 |
| C006 | *D4 | C169 | C4 | C321 | A3 | IC207 | B5 | | | R121 | C2 | R228 | *B3 | R335 | A3 | R903 | A4 |
| C007 | D2 | C170 | *C3 | C322 | A3 | IC301 | A2 | R002 | *D2 | R122 | *C3 | R229 | *B3 | R336 | *A3 | R904 | A3 |
| C008 | D2 | C171 | *C4 | C323 | A3 | IC302 | A3 | R003 | *D2 | R123 | *C2 | R230 | *B3 | R337 | *A3 | R907 | *A4 |
| C009 | D1 | C172 | *C3 | C324 | *A3 | IC303 | A3 | R004 | *D2 | R125 | *C2 | R231 | *B3 | R338 | *A3 | | |
| C010 | D1 | C173 | *C2 | C325 | B3 | IC305 | A3 | R005 | *D2 | R126 | *C2 | R232 | *B3 | R339 | A3 | RB001 | *D3 |
| C011 | D1 | C174 | C2 | C326 | *A4 | IC306 | *A5 | R006 | *D2 | R127 | *C3 | R233 | B3 | R340 | *A3 | RB002 | *D3 |
| C012 | D3 | C175 | *C3 | C327 | *A3 | IC307 | A5 | R007 | *D1 | R128 | *C3 | R234 | *B3 | R341 | *A3 | | |
| C013 | D3 | C176 | *C4 | C328 | A3 | IC309 | *B6 | R008 | *D1 | R129 | C2 | R235 | B3 | R342 | *A3 | TP001 | D5 |
| C014 | D4 | C177 | C4 | C329 | *A5 | L101 | C2 | R009 | *D2 | R130 | *C3 | R236 | *B3 | R343 | *A3 | TP002 | D5 |
| C015 | D4 | C178 | C4 | C330 | *A5 | L102 | C2 | R010 | *D1 | R131 | C2 | R237 | *B3 | R344 | *A3 | TP102 | C5 |
| C016 | D3 | C179 | C2 | C331 | *A5 | L201 | B2 | R011 | *D1 | R132 | C2 | R238 | *B3 | R345 | *A4 | TP202 | B5 |
| C017 | *D4 | C180 | C1 | C332 | A3 | L202 | B2 | R012 | *D1 | R133 | *C3 | R239 | B3 | R346 | *A3 | TP302 | A5 |
| C018 | *D4 | C181 | C2 | C333 | *A4 | L301 | A2 | R013 | *D2 | R134 | *C3 | R240 | *B3 | R347 | *A4 | | |
| C019 | *D4 | C201 | *B2 | C334 | A3 | L302 | A2 | R014 | *D2 | R135 | C3 | R241 | *B3 | R348 | *A3 | | |
| C033 | B6 | C202 | *B2 | C335 | *A3 | Q001 | D2 | R015 | *D2 | R136 | *C3 | R242 | *B3 | R349 | *A3 | | |
| C034 | B6 | C203 | *B2 | C337 | A5 | Q002 | *D2 | R016 | *D2 | R137 | *C3 | R243 | *B3 | R350 | A4 | | |
| C035 | *B6 | C207 | *B2 | C338 | *A5 | Q003 | *D4 | R017 | *D2 | R138 | *C3 | R244 | *B3 | R354 | *A5 | | |
| C036 | A6 | C208 | *B2 | C339 | *A3 | Q006 | B6 | R018 | *D2 | R139 | C3 | R245 | *B4 | R355 | *A4 | | |
| C037 | *B6 | C209 | B2 | C340 | B4 | Q007 | C6 | R019 | *D2 | R140 | *C3 | R246 | *B3 | R356 | A4 | | |
| C038 | *B6 | C210 | B2 | C341 | *A4 | Q009 | C6 | R021 | D5 | R141 | *C3 | R247 | *B4 | R357 | *A4 | | |
| C039 | B6 | C211 | *B2 | C342 | *A4 | Q101 | *C2 | R022 | *D2 | R142 | *C3 | R248 | *B3 | R358 | A4 | | |
| C040 | C6 | C212 | *B2 | C343 | *A5 | Q102 | C2 | R023 | *D2 | R143 | *C3 | R249 | *B3 | R359 | A4 | | |
| C044 | A5 | C213 | *C2 | C344 | *A4 | Q103 | *C2 | R024 | D4 | R144 | *C3 | R250 | *B4 | R360 | A5 | | |
| C045 | *A5 | C214 | B2 | C345 | B4 | Q104 | *C2 | R025 | D3 | R145 | *C4 | R254 | *B5 | R361 | A4 | | |
| C045 | *A6 | C215 | *B2 | C346 | A5 | Q105 | *C2 | R026 | D4 | R146 | *C3 | R255 | *B4 | R362 | *A4 | | |
| C046 | *B6 | C216 | *B2 | C347 | A5 | Q106 | C2 | R027 | *C4 | R147 | *C4 | R256 | B4 | R363 | A4 | | |
| C047 | C6 | C217 | *B2 | C348 | *A5 | Q107 | C3 | R027 | *D4 | R148 | *C4 | R257 | B4 | R364 | *A4 | | |
| C048 | *B6 | C218 | B2 | C349 | A5 | Q108 | C2 | R028 | D4 | R149 | *C4 | R258 | B4 | R365 | *A4 | | |
| C050 | C6 | C219 | *B2 | C350 | *A5 | Q109 | *C2 | R029 | *D4 | R150 | *C4 | R259 | B4 | R366 | *A4 | | |
| C051 | C6 | C220 | *B3 | C351 | *A5 | Q110 | *C3 | R030 | *D5 | R154 | *C5 | R260 | B5 | R367 | *A4 | | |
| C052 | C6 | C221 | B3 | C352 | A5 | Q111 | C3 | R032 | *D4 | R155 | *C4 | R261 | *B4 | R368 | *A4 | | |
| C053 | *D3 | C222 | B3 | C366 | *A2 | Q112 | C3 | R033 | *D4 | R156 | C4 | R262 | B4 | R369 | *A4 | | |
| C054 | D5 | C223 | B3 | C368 | A4 | Q113 | *C4 | R034 | *D4 | R157 | *C4 | R263 | B4 | R370 | A4 | | |
| C055 | D4 | C224 | *B3 | C369 | A4 | Q114 | C4 | R035 | *D4 | R158 | C4 | R264 | *B4 | R371 | *A4 | | |
| C056 | B6 | C225 | *B3 | C370 | *A3 | Q115 | C4 | R036 | *D4 | R159 | C4 | R265 | *B4 | R372 | *A4 | | |
| C057 | D5 | C226 | C3 | C371 | *A4 | Q116 | C4 | R037 | D4 | R160 | C5 | R266 | *B4 | R373 | A4 | | |
| C058 | D4 | C227 | *B3 | C372 | *A3 | Q117 | C4 | R038 | D4 | R161 | *C4 | R267 | *B5 | R374 | A4 | | |
| C059 | D4 | C228 | B3 | C373 | *B2 | Q118 | C4 | R040 | *D3 | R162 | C4 | R268 | *B4 | R375 | *B5 | | |
| C060 | D4 | C229 | *B5 | C374 | A2 | Q119 | *C4 | R041 | D3 | R163 | C4 | R269 | *B4 | R376 | *A5 | | |
| C061 | A6 | C230 | *B5 | C375 | A2 | Q120 | C4 | R042 | D3 | R164 | *C4 | R270 | B4 | R377 | *A5 | | |
| C062 | A6 | C231 | *B5 | C376 | *A4 | Q121 | C4 | R043 | D2 | R165 | *C4 | R271 | B4 | R378 | *A5 | | |
| C063 | *A6 | C232 | B3 | C377 | A4 | Q122 | C2 | R058 | *B6 | R166 | *C4 | R272 | *B4 | R379 | *A4 | | |
| C101 | *C1 | C233 | *B4 | C378 | A5 | Q123 | C3 | R059 | *B6 | R167 | *C5 | R273 | B4 | R380 | *A5 | | |
| C102 | *C1 | C234 | B3 | C379 | A2 | Q124 | C4 | R060 | A6 | R168 | *C4 | R274 | B4 | R381 | *A5 | | |
| C103 | *C2 | C235 | *B3 | C380 | A2 | Q201 | *B2 | R061 | A6 | R169 | *C4 | R275 | *C5 | R382 | *A5 | | |
| C107 | *C2 | C237 | B5 | C381 | A2 | Q202 | C2 | R062 | A6 | R170 | C4 | R276 | *B5 | R383 | *A5 | | |
| C108 | *C2 | C238 | *B5 | | | Q203 | *B2 | R063 | B6 | R171 | C4 | R277 | *B5 | R391 | *A2 | | |
| C109 | C2 | C239 | *B3 | CN001 | *C1 | Q204 | *B2 | R068 | *A6 | R172 | *C4 | R278 | *B5 | R392 | A2 | | |
| C110 | *C2 | C240 | C4 | CN002 | *B1 | Q205 | *B2 | R069 | *A6 | R173 | C4 | R279 | *B4 | R393 | *A2 | | |
| C111 | *C2 | C241 | *B4 | CN003 | *A1 | Q206 | C2 | R070 | *A6 | R174 | C4 | R280 | *B5 | R395 | *A3 | | |
| C112 | *C2 | C242 | *B4 | CN004 | C5 | Q207 | *B3 | R071 | *B6 | R175 | *C5 | R281 | *B5 | R396 | *A4 | | |
| C113 | *C2 | C243 | *B5 | | | Q208 | B2 | R072 | *D4 | R176 | *C5 | R282 | *B5 | R397 | *A5 | | |
| C114 | *C2 | C244 | *B4 | | | Q209 | *B2 | R073 | *B6 | R177 | *C5 | R283 | *B5 | R398 | A2 | | |
| C115 | *C2 | C245 | *B4 | | | Q210 | *B3 | R075 | *B5 | R178 | *C5 | R291 | *C2 | R399 | *B2 | | |
| C116 | *C2 | C246 | B5 | D004 | *D2 | Q211 | B3 | R076 | *A5 | R179 | *C4 | R292 | B2 | R400 | C1 | | |
| C117 | *C3 | C247 | B5 | D005 | B6 | Q212 | *B3 | R077 | *C5 | R180 | *C5 | R294 | *B2 | R401 | C1 | | |
| C118 | C2 | C248 | *B5 | D103 | C3 | Q213 | *B4 | R078 | *B6 | R181 | *C5 | R295 | *B3 | R402 | C2 | | |
| C119 | C3 | C249 | B5 | D104 | C4 | Q214 | B4 | R079 | *C4 | R182 | *C5 | R296 | *B4 | R403 | C2 | | |
| C120 | *C3 | C250 | *B5 | D203 | B3 | Q215 | B4 | R079 | *D4 | R183 | *C5 | R297 | *B5 | R404 | C3 | | |
| C121 | C3 | C251 | *B5 | D204 | *B4 | Q216 | B4 | R081 | D5 | R191 | *C2 | R298 | B2 | R405 | *C4 | | |
| C122 | C3 | C252 | B5 | D303 | A3 | Q217 | B4 | R082 | D4 | R192 | C2 | R299 | *C2 | R406 | *C4 | | |
| C123 | *C3 | C266 | *B2 | D304 | A4 | Q218 | B4 | R083 | *B6 | R194 | *C2 | R301 | *A1 | R407 | C4 | | |
| C124 | *C3 | C268 | B4 | | | Q219 | *B4 | R084 | *B6 | R195 | *C3 | R302 | *A2 | R500 | B1 | | |
| C125 | *C3 | C269 | B4 | E002 | B5 | Q220 | B4 | R085 | *B6 | R196 | *C4 | R303 | *A2 | R501 | B1 | | |
| C126 | *C3 | C270 | *B3 | E003 | D2 | Q221 | B4 | R086 | *B6 | R197 | *C5 | R304 | *A1 | R502 | B2 | | |
| C127 | *C3 | C271 | *B4 | | | Q222 | B2 | R087 | *B6 | R198 | C2 | R305 | *A2 | R503 | B2 | | |
| C128 | C3 | C272 | *B3 | FL101 | C1 | Q223 | C3 | R088 | *B6 | R199 | *C2 | R306 | A2 | R504 | C3 | | |
| C129 | *C5 | C273 | *B2 | FL201 | B1 | Q224 | B4 | R089 | *B6 | R201 | *B2 | R307 | A2 | R505 | *B4 | | |
| C130 | *C5 | C274 | B2 | FL301 | A1 | Q301 | *A2 | R090 | *B6 | R202 | *B2 | R309 | A2 | R506 | *B4 | | |
| C131 | *C5 | C275 | B2 | | | Q302 | A2 | R091 | *B6 | R203 | *B2 | R310 | *A2 | R507 | B4 | | |
| C132 | C3 | C276 | *B4 | IC001 | *D2 | Q302 | B2 | R092 | D5 | R204 | *B2 | R311 | *A2 | R600 | A2 | | |
| C132 | C4 | C277 | B4 | IC002 | *D3 | Q303 | *A2 | R093 | D5 | R205 | *B2 | R312 | *A2 | R601 | A2 | | |
| C133 | *C4 | C278 | C4 | IC003 | *D4 | Q304 | *A2 | R094 | C1 | R206 | C2 | R313 | *A3 | R602 | A2 | | |
| C134 | *C3 | C279 | B2 | IC004 | D2 | Q305 | *A2 | R101 | *C2 | R207 | B2 | R314 | *A2 | R603 | A2 | | |
| C135 | *C4 | C280 | B1 | IC005 | D2 | Q306 | A2 | R102 | *C2 | R209 | B2 | R315 | *A3 | R604 | B3 | | |
| C137 | C5 | C281 | B2 | IC007 | D3 | Q307 | *A3 | R103 | *C2 | R210 | B2 | R316 | *A2 | R605 | *A4 | | |
| C138 | *C5 | C301 | *A2 | IC009 | D4 | Q308 | A2 | R104 | *C2 | R211 | *B2 | R317 | A2 | R606 | *A4 | | |
| C139 | *C3 | C302 | *A2 | IC010 | D4 | Q309 | *A2 | R105 | *C2 | R212 | *B2 | R318 | *A2 | R607 | A4 | | |
| C140 | C4 | C303 | *A2 | IC011 | D4 | Q310 | *A3 | R106 | C1 | R213 | *B3 | R319 | *A2 | R700 | *C3 | | |
| C141 | *C4 | C307 | *A2 | IC012 | D3 | Q311 | A3 | R106 | C2 | R214 | *B2 | R320 | *A2 | R701 | C3 | | |
| C142 | *C4 | C308 | *A2 | IC015 | B6 | Q312 | *A3 | R107 | C2 | R215 | *B3 | R321 | A2 | R702 | C3 | | |
| C143 | *C5 | C309 | A2 | IC016 | *B6 | Q313 | *A4 | R109 | C2 | R216 | *B2 | R322 | *A3 | R703 | C4 | | |
| C144 | *C4 | C310 | *A2 | IC101 | C2 | Q314 | A4 | R110 | *C2 | R217 | *B2 | R323 | B3 | R704 | *C4 | | |
| C145 | *C4 | C311 | *A2 | IC102 | C3 | Q315 | A4 | R111 | *C2 | R218 | *B2 | R325 | *A2 | R707 | *C4 | | |
| C146 | C5 | C312 | *A2 | IC103 | C3 | Q316 | A4 | R112 | *C2 | R219 | *B2 | R326 | *A2 | R800 | B2 | | |
| C147 | *D5 | C313 | *A2 | IC105 | C3 | Q317 | A4 | R113 | *C2 | R220 | *B2 | R327 | *A3 | R801 | B3 | | |
| C148 | *C5 | C314 | *A2 | IC106 | *C5 | Q318 | A4 | R114 | *C2 | R221 | B2 | R328 | *A3 | R802 | *B3 | | |
| C149 | C5 | C315 | *A2 | IC107 | C5 | Q319 | *A4 | R115 | *C3 | R222 | *B3 | R329 | *A3</ | | | | |

VA-199V
SUFFIX: -M

VA-199
SUFFIX: -11

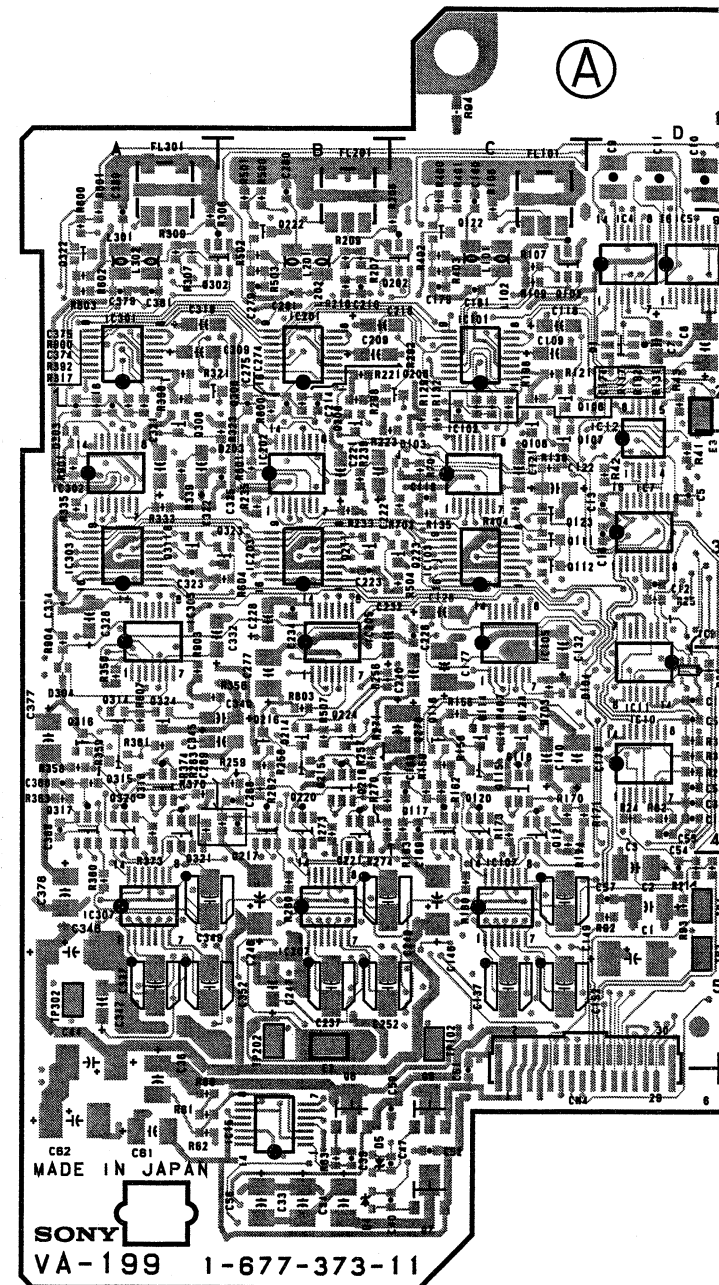

VA-199 -A SIDE-
SUFFIX: -11

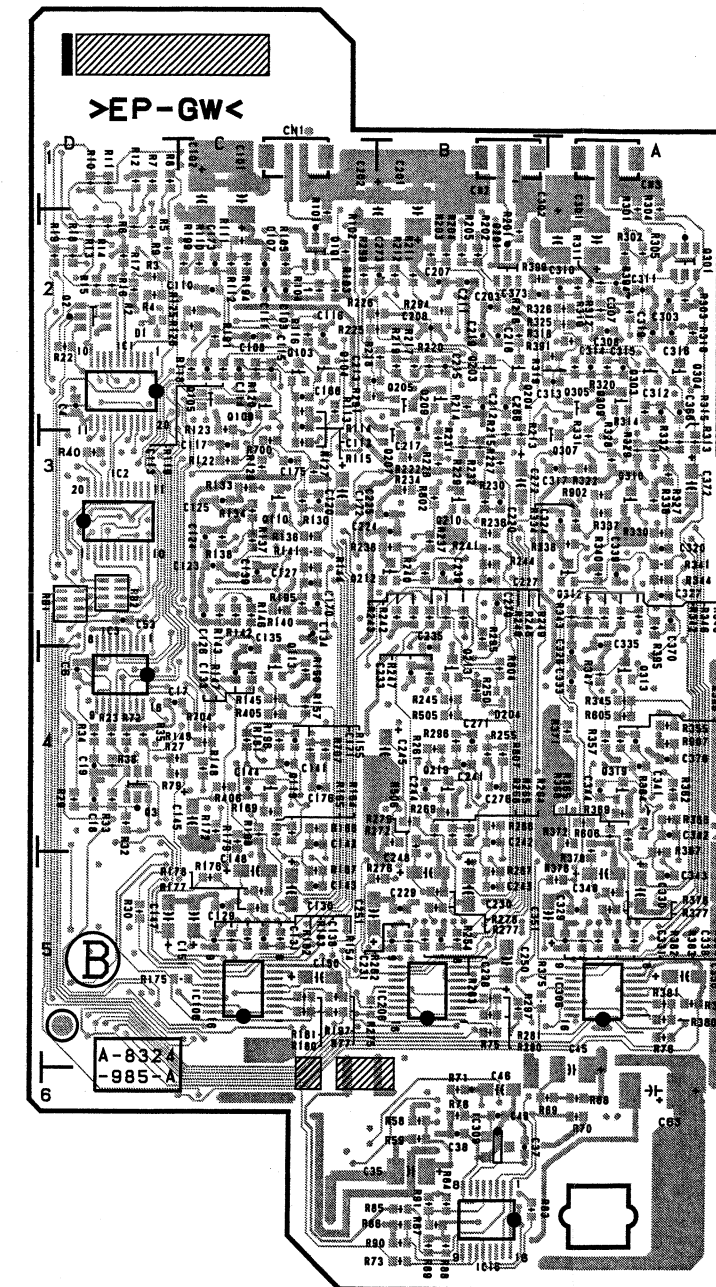

VA-199 -B SIDE-
SUFFIX: -11